

**1999**

**BMW Z3 (E36/7)  
Z3 Roadster, Z3 Coupe,  
M Roadster, M Coupe**

**Electrical**

**Troubleshooting**

**Manual**

Vehicles produced 9/98 thru 03/99



## ELECTRICAL TROUBLESHOOTING MANUAL

### SERIES 3 – E36/7 (Z3 Roadster, Z3 Coupe, M Roadster, and M Coupe)

#### SCHEMATICS

#### MODEL YEAR 1999

0100.0	INDEX	6160.1	WIPER/WASHER MODULE (WWM)
0110.0	INTRODUCTION	6167.1	HEADLIGHT WASHER (SRA)
0140.0	SYMBOLS	6169.0	WINDSHIELD WASHER JET HEATERS
0670.0	POWER DISTRIBUTION CHART	6211.0	INSTRUMENT CLUSTER
0670.1	FUSE CHART	6213.3	DIGITAL CLOCK
0670.2	POWER DISTRIBUTION	6300.0	LIGHT SWITCH DETAILS
0670.3	FUSE DETAILS	6312.0	HEADLIGHTS/FOG LIGHTS
0670.4	GROUND DISTRIBUTION	6313.0	TURN/HAZARD LIGHTS
0670.5	DATA LINK	6314.0	PARK/TAIL/UNDERHOOD LIGHTS
1210.17	ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER S52)	6320.0	LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS
1210.25	ENGINE CONTROL SYSTEM MS42.1 (6-CYLINDER M52)	6322.0	BACK UP LIGHTS
1230.0	CHARGING SYSTEM	6325.0	BRAKE LIGHTS
1240.0	START	6330.3	INTERIOR LIGHTS
1290.0	E-BOX FAN	6332.0	INTERIOR ACCESSORIES
2460.2	ELECTRONIC TRANSMISSION CONTROL (EGS A4S 270R)	6350.0	CRASH CONTROL MODULE
3234.0	SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)	6424.0	REAR WINDOW DEFOGGER
3450.1	SLIP CONTROL (ABS/ASC)	6450.6	INTEGRATED HEATING- AND CLIMATE CONTROL
3614.0	TIRE INFLATION SYSTEM	6510.1	RADIO/HIFI
5116.0	POWER MIRRORS	6561.0	CELLULAR TELEPHONE (PROVISIONS)
5126.0	ZKE CENTRAL LOCKING (ZV)	6571.0	CRUISE CONTROL (TEMPOMAT)
5133.0	ZKE POWER WINDOWS (FH)	6575.2	ANTI-THEFT SYSTEM (ALPINE)
5200.0	POWER SEATS	6581.3	BOARD COMPUTER (BC – LOW)
5203.0	HEATED SEATS	7000.0	COMPONENT LOCATION CHART
5410.5	POWER TILT SUNROOF	7100.0	COMPONENT LOCATION VIEWS
5430.2	ELECTRO-HYDRAULIC CONVERTIBLE TOP	8000.0	SPLICE LOCATION VIEWS
6100.0	CENTRAL BODY ELECTRONICS (ZKE IV)	8500.0	CONNECTOR VIEWS
6133.0	HORN		
6135.1	DRIVE-AWAY PROTECTION (EWS III)		



# 0100.0 INDEX

Z3

ABS HYDRAULIC UNIT, Y1w .....	3450.1-01
AIR BAG CUT-OFF SWITCH, PASSENGER'S, S559 .....	3234.0-01
AIR BAG GAS GENERATOR, DRIVER'S, G5 .....	3234.0-00
AIR BAG GAS GENERATOR, LEFT SIDE, G14 .....	3234.0-03
AIR BAG GAS GENERATOR, PASSENGER'S, G6 .....	3234.0-01
AIR BAG GAS GENERATOR, RIGHT SIDE, G15 .....	3234.0-03
AIR CONDITIONING COMPRESSOR, Y2 .....	6450.6-02
AIR CONDITIONING COMPRESSOR, Y2 .....	6450.6-06
AIR CONDITIONING RELAY, MOTRONIC, K33a .....	6450.6-04
AIR CONDITIONING/RECIRCULATING SWITCH ASSEMBLY, S220 .....	6450.6-01
AIR CONDITIONING/RECIRCULATING SWITCH ASSEMBLY, S220 .....	6450.6-05
AIR PUMP, Y6133 .....	1210.17-05
AIR PUMP, Y6133 .....	1210.25-04
ANALOG CLOCK, N5 .....	6211.0-05
ANTENNA AMPLIFIER AM/FM, N8 .....	6510.1-00
ANTI-THEFT CONTROL MODULE (ALPINE), N12w .....	6575.2
ANTI-THEFT HORN (ALPINE), H1w .....	6575.2-01
ANTI-THEFT SYSTEM (ALPINE) .....	6575.2
ASC SWITCH, S6 .....	3450.1-03
ASC SWITCH, S6 .....	3450.1-06
ASHTRAY LIGHT, FRONT, E25 .....	6300.0-01
ASHTRAY LIGHT, FRONT, E25 .....	6332.0-00
AUTOMATIC TRANSMISSION RANGE SWITCH, S3 .....	2460.2-04
AUXILIARY FAN MOTOR, M9 .....	6450.6-03
AUXILIARY FAN MOTOR, M9 .....	6450.6-07
AUXILIARY FUSE BOX, P95 .....	0670.2-06
AUXILIARY FUSE BOX, P97 .....	0670.2-06
AUXILIARY THROTTLE POSITION MOTOR (ADS), M93 .....	3450.1-02

AUXILIARY THROTTLE POSITION SENSOR, R31 .....	3450.1-02
AUXILIARY TURN LIGHT, LEFT FRONT, H9 .....	6313.0-02
AUXILIARY TURN LIGHT, RIGHT FRONT, H8 .....	6313.0-02
B+ JUMP START JUNCTION POINT, G6430 .....	0670.2-00
B+ JUMP START JUNCTION POINT, G6430 .....	0670.2-05
B+ JUNCTION POINT E-BOX, G6400 .....	0670.2-01
B+ JUNCTION POINT, G7512 .....	0670.2-00
BACK UP LIGHT, LEFT, H27 .....	6322.0-00
BACK UP LIGHT, RIGHT, H28 .....	6322.0-00
BACK UP LIGHTS .....	6322.0-00
BATTERY, G1 .....	0670.2-00
BATTERY, G1 .....	0670.2-05
BLOWER MOTOR, M30 .....	6450.6-00
BLOWER MOTOR, M30 .....	6450.6-04
BLOWER RELAY, K4 .....	6450.6-00
BLOWER RELAY, K4 .....	6450.6-04
BLOWER RESISTORS, R11 .....	6450.6-00
BLOWER RESISTORS, R11 .....	6450.6-04
BLOWER SWITCH, S75 .....	6450.6-00
BLOWER SWITCH, S75 .....	6450.6-04
BOARD COMPUTER (BC - LOW) .....	6581.3-00
BOARD COMPUTER (BC - LOW), A35y .....	6581.3-00
BODY ELECTRONICS CONTROL MODULE (ZKE IV), A104 .....	6100.0
BRAKE FLUID LEVEL SWITCH, B18 .....	6211.0-00
BRAKE LIGHT SWITCH, S30 .....	6325.0
BRAKE LIGHT, LEFT, H24 .....	6325.0
BRAKE LIGHT, RIGHT, H31 .....	6325.0
BRAKE LIGHTS .....	6325.0
BRAKE PAD SENSOR, LEFT FRONT, B16 .....	6211.0-01
BRAKE PAD SENSOR, RIGHT REAR, B17 .....	6211.0-01



CAMSHAFT POSITION SENSOR  
(CYLINDER IDENTIFICATION), B6204 ..... 1210.17-06

CAMSHAFT POSITION SENSOR 1 (INLET), B6214 ..... 1210.25-05

CAMSHAFT POSITION SENSOR 2 (OUTLET), B6224 ..... 1210.25-05

CD CHANGER, N22 ..... 6510.1

CELLULAR TELEPHONE (PROVISIONS) ..... 6561.0-00

CENTRAL BODY ELECTRONICS (ZKE IV) ..... 6100.0

CENTRAL LOCKING LUGGAGE COMPARTMENT LID  
MOTOR RELAY (ZV), K70 ..... 5126.0-05

CHARCOAL FILTER SHUT-OFF VALVE, B6247 ..... 1210.17-09

CHARGING SYSTEM ..... 1230.0

CHIME MODULE, H10 ..... 6211.0-00

CIGAR LIGHTER CONNECTION, E28a ..... 3614.0-00

CIGAR LIGHTER LIGHT, FRONT, E29 ..... 6300.0-01

CIGAR LIGHTER LIGHT, FRONT, E29 ..... 6332.0-00

CIGAR LIGHTER, FRONT, E28 ..... 6332.0-00

CLUTCH SWITCH, S32 ..... 6571.0-01

CLUTCH SWITCH, S32 ..... 6571.0-03

COMBINATION SWITCH, S7 ..... 6313.0-00

COMPONENT LOCATION CHART ..... 7000.0

COMPONENT LOCATION VIEWS ..... 7100.0

COMPRESSOR CONTROL RELAY, K19 ..... 6450.6-02

COMPRESSOR CONTROL RELAY, K19 ..... 6450.6-06

COMPRESSOR MAIN SWITCH, S232 ..... 3614.0-00

COMPRESSOR RELAY, K6394 ..... 3614.0-00

CONNECTOR VIEWS ..... 8500.0

CONTACT RING, C101 ..... 3234.0-00

CONVERTIBLE TOP ACTUATING SWITCH, S143 ..... 5430.2-01

CONVERTIBLE TOP END-POSITION MICRO SWITCH, S164 ..... 5430.2-01

CONVERTIBLE TOP MOTOR, M101 ..... 5430.2-00

CONVERTIBLE TOP RELAY I (CLOSE), K18363 ..... 5430.2-00

CONVERTIBLE TOP RELAY II (OPEN), K18364 ..... 5430.2-00

CRANKSHAFT POSITION/RPM SENSOR, B6203 ..... 1210.17-06

CRANKSHAFT POSITION/RPM SENSOR, B6203 ..... 1210.25-05

CRASH CONTROL MODULE ..... 6350.0

CRASH CONTROL MODULE, N17 ..... 6350.0-01

CRUISE CONTROL (TEMPOMAT) ..... 6571.0

CRUISE CONTROL ACTUATOR (TEMPOMAT), M25 ..... 6571.0-01

CRUISE CONTROL INTERFACE, A9008 ..... 6571.0-02

CRUISE CONTROL MODULE (TEMPOMAT), A8 ..... 6571.0

CRUISE CONTROL SWITCH, S28 ..... 6571.0-00

CRUISE CONTROL SWITCH, S28 ..... 6571.0-02

DATA LINK ..... 0670.5

DATA LINK CONNECTOR, D100 ..... 0670.5

DAY LIGHT RELAY MODULE, K46z ..... 6312.0-01

DEFOGGER I, REAR, E9 ..... 6424.0

DIGITAL CLOCK ..... 6213.3-00

DIGITAL CLOCK, A110 ..... 6213.3-00

DOME LIGHT/MAP READING ASSEMBLY, FRONT, E34 ..... 6330.3-00

DOOR JAMB SWITCH, DRIVER'S, S14 ..... 5126.0-01

DOOR JAMB SWITCH, PASSENGER'S, S13 ..... 5126.0-01

DOOR LOCK MOTOR, DRIVER'S, M12 ..... 5126.0-02

DOOR LOCK MOTOR, DRIVER'S, M12 ..... 5126.0-04

DOOR LOCK MOTOR, PASSENGER'S, M13 ..... 5126.0-02

DOOR LOCK MOTOR, PASSENGER'S, M13 ..... 5126.0-04

DOOR LOCK SWITCH, DRIVER'S, S47 ..... 5126.0-00

DOOR LOCK SWITCH, PASSENGER'S, S49 ..... 5126.0-00

DRIVE-AWAY PROTECTION (EWS III) ..... 6135.1

DUAL TEMPERATURE SENSOR  
(COOLANT TEMPERATURE), B6256 ..... 1210.17-02



# INDEX

Z3

E-BOX FAN .....	1290.0-00
E-BOX FAN, M6506 .....	1290.0-00
ELECTRICAL COMPRESSOR, M805 .....	3614.0-00
ELECTRO-HYDRAULIC CONVERTIBLE TOP .....	5430.2
ELECTRONIC IMMOBILIZER CONTROL MODULE (EWS III), A837 .....	6135.1
ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310R) ....	2460.2
ENGINE CONTROL MODULE (DME), A6000 .....	1210.17
ENGINE CONTROL MODULE (DME), A6000 .....	1210.25
ENGINE CONTROL MODULE RELAY, K6300 .....	1210.17-00
ENGINE CONTROL MODULE RELAY, K6300 .....	1210.25-00
ENGINE CONTROL RELAY (ABS/ASC), K94 .....	3450.1-00
ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52) .....	1210.17
ENGINE CONTROL SYSTEM MS42.1 (6-CYLINDER M52) .....	1210.25
ENGINE COOLANT TEMPERATURE SENSOR, B6232 .....	1210.17-02
ENGINE COOLANT TEMPERATURE SENSOR, B6232 .....	6211.0-03
ENGINE COOLANT TEMPERATURE SENSOR, B6236 .....	1210.17-02
ENGINE COOLANT TEMPERATURE SENSOR, B6236 .....	1210.25-07
ENGINE HOOD SWITCH, S21w .....	6575.2-00
EVAPORATIVE EMISSION VALVE, Y6120 .....	1210.17-05
EVAPORATIVE EMISSION VALVE, Y6120 .....	1210.25-03
EVAPORATOR CONTROLLER, S221 .....	6450.6-01
EVAPORATOR CONTROLLER, S221 .....	6450.6-05
EVAPORATOR TEMPERATURE SENSOR, B14 .....	6450.6-01
EVAPORATOR TEMPERATURE SENSOR, B14 .....	6450.6-05
EWS TOROIDAL COIL, L1 .....	6135.1
FOG LIGHT RELAY, FRONT, K47 .....	6312.0-00
FOG LIGHT SWITCH, S10 .....	6312.0-00
FOG LIGHT, LEFT, E26 .....	6312.0-00
FOG LIGHT, RIGHT, E27 .....	6312.0-00

FRESH AIR RECIRCULATION MOTOR, M111 .....	6450.6-01
FRESH AIR RECIRCULATION MOTOR, M111 .....	6450.6-05
FRONT POWER DISTRIBUTION BOX, FRONT, P90 .....	0670.2
FUEL INJECTION VALVE, CYL. 1, Y6101 .....	1210.17-01
FUEL INJECTION VALVE, CYL. 1, Y6101 .....	1210.25-02
FUEL INJECTION VALVE, CYL. 2, Y6102 .....	1210.17-01
FUEL INJECTION VALVE, CYL. 2, Y6102 .....	1210.25-02
FUEL INJECTION VALVE, CYL. 3, Y6103 .....	1210.17-01
FUEL INJECTION VALVE, CYL. 3, Y6103 .....	1210.25-02
FUEL INJECTION VALVE, CYL. 4, Y6104 .....	1210.17-01
FUEL INJECTION VALVE, CYL. 4, Y6104 .....	1210.25-02
FUEL INJECTION VALVE, CYL. 5, Y6105 .....	1210.17-01
FUEL INJECTION VALVE, CYL. 5, Y6105 .....	1210.25-02
FUEL INJECTION VALVE, CYL. 6, Y6106 .....	1210.17-01
FUEL INJECTION VALVE, CYL. 6, Y6106 .....	1210.25-02
FUEL PUMP RELAY, K6301w .....	1210.17-04
FUEL PUMP RELAY, K6301w .....	1210.25-06
FUEL PUMP, M2 .....	1210.17-04
FUEL PUMP, M2 .....	1210.25-06
FUEL SENSOR, B6y .....	6211.0-02
FUEL TANK PRESSURE SENSOR, B65 .....	1210.17-09
FUSE CHART .....	0670.1
FUSE DETAILS .....	0670.3
FUSE HOLDER IN E-BOX, P98 .....	0670.2-01
FUSE HOLDER, P99 .....	0670.2-00
GENERATOR, G6509 .....	1230.0
GROUND DISTRIBUTION .....	0670.4
HARD TOP CONNECTOR 1, E99 .....	6424.0-01
HAZARD FLASHER RELAY, K16 .....	6313.0-00
HAZARD SWITCH, S18 .....	6313.0-01



# INDEX

Z3

HEADLIGHT WASHER (SRA) .....	6167.1-00
HEADLIGHT, LEFT, E7 .....	6312.0-01
HEADLIGHT, RIGHT, E8 .....	6312.0-01
HEADLIGHT/FOG LIGHT WASHER PUMP, M7 .....	6160.1-00
HEADLIGHT/FOG LIGHT WASHER PUMP, M7 .....	6167.1-00
HEADLIGHTS/FOG LIGHTS .....	6312.0
HEAT/A/C CONTROL PANEL ILLUMINATION, E105 .....	6300.0-02
HEAT/A/C CONTROL PANEL ILLUMINATION, E105 .....	6300.0-03
HEAT/A/C CONTROL PANEL ILLUMINATION, E106 .....	6300.0-02
HEAT/A/C CONTROL PANEL ILLUMINATION, E106 .....	6300.0-03
HEATED SEATS .....	5203.0-00
HIFI AMPLIFIER, A18 .....	6510.1
HIGH BEAM LIGHT RELAY, K46 .....	6312.0-01
HIGH BEAM LIGHT, LEFT, E11 .....	6312.0-01
HIGH LEVEL STOP LIGHT, H34 .....	6325.0
HIGH RANGE SPEAKER, LEFT FRONT, H59 .....	6510.1-02
HIGH RANGE SPEAKER, LEFT FRONT, H59 .....	6510.1-03
HIGH RANGE SPEAKER, LEFT REAR, H56 .....	6510.1-03
HIGH RANGE SPEAKER, RIGHT FRONT, H50 .....	6510.1-01
HIGH RANGE SPEAKER, RIGHT REAR, H53 .....	6510.1-03
HIGH SPEED RELAY, K22 .....	6450.6-03
HIGH SPEED RELAY, K22 .....	6450.6-07
HORN .....	6133.0-00
HORN RELAY, K2 .....	6133.0-00
HORN SWITCH, S4 .....	6133.0-00
HORN, LEFT, H2 .....	6133.0-00
HOT FILM AIR MASS METER, B6207 .....	1210.17-05
HOT FILM AIR MASS METER, B6207 .....	1210.25-05
IDLE SPEED CONTROL VALVE, Y6130 .....	1210.17-01
IDLE SPEED CONTROL VALVE, Y6130 .....	1210.25-03

IGNITION COIL, CYL. 1, T6151 .....	1210.17-03
IGNITION COIL, CYL. 1, T6151 .....	1210.25-01
IGNITION COIL, CYL. 2, T6152 .....	1210.17-03
IGNITION COIL, CYL. 2, T6152 .....	1210.25-01
IGNITION COIL, CYL. 3, T6153 .....	1210.17-03
IGNITION COIL, CYL. 3, T6153 .....	1210.25-01
IGNITION COIL, CYL. 4, T6154 .....	1210.17-03
IGNITION COIL, CYL. 4, T6154 .....	1210.25-01
IGNITION COIL, CYL. 5, T6155 .....	1210.17-03
IGNITION COIL, CYL. 5, T6155 .....	1210.25-01
IGNITION COIL, CYL. 6, T6156 .....	1210.17-03
IGNITION COIL, CYL. 6, T6156 .....	1210.25-01
IGNITION SWITCH, S2 .....	0670.2-04
IGNITION SWITCH, S2 .....	0670.2-08
INDEX .....	0100.0
INSTRUMENT CLUSTER .....	6211.0
INSTRUMENT CLUSTER, A2w .....	6211.0
INTAKE AIR TEMPERATURE SENSOR, B6205 .....	1210.17-02
INTAKE AIR TEMPERATURE SENSOR, B6205 .....	1210.25-07
INTEGRATED HEATING- AND CLIMATE CONTROL .....	6450.6
INTERIOR ACCESSORIES .....	6332.0-00
INTERIOR LIGHT SWITCH, S408 .....	6330.3-00
INTERIOR LIGHT, FRONT LEFT, E800 .....	6330.3-00
INTERIOR LIGHTS .....	6330.3-00
INTERMEDIATE PRESSURE SWITCH, B9 .....	6450.6-03
INTERMEDIATE PRESSURE SWITCH, B9 .....	6450.6-07
INTRODUCTION .....	0110.0
JET HEATER THERMOSWITCH, S198 .....	6169.0-00
KICK-DOWN SWITCH, S8507 .....	2460.2-02
KNOCK SENSOR, B6240 .....	1210.17-06



# INDEX

Z3

KNOCK SENSOR, B6240 .....	1210.25-09	NORMAL SPEED RELAY, K21 .....	6450.6-07
LEAKAGE DIAGNOSIS PUMP, Y6139 .....	1210.25-04	OBD II CONNECTOR, D110 .....	0670.5-03
LICENSE PLATE LIGHT, LEFT, E43 .....	6320.0-00	OBD II CONNECTOR, D110 .....	0670.5-06
LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS .....	6320.0-00	OIL PRESSURE SWITCH, B6231 .....	1210.25-08
LIGHT ASSEMBLY, LEFT REAR, E16 .....	0670.4-16	OIL PRESSURE SWITCH, B6231 .....	6211.0-03
LIGHT ASSEMBLY, RIGHT REAR, E17 .....	0670.4-16	OIL PRESSURE SWITCH, B6231 .....	6211.0-07
LIGHT SWITCH DETAILS .....	6300.0	OIL TEMPERATURE GAUGE, B59 .....	6211.0-05
LIGHT SWITCH, S8 .....	6300.0-00	OIL TEMPERATURE SENSOR, B6238 .....	1210.25-07
LOW BEAM LIGHT RELAY, K48 .....	6312.0-01	OIL TEMPERATURE SENSOR, B6238 .....	6211.0-05
LOW BEAM LIGHT, LEFT, E13 .....	6312.0-01	ON-BOARD COMPUTER TEMPERATURE SENSOR, B21 ....	6581.3-00
LOW RANGE SPEAKER, LEFT FRONT, H58 .....	6510.1-01	OXYGEN SENSOR I (BEHIND CATALYTIC CONVERTER), B62102 .....	1210.17-04
LOW RANGE SPEAKER, LEFT REAR, H57 .....	6510.1-02	OXYGEN SENSOR I (BEHIND CATALYTIC CONVERTER), B62102 .....	1210.25-06
LOW RANGE SPEAKER, RIGHT FRONT, H51 .....	6510.1-01	OXYGEN SENSOR I (IN FRONT OF CATALYTIC CONVERTER), B62101 .....	1210.17-04
LOW RANGE SPEAKER, RIGHT REAR, H52 .....	6510.1-02	OXYGEN SENSOR I (IN FRONT OF CATALYTIC CONVERTER), B62101 .....	1210.25-06
LUGGAGE COMPARTMENT LID LOCKING SWITCH, S117 ...	5126.0-05	OXYGEN SENSOR II (BEHIND CATALYTIC CONVERTER), B62202 .....	1210.17-04
LUGGAGE COMPARTMENT LIGHT SWITCH, S826 .....	6320.0-00	OXYGEN SENSOR II (BEHIND CATALYTIC CONVERTER), B62202 .....	1210.25-06
LUGGAGE COMPARTMENT LIGHT, E32 .....	6320.0-01	OXYGEN SENSOR II (IN FRONT OF CATALYTIC CONVERTER), B62201 .....	1210.17-04
LUGGAGE COMPARTMENT LOCK MOTOR, M17 .....	5126.0-03	OXYGEN SENSOR II (IN FRONT OF CATALYTIC CONVERTER), B62201 .....	1210.25-06
LUGGAGE COMPARTMENT LOCK MOTOR, M17 .....	5126.0-05	PARK BRAKE SWITCH, S31 .....	6211.0-04
MARKER LIGHT, LEFT FRONT, E21 .....	6314.0-01	PARK BRAKE SWITCH, S31 .....	6211.0-08
MARKER LIGHT, RIGHT FRONT, E22 .....	6314.0-01	PARK LIGHT, LEFT, E15 .....	6314.0-01
MID-HIGH RANGE SPEAKER, REAR LEFT, H55z .....	6510.1-02	PARK/TAIL/UNDERHOOD LIGHTS .....	6314.0
MID-HIGH RANGE SPEAKER, REAR RIGHT, H54z .....	6510.1-02	POWER DISTRIBUTION .....	0670.2
MIDRANGE SPEAKER, LEFT FRONT, H55 .....	6510.1-02		
MIDRANGE SPEAKER, LEFT FRONT, H55 .....	6510.1-03		
MIDRANGE SPEAKER, RIGHT FRONT, H54 .....	6510.1-01		
MIRROR CONTROL SWITCH, S17 .....	5116.0-00		
MIRROR, DRIVER'S SIDE, Y5 .....	5116.0-01		
MIRROR, PASSENGER'S SIDE, Y6 .....	5116.0-01		
NORMAL SPEED RELAY, K21 .....	6450.6-03		



# INDEX

Z3

POWER DISTRIBUTION CHART .....	0670.0
POWER MIRRORS .....	5116.0
POWER SEATS .....	5200.0
POWER TILT SUNROOF .....	5410.5-00
POWER WINDOW SWITCH, DRIVER'S, S126y .....	5133.0-01
POWER WINDOW SWITCH, PASSENGER'S, S127y .....	5133.0-01
PRESSURE SWITCH, B8y .....	6450.6-03
PRESSURE SWITCH, B8y .....	6450.6-07
PRESSURE SWITCH, B9508 .....	6450.6-03
PRESSURE SWITCH, B9508 .....	6450.6-07
PROGRAM SWITCH, S8503 .....	2460.2-03
PYROTECHNICAL BELT TENSIONER, DRIVER'S SIDE, G12 ..	3234.0-00
PYROTECHNICAL BELT TENSIONER, PASSENGER'S SIDE, G13 .....	3234.0-00
RADIO ANTI-THEFT SWITCH, S20w .....	6575.2-00
RADIO, N9 .....	6510.1
RADIO/HIFI .....	6510.1
RESISTOR, R8554 .....	0670.4-08
REVERSING LIGHT SWITCH, S8511 .....	6322.0-00
RIGHT HIGH BEAM LIGHT, RIGHT, E12 .....	6312.0-01
RIGHT HORN, RIGHT, H3 .....	6133.0-00
RIGHT LICENSE PLATE LIGHT, RIGHT, E44 .....	6320.0-00
RIGHT LOW BEAM LIGHT, RIGHT, E14 .....	6312.0-01
RIGHT PARK LIGHT, RIGHT, E19 .....	6314.0-01
SEAT BELT SWITCH, DRIVER'S, S58 .....	3234.0-02
SEAT BELT SWITCH, PASSENGER'S, S59 .....	3234.0-02
SEAT CONTROL SWITCH, DRIVER'S SEAT, S51 .....	5200.0-00
SEAT CONTROL SWITCH, DRIVER'S SEAT, S51 .....	5200.0-02
SEAT CONTROL SWITCH, PASSENGER'S SEAT, S56 .....	5200.0-01
SEAT CONTROL SWITCH, PASSENGER'S SEAT, S56 .....	5200.0-03

SEAT HEATER SWITCH, DRIVER'S SEAT, S53 .....	5203.0-00
SEAT HEATER SWITCH, PASSENGER'S SEAT, S54 .....	5203.0-00
SEAT HEATER, DRIVER'S, E57 .....	5203.0-00
SEAT HEATER, PASSENGER'S, E58 .....	5203.0-00
SEAT HEIGHT MOTOR, DRIVER'S, M52 .....	5200.0-00
SEAT HEIGHT MOTOR, DRIVER'S, M52 .....	5200.0-02
SEAT HEIGHT MOTOR, PASSENGER'S, M59 .....	5200.0-01
SEAT HEIGHT MOTOR, PASSENGER'S, M59 .....	5200.0-03
SEAT LENGTH ADJUST CUT-OFF RELAY, DRIVER'S, K921 ..	5200.0-02
SEAT LENGTH ADJUST CUT-OFF RELAY, PASSENGER'S, K911 .....	5200.0-03
SEAT LIMIT SWITCH, DRIVER'S, S910 .....	5200.0-02
SEAT LIMIT SWITCH, PASSENGER'S, S911 .....	5200.0-03
SEAT MAT, I1008 .....	3234.0-01
SEAT MOVEMENT MOTOR, DRIVER'S, M51 .....	5200.0-00
SEAT MOVEMENT MOTOR, DRIVER'S, M51 .....	5200.0-02
SEAT MOVEMENT MOTOR, PASSENGER'S, M60 .....	5200.0-01
SEAT MOVEMENT MOTOR, PASSENGER'S, M60 .....	5200.0-03
SEAT OCCUPANCY DETECTOR, A113 .....	3234.0-01
SEAT TILT ADJUST CUT-OFF RELAY, DRIVER'S, K920 .....	5200.0-02
SEAT TILT ADJUST CUT-OFF RELAY, PASSENGER'S, K910 .....	5200.0-03
SEATBACK HEATER, DRIVER'S, E56 .....	5203.0-00
SEATBACK HEATER, PASSENGER'S, E59 .....	5203.0-00
SECONDARY AIR PUMP RELAY, K6304 .....	1210.17-05
SECONDARY AIR PUMP RELAY, Y6304 .....	1210.25-04
SECONDARY AIR PUMP VALVE, Y6163 .....	1210.17-05
SECONDARY AIR PUMP VALVE, Y6163 .....	1210.25-03
SHIFT-LOCK, Y19 .....	2460.2-02
SIDE IMPACT SENSOR, DRIVER'S, B78 .....	3234.0-03





SIDE IMPACT SENSOR, PASSENGER'S, B79 ..... 3234.0-03  
 SLIP CONTROL (ABS/ASC) ..... 3450.1  
 SLIP CONTROL MODULE (ABS/ASC), A52 ..... 3450.1  
 SOLENOID VALVE ("RUNNING LOSSES"), Y6550 ..... 1210.17-05  
 SOLENOID VALVE ("RUNNING LOSSES"), Y6550 ..... 1210.25-04  
 SPEAKER, LEFT REAR, H46 ..... 6510.1-03  
 SPEAKER, RIGHT REAR, H45 ..... 6510.1-03  
 SPEED SENSOR – ABS, LEFT FRONT, B2 ..... 3450.1-04  
 SPEED SENSOR – ABS, LEFT FRONT, B2 ..... 3450.1-07  
 SPEED SENSOR – ABS, LEFT REAR, B4 ..... 3450.1-04  
 SPEED SENSOR – ABS, LEFT REAR, B4 ..... 3450.1-07  
 SPEED SENSOR – ABS, RIGHT FRONT, B1 ..... 3450.1-04  
 SPEED SENSOR – ABS, RIGHT FRONT, B1 ..... 3450.1-07  
 SPEED SENSOR – ABS, RIGHT REAR, B3 ..... 3450.1-04  
 SPEED SENSOR – ABS, RIGHT REAR, B3 ..... 3450.1-07  
 SPLICE LOCATION VIEWS ..... 8000.0  
 START ..... 1240.0  
 STARTER IMMOBILIZATION SWITCH, S235 ..... 1240.0  
 STARTER, M6510 ..... 1240.0  
 SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG) ..... 3234.0  
 SUPPLEMENTAL RESTRAINT SYSTEM CONTROL MODULE,  
 A12 ..... 3234.0  
 SYMBOLS ..... 0140.0  
 TAIL LIGHT, LEFT, H25 ..... 6314.0-01  
 TAIL LIGHT, LEFT, H37 ..... 6314.0-01  
 TAIL LIGHT, RIGHT, H30 ..... 6314.0-01  
 TAIL LIGHT, RIGHT, H39 ..... 6314.0-01  
 TEMPERATURE SWITCH, S36 ..... 6450.6-03  
 TEMPERATURE SWITCH, S36 ..... 6450.6-07  
 TEMPERATURE WHEEL SWITCH, S531 ..... 6450.6-01

TEMPERATURE WHEEL SWITCH, S531 ..... 6450.6-05  
 THERMAL OIL LEVEL SENSOR (TOENS) CONTROL MODULE,  
 A19007 ..... 6211.0-06  
 THERMAL OIL LEVEL SWITCH, B6254 ..... 6211.0-07  
 THERMOSTAT, CHARACTERISTIC MAP COOLING, B6279 . 1210.25-05  
 THROTTLE POSITION SENSOR, R6252 ..... 1210.17-05  
 THROTTLE POSITION SENSOR/  
 CRUISE CONTROL ACTUATOR, R6385 ..... 1210.25-07  
 THROTTLE POSITION SENSOR/CRUISE CONTROL  
 ACTUATOR, R6385 ..... 6571.0-03  
 TILT SUNROOF MOTOR, M24y ..... 5410.5-00  
 TILT SUNROOF SWITCH, S38y ..... 5410.5-00  
 TIRE INFLATION SYSTEM ..... 3614.0-00  
 TRANSMISSION CONTROL MODULE (EGS), A8500 ..... 2460.2  
 TRANSMISSION POSITION INDICATOR LIGHT, E82 ..... 6300.0-02  
 TRANSMISSION VALVE UNIT, Y8521 ..... 2460.2-01  
 TURN LIGHT, LEFT FRONT, H7 ..... 6313.0-02  
 TURN LIGHT, LEFT REAR, H6 ..... 6313.0-03  
 TURN LIGHT, RIGHT FRONT, H4 ..... 6313.0-02  
 TURN LIGHT, RIGHT REAR, H5 ..... 6313.0-03  
 TURN/HAZARD LIGHTS ..... 6313.0  
 UNLOADER RELAY, TERMINAL 15, K6326 ..... 1210.17-02  
 UNLOADER RELAY, TERMINAL 15, K6326 ..... 1210.25-01  
 UNLOADER RELAY, TERMINAL 15, K9 ..... 6424.0  
 VALVE RELAY (ABS/ASC), K95 ..... 3450.1-00  
 VALVE, INDIVIDUAL CONTROL INTAKE SYSTEM, Y6167 ... 1210.25-03  
 VARIABLE CAMSHAFT CONTROL VALVE 1 (INLET), Y6275z 1210.25-03  
 VARIABLE CAMSHAFT CONTROL VALVE 1, Y6275 ..... 1210.17-01  
 VARIABLE CAMSHAFT CONTROL VALVE 2 (OUTLET),  
 Y6276 ..... 1210.25-03  
 VEHICLE SPEED SENSOR, B10 ..... 6211.0-02



# INDEX

Z3

VOLTMETER, B211 .....	6211.0-05
WASHER JET HEATER, LEFT, E51 .....	6169.0-00
WASHER JET HEATER, RIGHT, E52 .....	6169.0-00
WASHER PUMP, M4 .....	6160.1-01
WASHER PUMP, M4 .....	6160.1-02
WATER VALVE, Y4z .....	6450.6-01
WATER VALVE, Y4z .....	6450.6-05
WINDOW DEFOGGER SWITCH, REAR, S76 .....	6424.0
WINDOW DEFOGGER, REAR .....	6424.0
WINDOW MOTOR, DRIVER'S, M21 .....	5133.0-02
WINDOW MOTOR, PASSENGER'S, M23 .....	5133.0-02
WINDSHIELD WASHER JET HEATERS .....	6169.0-00
WIPER MOTOR, M3 .....	6160.1-00
WIPER/WASHER INTERVAL CONTROL MODULE, REAR, A36 .....	6160.1-02
WIPER/WASHER MODULE (WWM) .....	6160.1
WIPER/WASHER MODULE, A51 .....	6160.1
WIPER/WASHER MODULE, A51 .....	6167.1-00
WIPER/WASHER SWITCH, S5 .....	6160.1-01
WIPER/WASHER SWITCH, S5 .....	6160.1-02
WOOFER, REAR, H500 .....	6510.1-02
ZKE CENTRAL LOCKING (ZV) .....	5126.0
ZKE POWER WINDOWS (FH) .....	5133.0





Z3

## INTRODUCTION

---


### General Conventions

1. Switches and relays are always shown in rest position (e.g. K11).
2. A component shown in a dashed frame signifies that the component is illustrated only in part (e.g. P90 and P91).
3. A component shown in a completely drawn frame signifies that the component is illustrated in full (e.g. K11).
4. The dashed line between pin 8 and pin 6 of connector X293 indicates that both pins belong to connector X293.
5. The dashed line from fuse F1 to pin 8 of connector X293 shows the positive supply of relay K11. If required, refer to cell **0670.3 Fuse Details** at fuse F1 for the complete line progressing with plug connections, line branches, wire colors and cross sections.
6. The dashed line with an arrow at splice X452 indicates that several wires lead to splice X452. All lines leading to the connection are illustrated in cell **6100.0 Central Body Electronics (ZKE)**. An interrupted line with an arrow indicates that only this one wire leads to another circuit.
7. The dashed line from pin 4 of connector X293 to ground X493 shows the ground supply for relay K11. If required, refer to cell **0670.4 Ground Distribution** at ground X493 for the complete line progression with all plug connections, line branches, wire colors, and cross sections.
8. The interrupted line from splice X452 with an **A** in the open arrow is continued on page 6160.0-02. Termination of wire 4 VI/SW from splice X452 with a wavy line indicates that the wire is continued on the opposite page.




# 0140.0 SYMBOLS

Z3

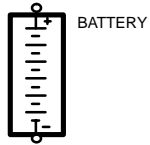

BATTERY

 

HEATING ELEMENT



VARIABLE RESISTANCE SENSOR VARIABLE CONTACT IS MOVED BY AN EXTERNAL FORCE



ANTENNA



FUSE DETAILS



LOUDSPEAKER OR HORN



VARIABLE RESISTOR RESISTANCE IS CHANGED BY TEMPERATURE OR PRESSURE



CONTROL/POWER ELECTRONICS



FUSIBLE LINK



LIGHT



DIODE CURRENT CAN FLOW ONLY IN DIRECTION OF ARROW



HALL EFFECT SENSOR



RADIO



CIRCUIT BREAKER



PERMANENT MAGNET MOTOR ONE SPEED



ZENER DIODE TO REGULATE VOLTAGE



TRANSISTORIZED SWITCH



THERMO SWITCH



PERMANENT MAGNET MOTOR TWO SPEEDS



LIGHT EMITTING DIODE



INDUCTIVE SENSOR



SOLENOID



KNOCK SENSOR



OXYGEN SENSOR



VEHICLE SPEED SENSOR

 
SOLENOID CONTROLLED VALVE OR CLUTCH SOLENOID




ENTIRE COM-  
PONENT SHOWN




PART OF COM-  
PONENT SHOWN




COMPONENT WITH  
SCREW TERMI-  
NALS

 


COMPONENT CASE  
ATTACHED DI-  
RECTLY TO METAL  
PART OF CAR  
(GROUNDED)

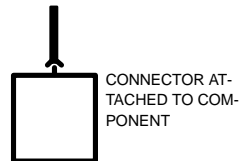


CONNECTOR AT-  
TACHED TO COM-  
PONENT

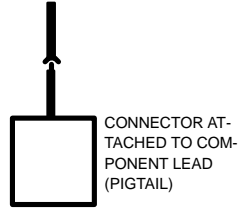

CONNECTOR AT-  
TACHED TO COM-  
PONENT LEAD  
(PIGTAIL)

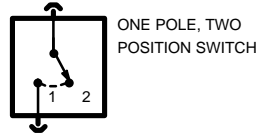


ONE POLE, TWO  
POSITION SWITCH

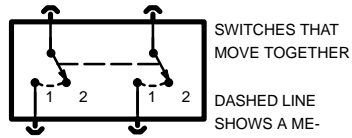

SWITCHES THAT  
MOVE TOGETHER

DASHED LINE  
SHOWS A ME-  
CHANICAL CON-  
NECTION  
BETWEEN  
SWITCHES


WIRE COLOR	
BL	BLUE
BR	BROWN
GE	YELLOW
GN	GREEN
GR	GRAY
OR	ORANGE
RS	PINK
RT	RED
SW	BLACK
VI	VIOLET
WS	WHITE
TR	TRANSPARENT

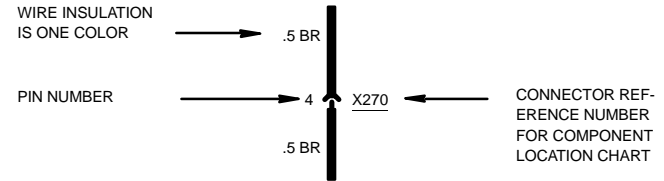

WIRE INSULATION  
IS ONE COLOR


PIN NUMBER

CONNECTOR REF-  
ERENCE NUMBER  
FOR COMPONENT  
LOCATION CHART

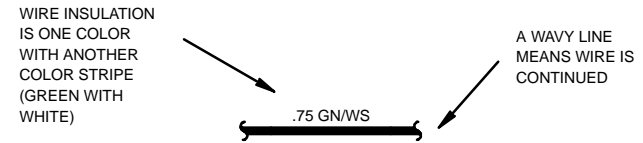

WIRE INSULATION  
IS ONE COLOR  
WITH ANOTHER  
COLOR STRIPE  
(GREEN WITH  
WHITE)


A WAVY LINE  
MEANS WIRE IS  
CONTINUED

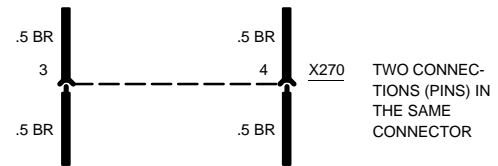

TWO CONNEC-  
TIONS (PINS) IN  
THE SAME  
CONNECTOR


DASHED LINE INDI-  
CATES TERMINALS  
OF THE SAME  
CONNECTOR

WIRE SIZE IN MM  
SQUARED

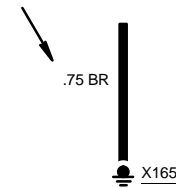


WIRE ATTACHED  
TO METAL PART  
OF CAR  
(GROUNDED)


GROUND NUM-  
BERED FOR REF-  
ERENCE ON COM-  
PONENT LOCATION  
CHART

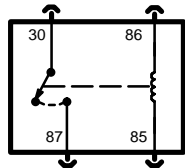


CONTACT RELAY

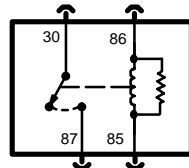

RELAY WITH RESISTOR ACROSS WINDING

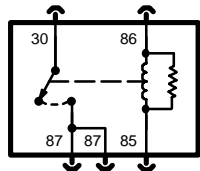


CONTACT RELAY WITH TWO OUTPUTS

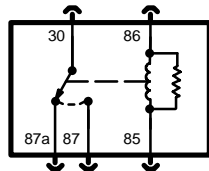


CHANGEOVER RELAY WITH TWO OUTPUTS

TERMINAL NUMBER	DESCRIPTION
30	RELAY INPUT
85	RELAY OUTPUT (WINDING)
86	RELAY INPUT (WINDING)
87	RELAY OUTPUT (ENERGIZED)
87a	RELAY OUTPUT (AT REST)

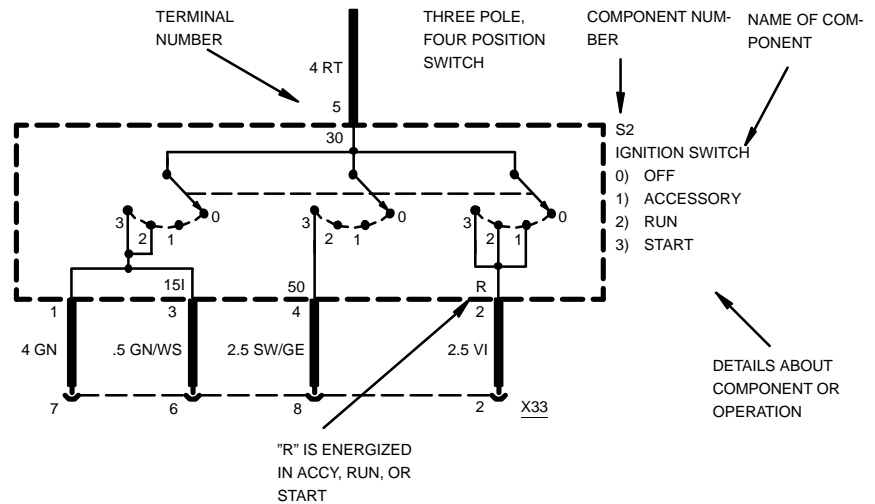

TERMINAL NUMBER	DESCRIPTION	TERMINAL NUMBER	DESCRIPTION
50	VOLTAGE: IGNITION SWITCH IN START	15I	VOLTAGE: IGNITION SWITCH IN RUN
30	VOLTAGE: SUPPLIED AT ALL TIMES	R	VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN OR START
15	VOLTAGE: IGNITION SWITCH IN RUN OR START	31	GROUND

**HOT AT ALL TIMES**

 

INDICATES THAT FUSE 9 IS SUPPLIED WITH POWER AT ALL TIMES

POWER STATUS

**HOT AT ALL TIMES**

**HOT IN RUN AND START**

**HOT IN ACCY, RUN AND START**

DESCRIPTION

VOLTAGE: SUPPLIED AT ALL TIMES

VOLTAGE: IGNITION SWITCH IN RUN OR START


VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN OR START




# SYMBOLS

## Z3


### HOT IN ACCY, RUN AND START

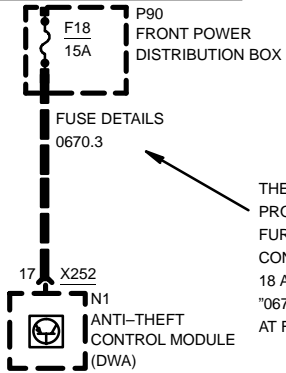


THE COMPLETE WIRE  
PROGRESSION AND  
FURTHER CIRCUITS  
CONNECTED TO FUSE  
18 ARE SHOWN IN CELL  
"0670.3 FUSE DETAILS"  
AT FUSE 18

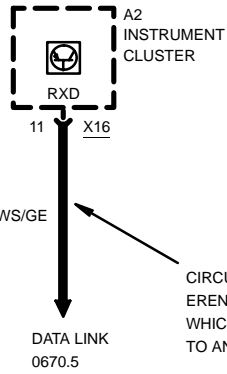

CIRCUIT REF-  
ERENCE-A WIRE  
WHICH CONNECTS  
TO ANOTHER CIRCUIT

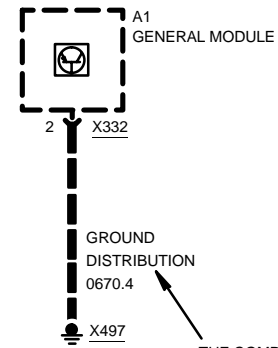

THE COMPLETE  
WIRE PROGRES-  
SION AND FUR-  
THER CIRCUITS  
CONNECTED TO  
GROUND X497 ARE  
SHOWN IN CELL  
"0670.4 GROUND  
DISTRIBUTION" AT  
GROUND X497

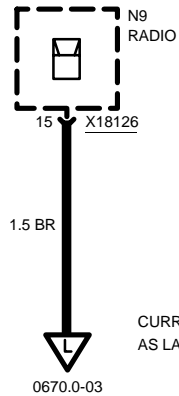

CURRENT PATH IS CONTINUED  
AS LABELED




ARROW SHOWS  
DIRECTION OF  
CURRENT FLOW  
AND IS REPEATED  
WHERE CURRENT  
PATH CONTINUES





# 0670.0 POWER DISTRIBUTION CHART


## FRONT POWER DISTRIBUTION BOX

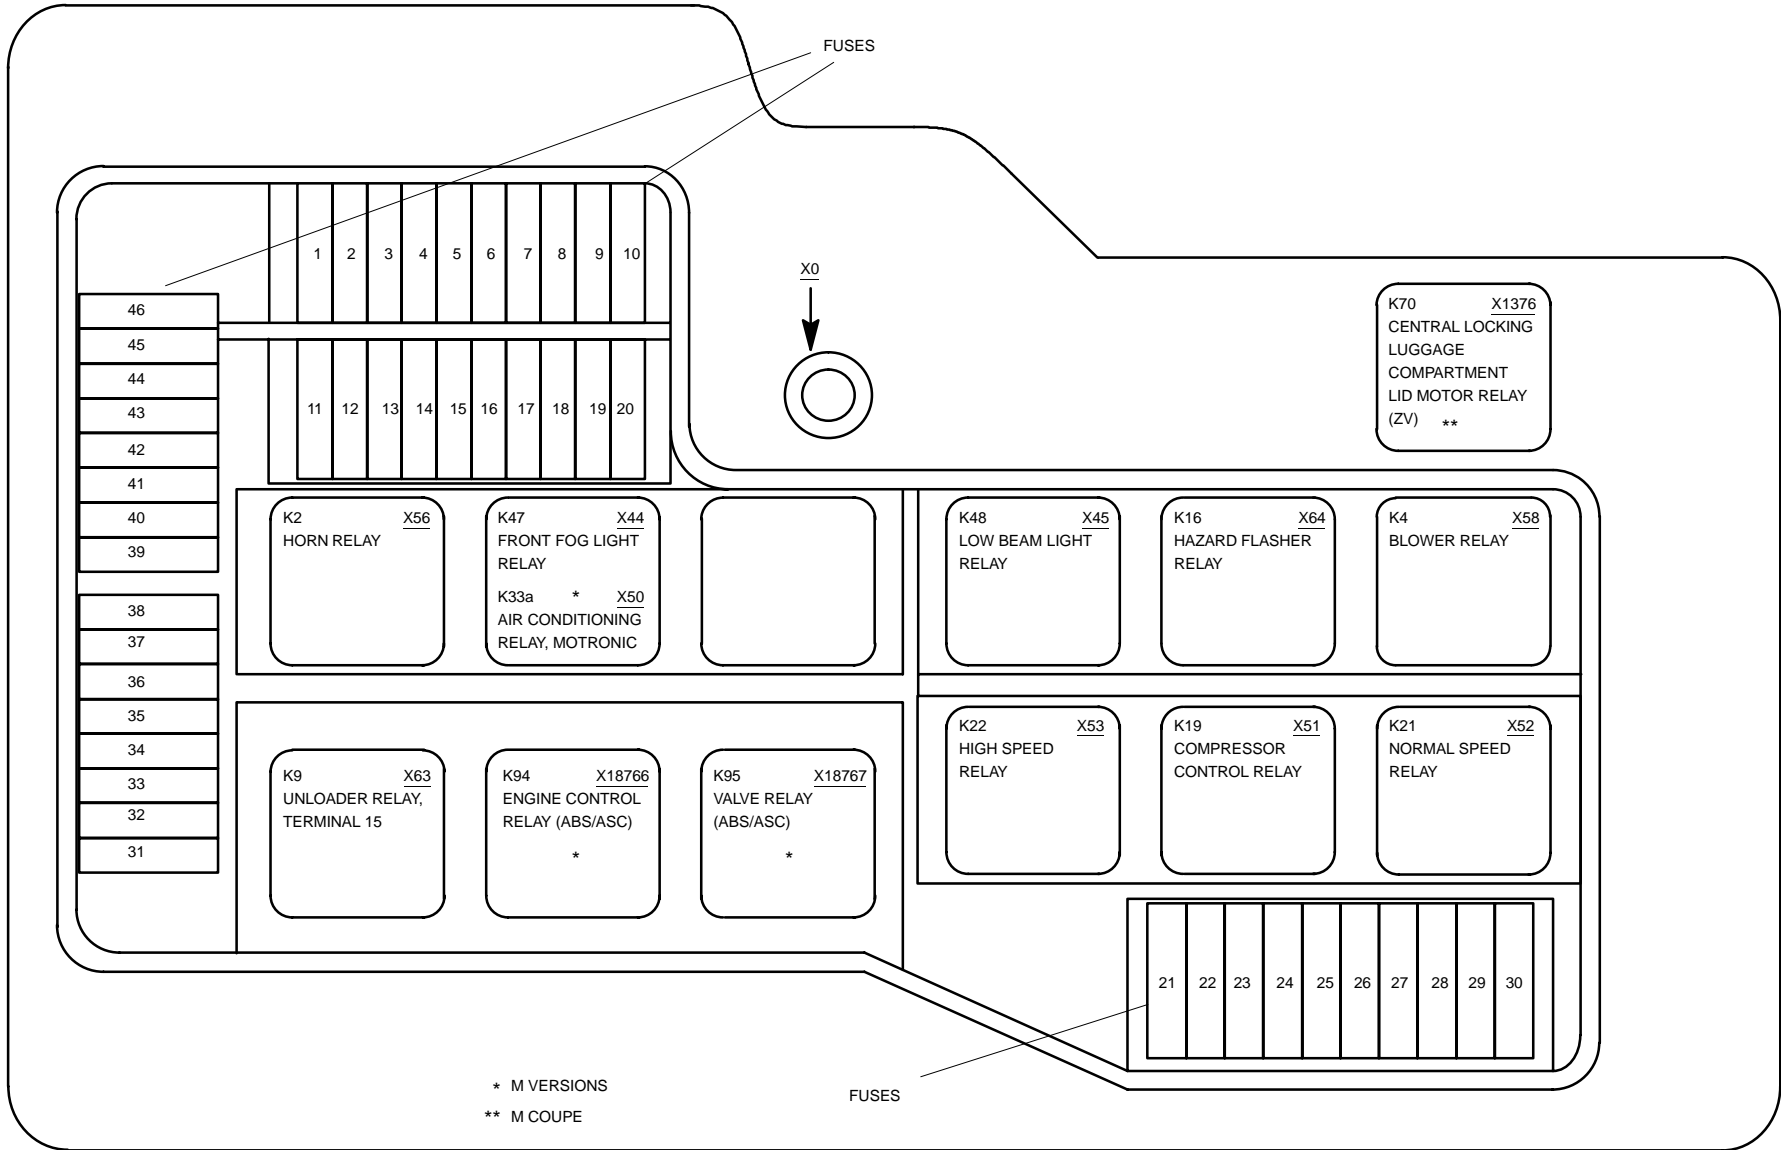




# POWER DISTRIBUTION CHART

IN E-BOX

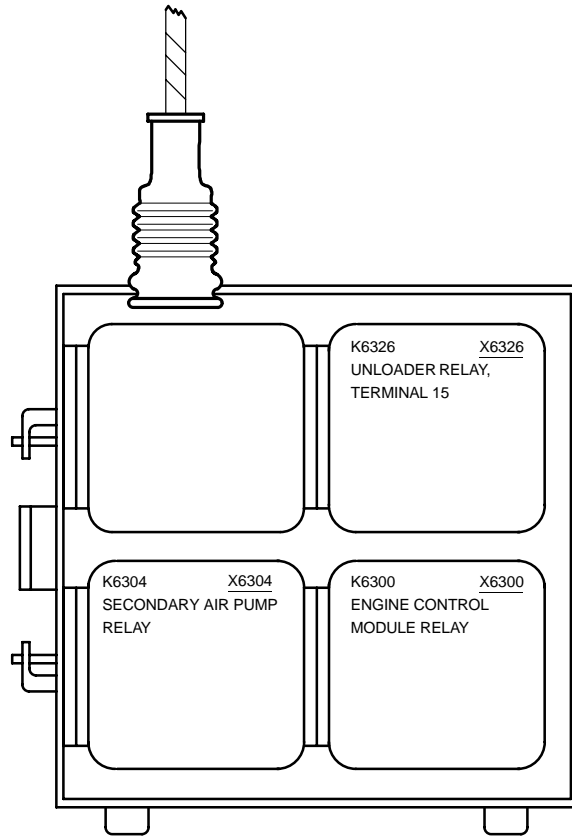

M VERSIONS

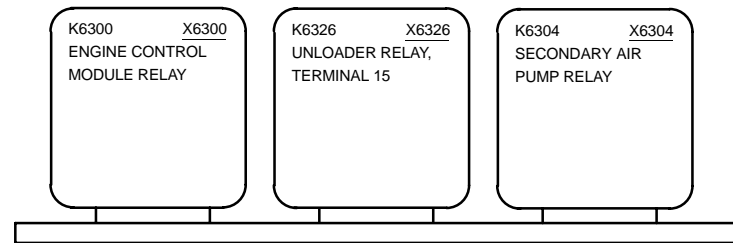


Z3 VERSIONS



Z3

# POWER DISTRIBUTION CHART

## RELAY PANEL UNDER LH SIDE OF DASHBOARD

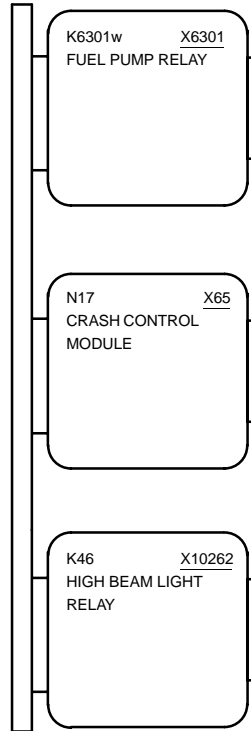




# POWER DISTRIBUTION CHART

Z3 VERSIONS

B+ JUNCTION POINT UNDER LH SIDE OF DASHBOARD

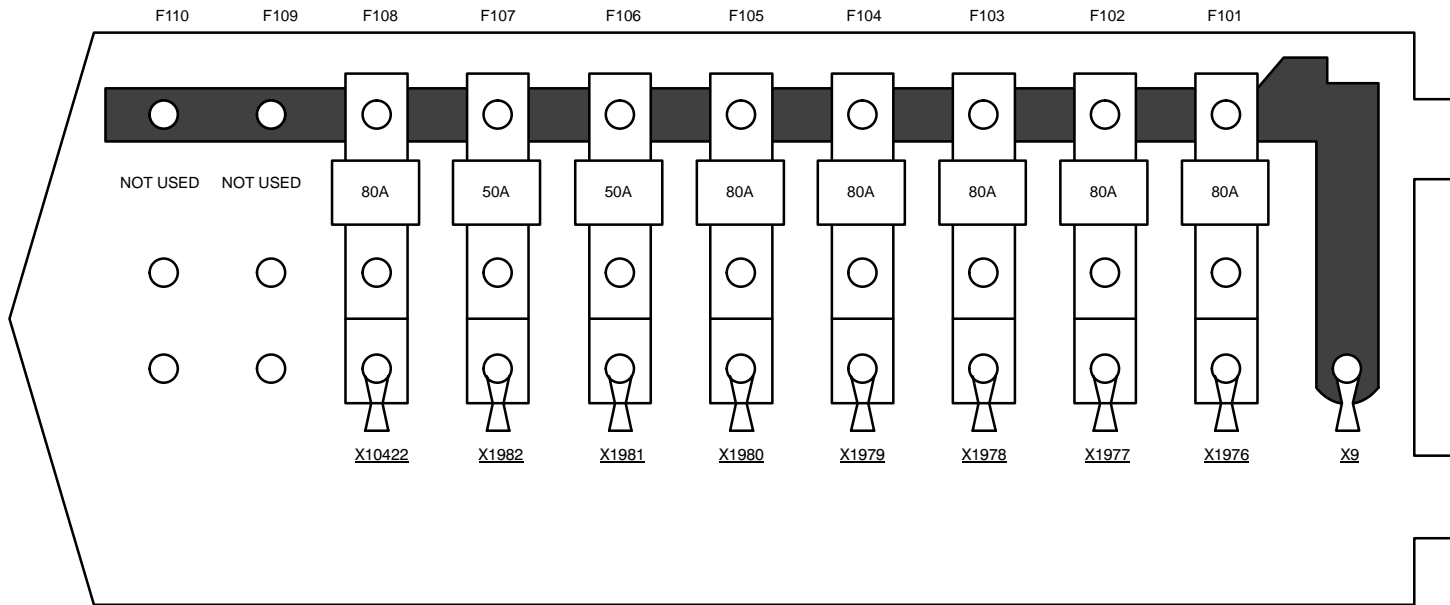



# 0670.1 FUSE CHART

## FUSES 1 TO 29

Z3

\* M VERSIONS

	FUSE NUMBER																													
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	
	30A	*15A 10A	30A	15A	30A	20A	5A	15A	20A	30A	7.5A	7.5A	*5A 7.5A	30A	10A	5A	15A	30A	30A	5A	5A	5A	10A	5A	10A	5A	5A	5A	7.5A	
1210.17 ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER S52)													●			●		●												
1210.25 ENGINE CONTROL SYSTEM MS42.1 (6-CYLINDER M52)													●			●		●									●	●		
1230.0 CHARGING SYSTEM																											●	●		
1240.0 START																													●	
1290.0 E-BOX FAN																											●			
2460.2 ELECTRONIC TRANSMISSION CONTROL (EGS A4S 270R)																										●		●		
3234.0 SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)																								●			●			
3450.1 SLIP CONTROL (ABS/ASC)										●			●							●							●			
3614.0 TIRE INFLATION SYSTEM																														
5116.0 POWER MIRRORS																									●					
5126.0 ZKE CENTRAL LOCKING (ZV)							●																							
5133.0 ZKE POWER WINDOWS (FH)															●															
5200.0 POWER SEATS					●															●										
5203.0 HEATED SEATS				●																										
5410.5 POWER TILT SUNROOF																									●					
5430.2 ELECTRO-HYDRAULIC CONVERTIBLE TOP	●																													
6100.0 CENTRAL BODY ELECTRONICS (ZKE IV)		●													●															
6133.0 HORN								●																						
6135.1 DRIVE-AWAY PROTECTION (EWS III)																													●	
6160.1 WIPER/WASHER MODULE (WWM)	●		●																											
6167.1 HEADLIGHT WASHER (SRA)			●																											












# 0670.2 POWER DISTRIBUTION

# Z3 VERSIONS


Z3

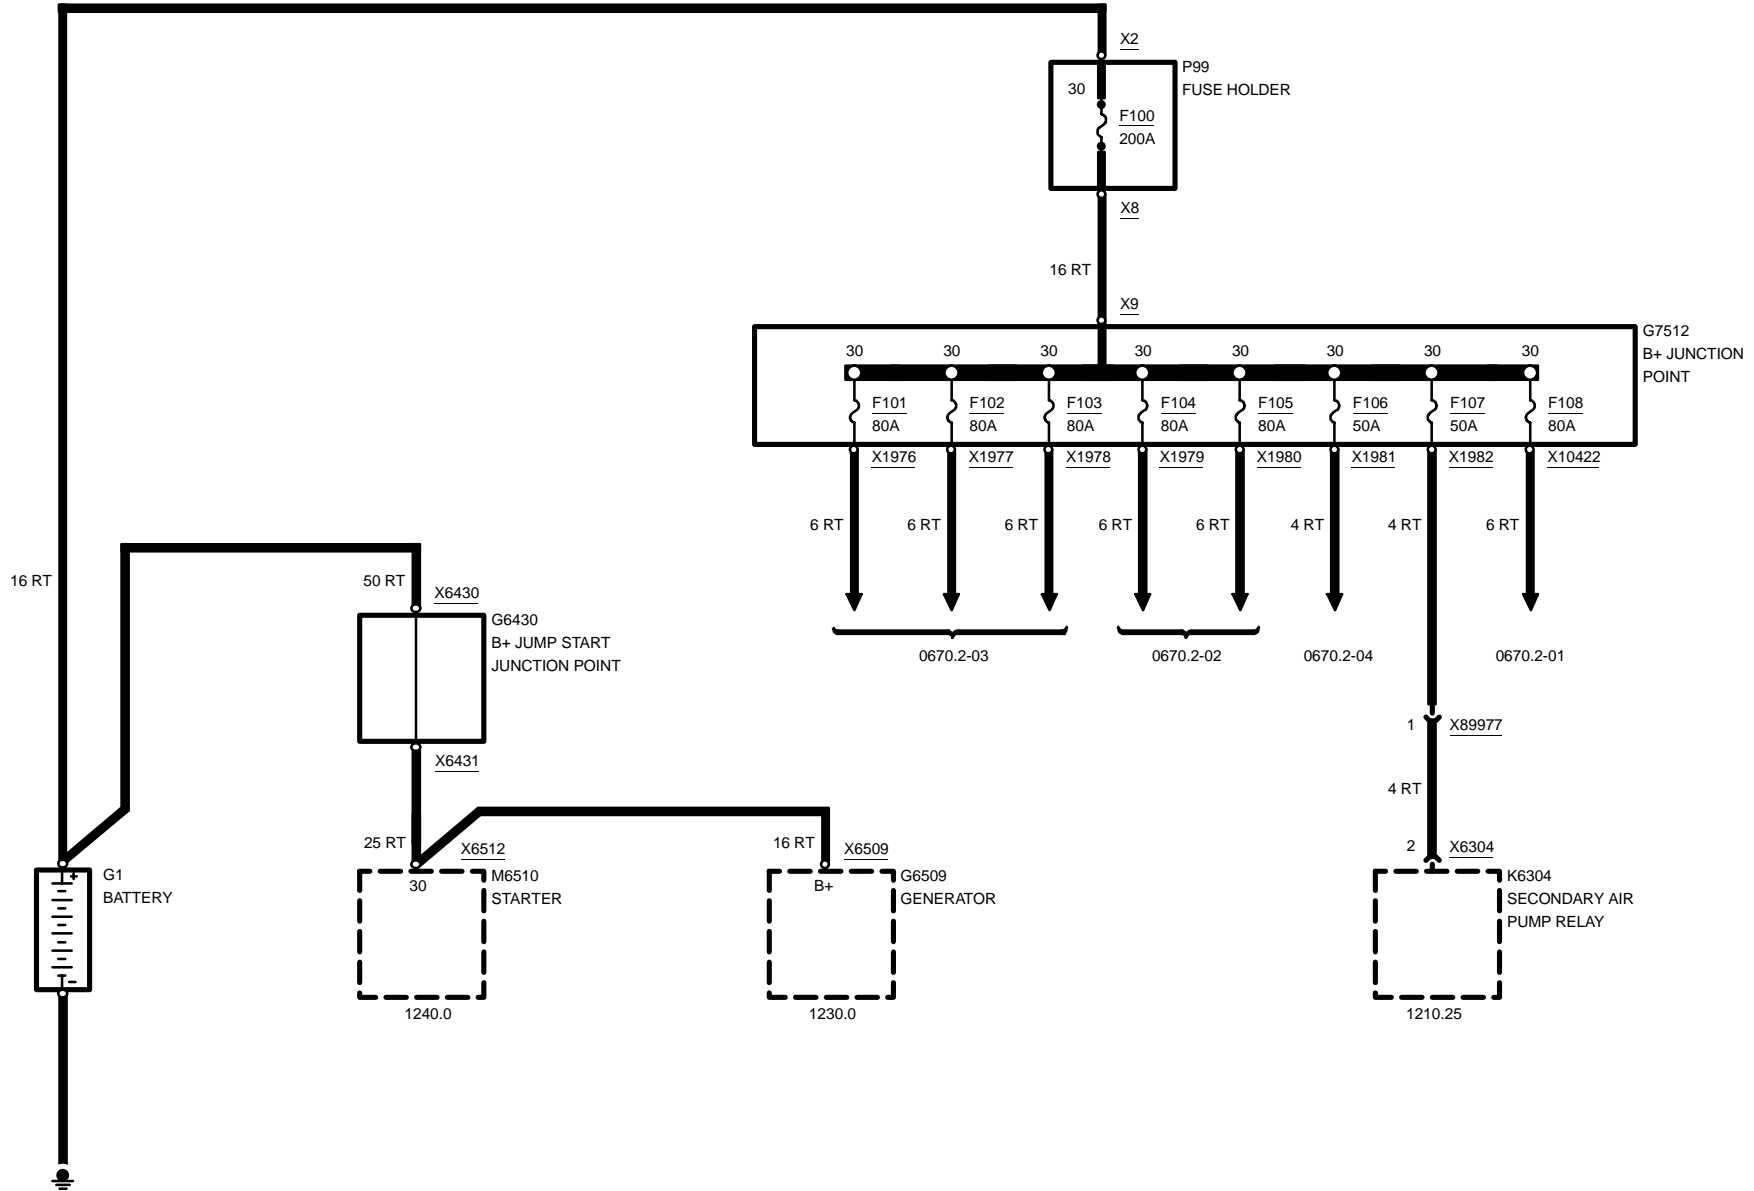



# POWER DISTRIBUTION

# Z3 VERSIONS

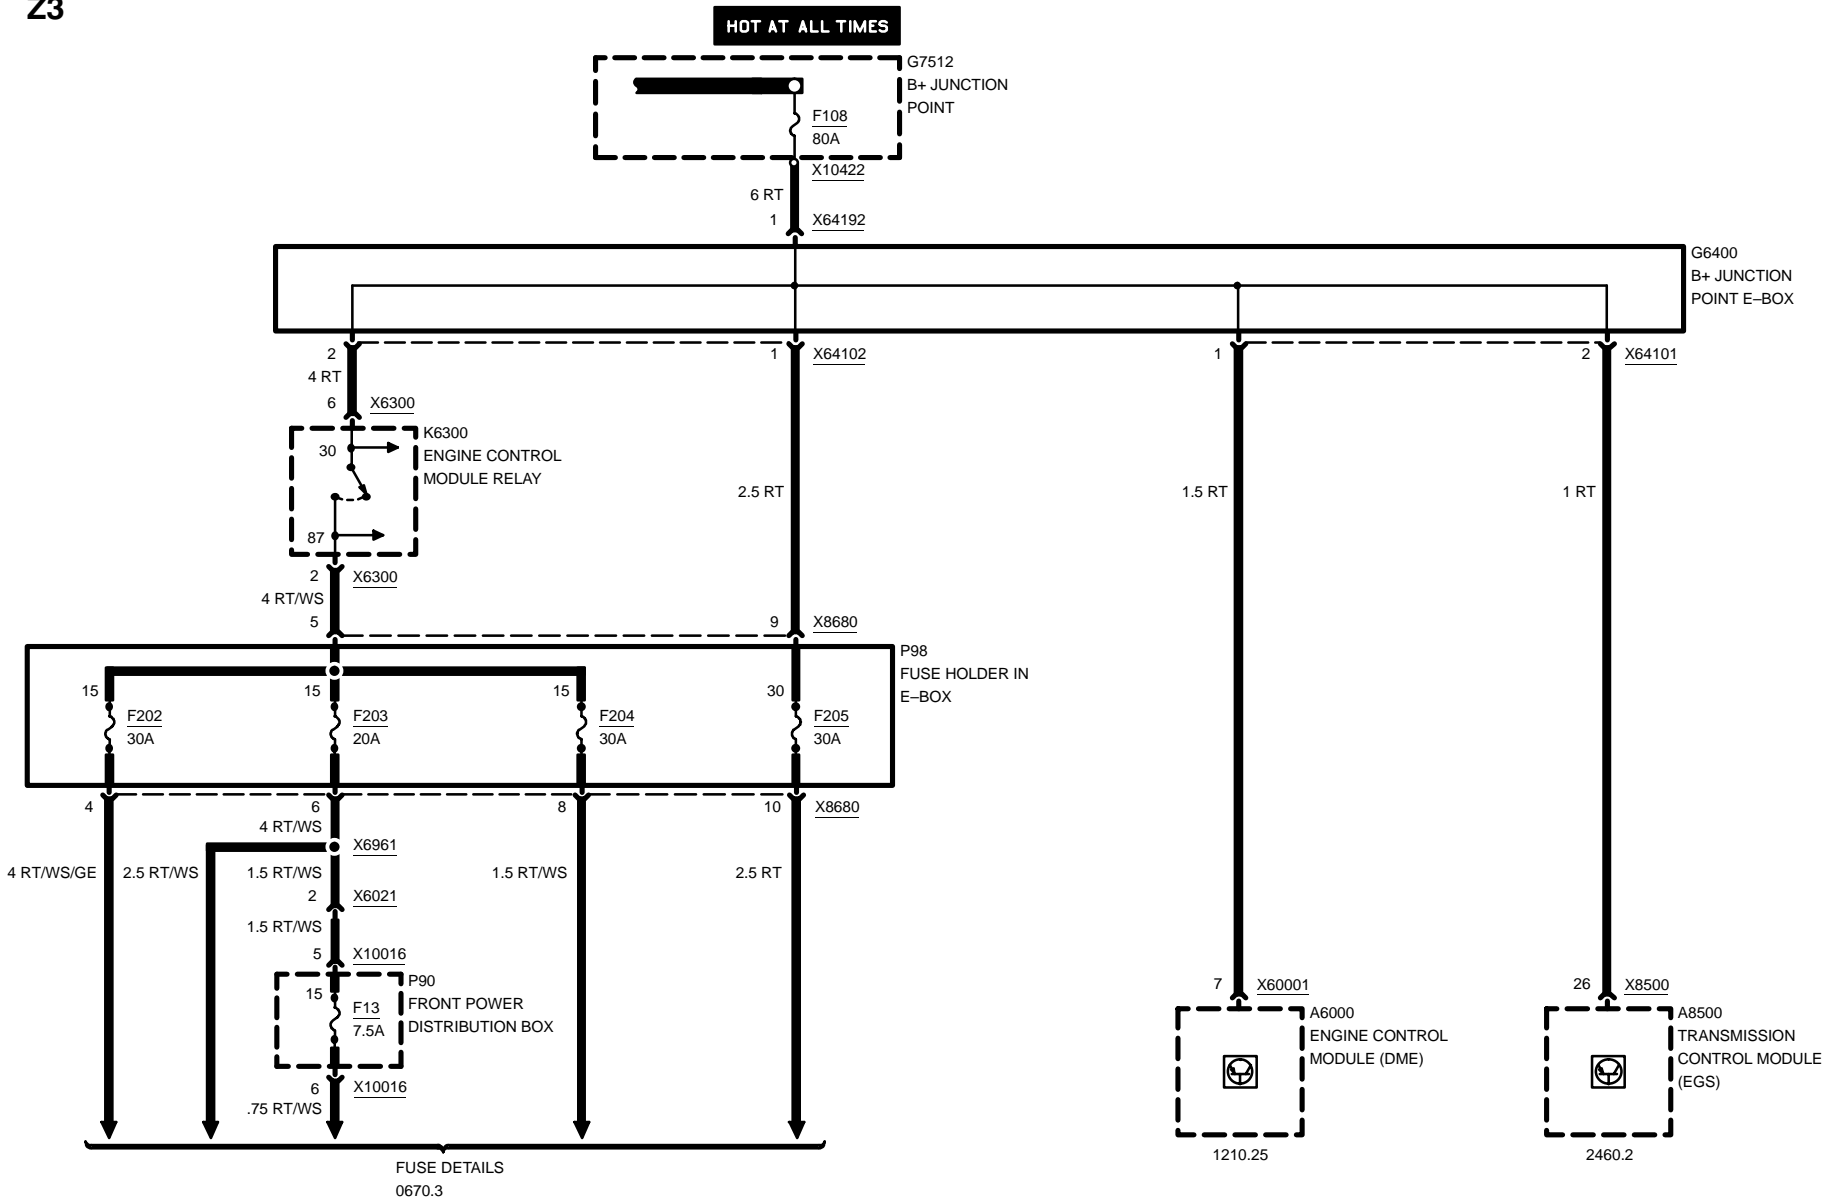

03/00

0670.2-01

1999






Z3

# POWER DISTRIBUTION

# Z3 VERSIONS

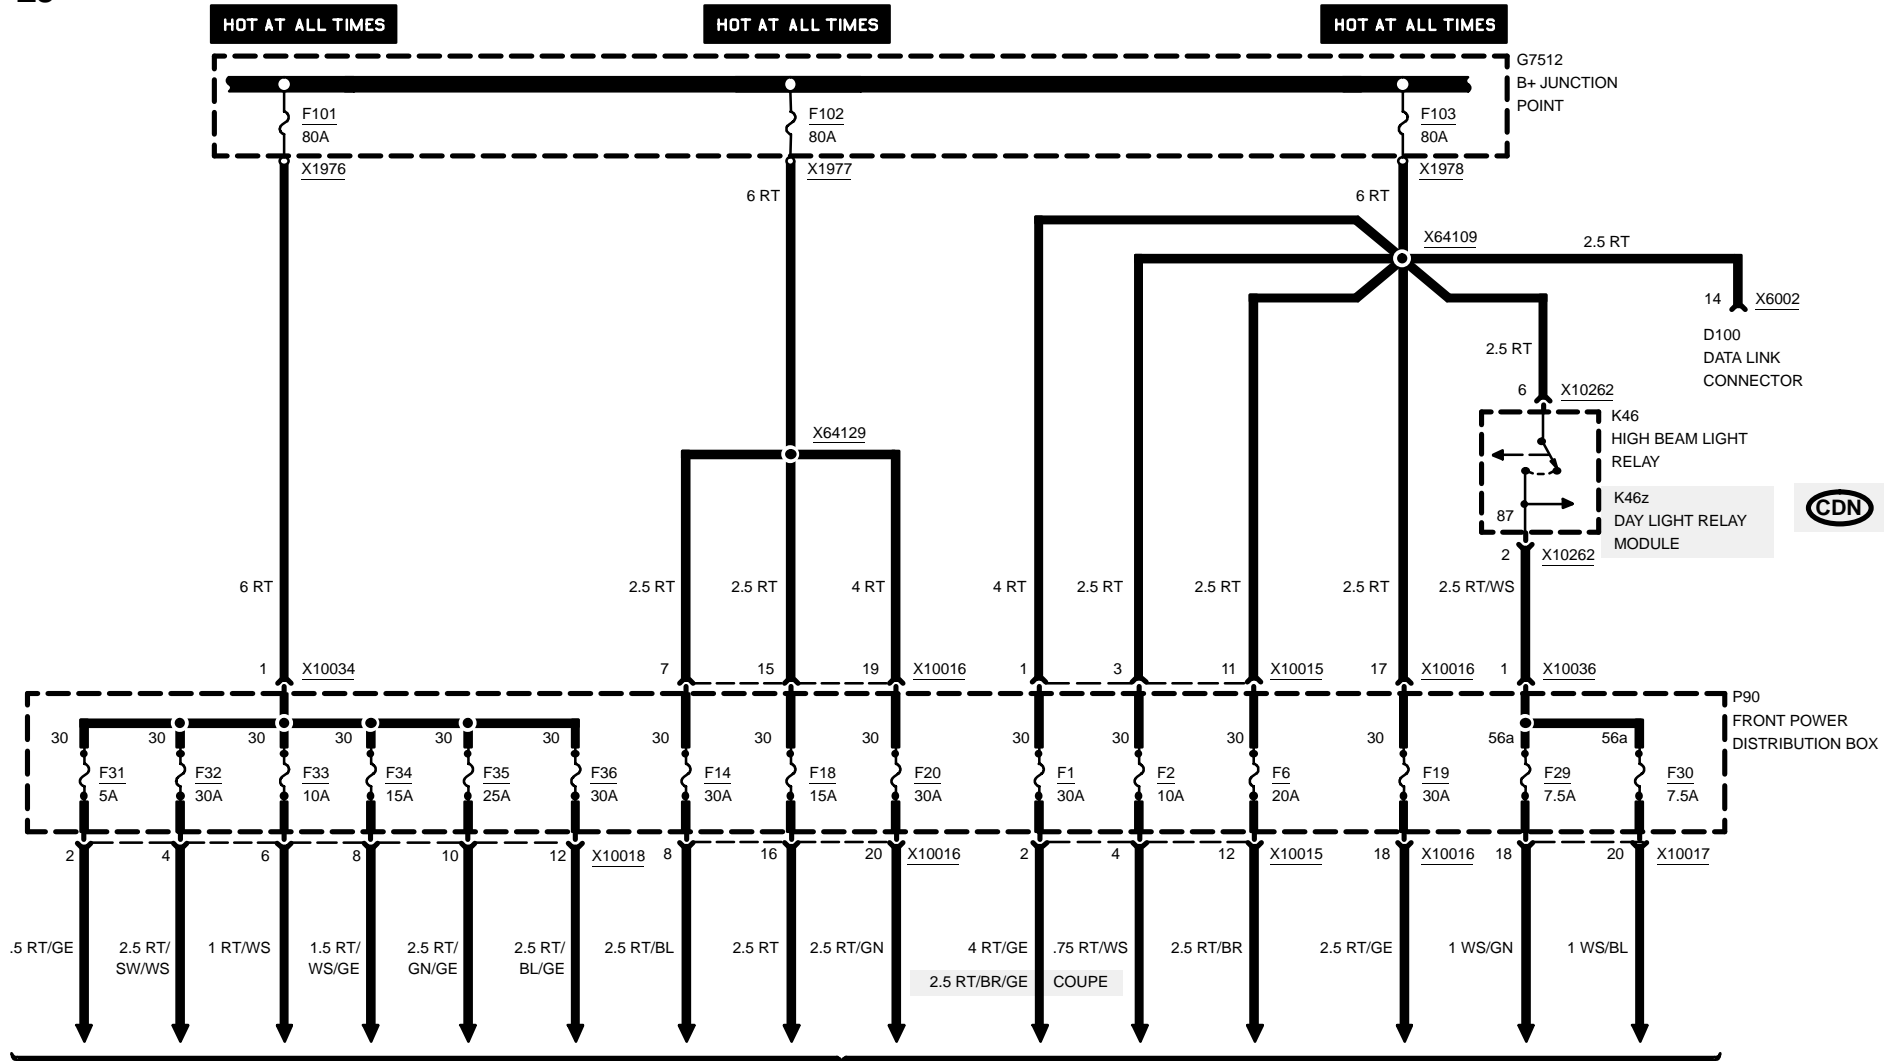


FUSE DETAILS  
0670.3



# POWER DISTRIBUTION

# Z3 VERSIONS

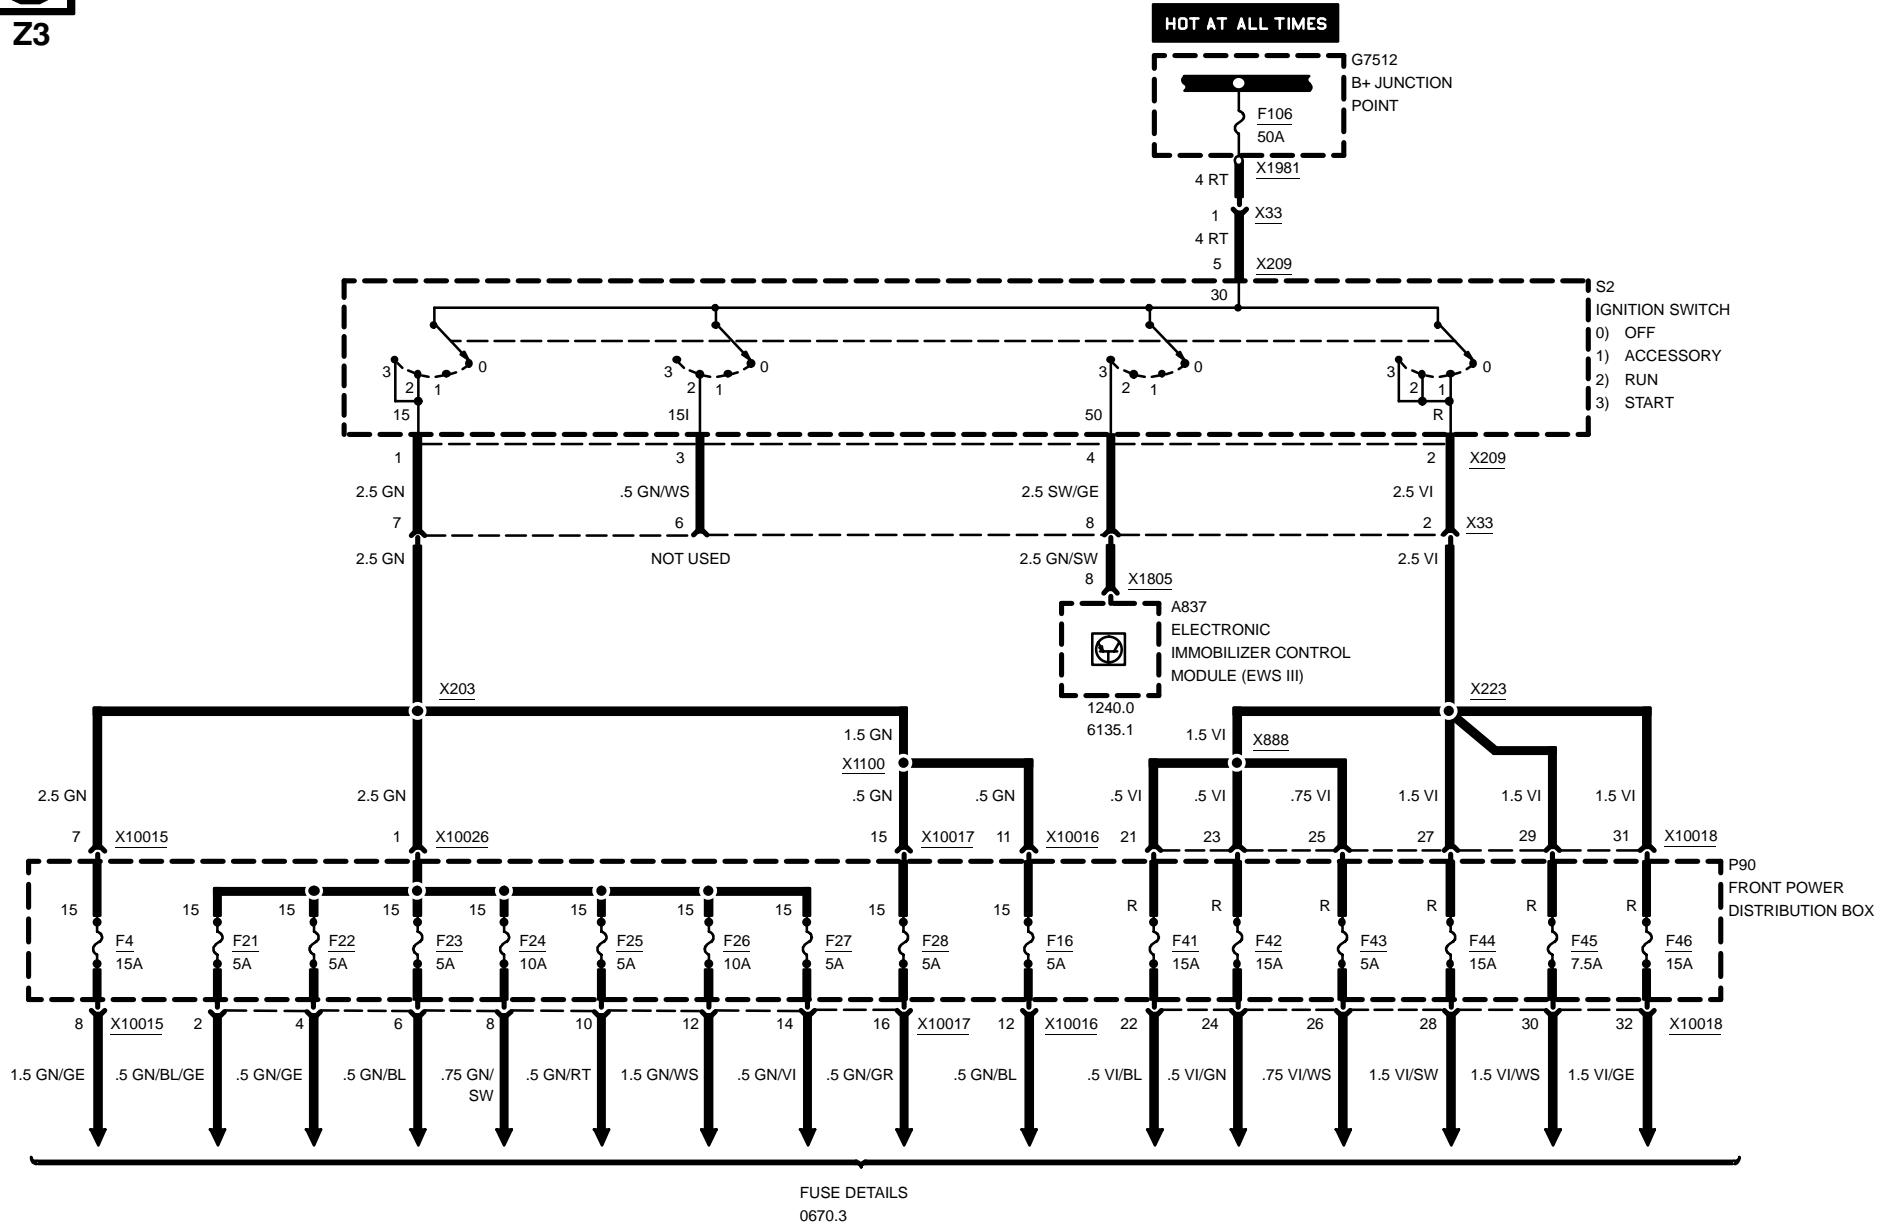








# POWER DISTRIBUTION

## M VERSIONS

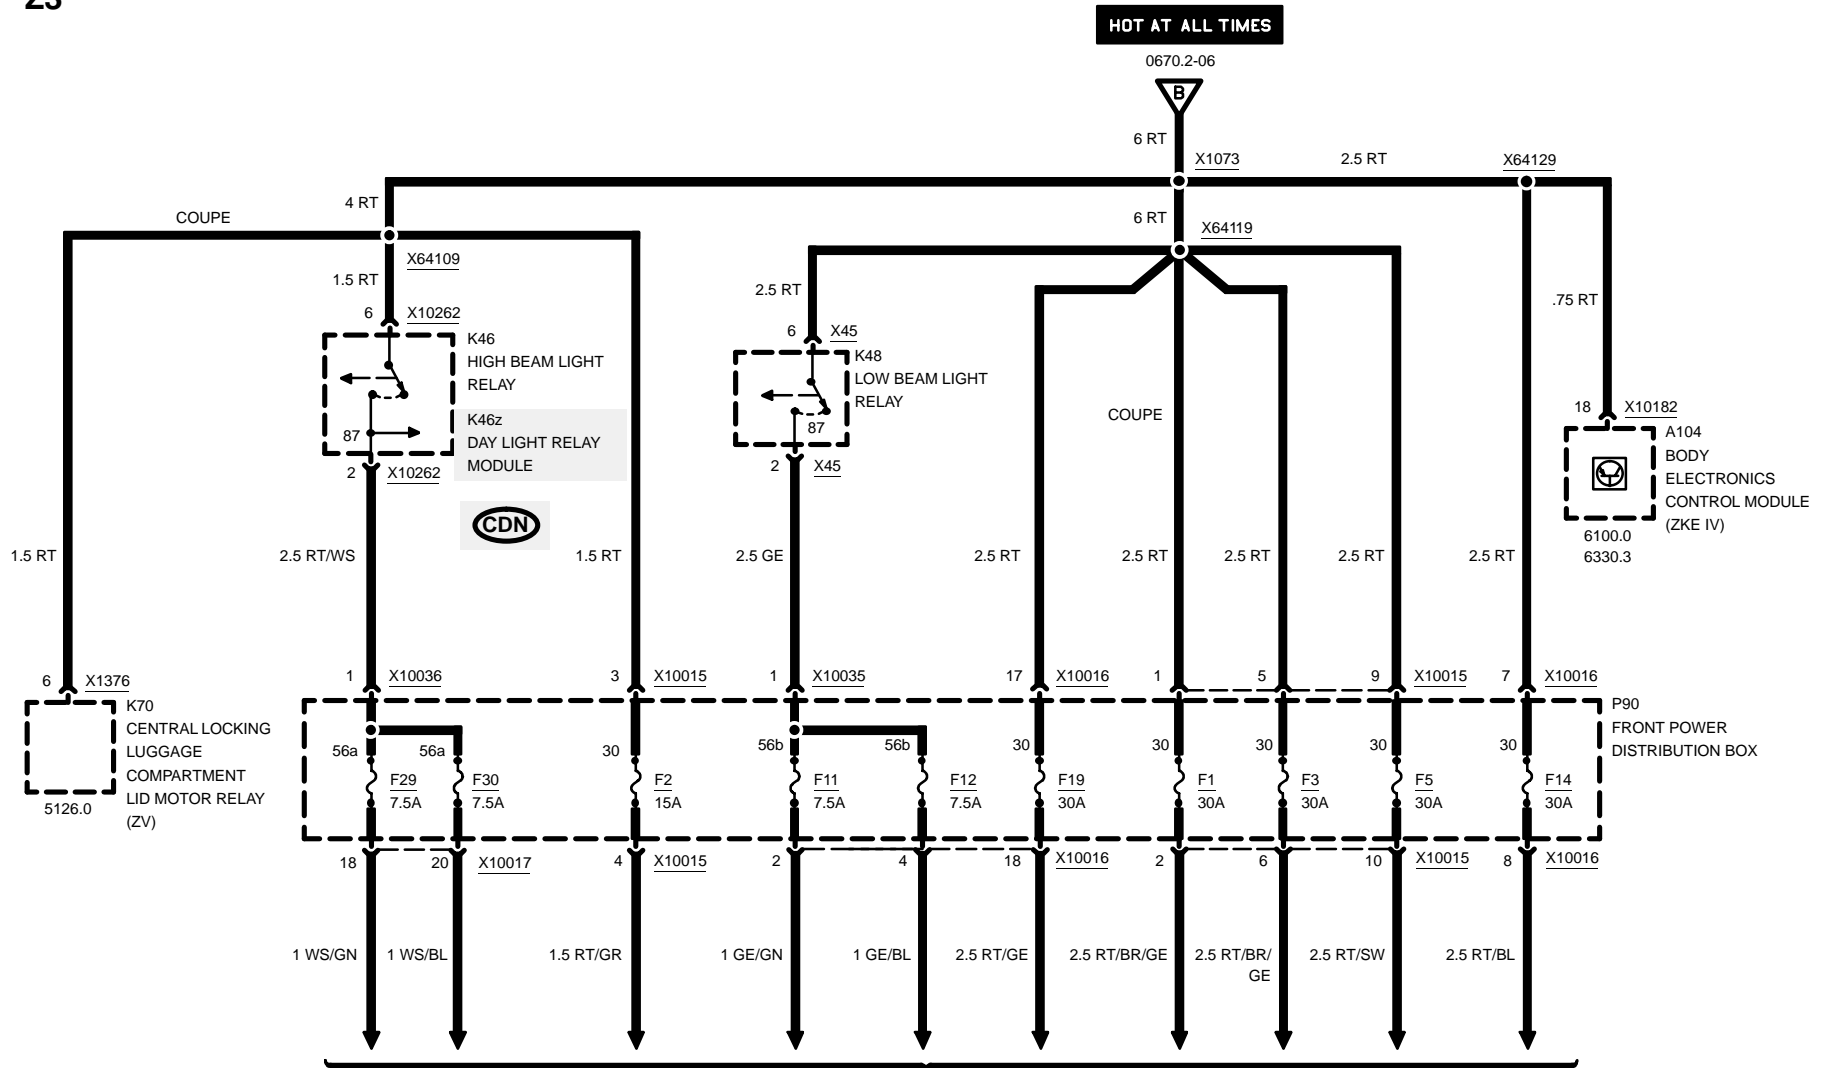


FUSE DETAILS  
0670.3





# POWER DISTRIBUTION


# M VERSIONS

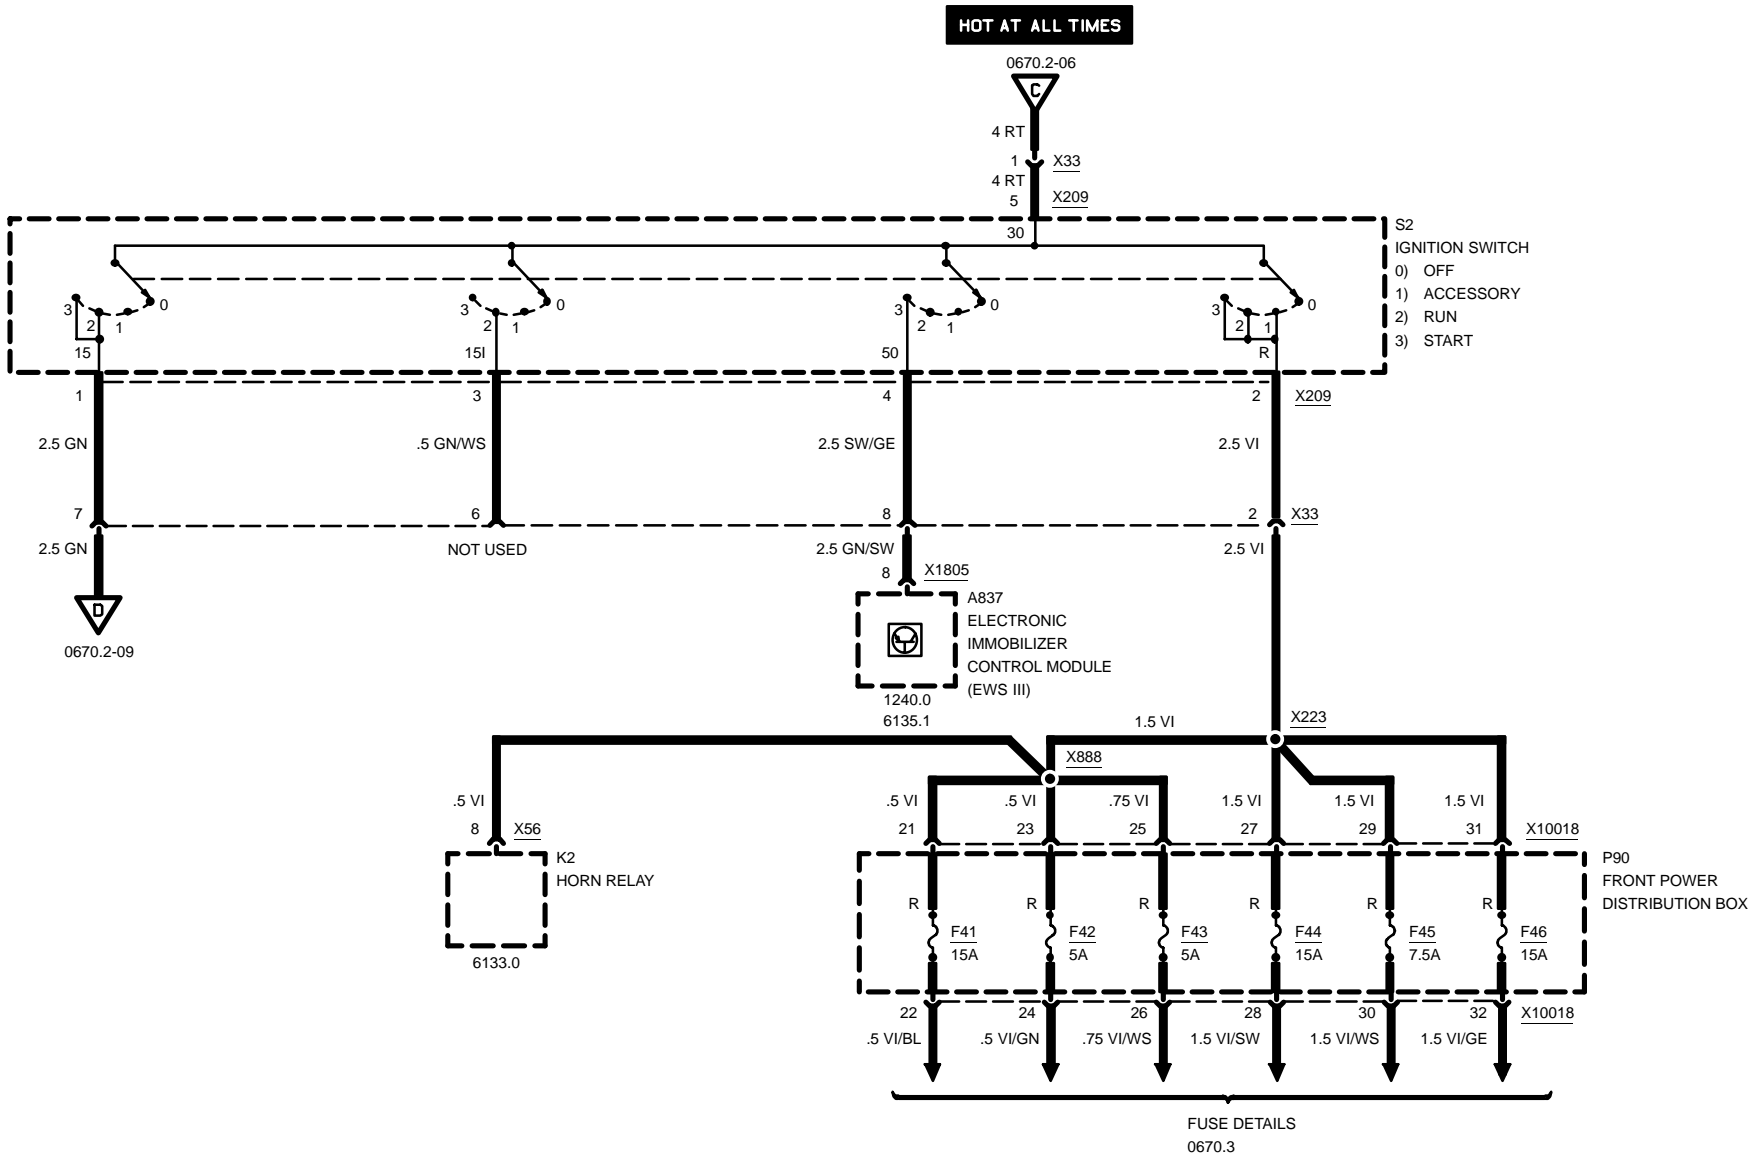



# POWER DISTRIBUTION

# M VERSIONS

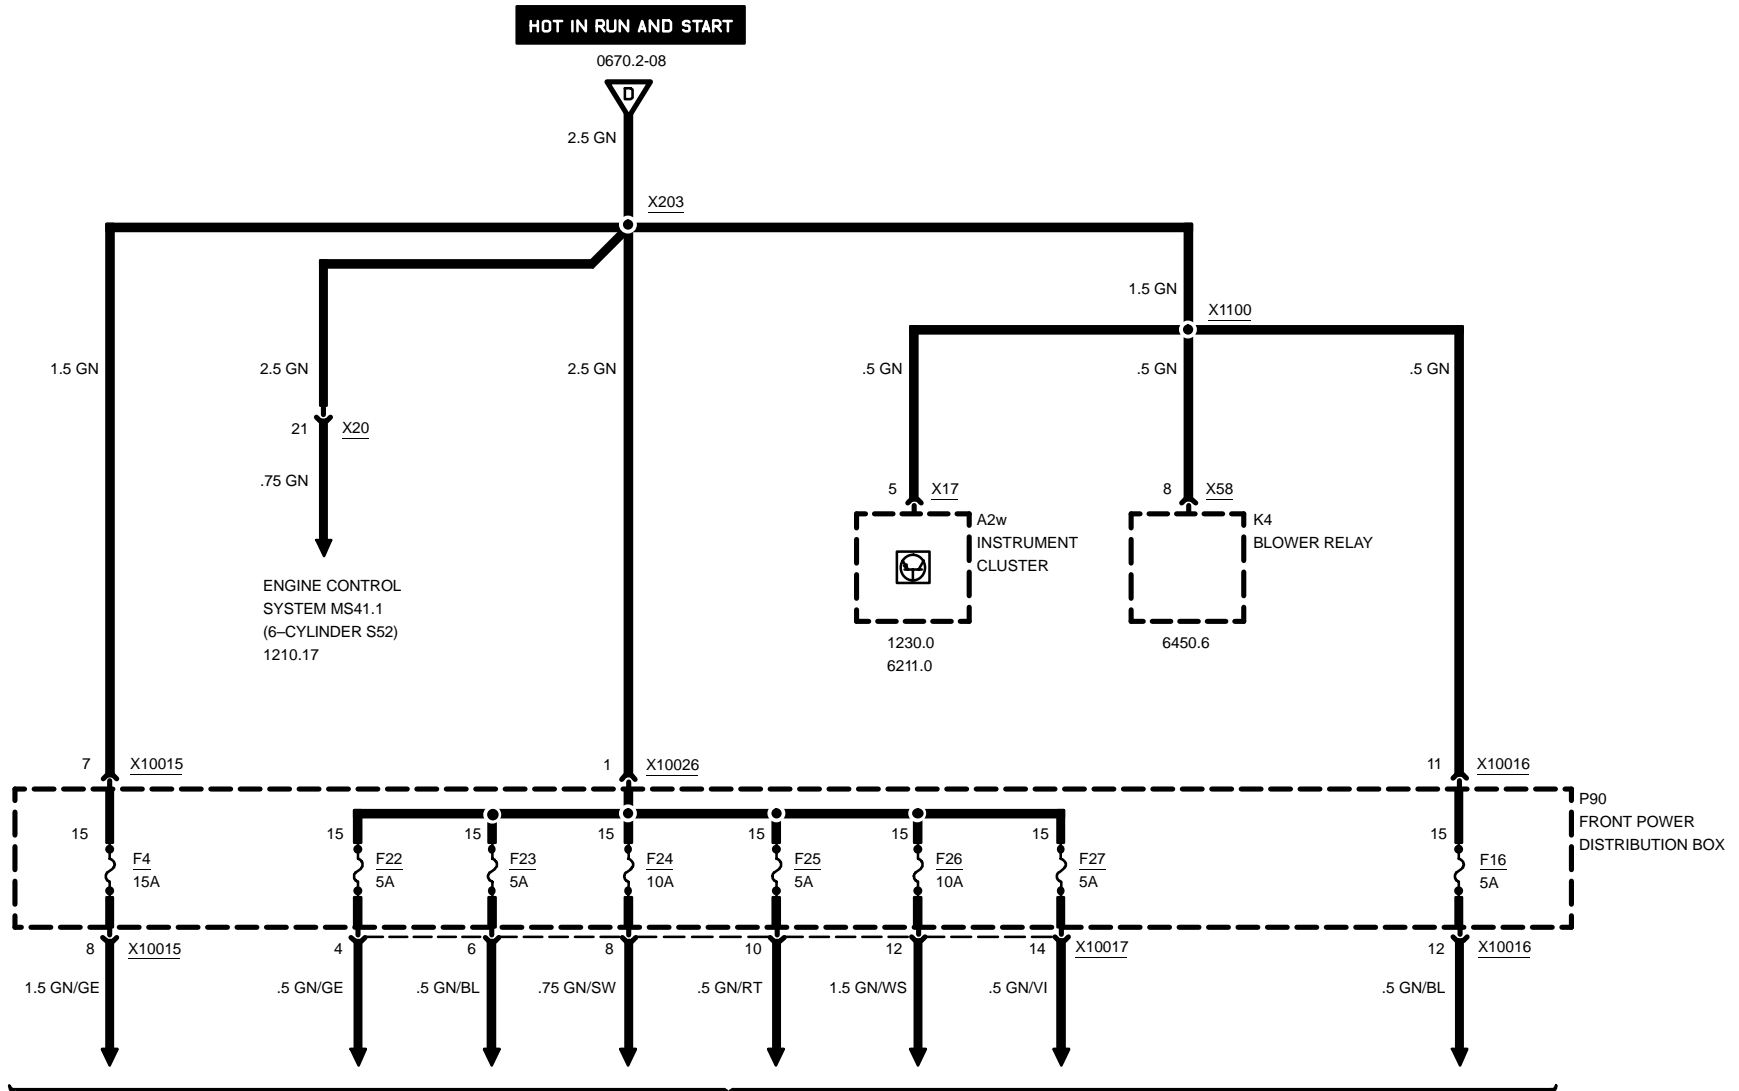


FUSE DETAILS 0670.3



# 0670.3 FUSE DETAILS

## FUSES 1, 2, 3, AND 4

Z3

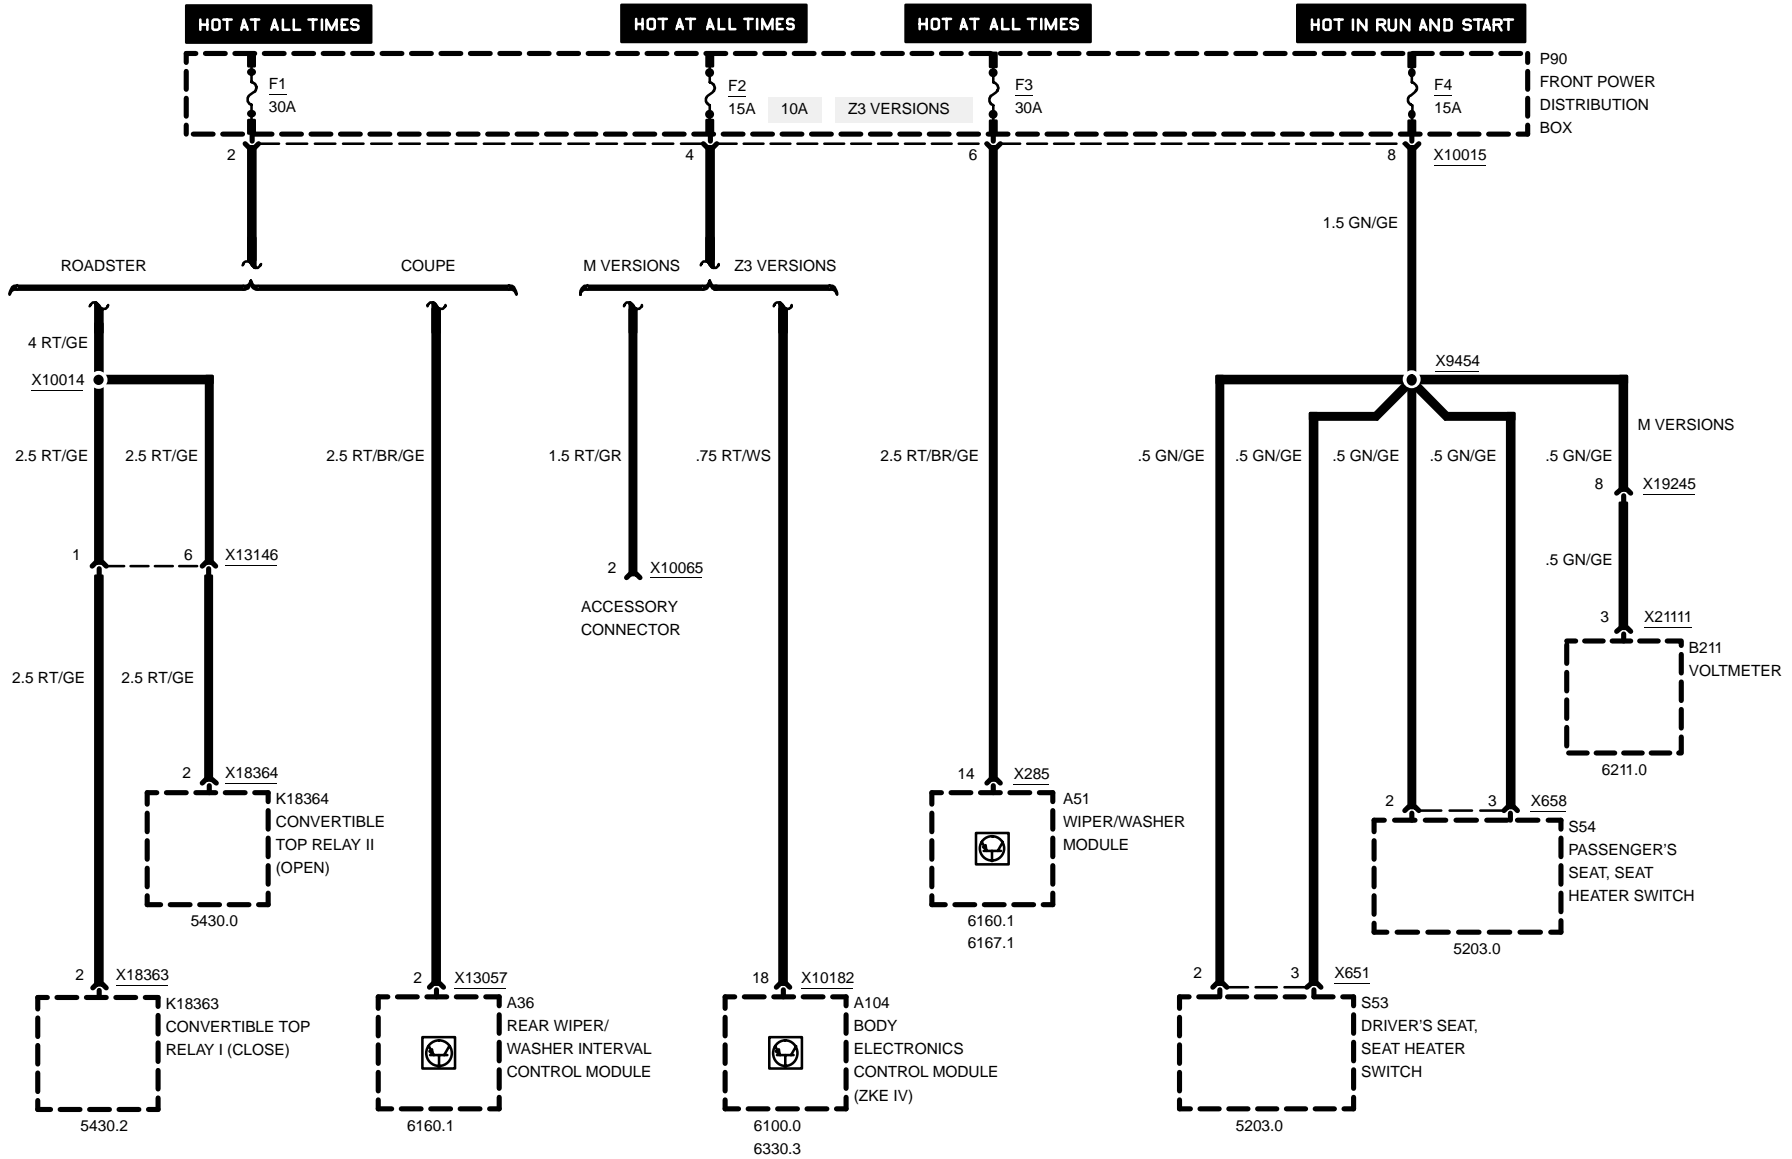




# FUSE DETAILS

## FUSES 5, 6, 7, AND 8

Z3

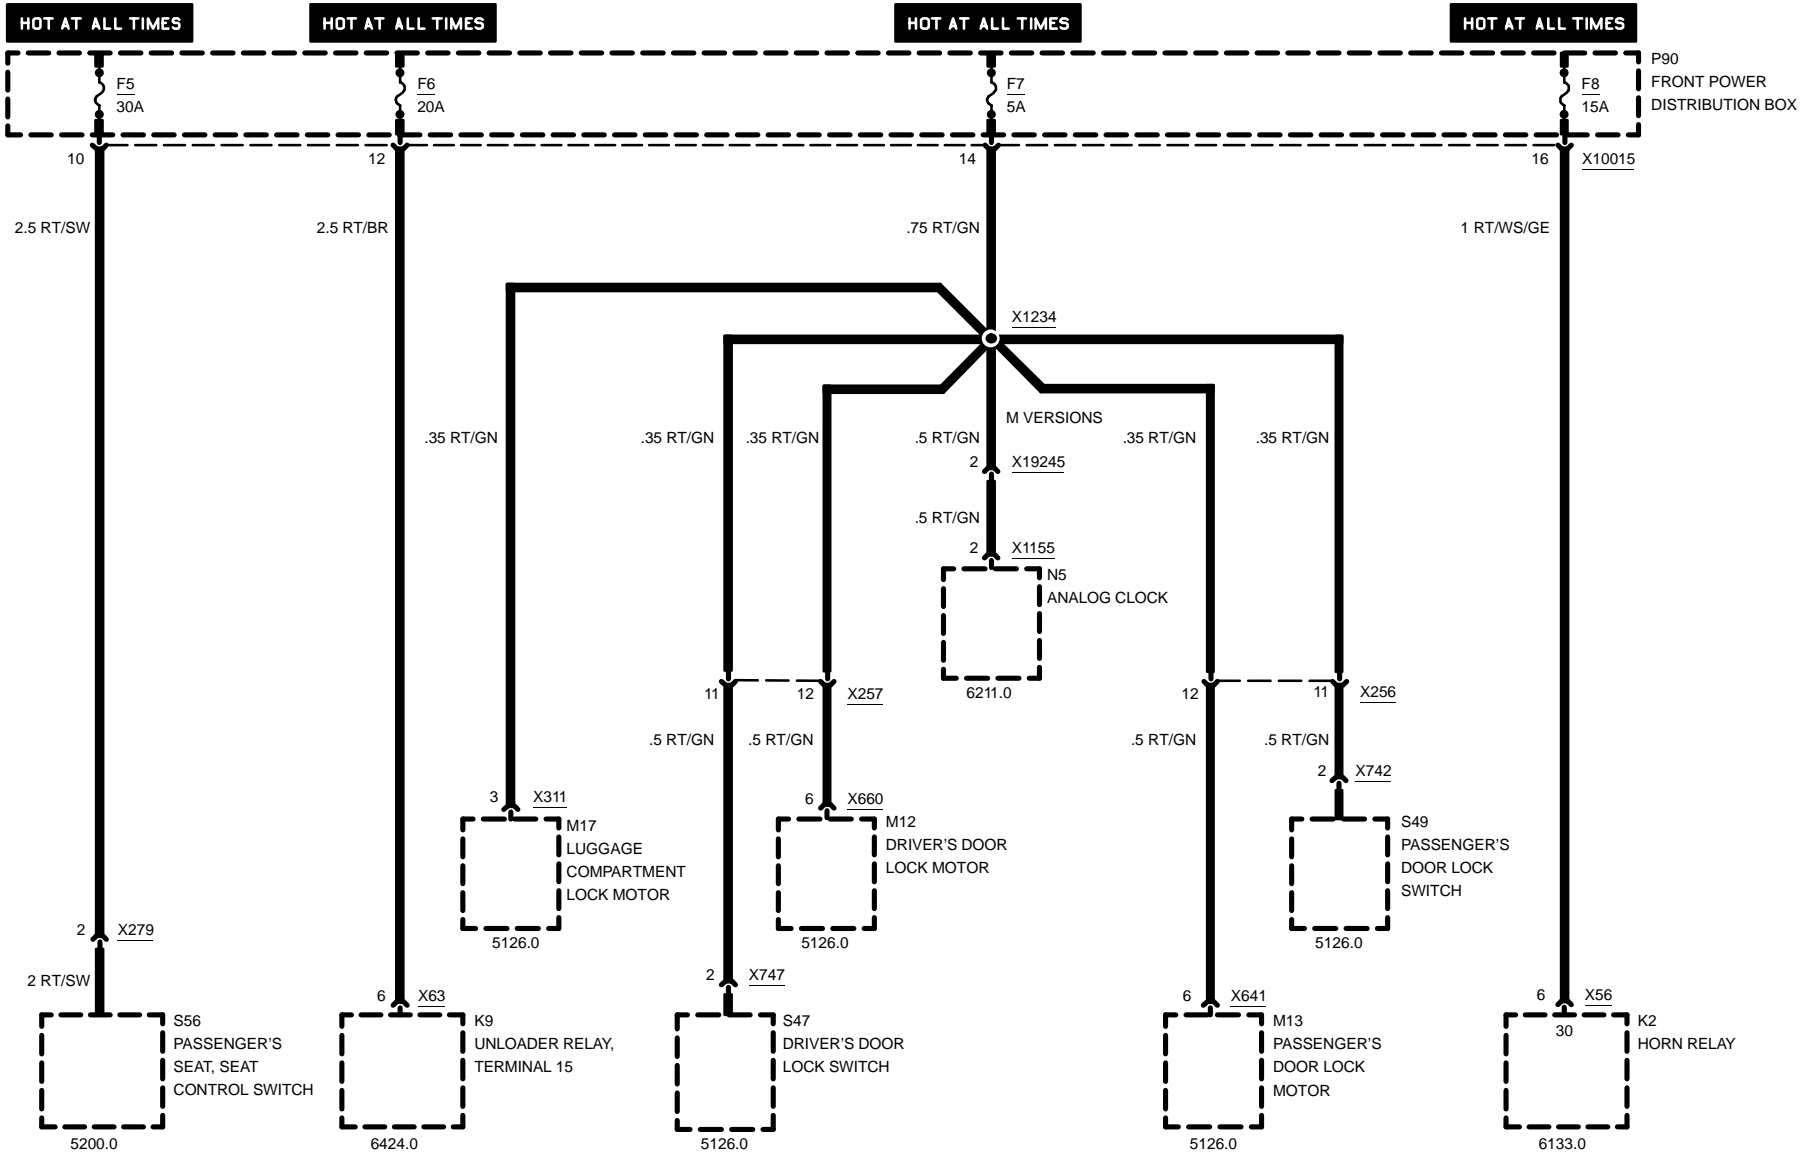

03/00

0670.3-01


1999



# FUSE DETAILS

## FUSES 9 AND 10

Z3

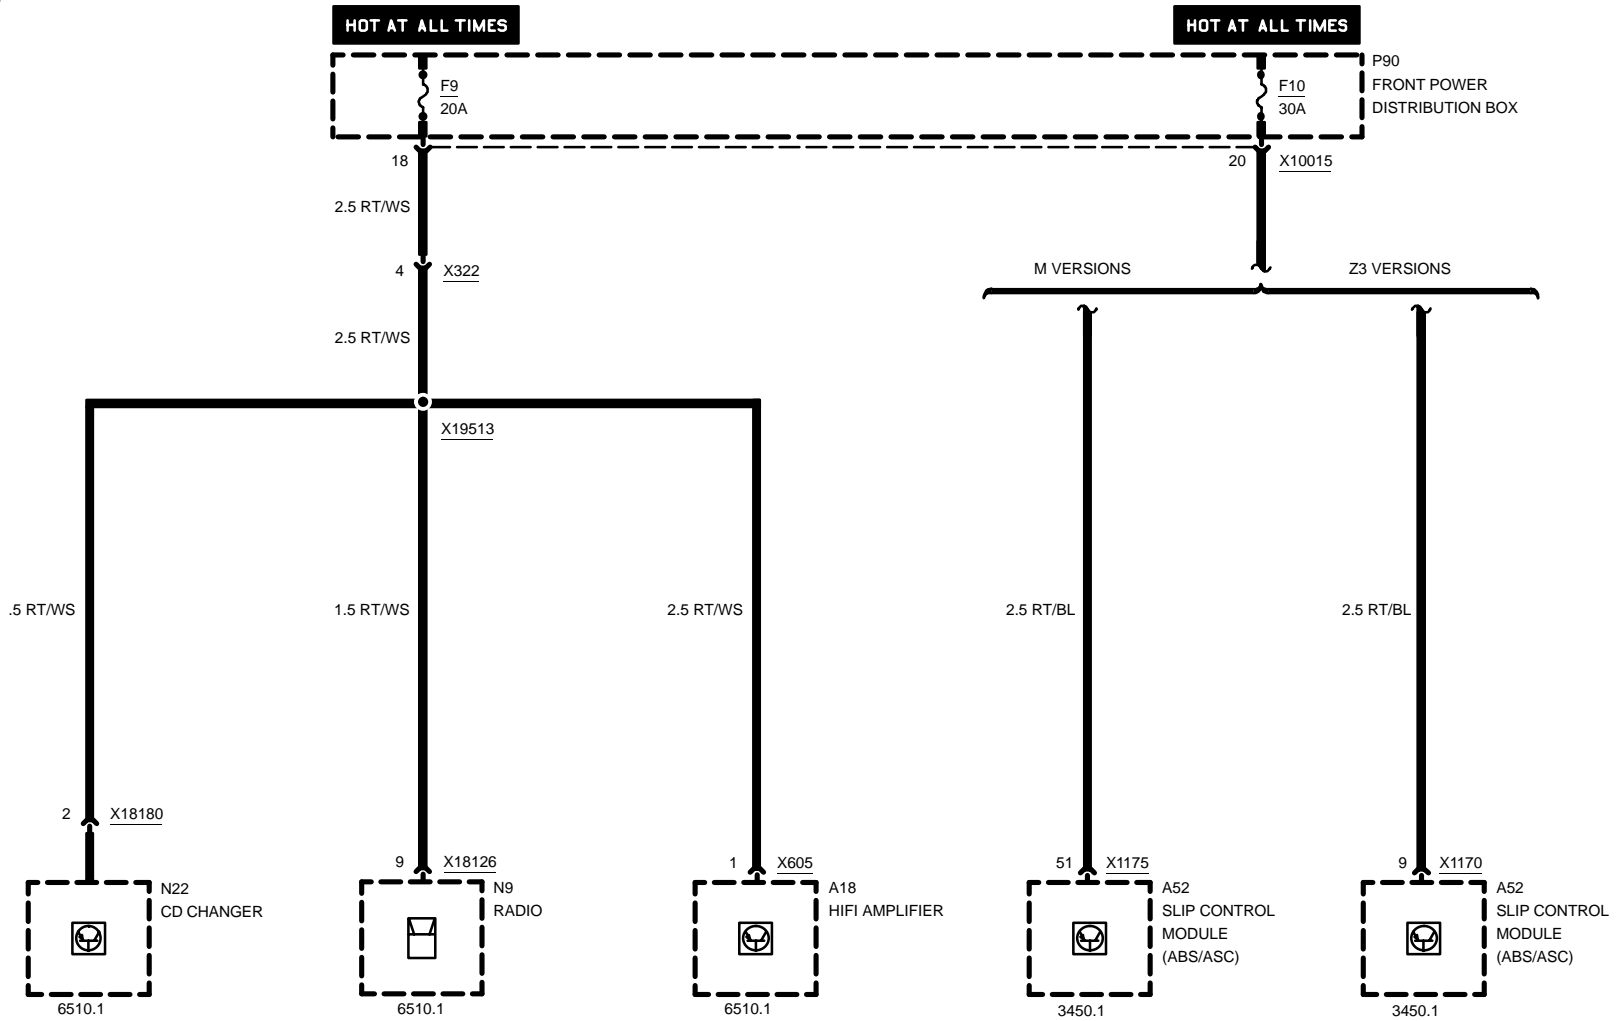




# FUSE DETAILS

## FUSES 11, 12, AND 13

Z3

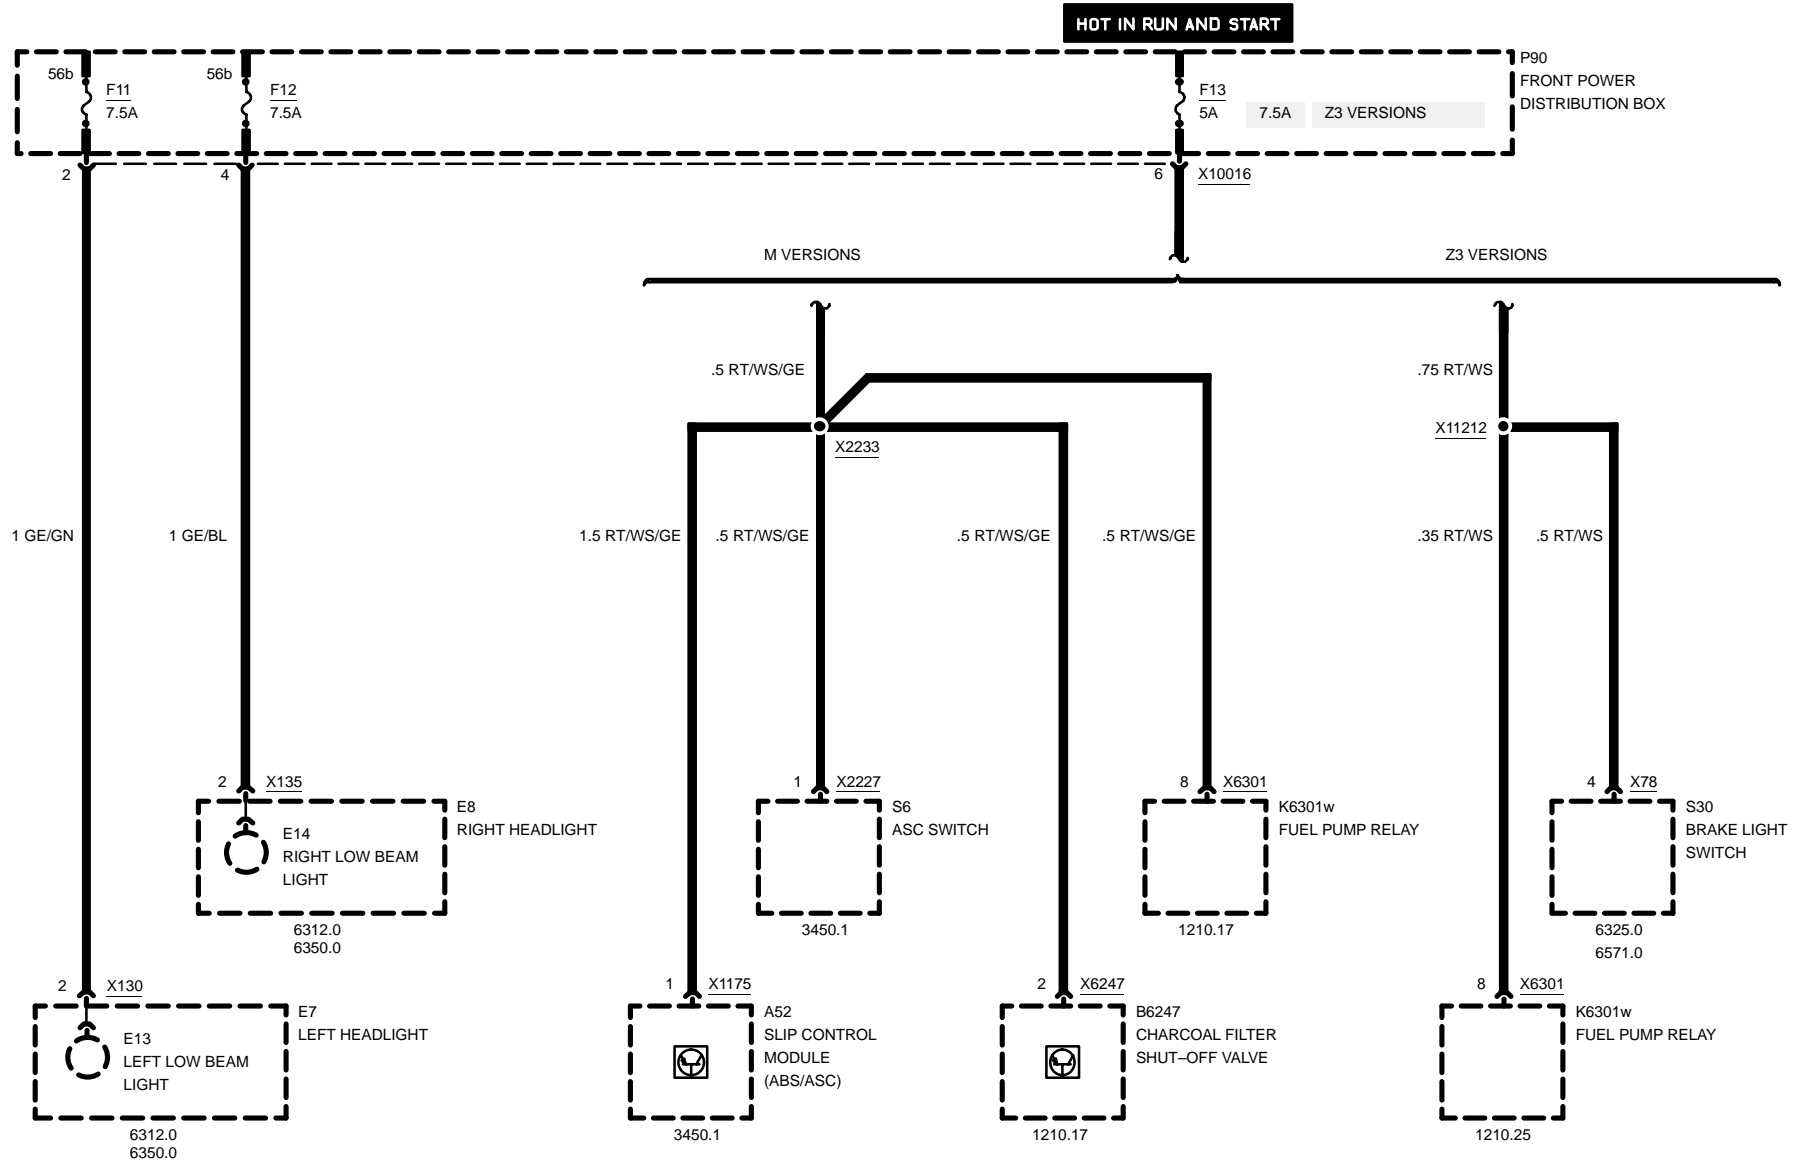




# FUSE DETAILS

## FUSES 14, 15, 16, AND 18

Z3

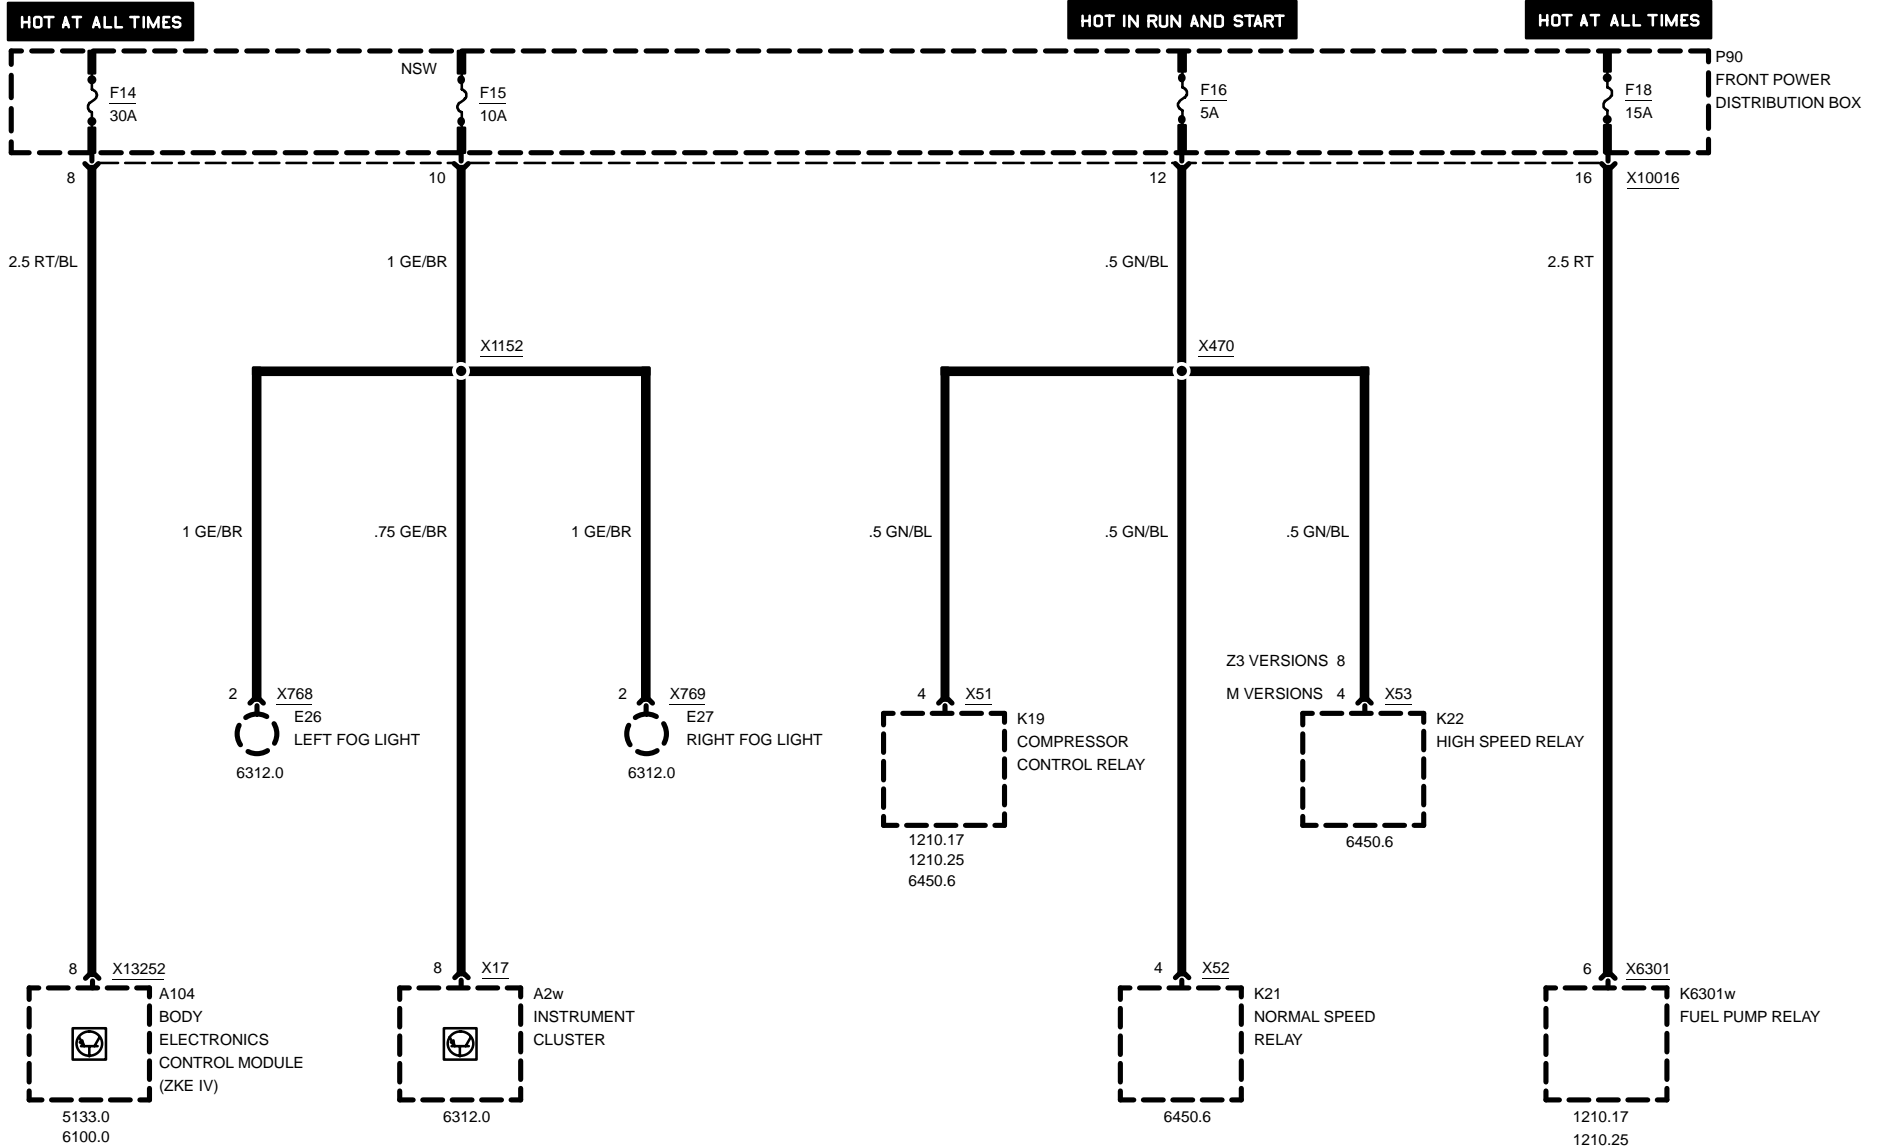

03/00

0670.3-04


1999



# FUSE DETAILS

## FUSES 19, 20, 21, AND 22

Z3

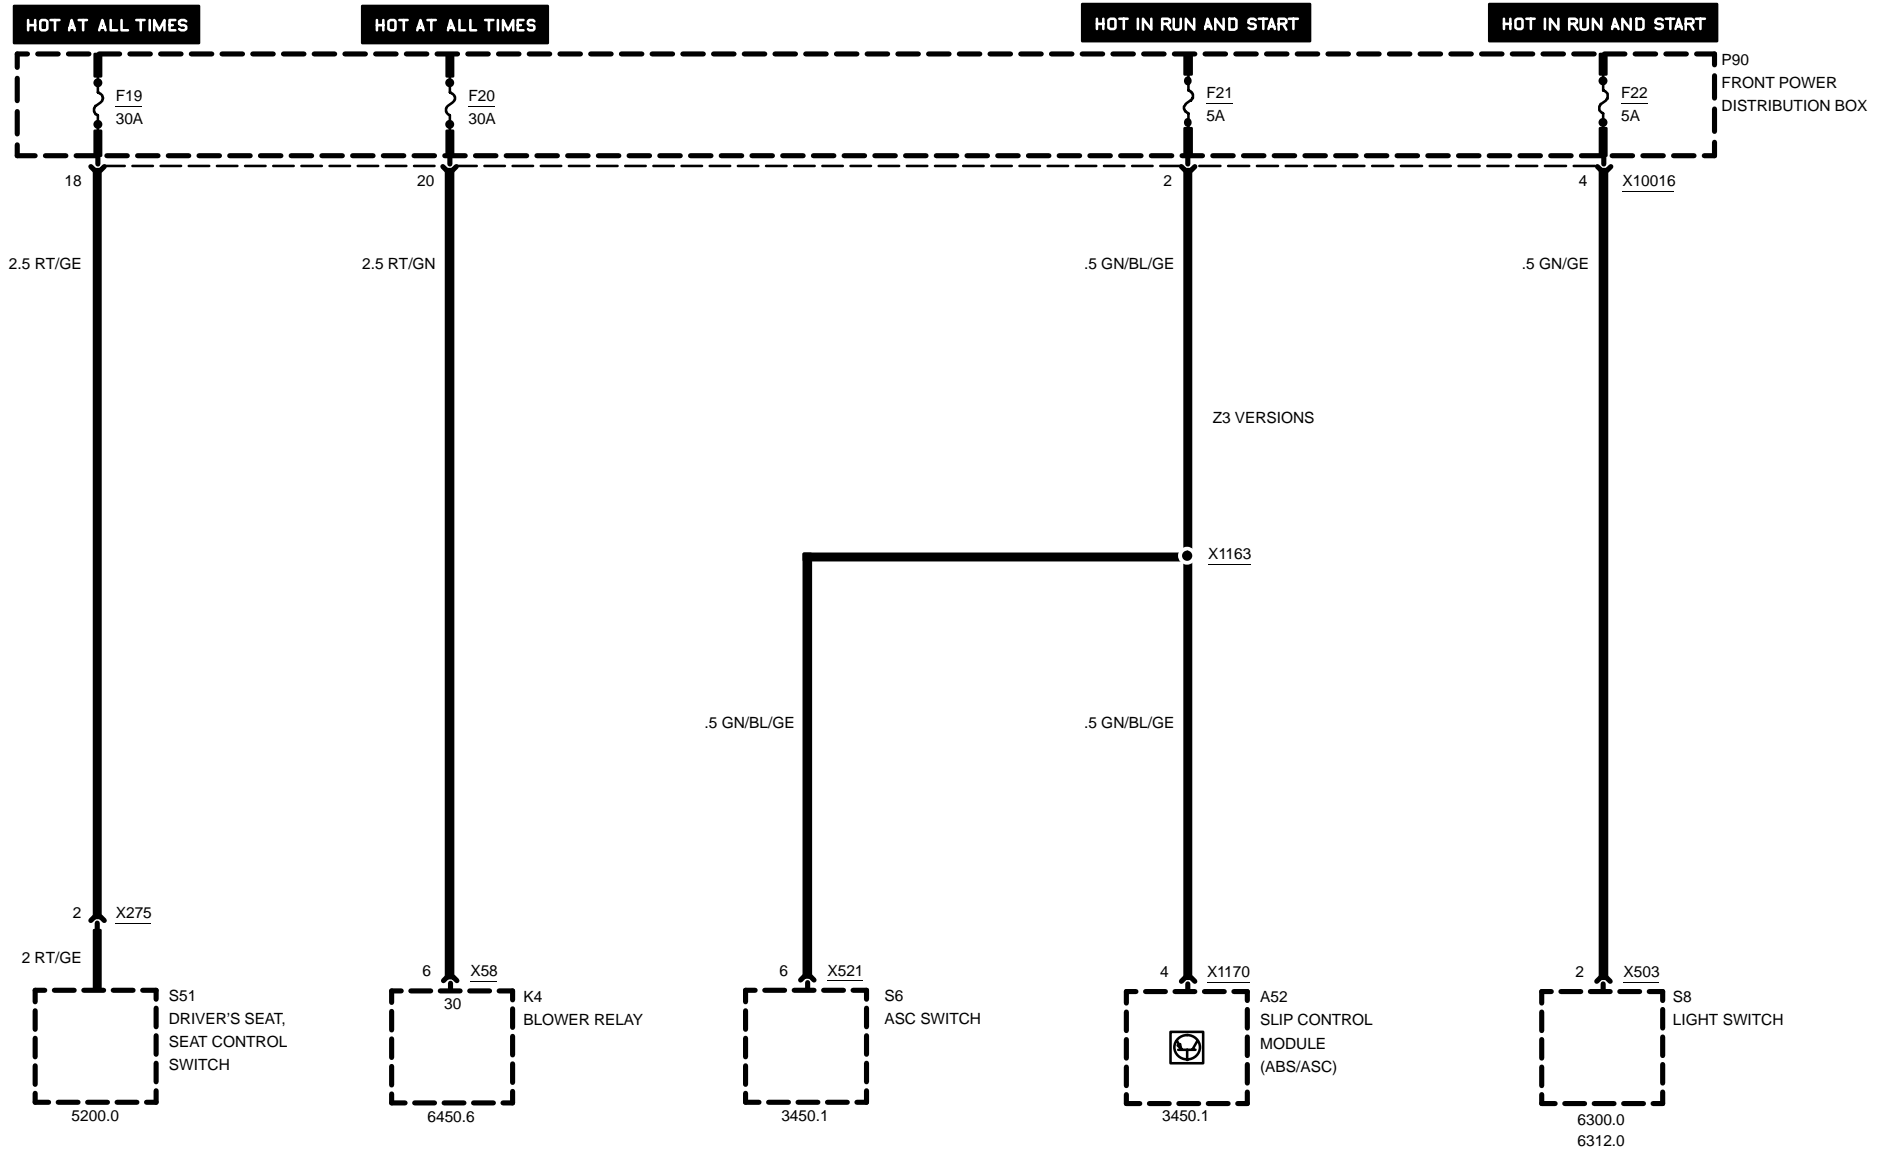






# FUSE DETAILS

## FUSE 23

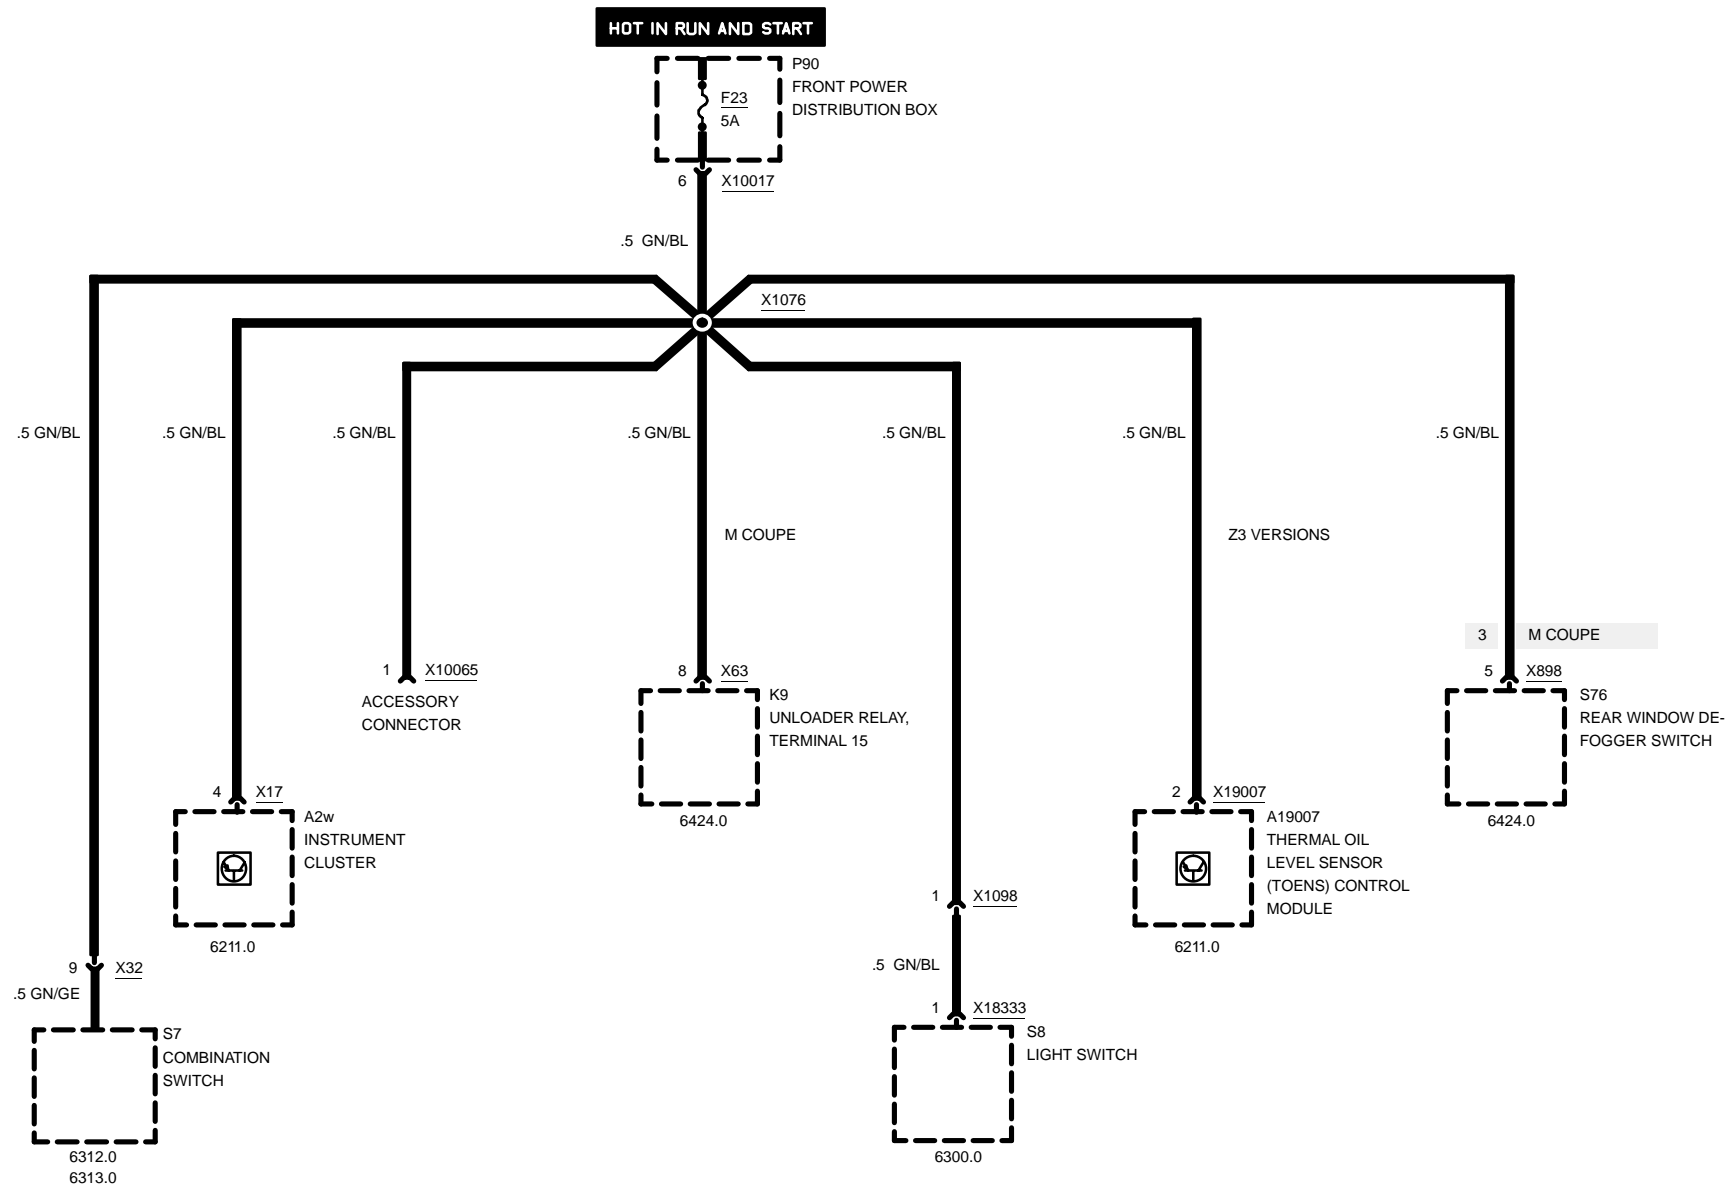




# FUSE DETAILS

## FUSES 24 AND 25

Z3

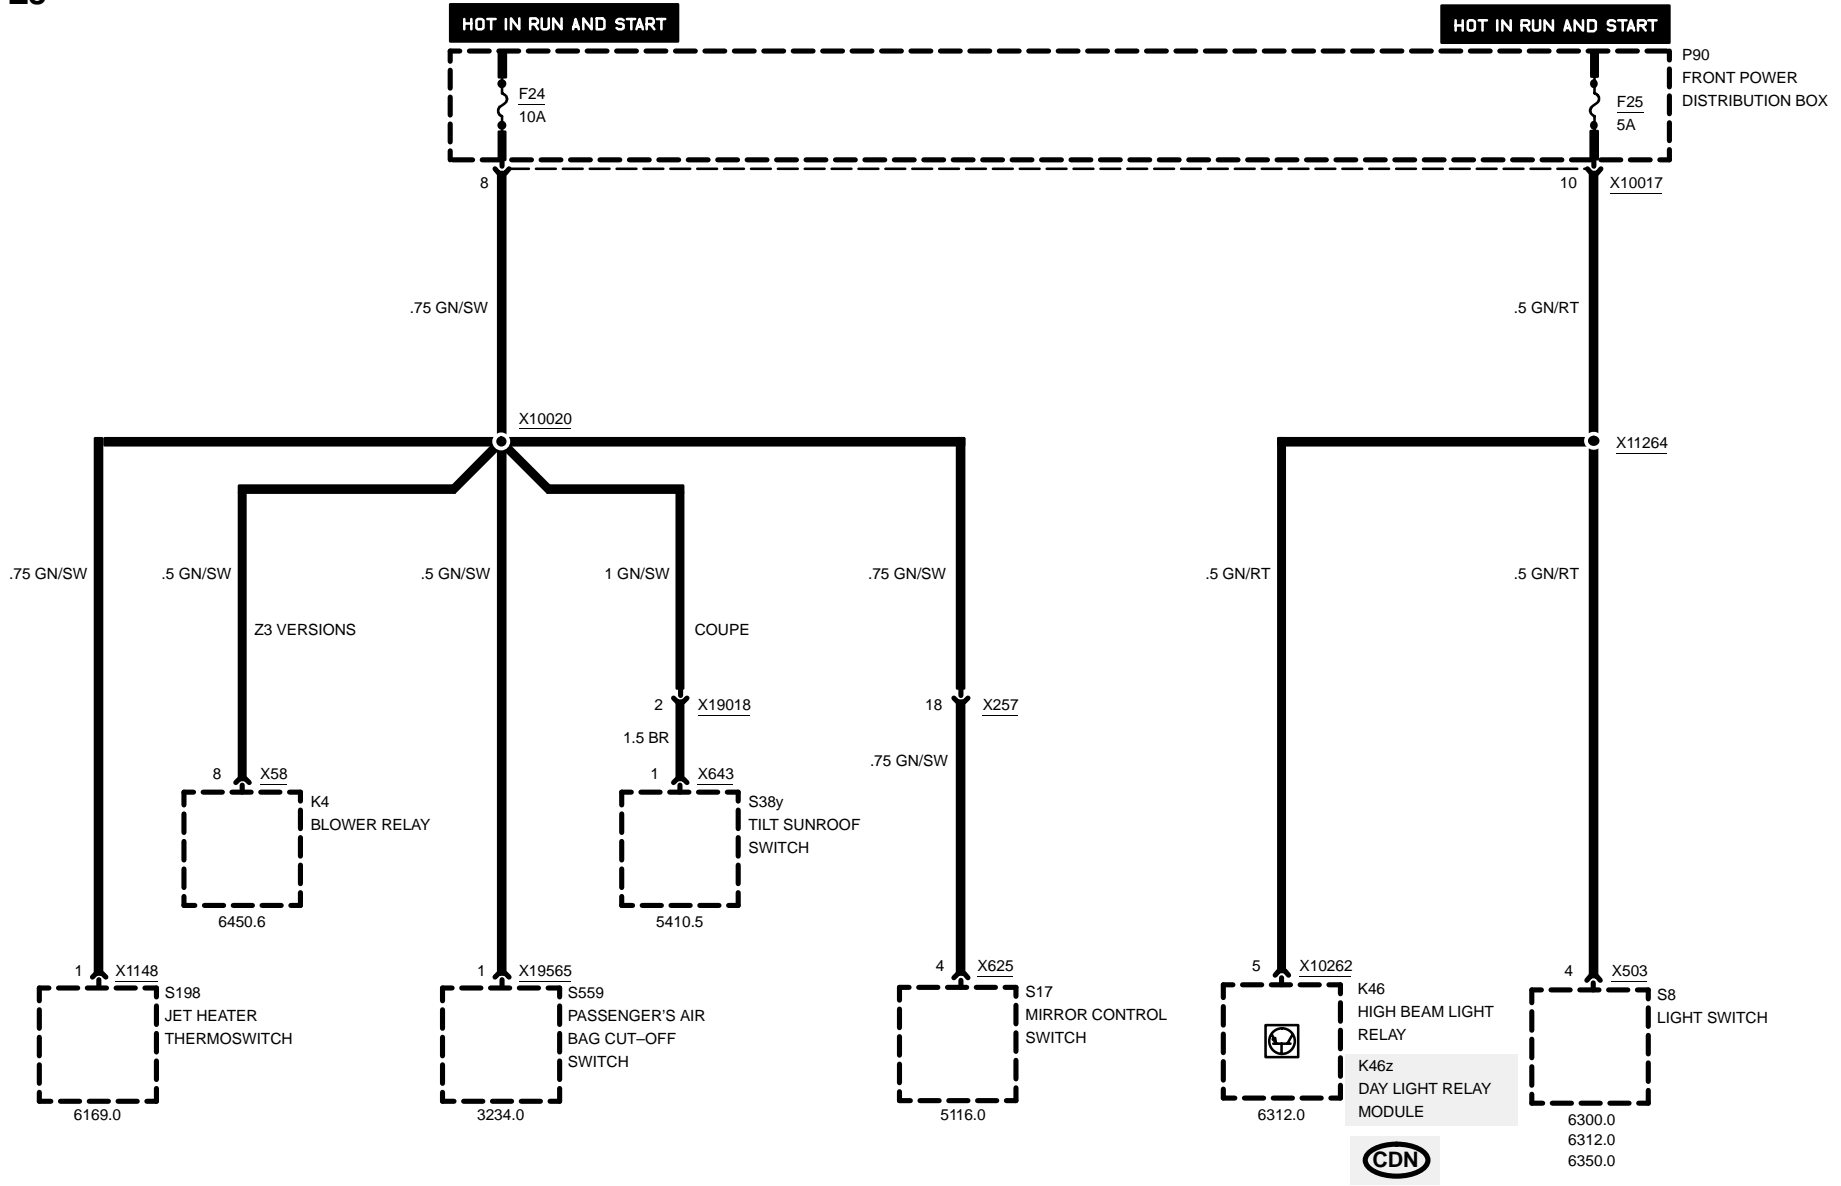

03/00

0670.3-07


1999



# FUSE DETAILS

## FUSE 26

Z3

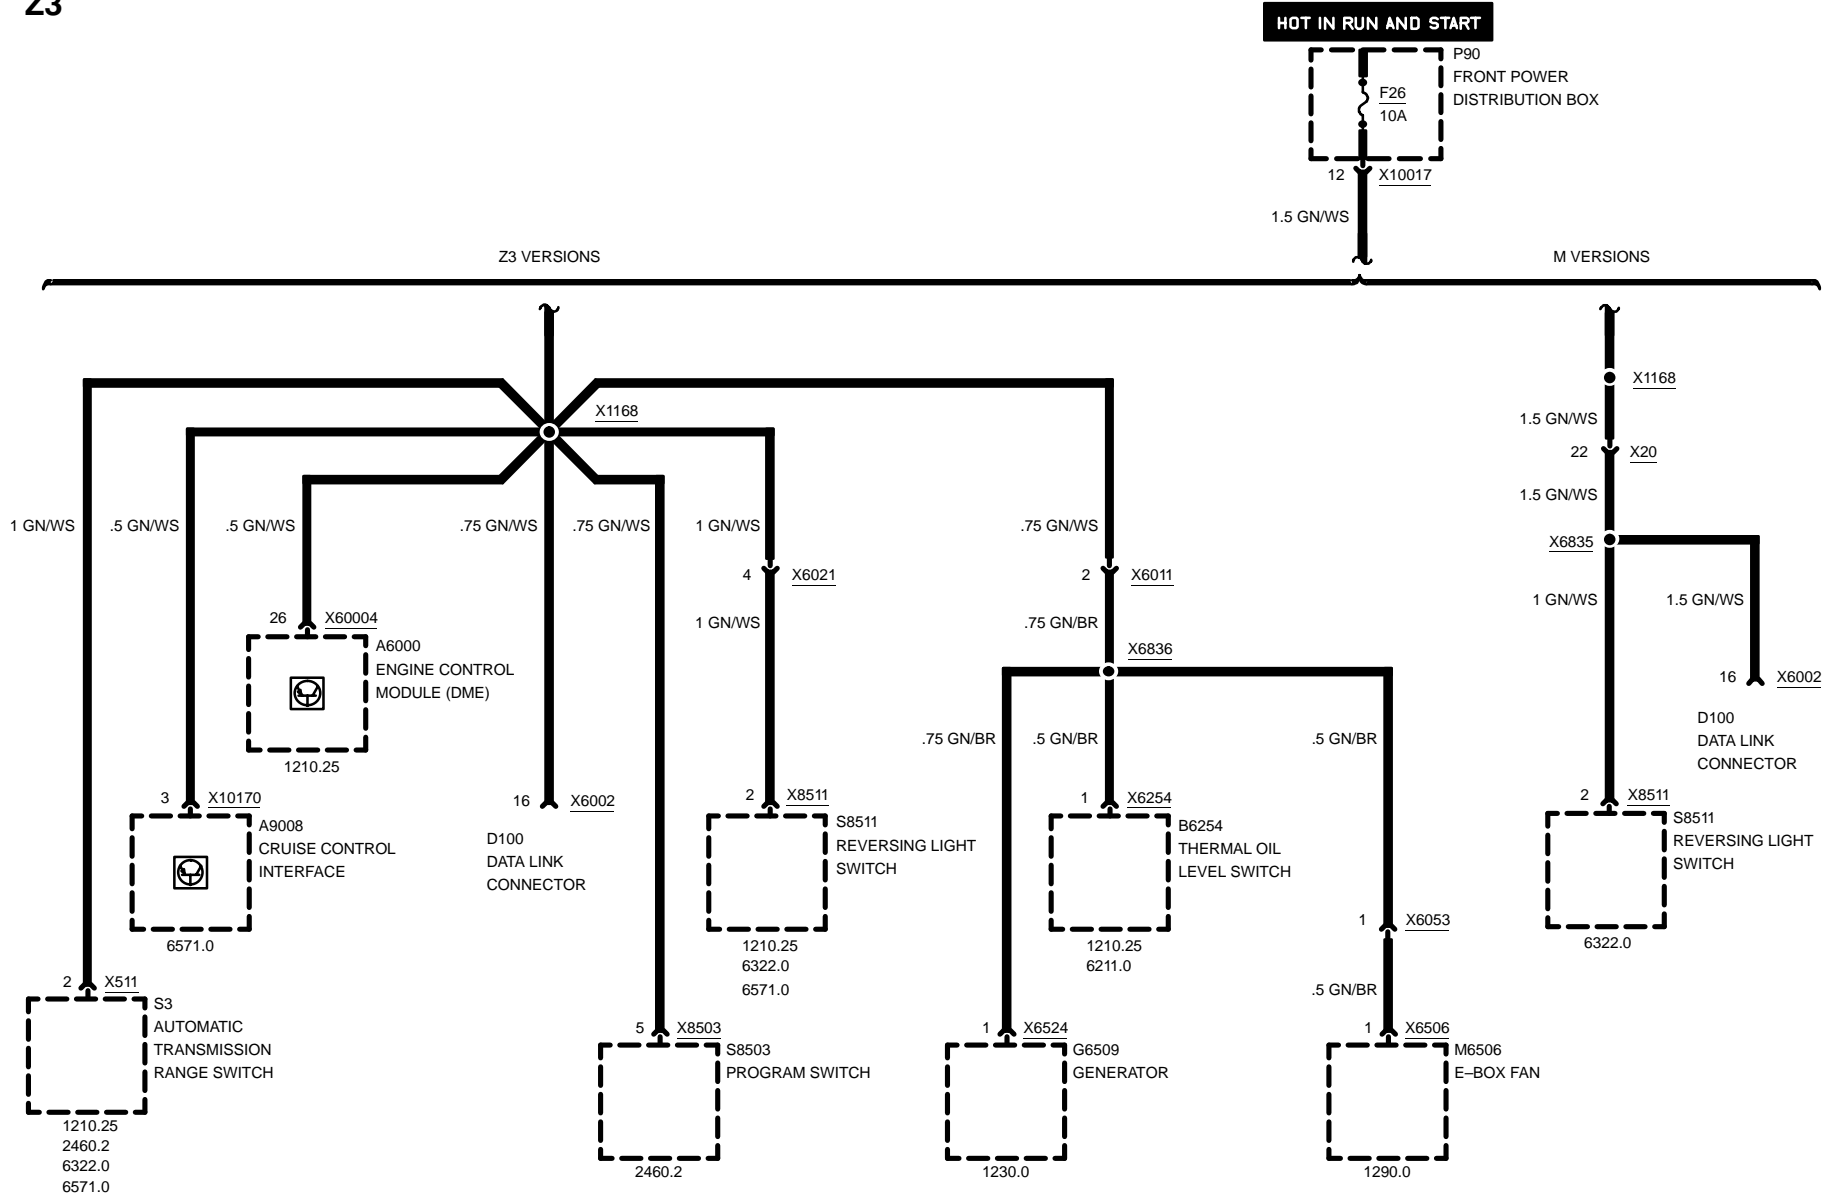

03/00

0670.3-08


1999



# FUSE DETAILS

## FUSES 27, 28, 29, AND 30

Z3

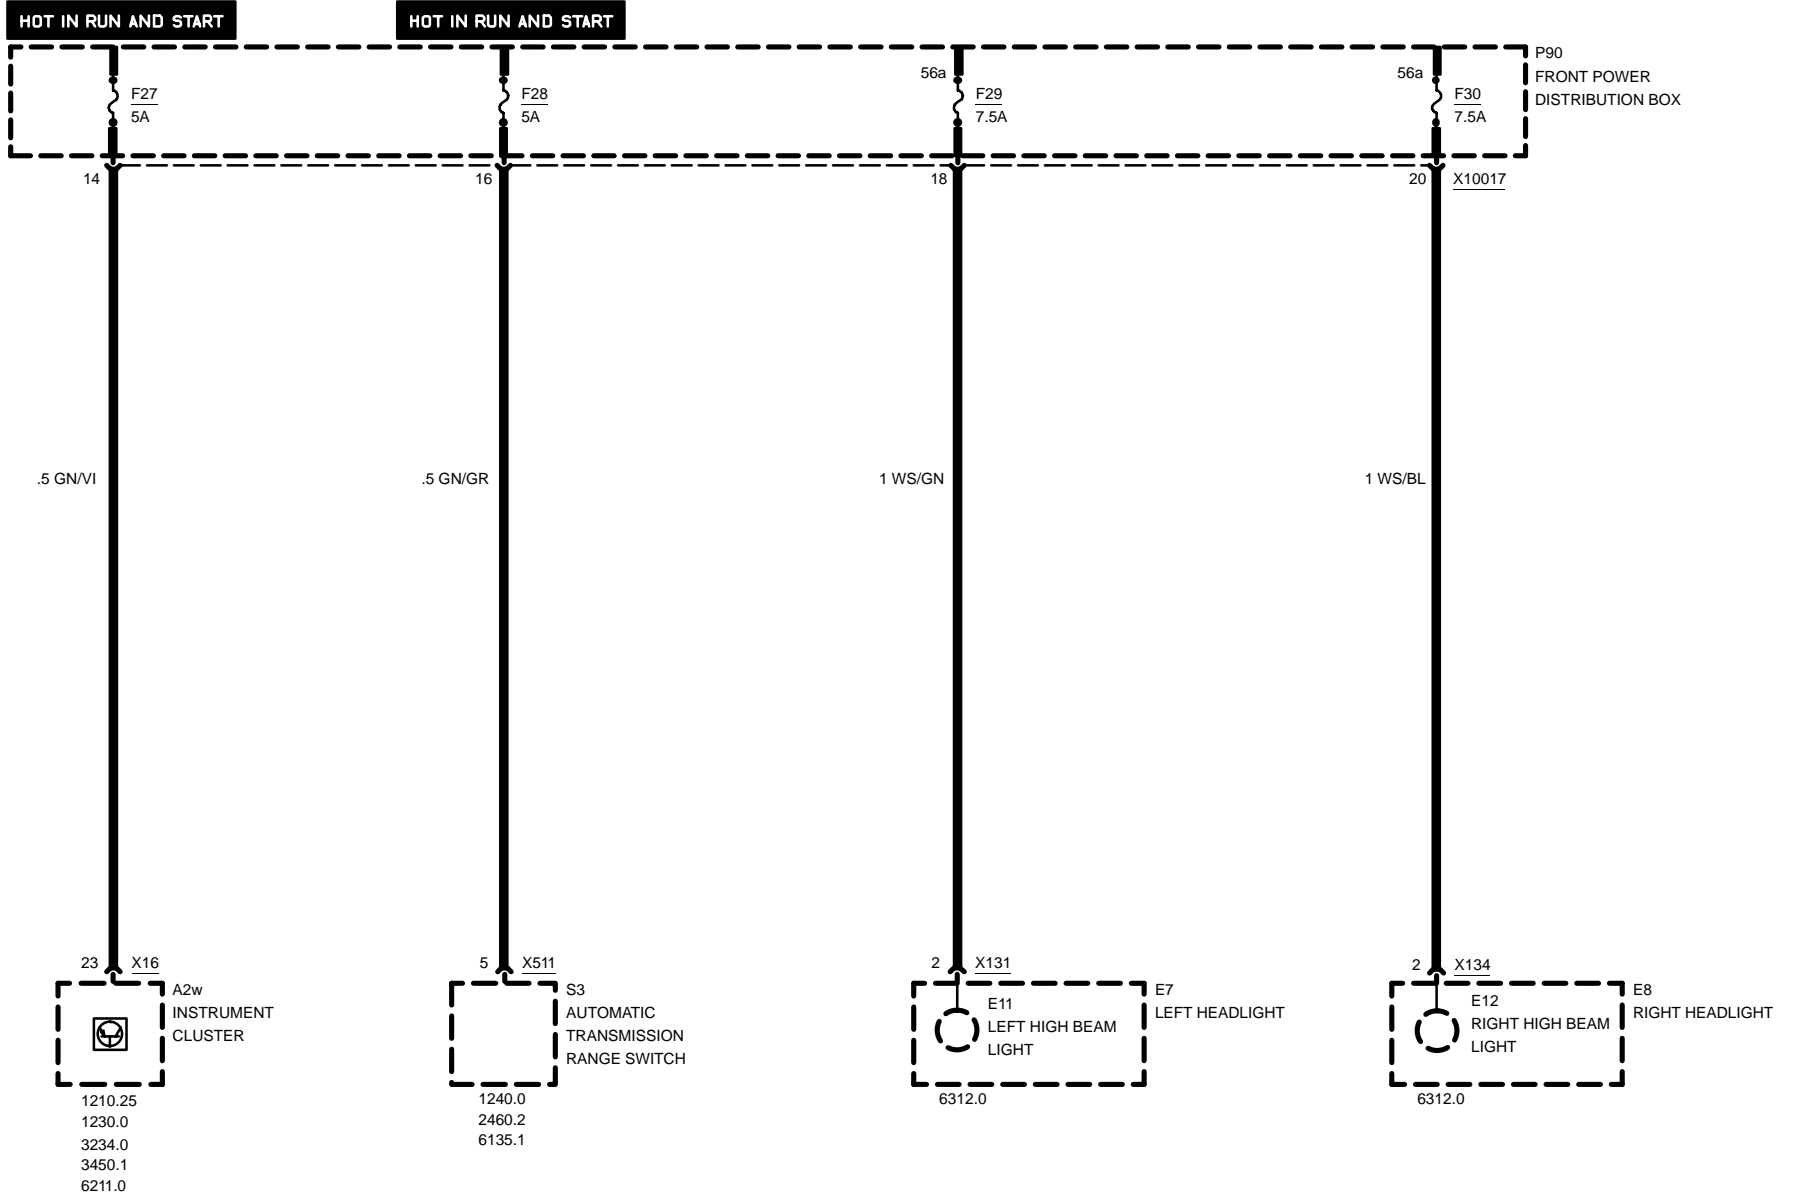




# FUSE DETAILS

## FUSE 31

Z3

HOT AT ALL TIMES

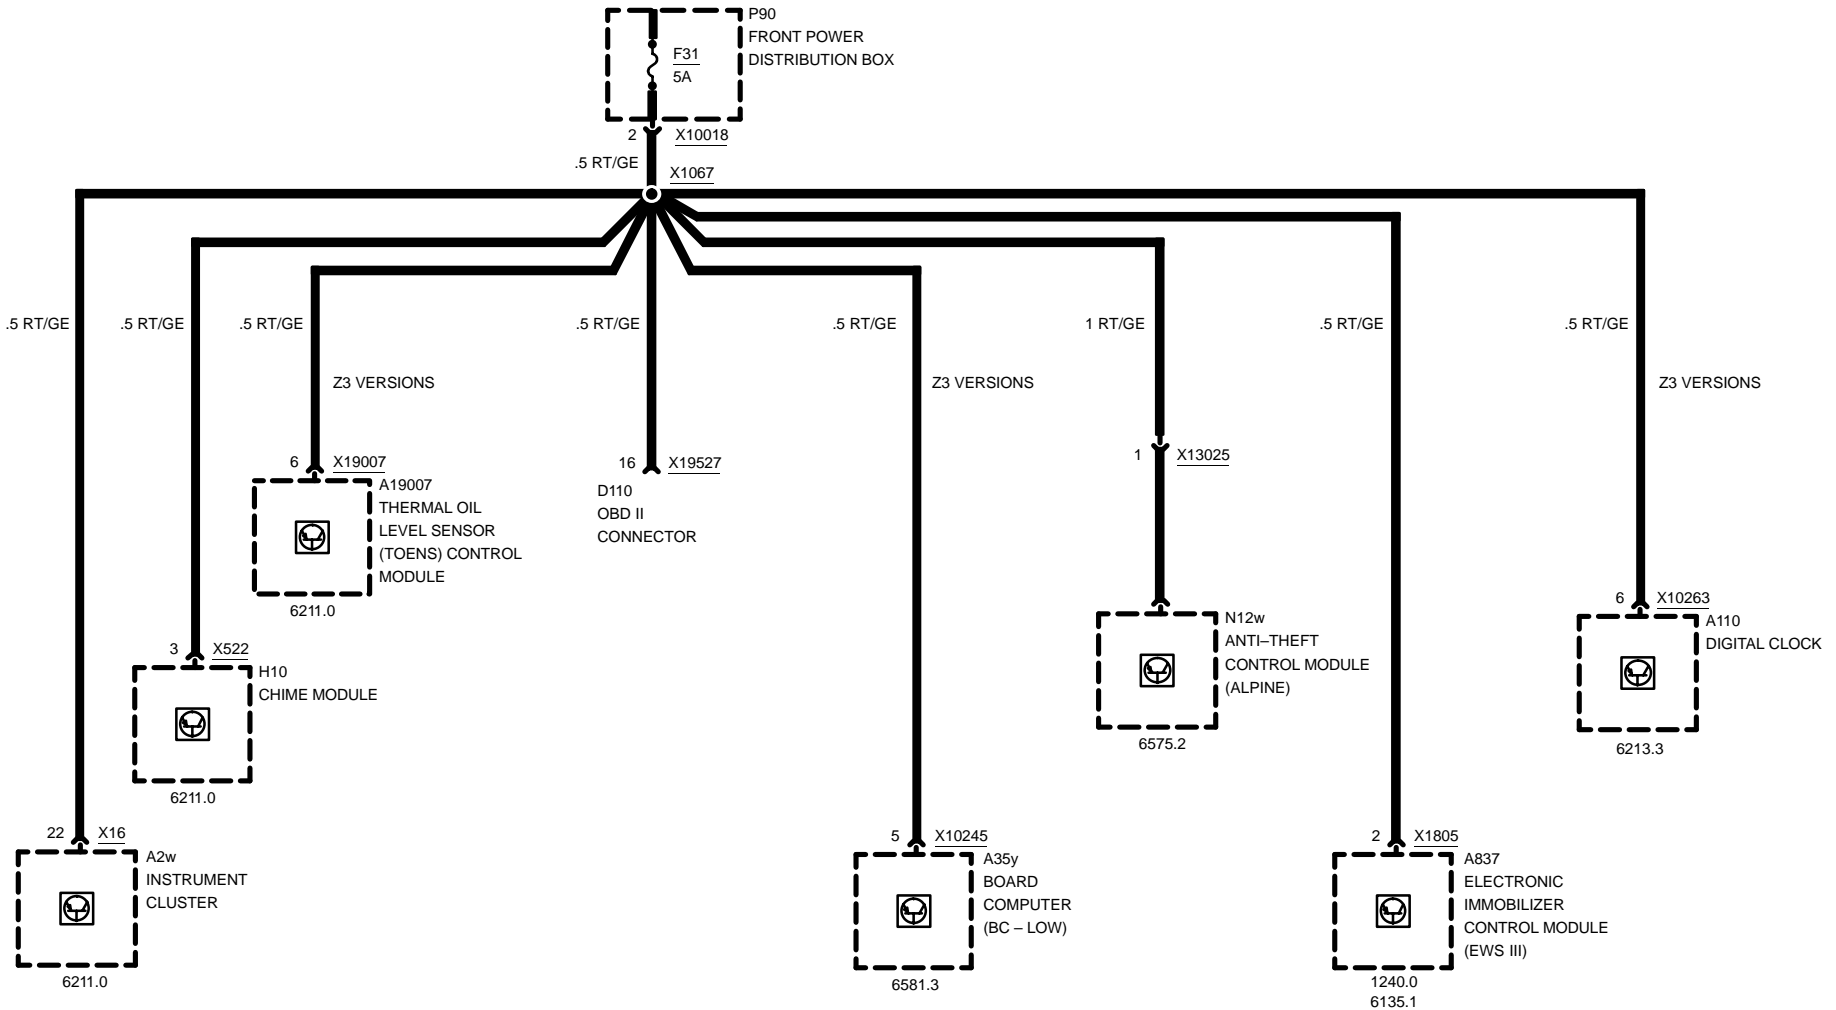




# FUSE DETAILS

## FUSES 32, 33, 34, AND 35

Z3

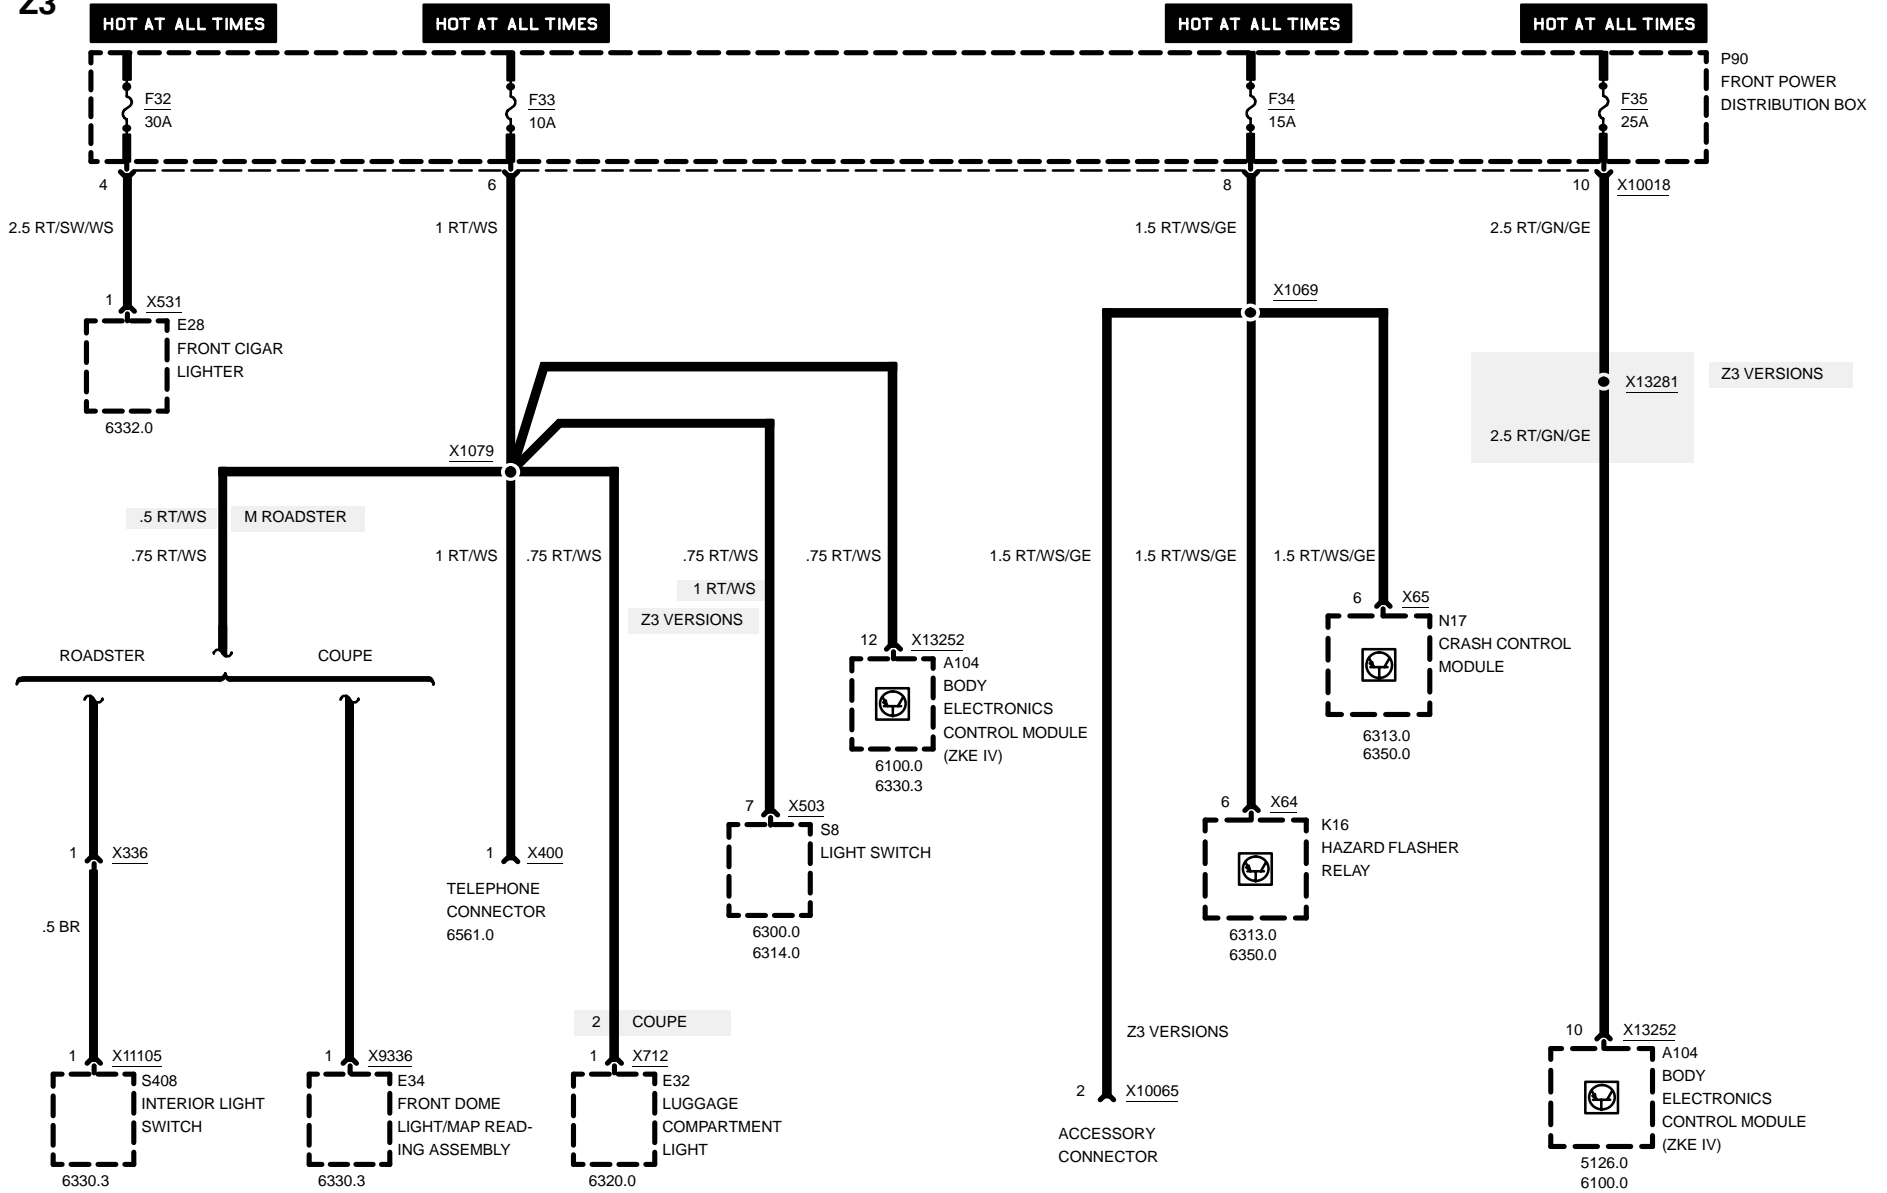




# FUSE DETAILS

## FUSES 36, 37, 38, AND 39

Z3

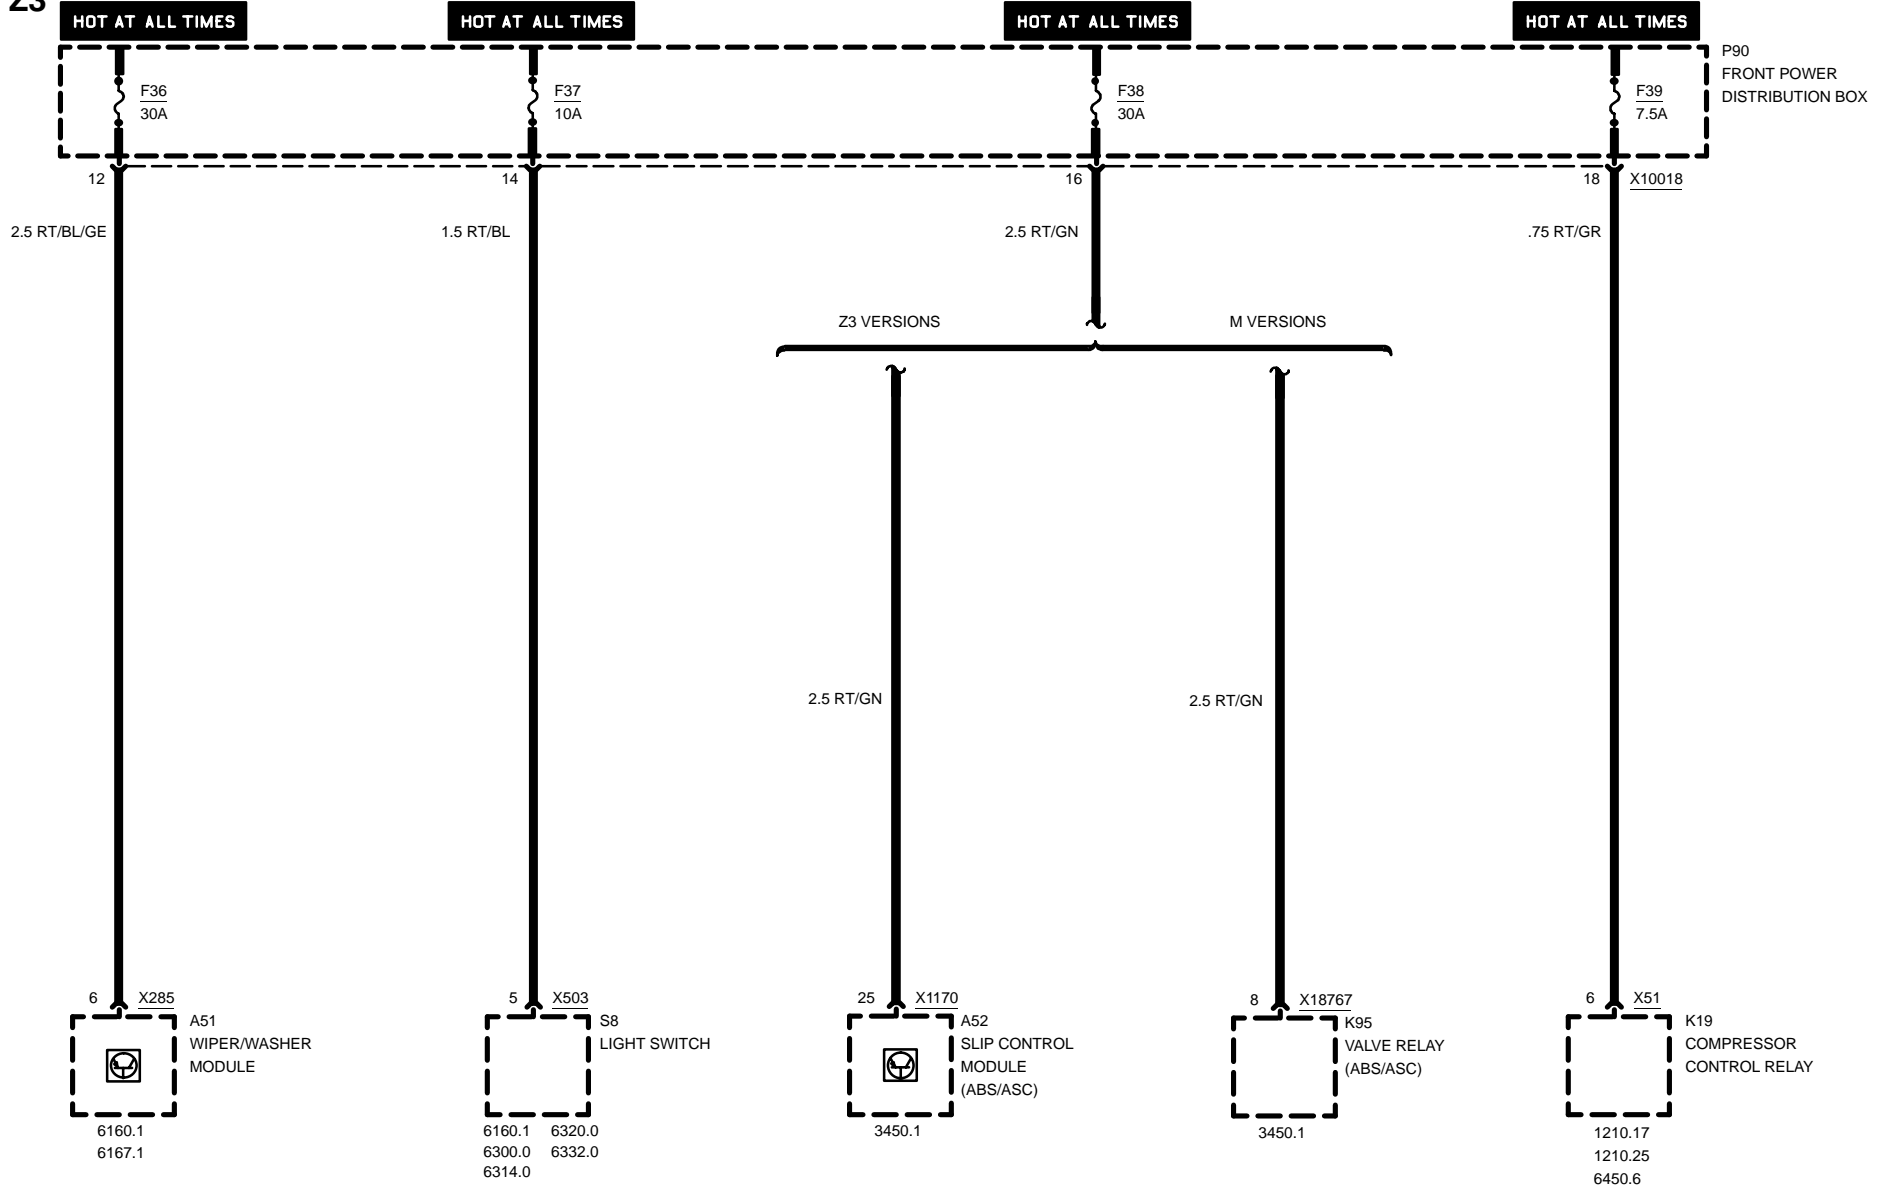




# FUSE DETAILS

## FUSES 40, 41, AND 42

Z3

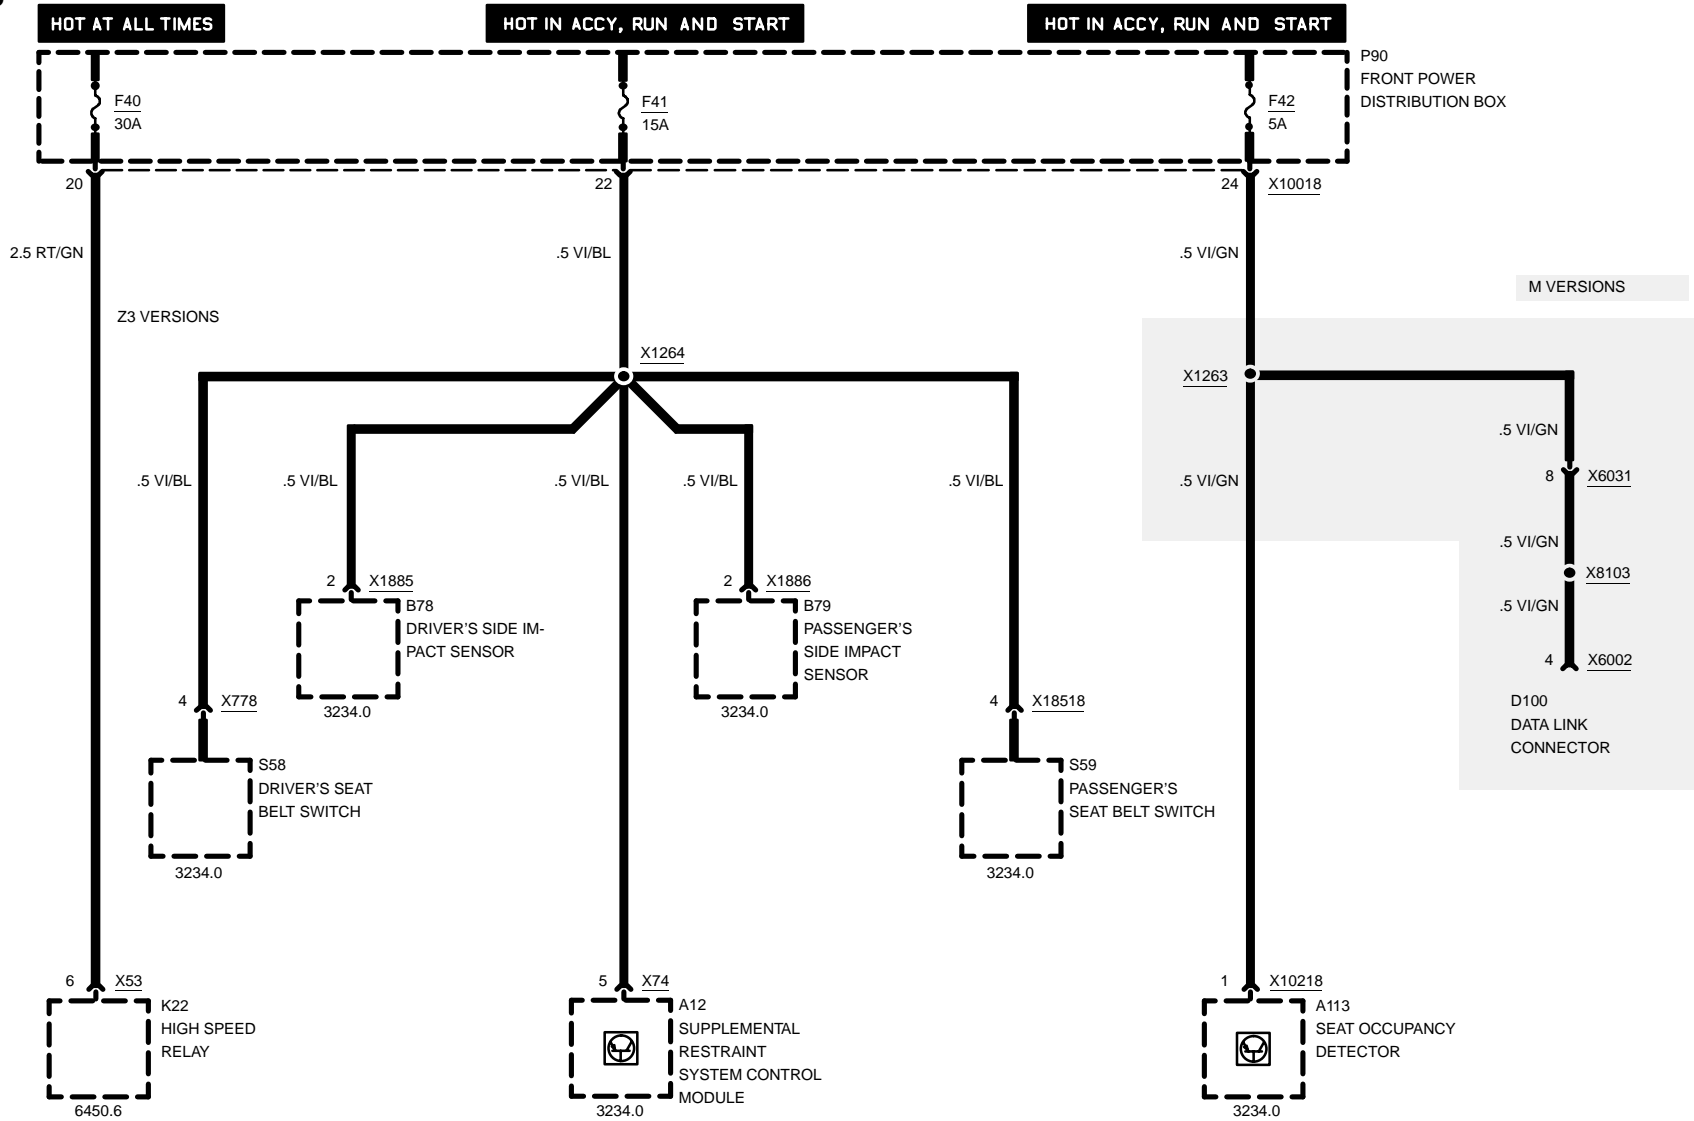






# FUSE DETAILS

## FUSES 43, 44, AND 45

Z3

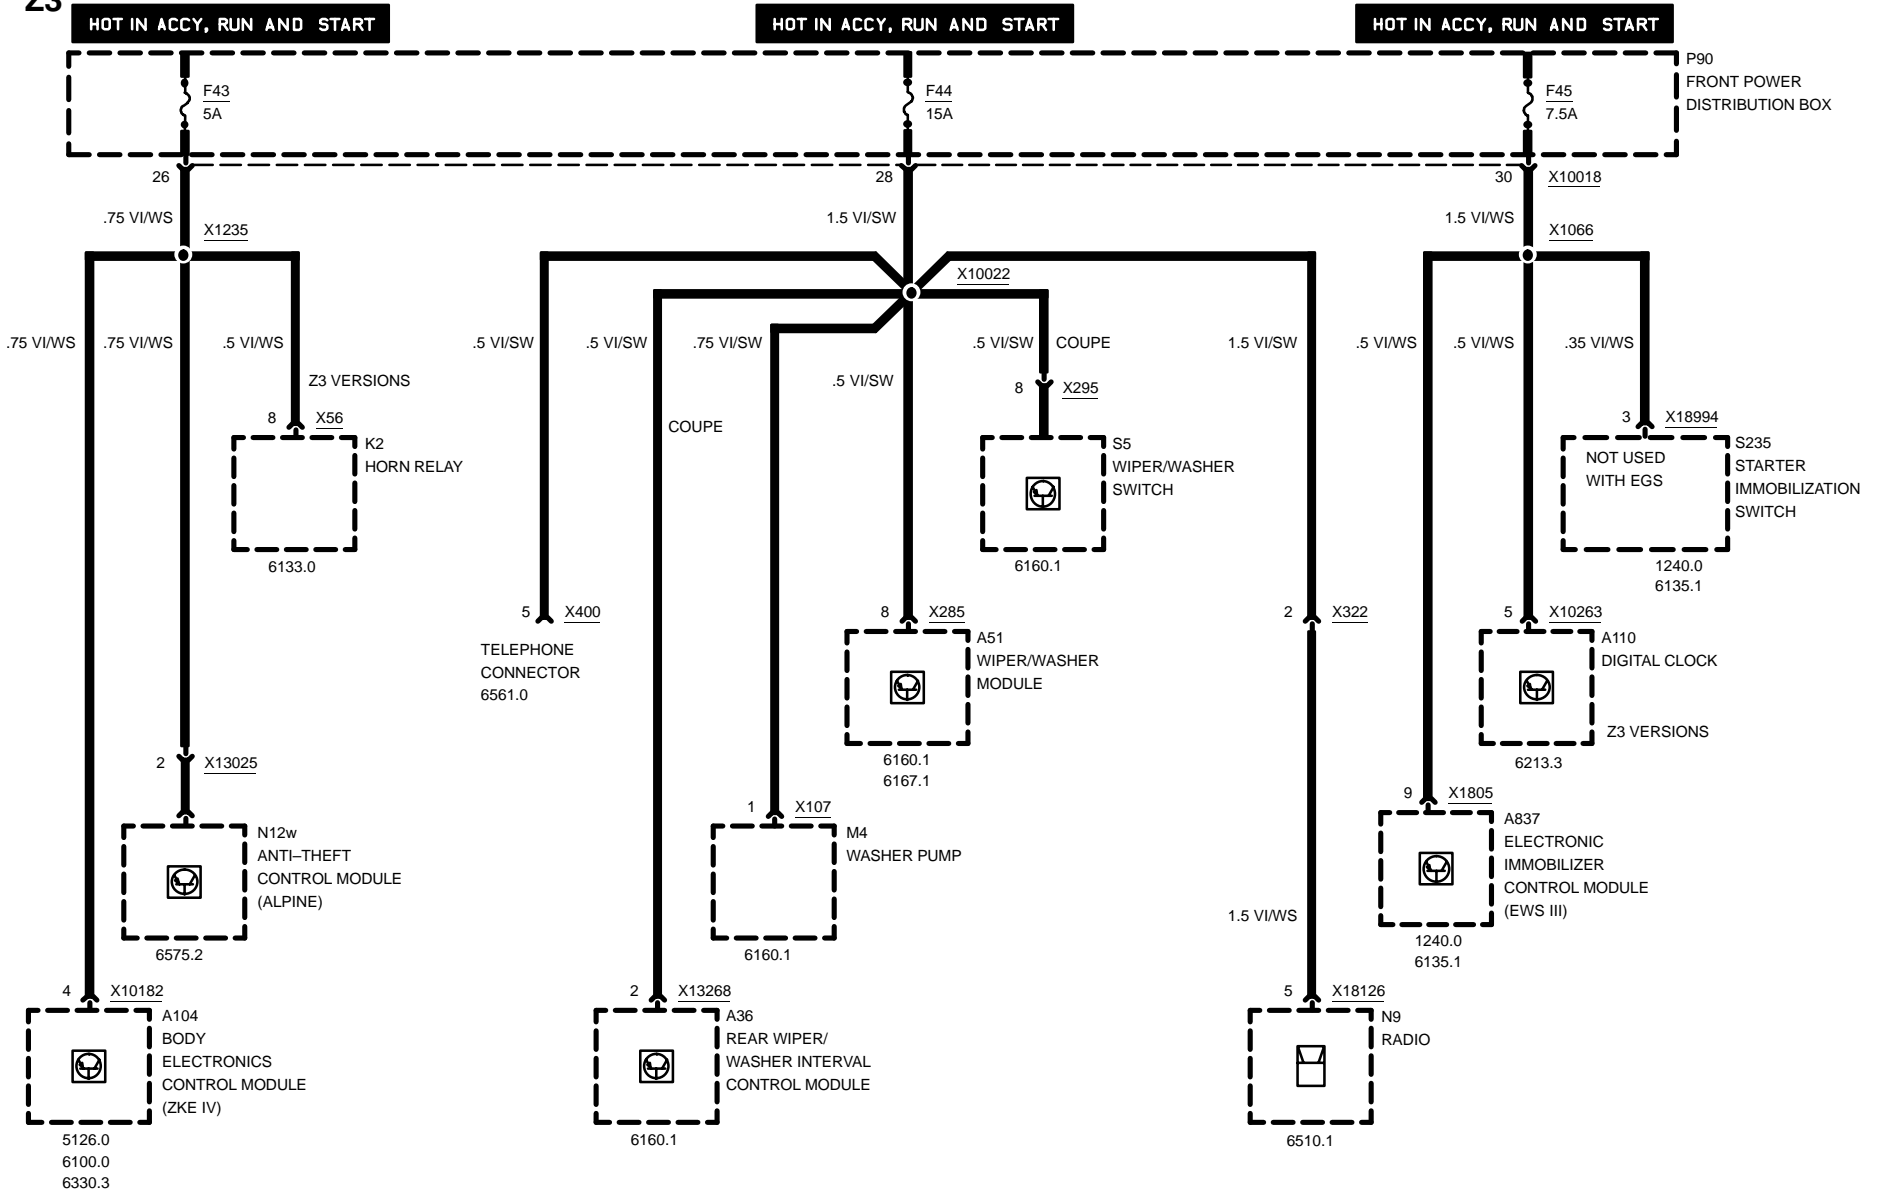

03/00

0670.3-14


1999



# FUSE DETAILS

## FUSE 46

Z3

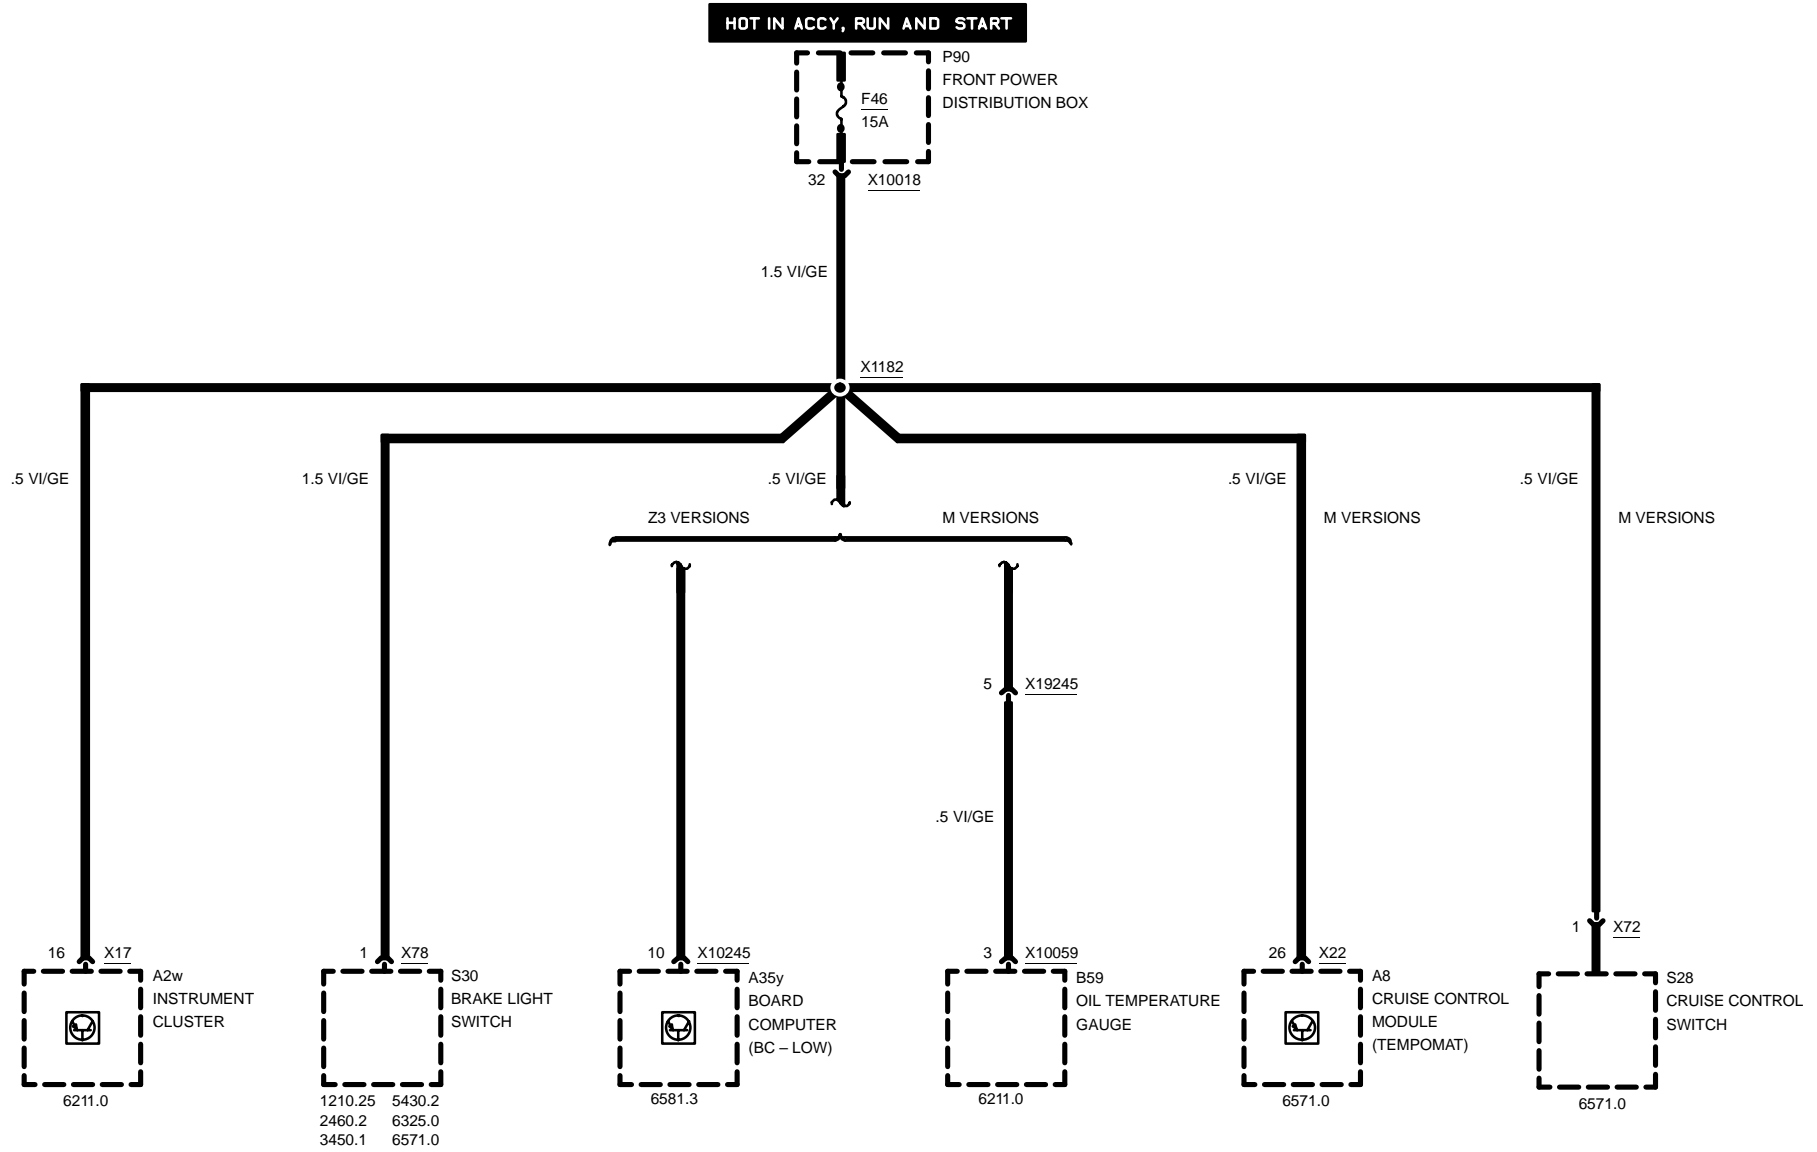





Z3

# FUSE DETAILS

## FUSES 48 AND 49

# M VERSIONS

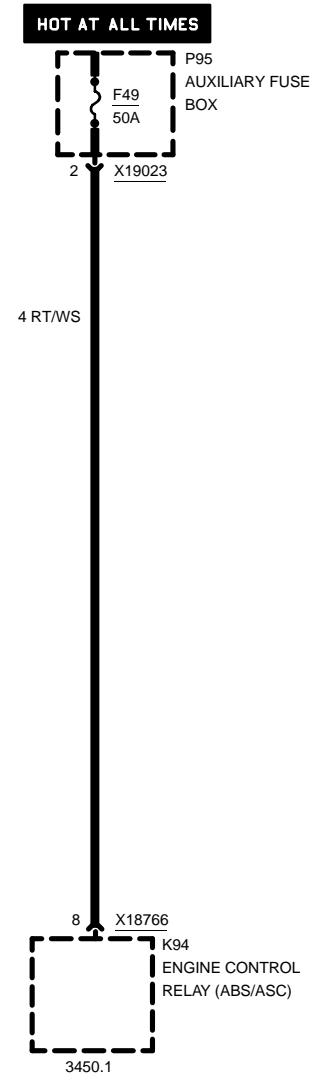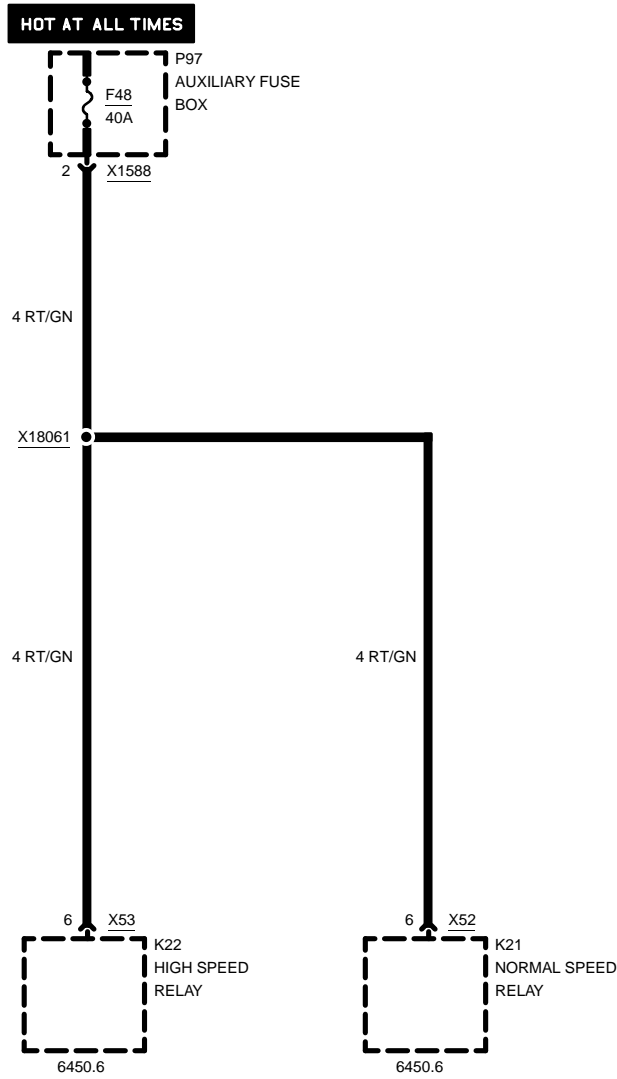




# FUSE DETAILS

## FUSE 202

Z3

HOT IN RUN AND START

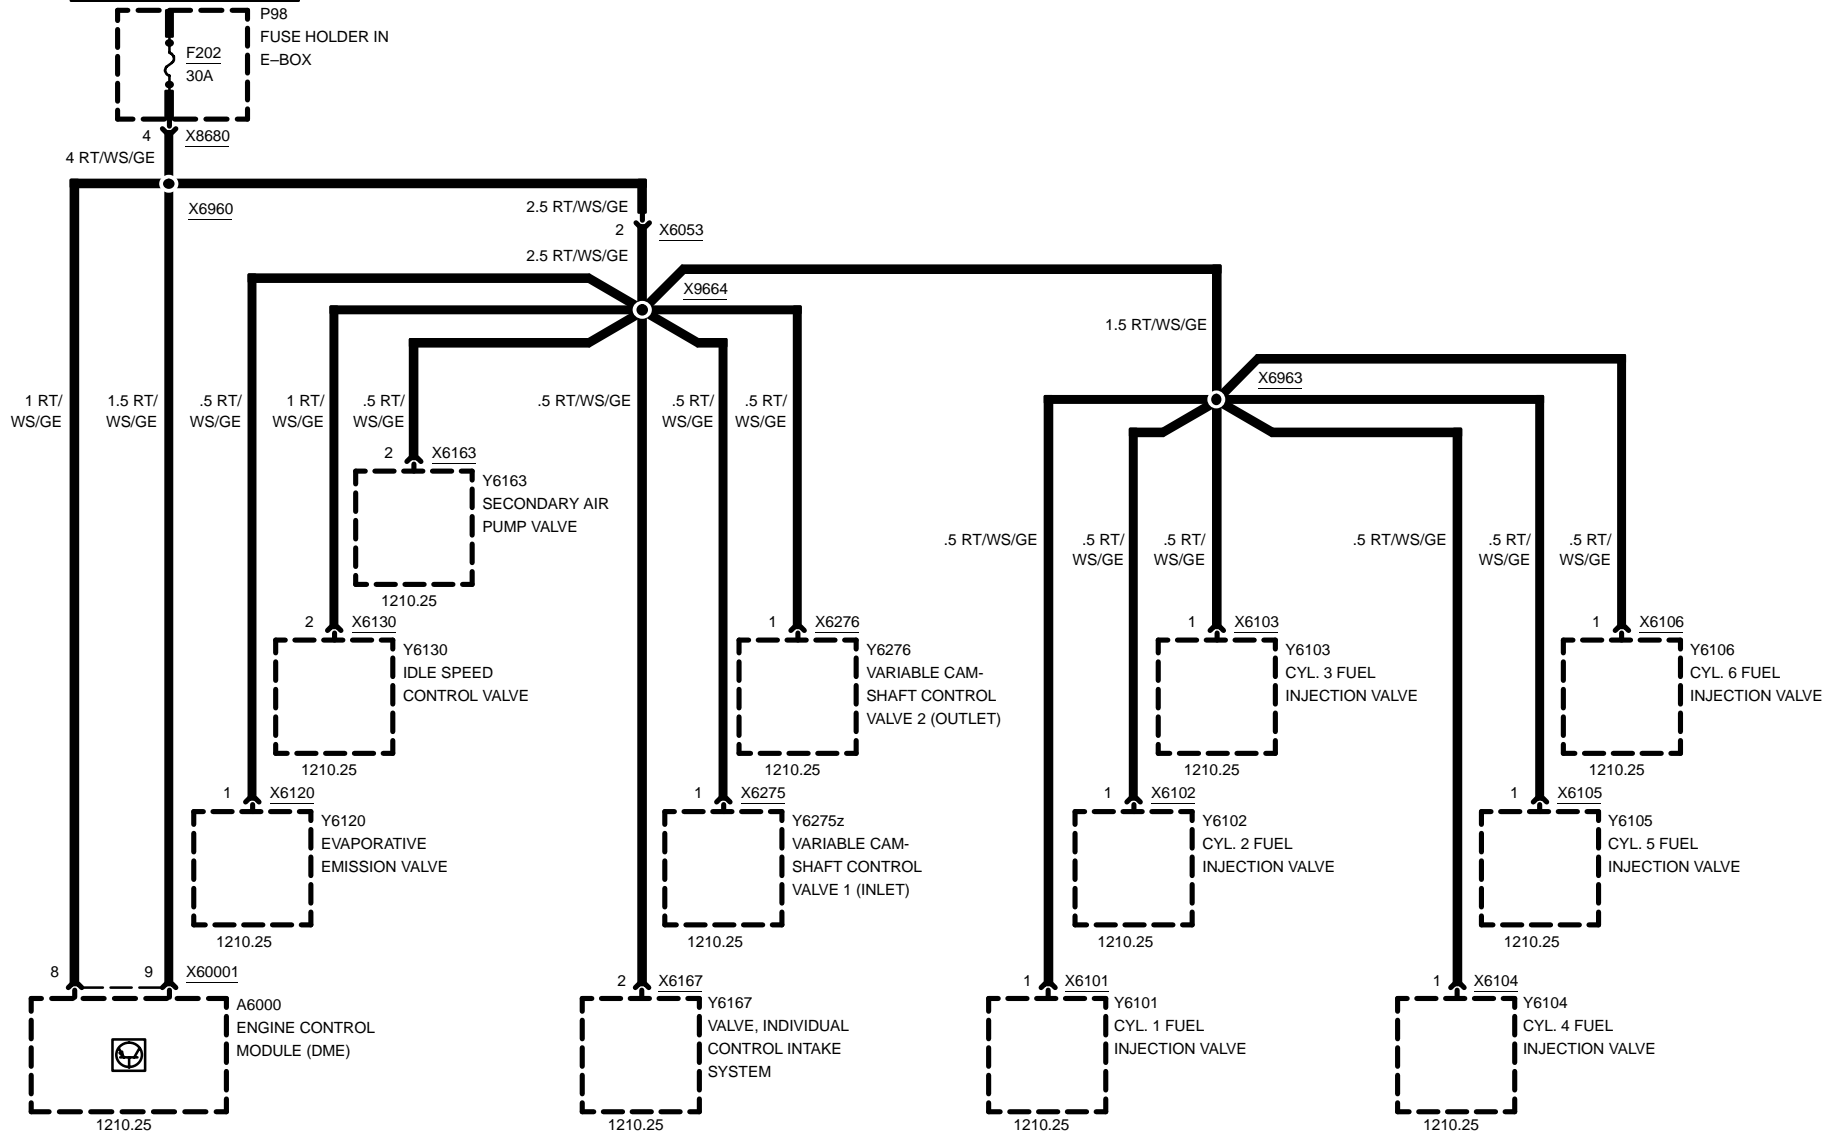




# FUSE DETAILS

## FUSES 203, 204, AND 205

Z3

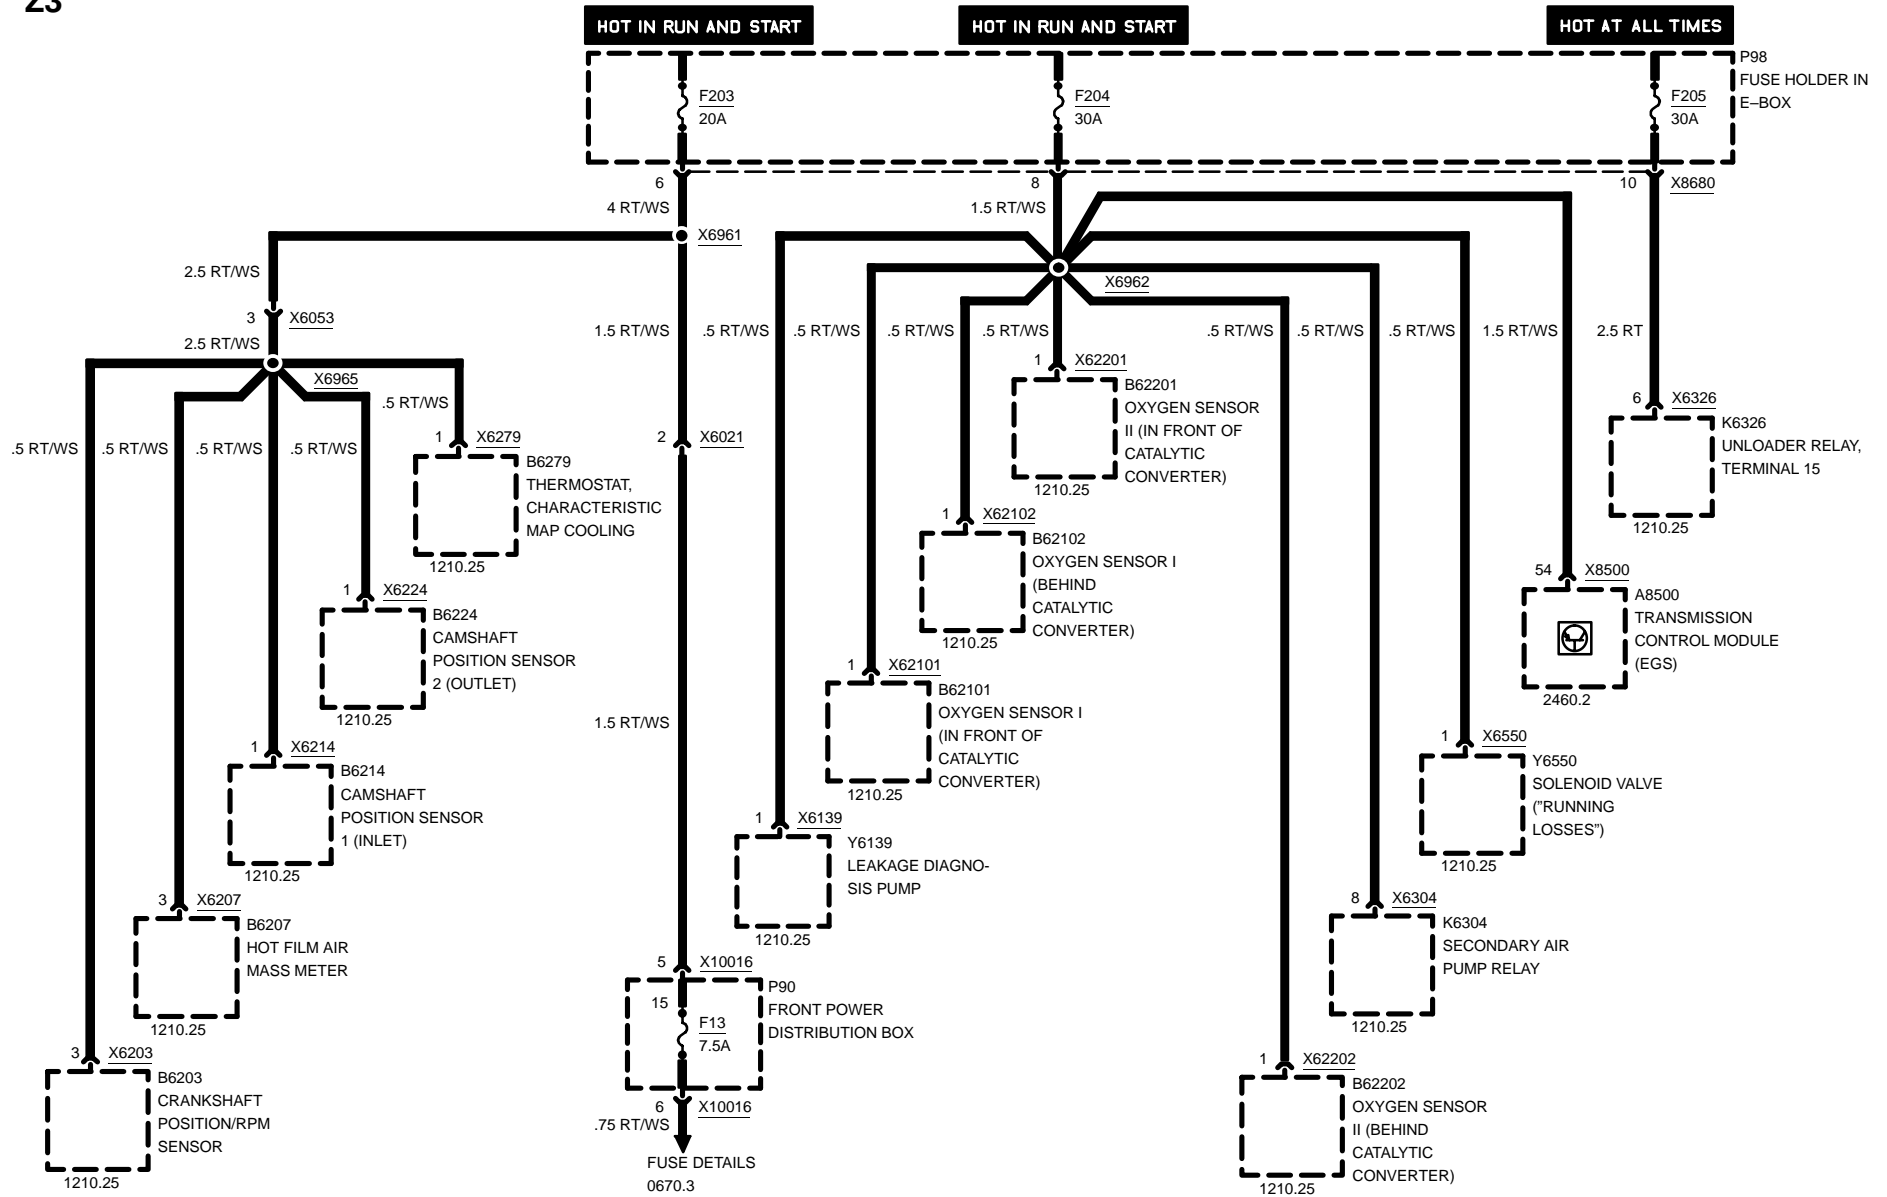




# 0670.4 GROUND DISTRIBUTION

M VERSIONS

## GROUNDS X4 AND X165

Z3

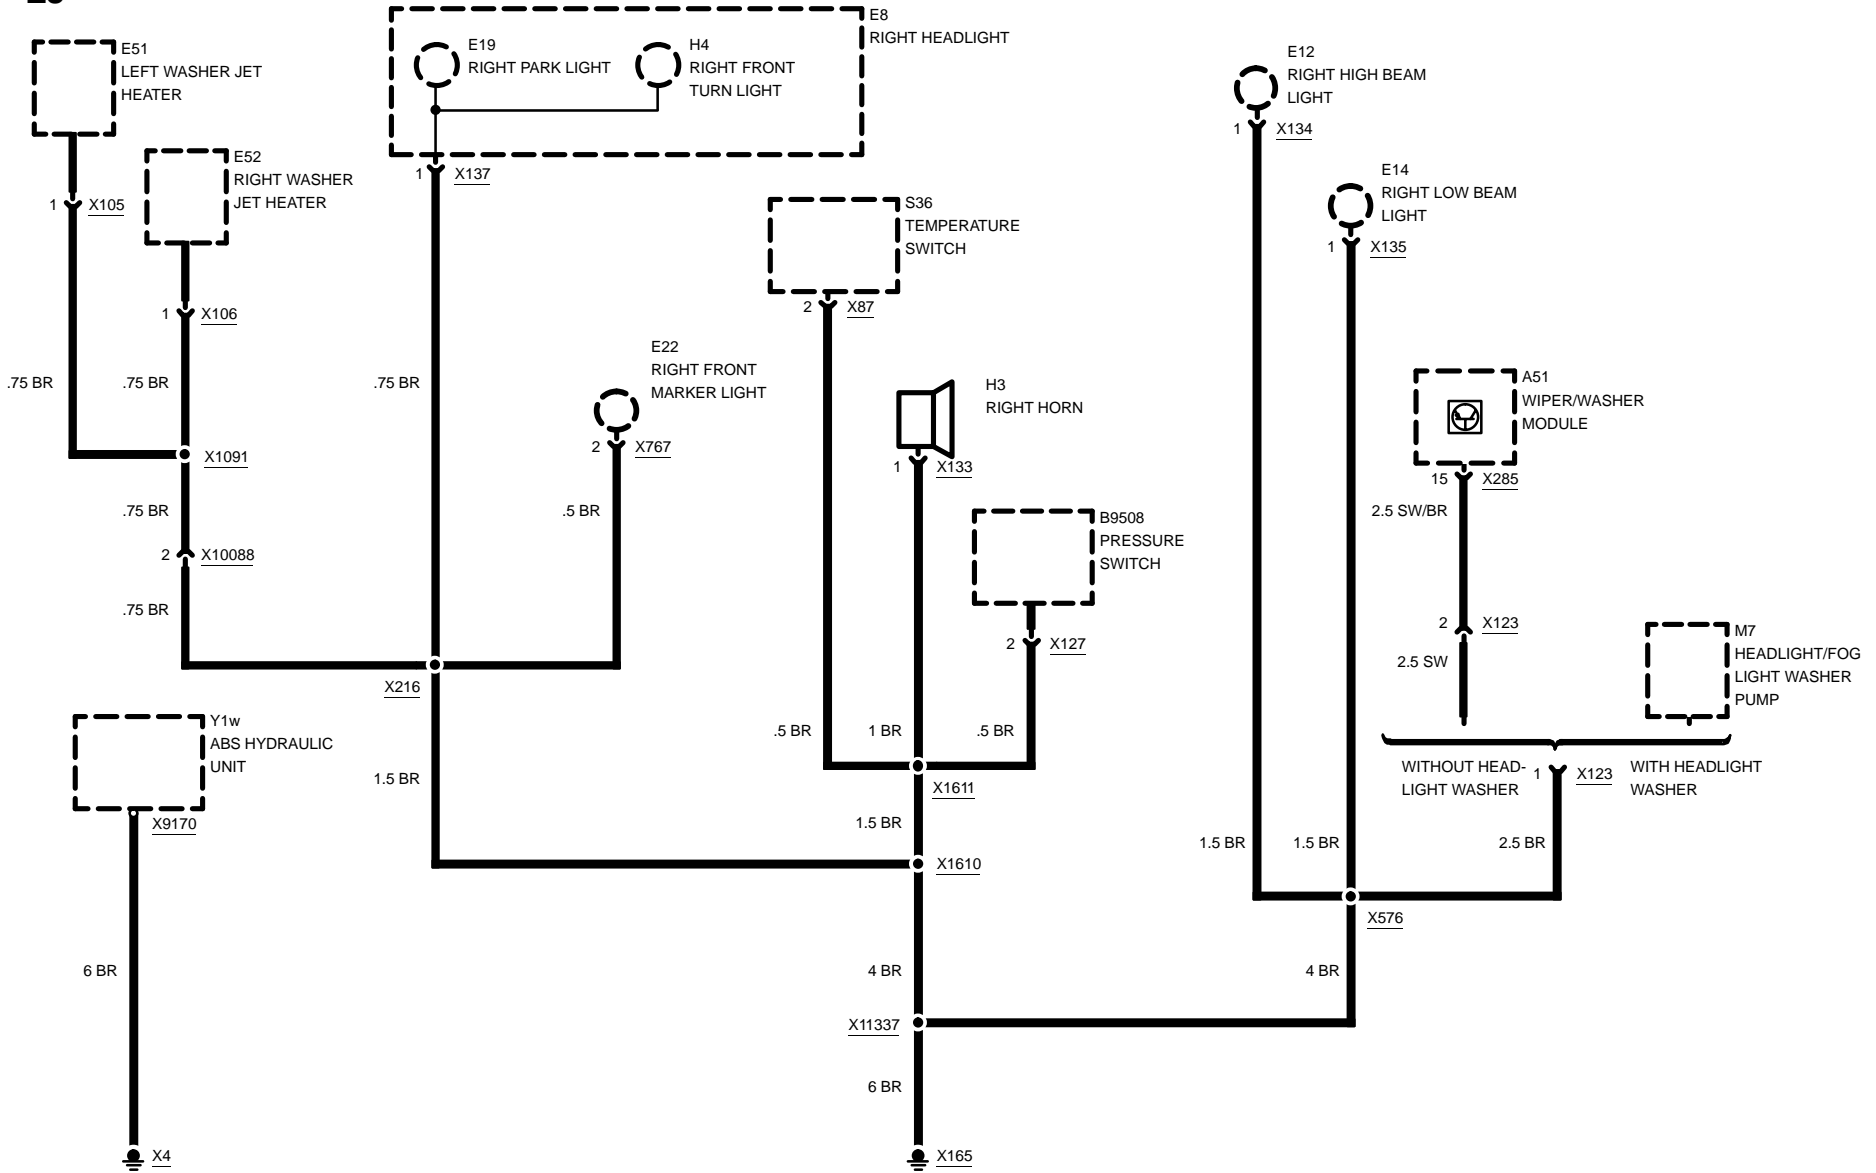




# GROUND DISTRIBUTION

## Z3 VERSIONS

### GROUND X165

Z3

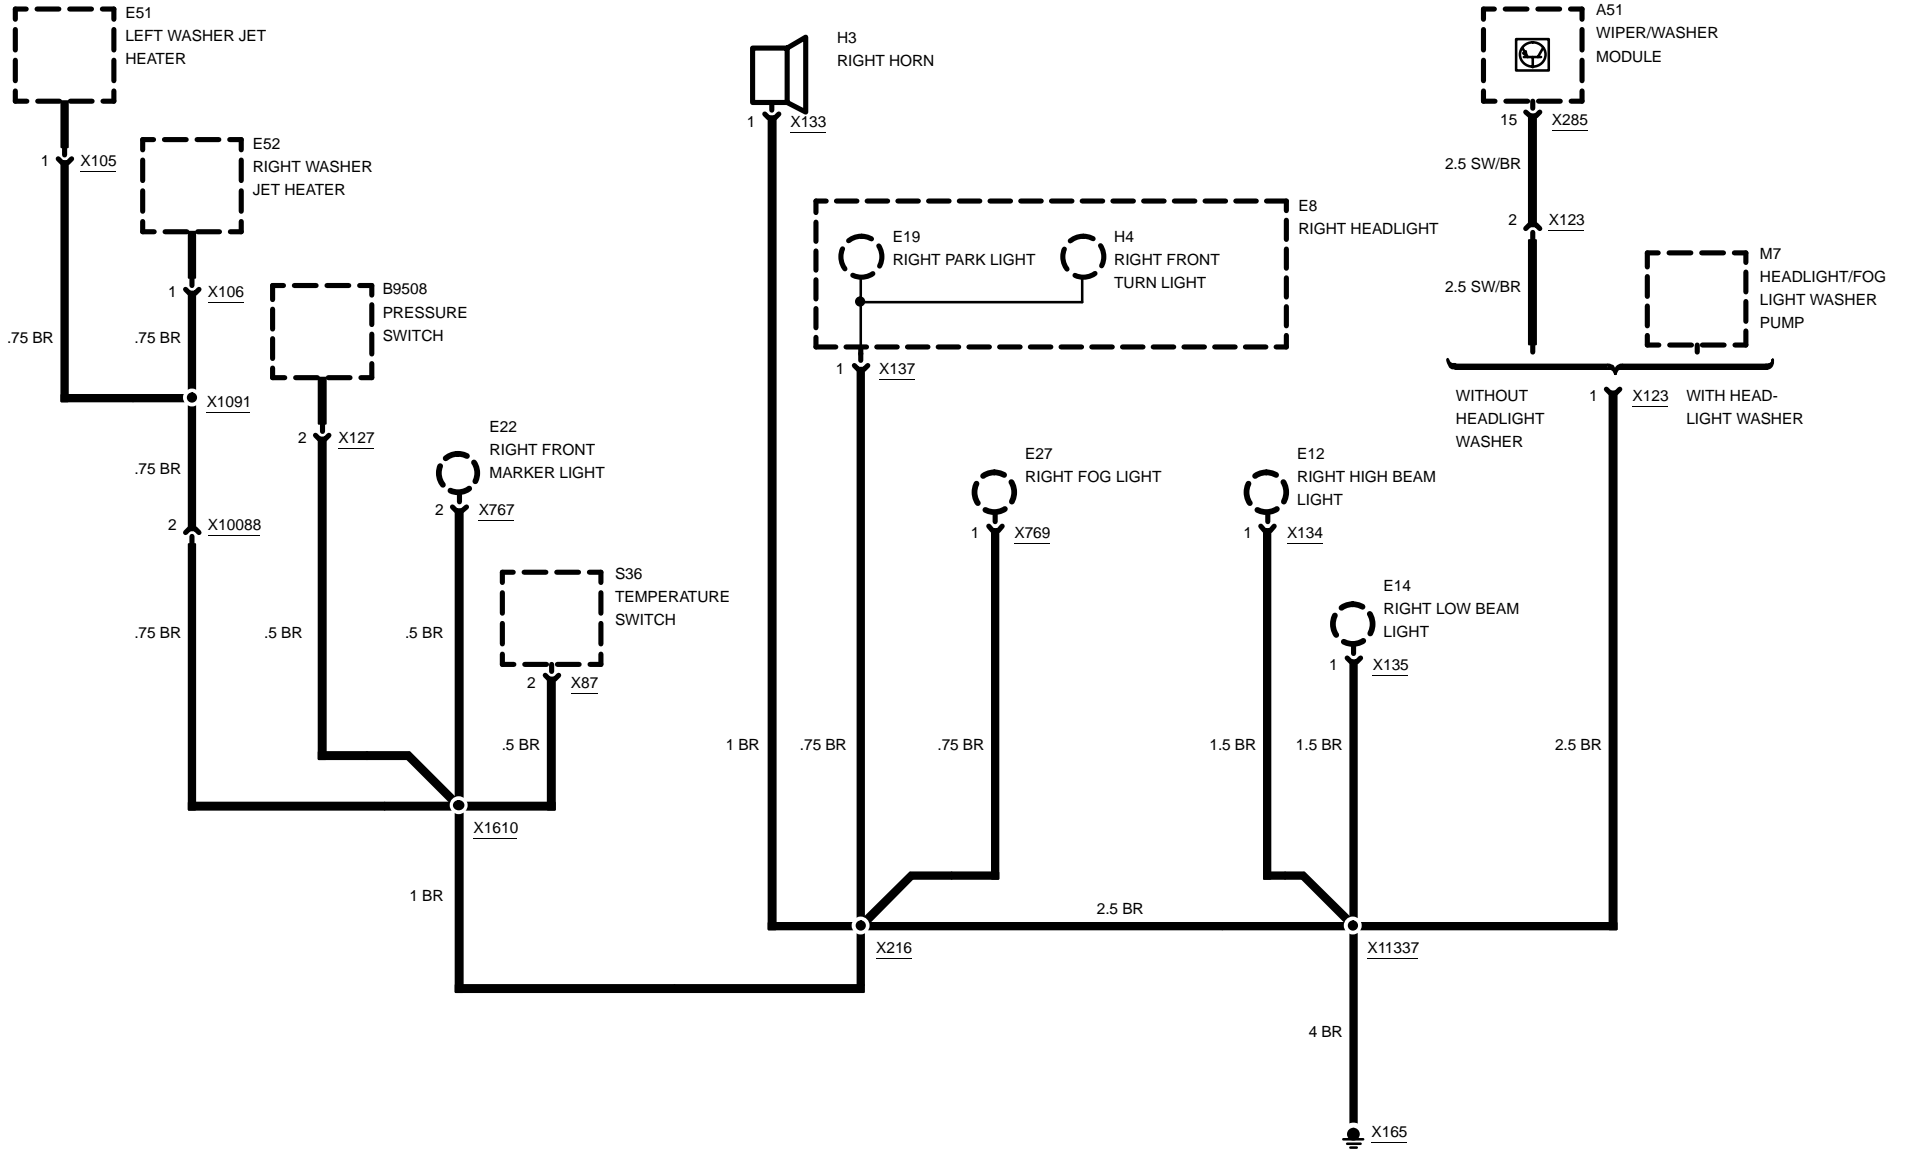




# GROUND DISTRIBUTION

M VERSIONS

## GROUND X166

Z3

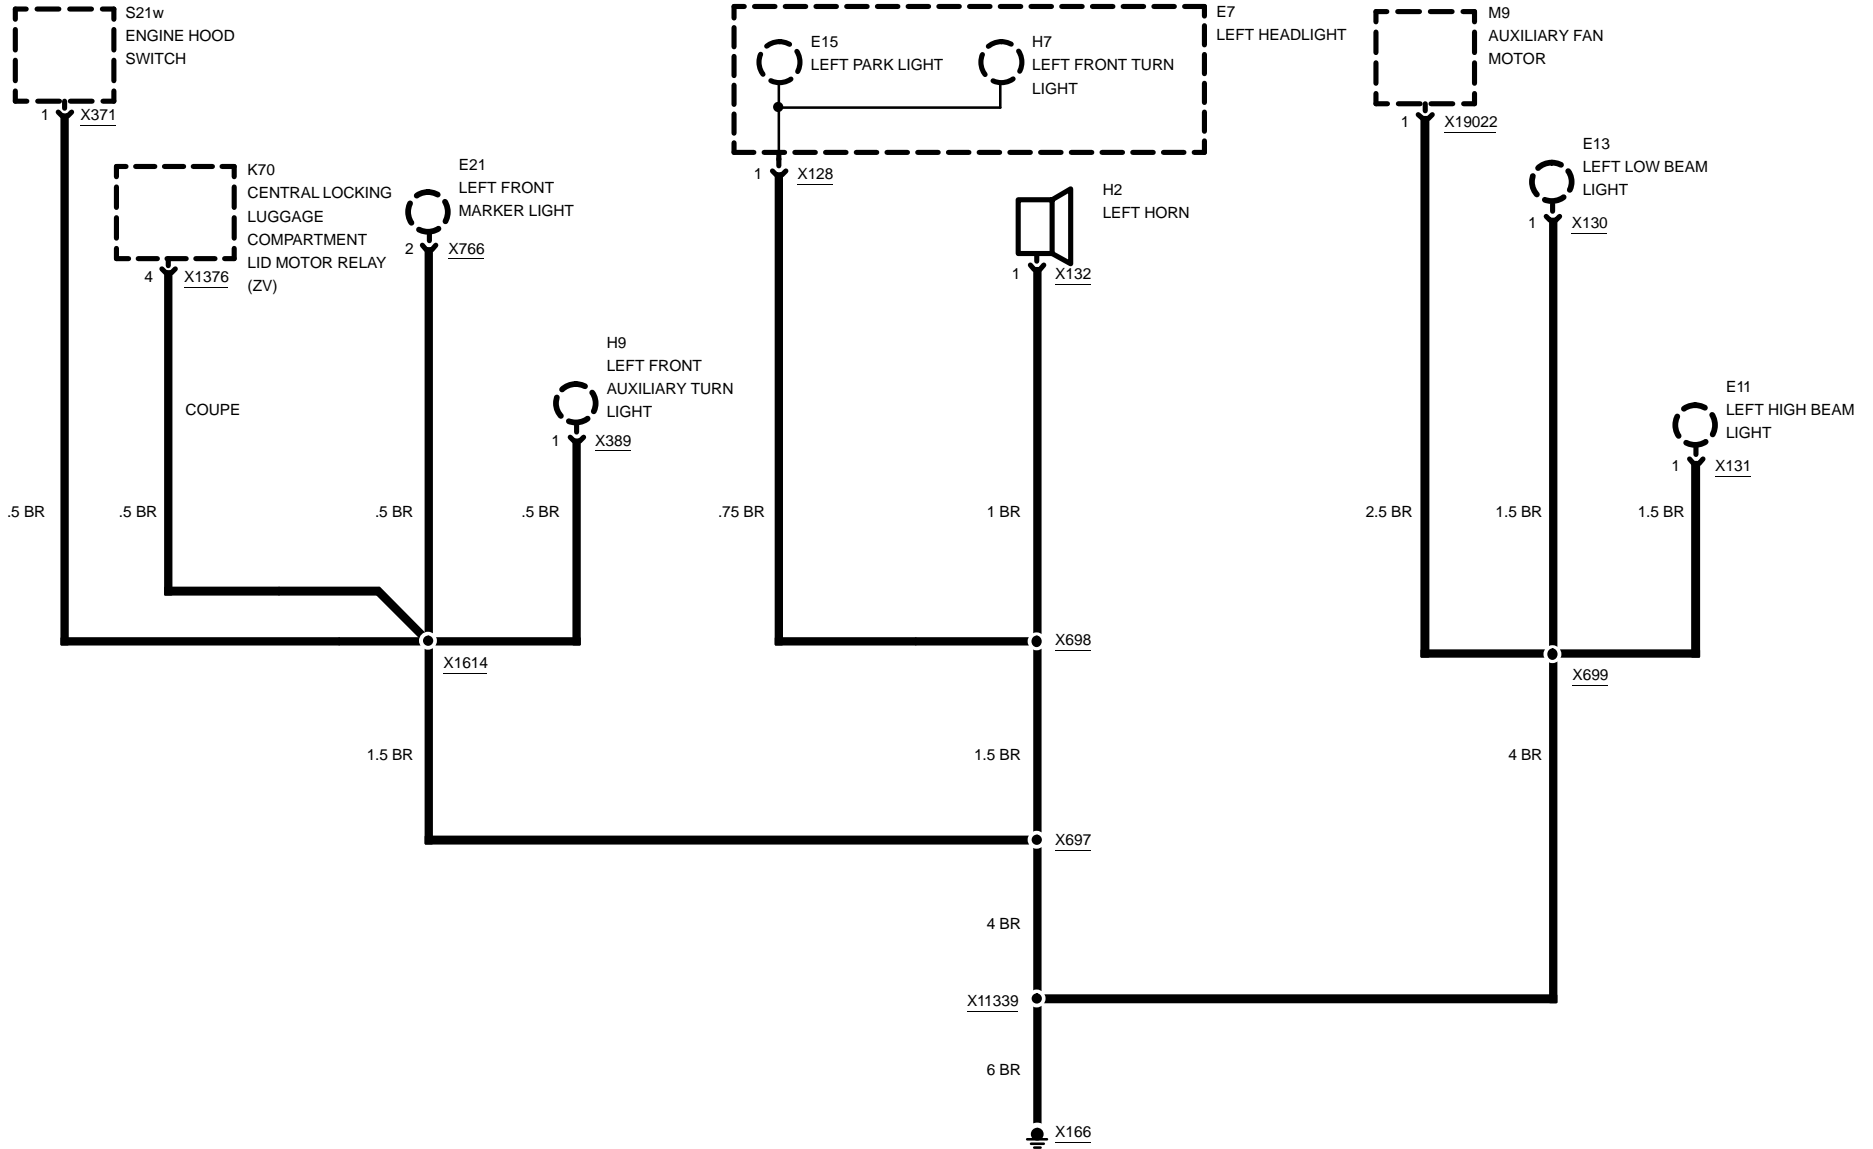






# GROUND DISTRIBUTION

## Z3 VERSIONS

### GROUND X166

Z3

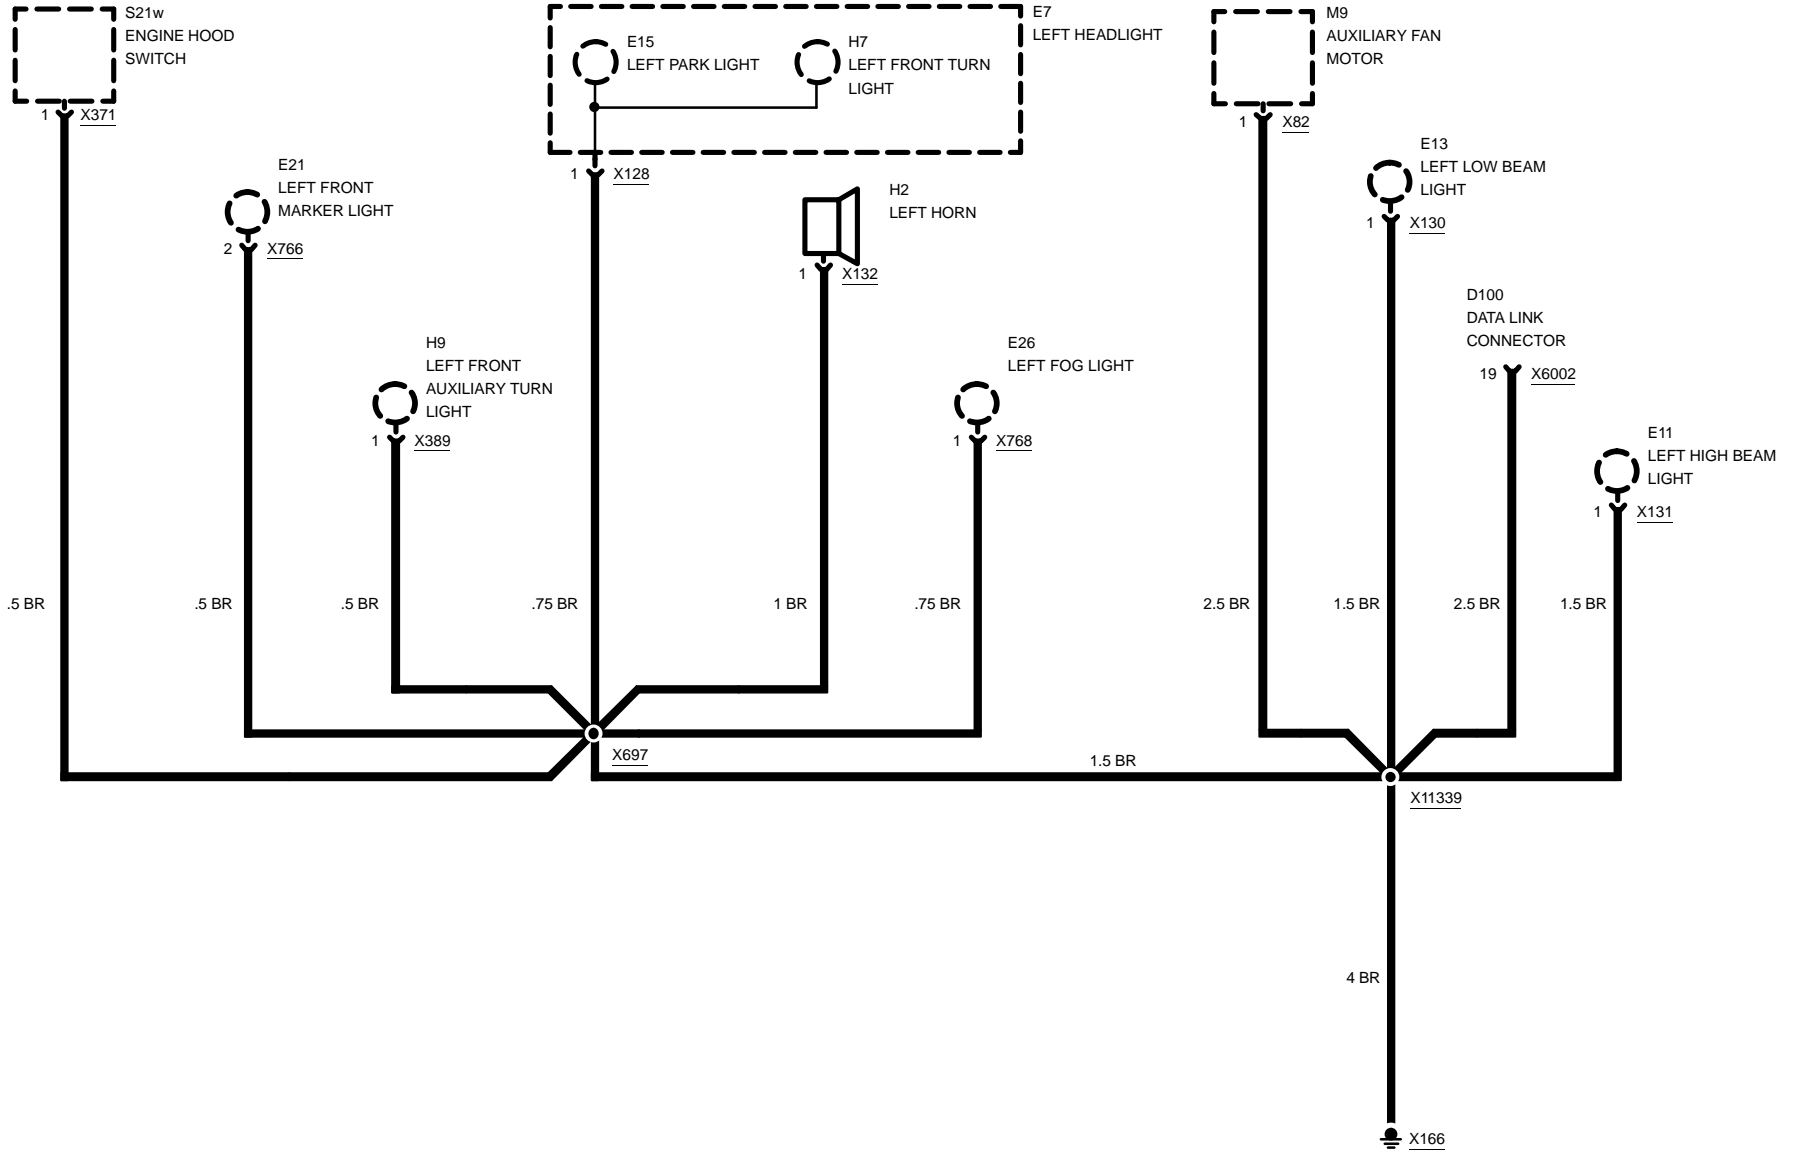




# GROUND DISTRIBUTION

## GROUNDS X170 AND X494

Z3

Z3 VERSIONS

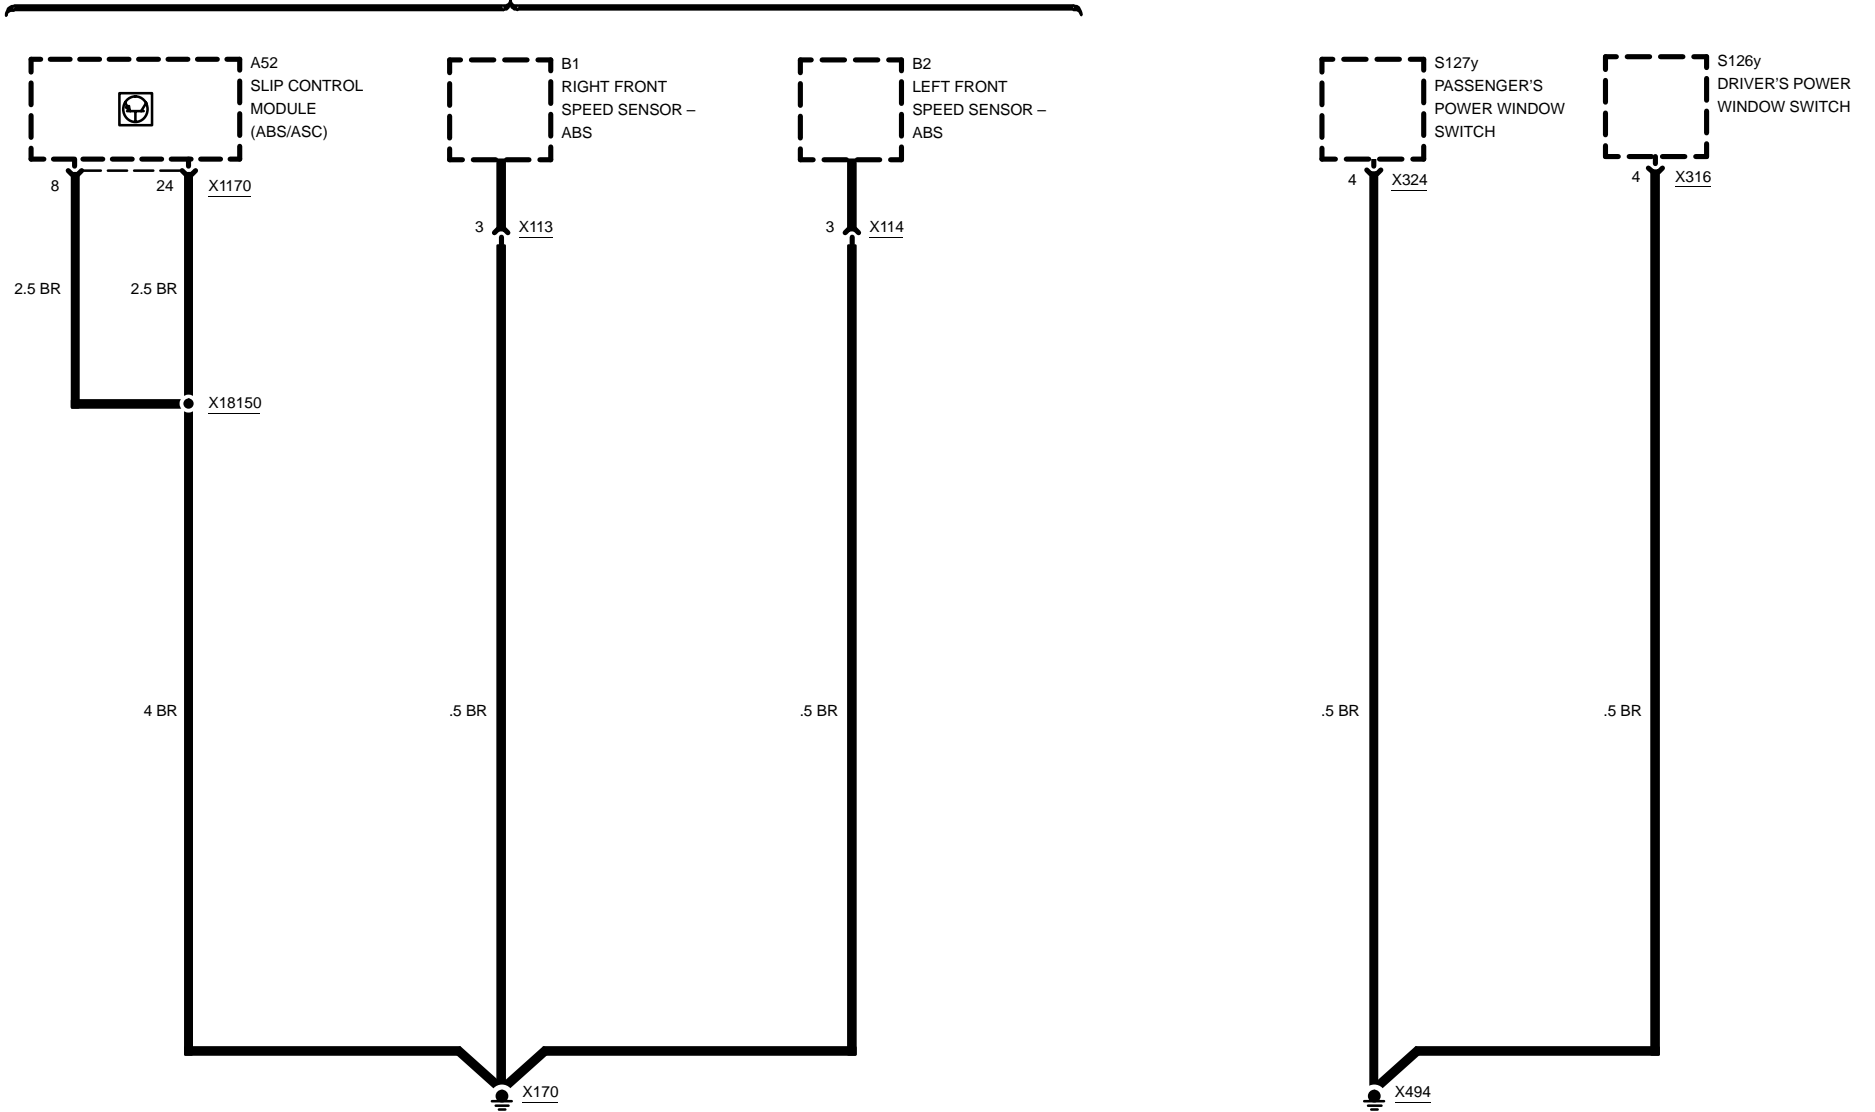




Z3

# GROUND DISTRIBUTION

## GROUNDS X1116, X1166, AND X1441

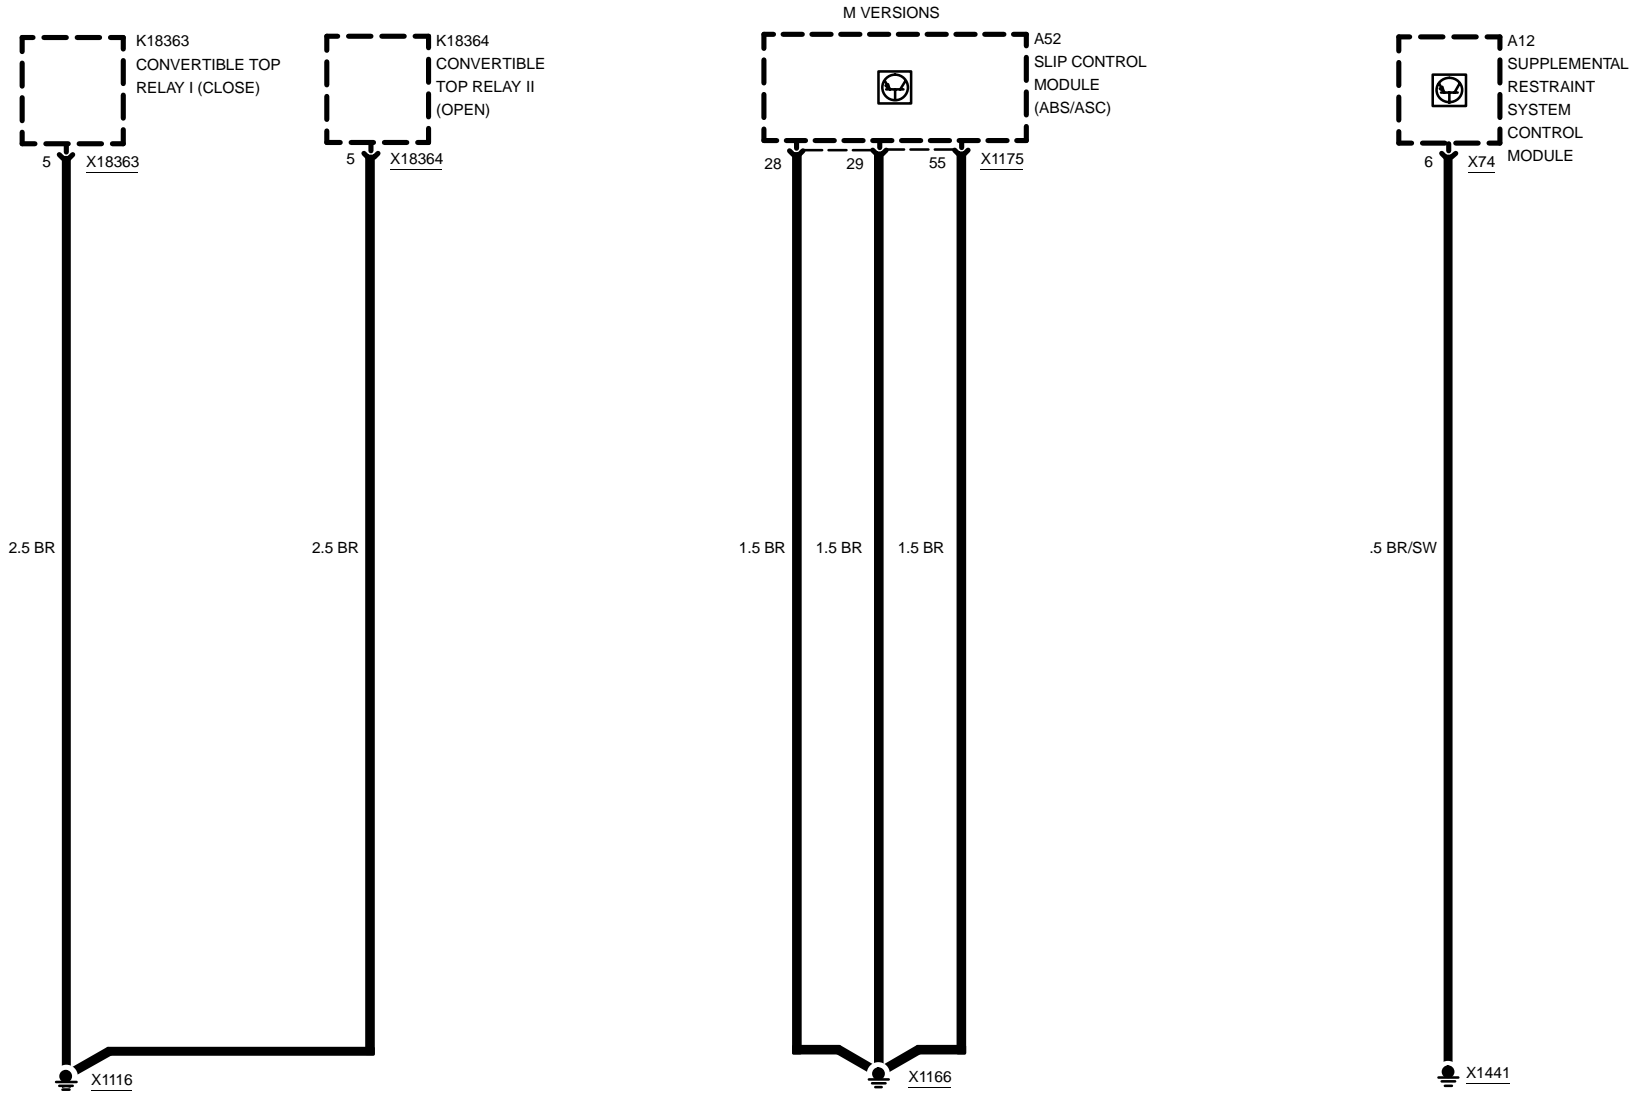




# GROUND DISTRIBUTION

## M VERSIONS

### GROUND X6454

Z3

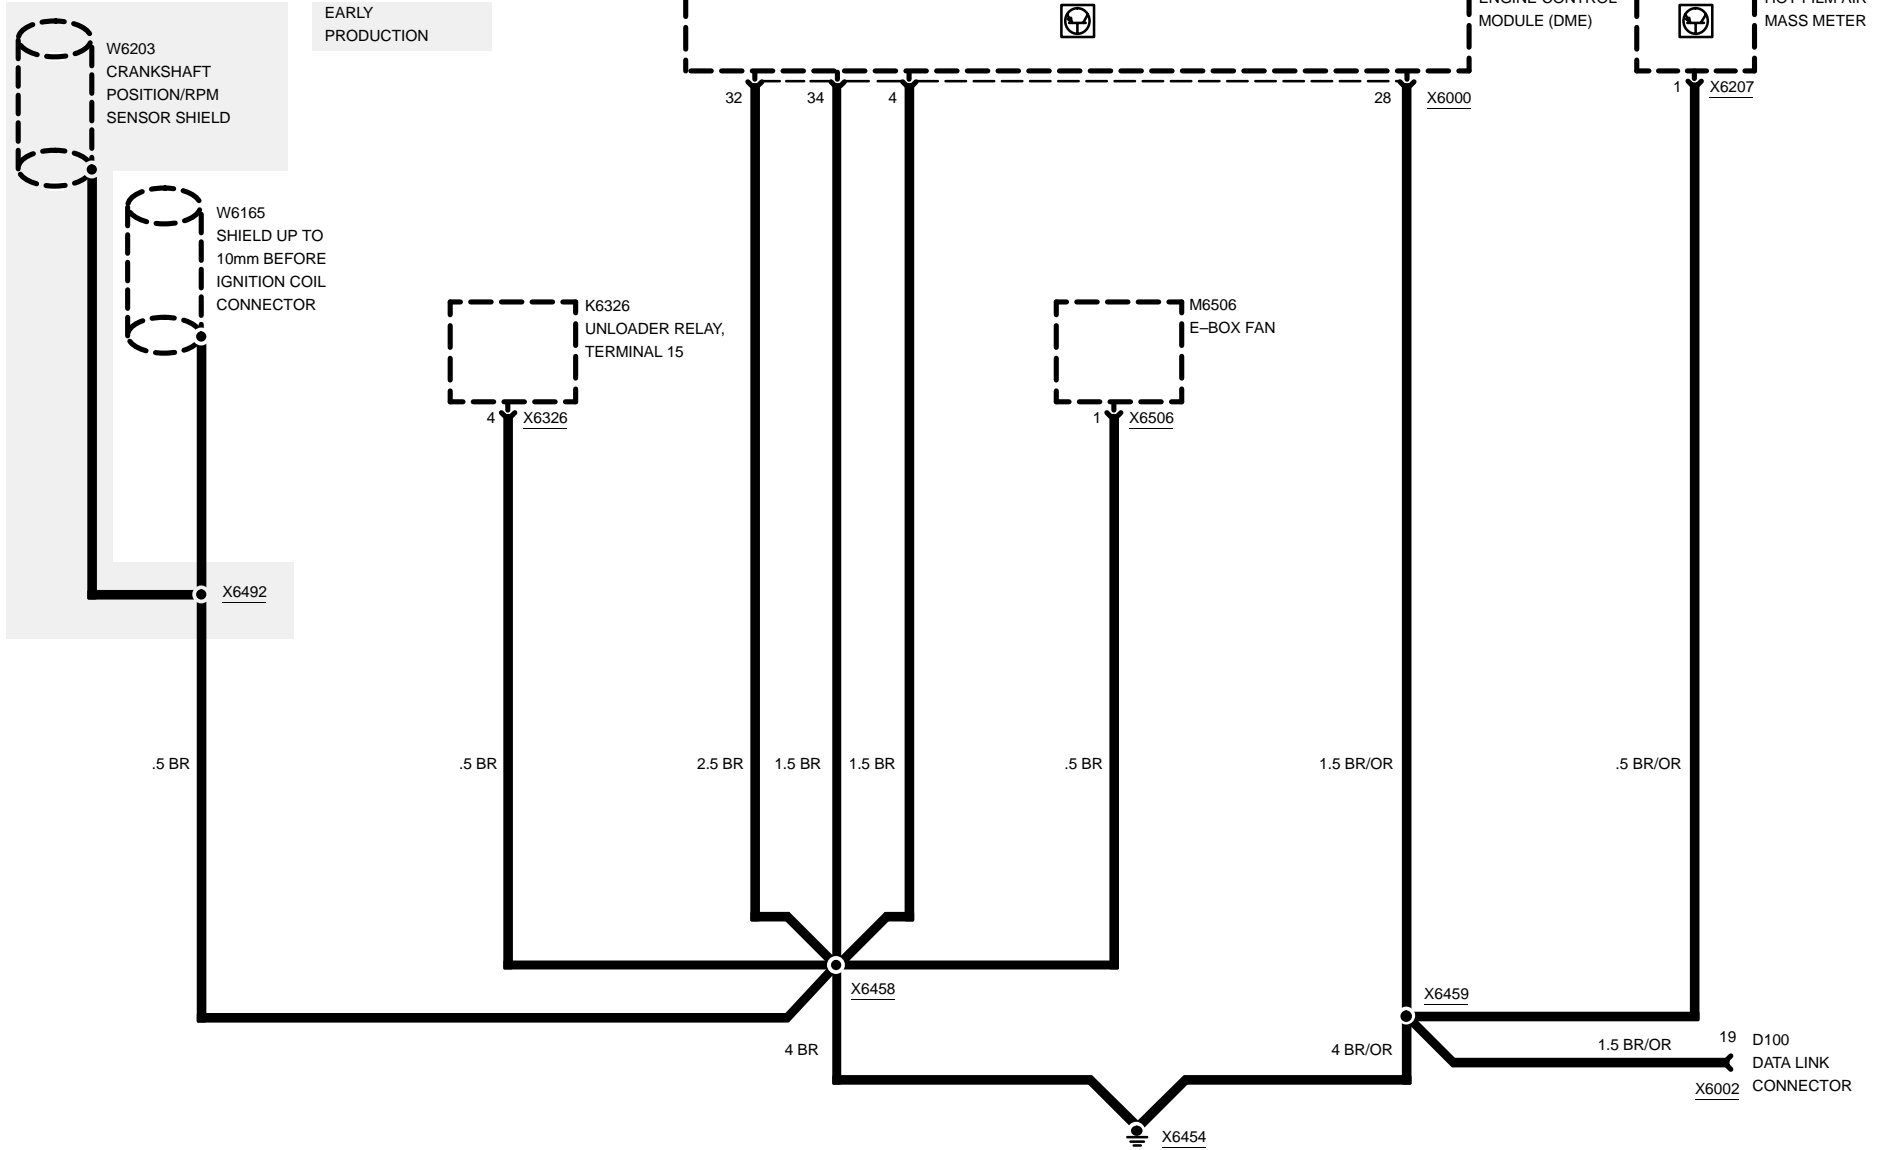

03/00

0670.4-06

1999




# GROUND DISTRIBUTION

## Z3 VERSIONS

### GROUND X6454

Z3

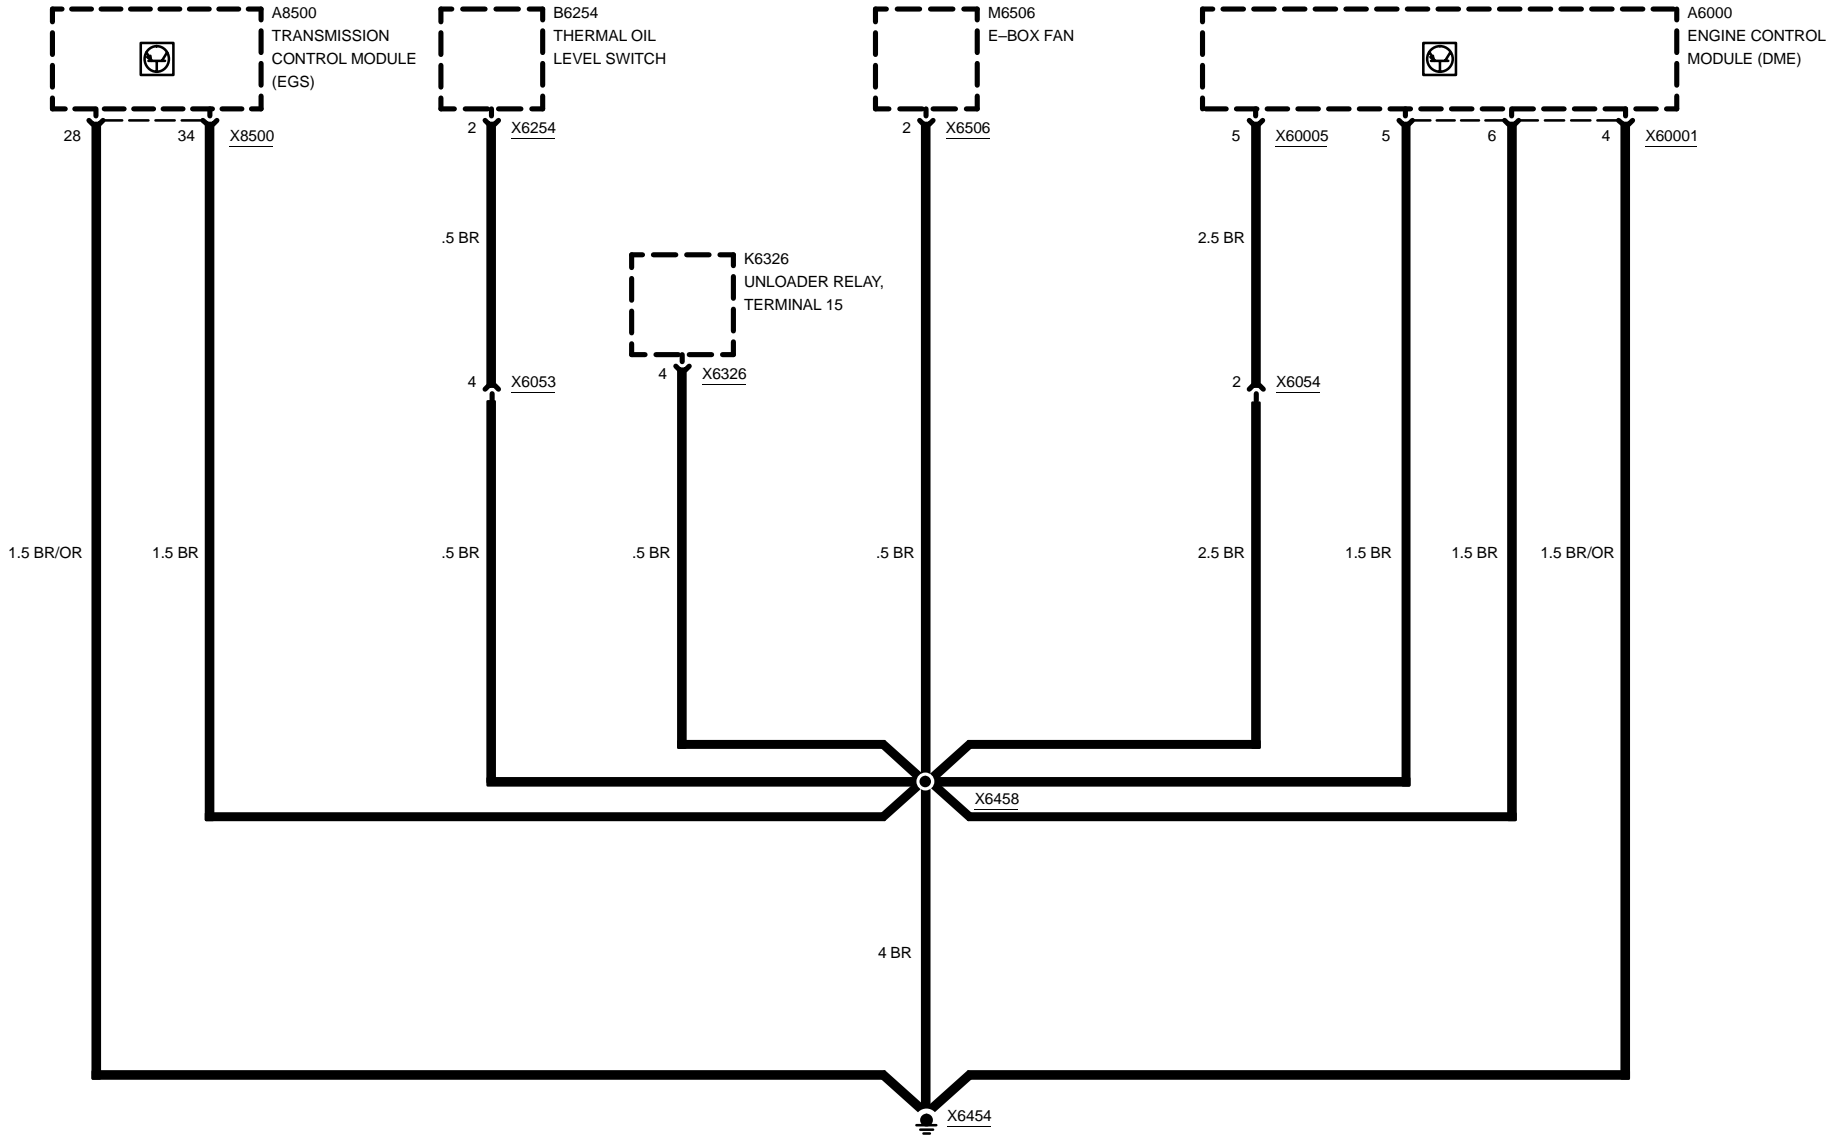




# GROUND DISTRIBUTION

## GROUNDS X6455 AND X6456

Z3

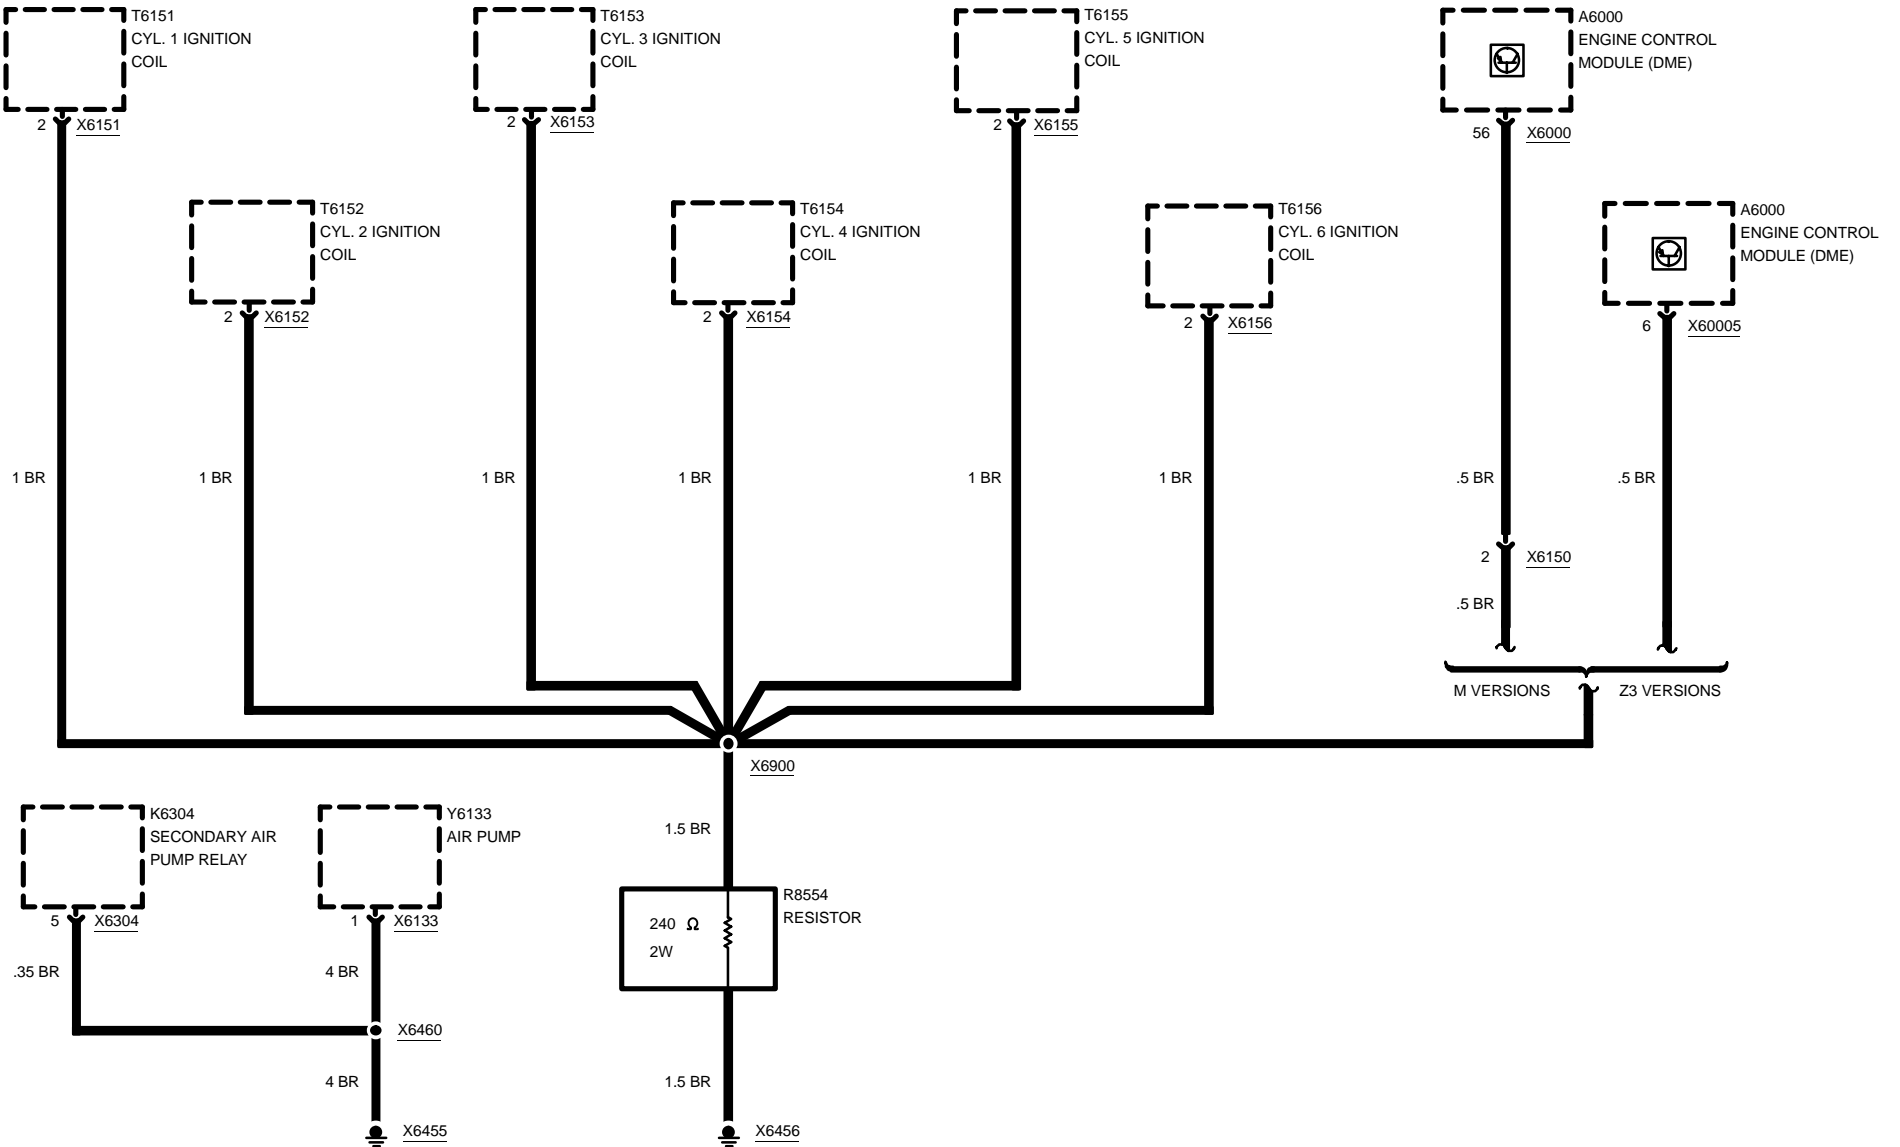




# GROUND DISTRIBUTION

## Z3 VERSIONS

### GROUND X9633

Z3

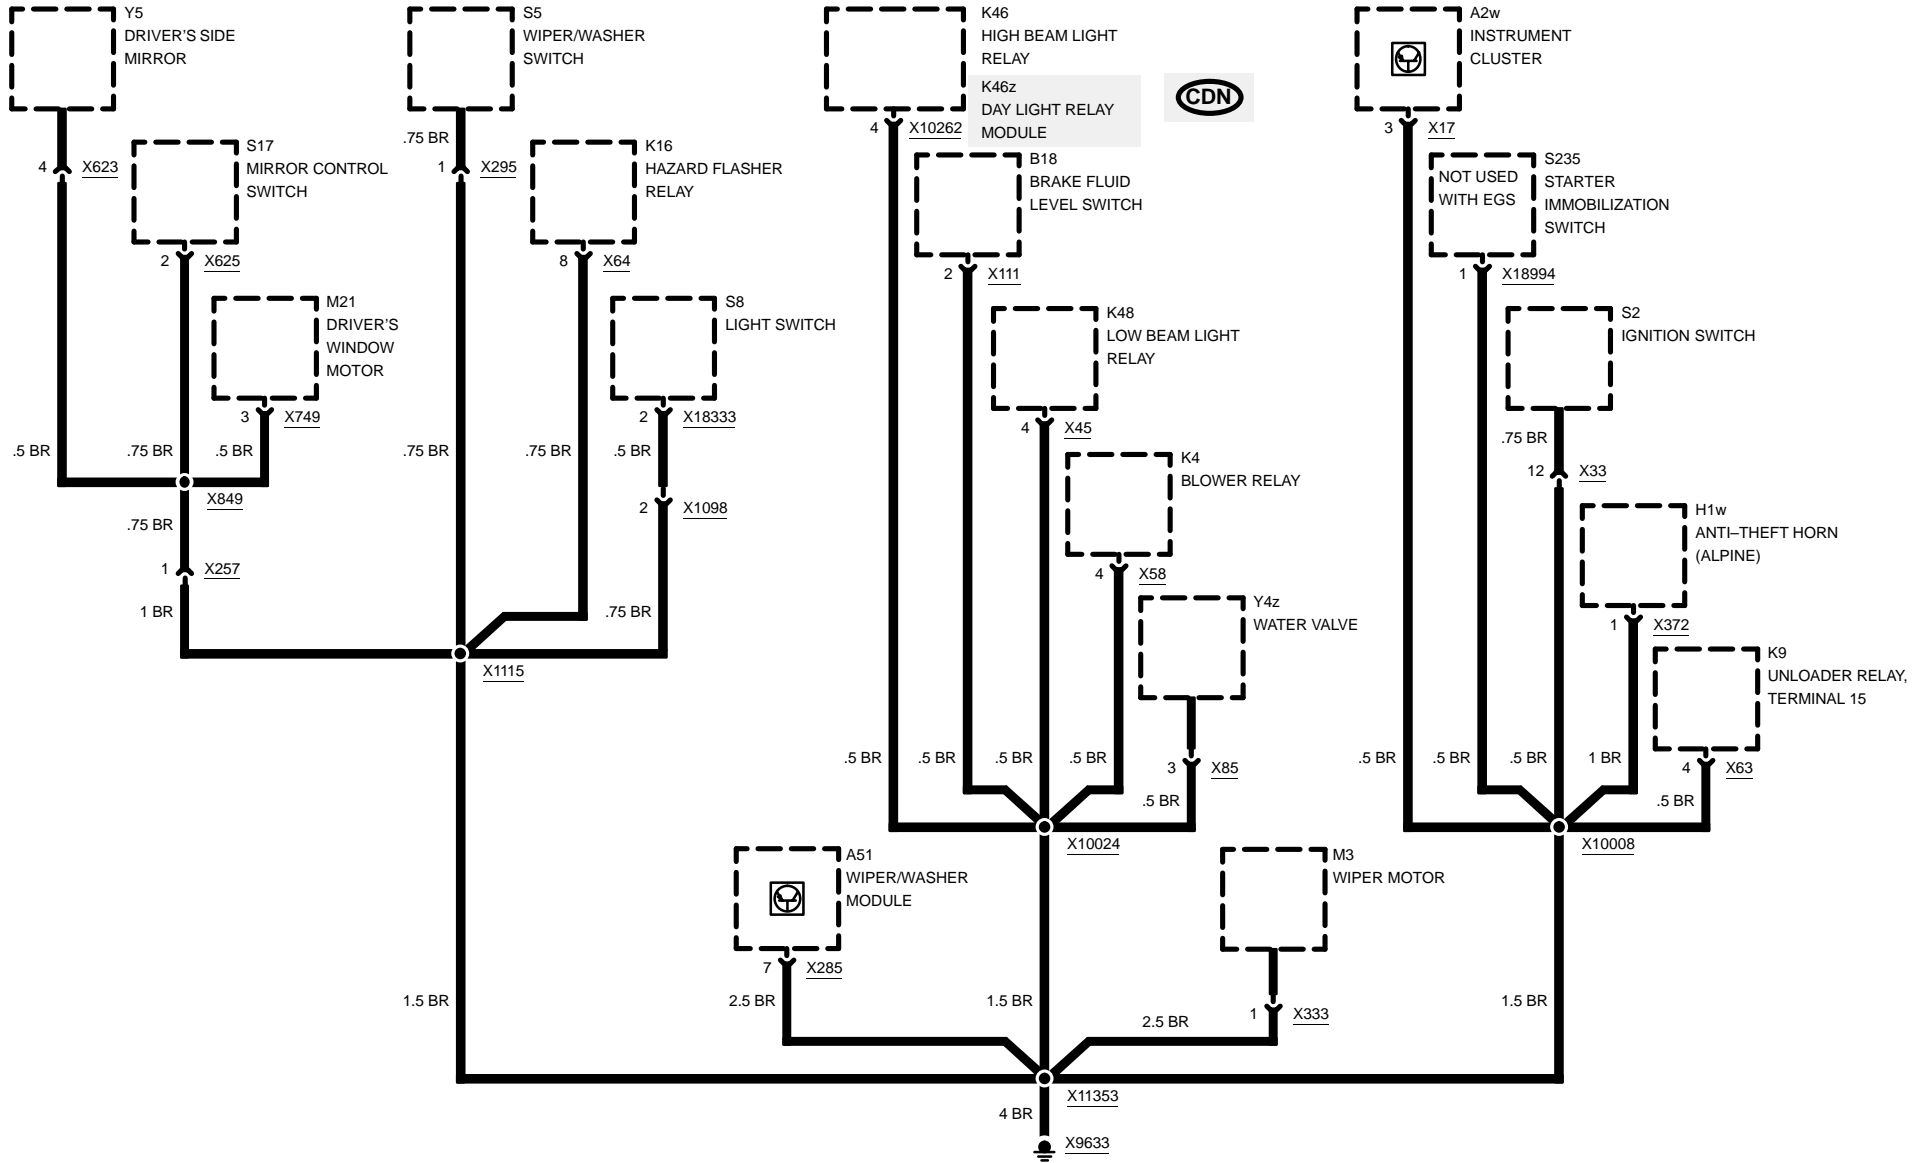





# GROUND DISTRIBUTION

## GROUND X9633


Z3

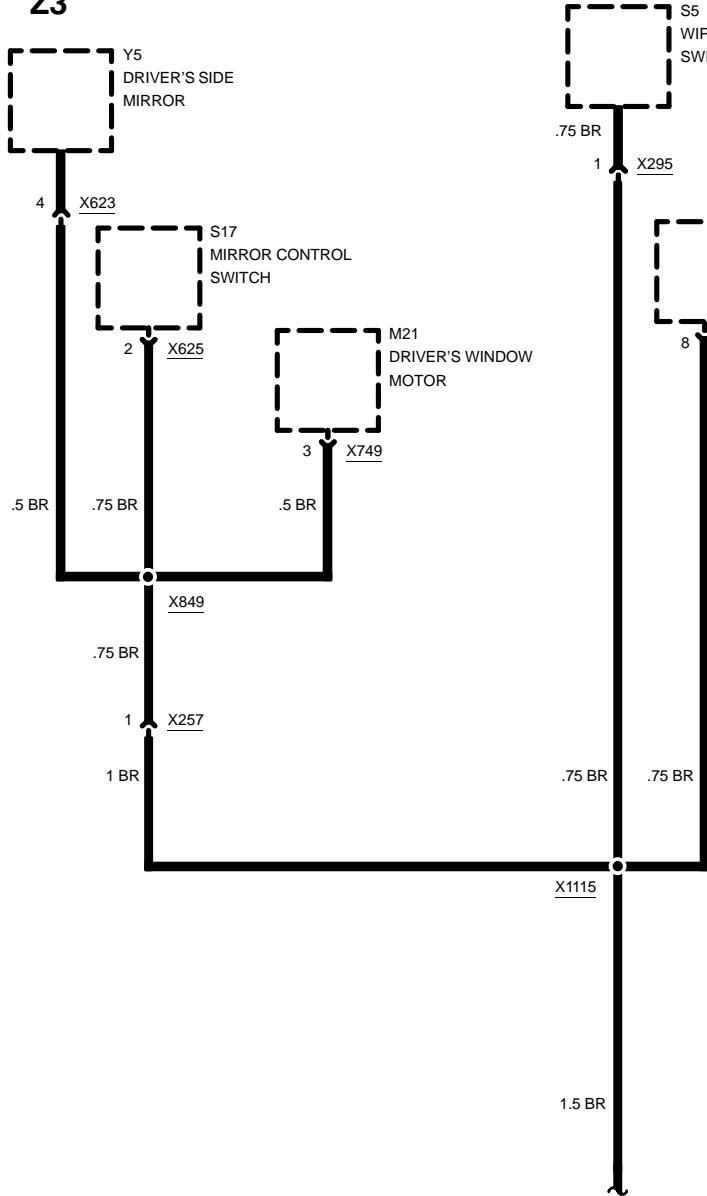

## M VERSIONS

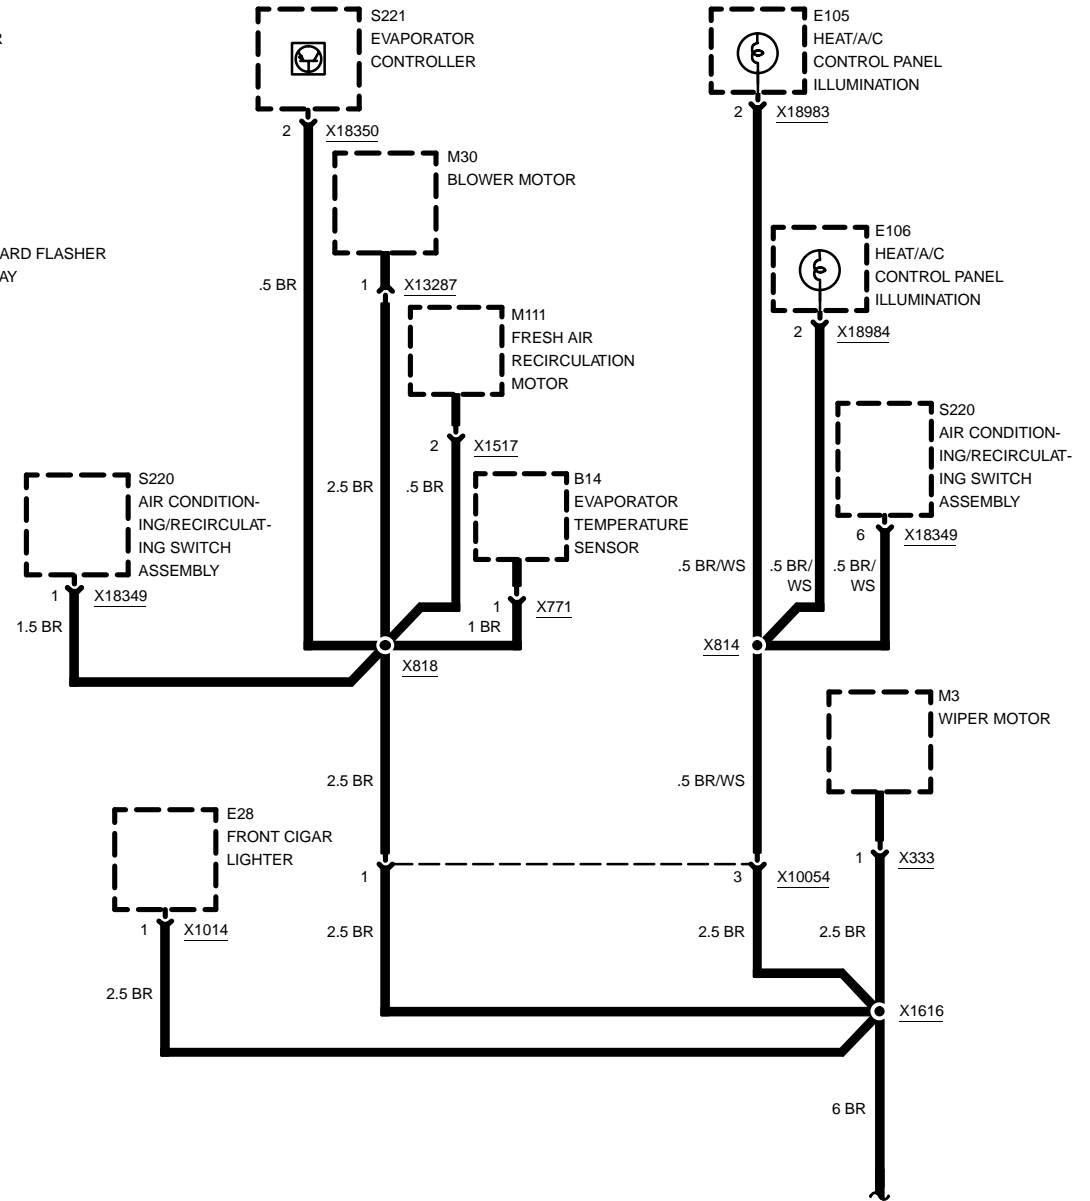



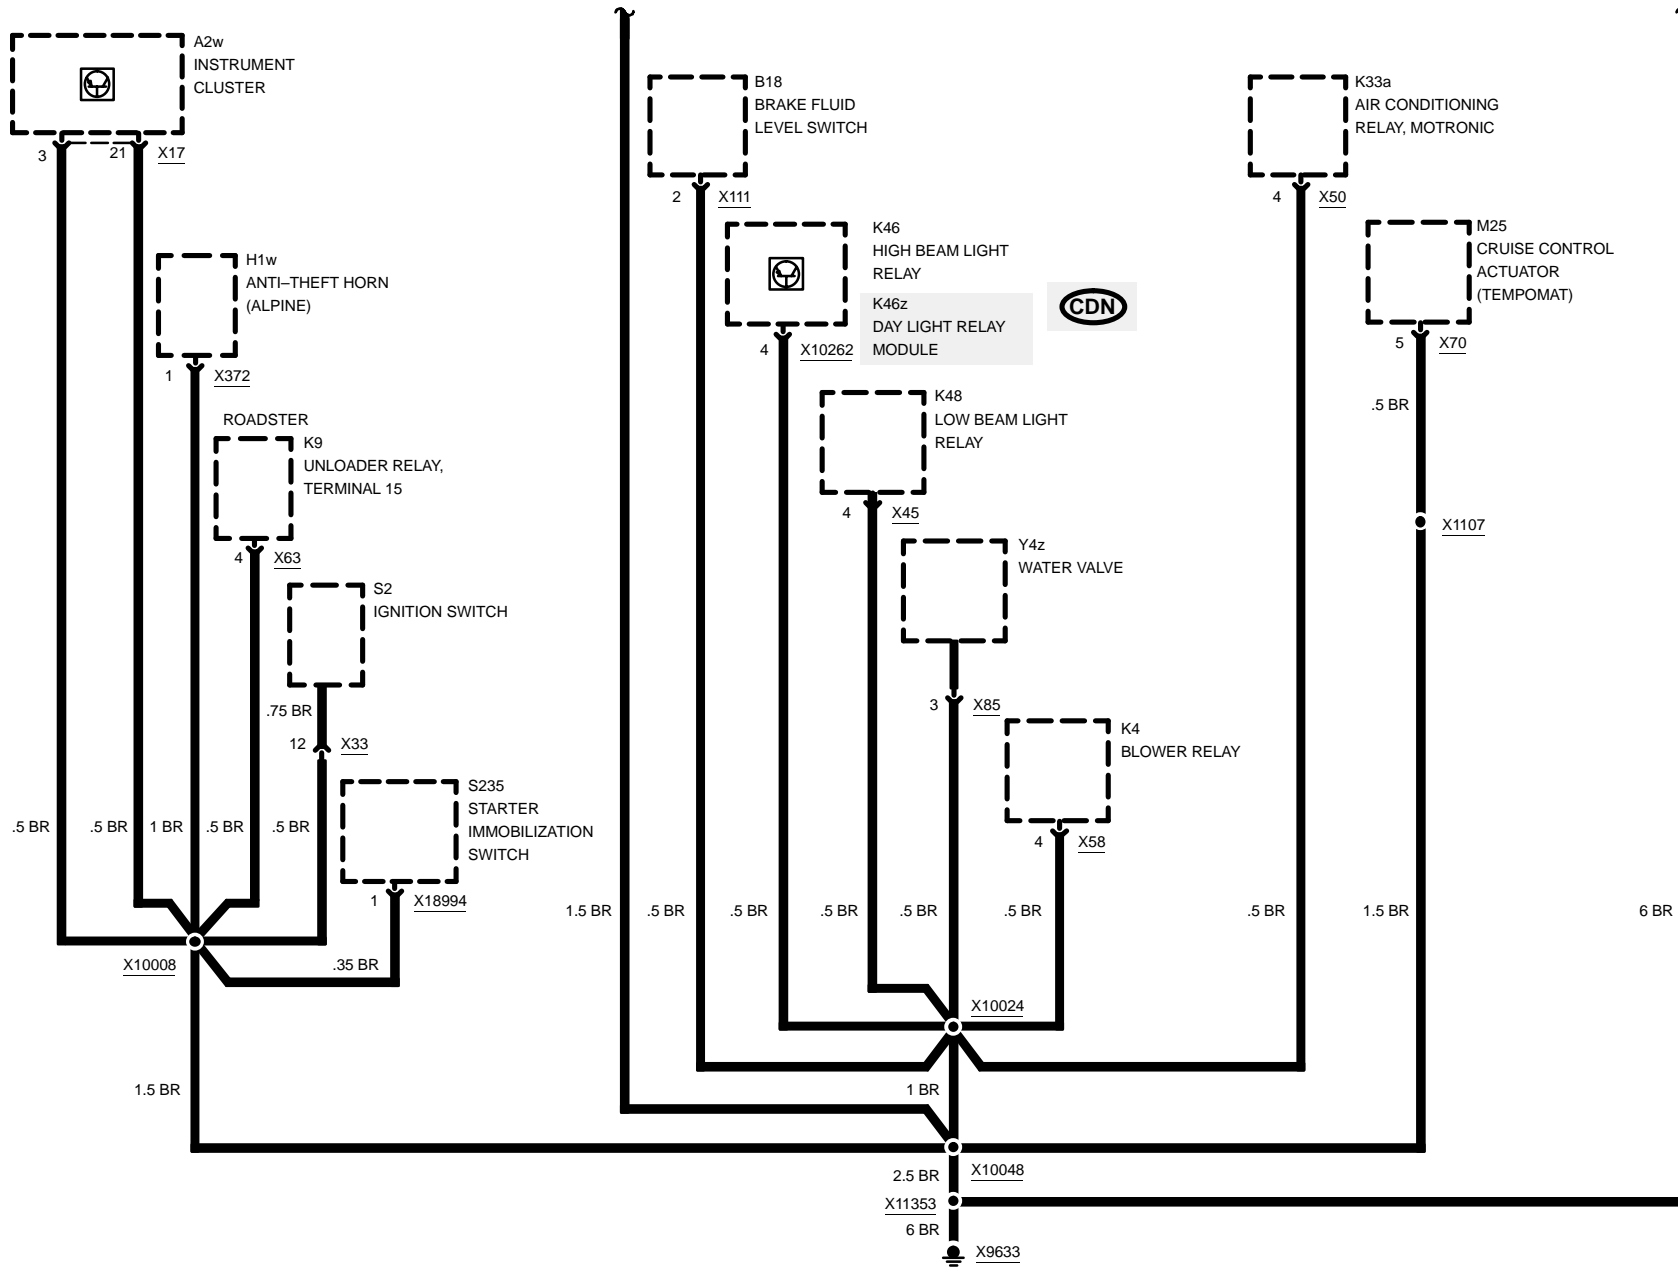




# GROUND DISTRIBUTION

## Z3 VERSIONS

### GROUND X10010

Z3

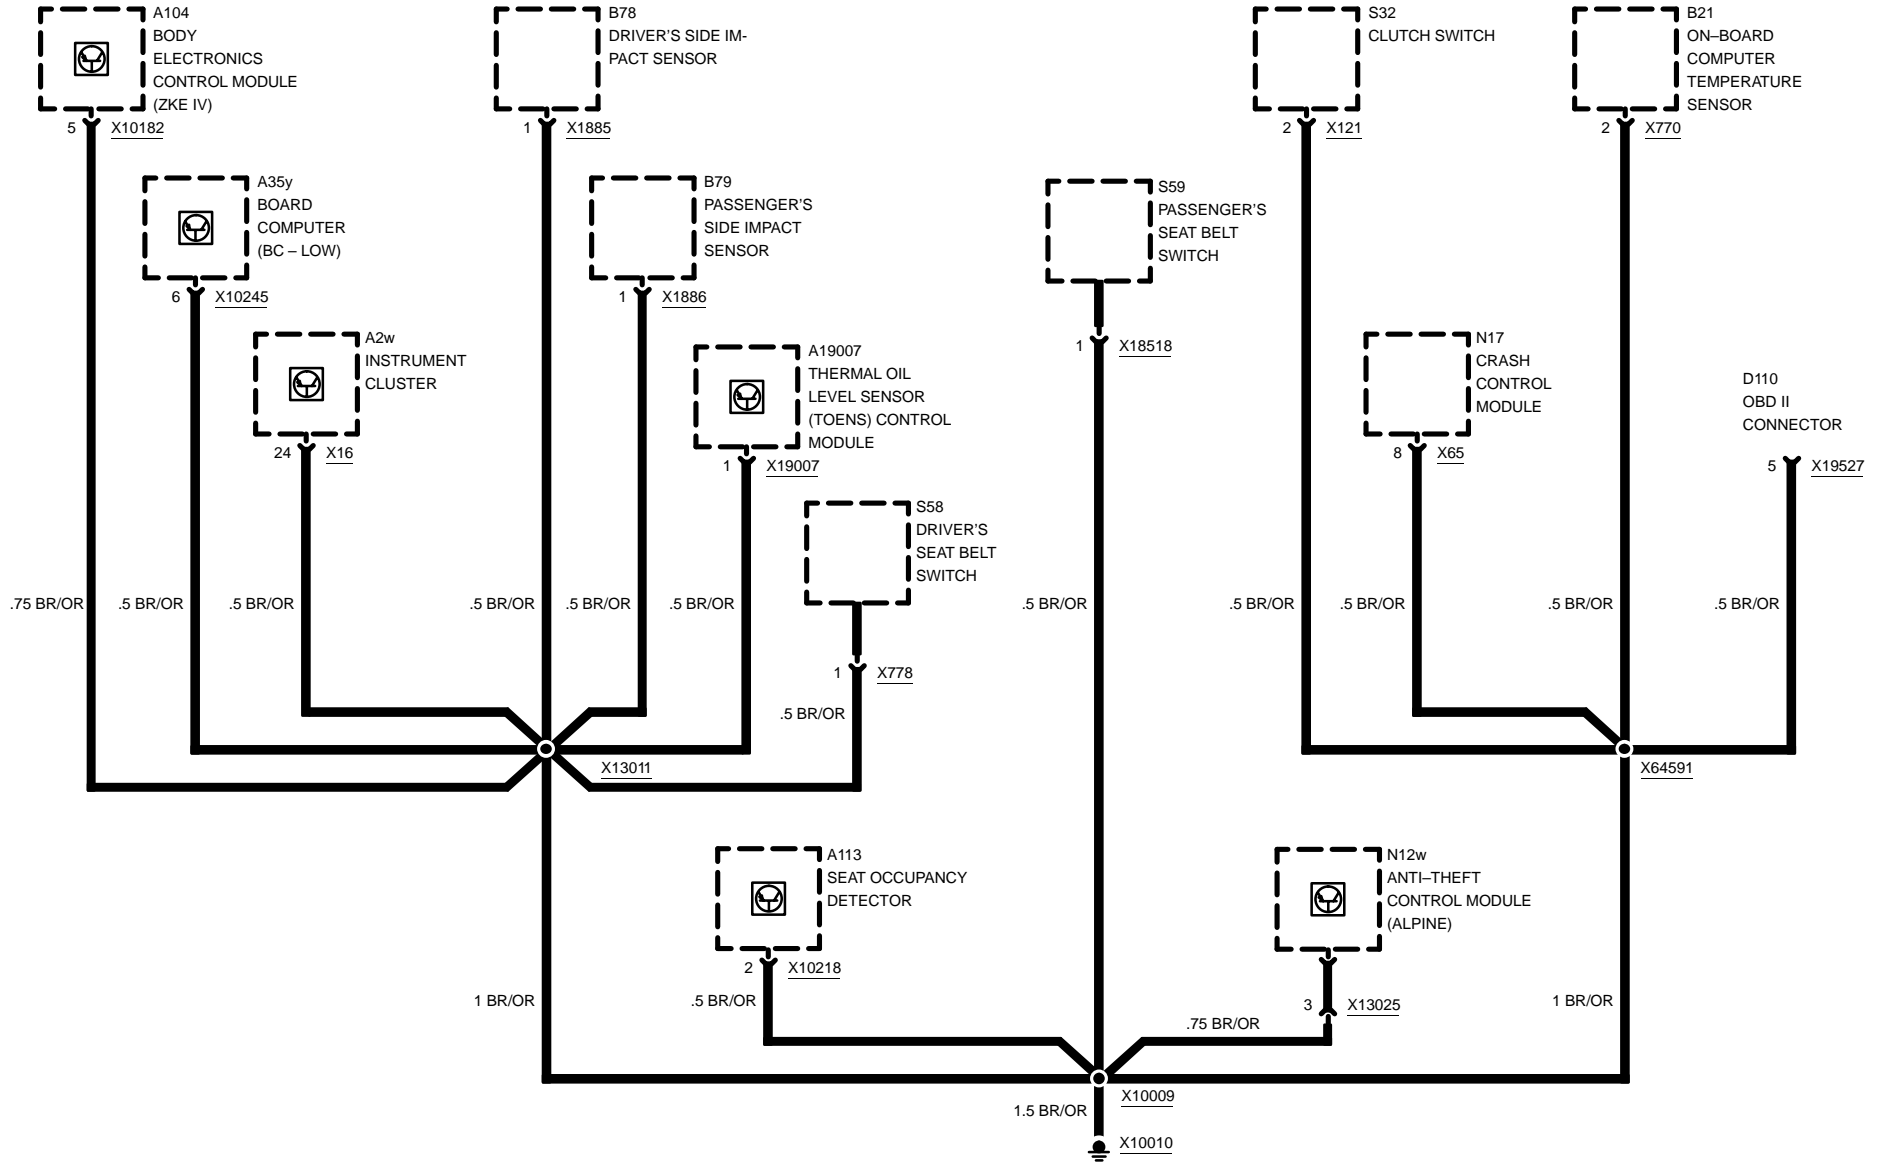

03/00

0670.4-12

1999




# GROUND DISTRIBUTION

# M VERSIONS

## GROUND X10010

Z3

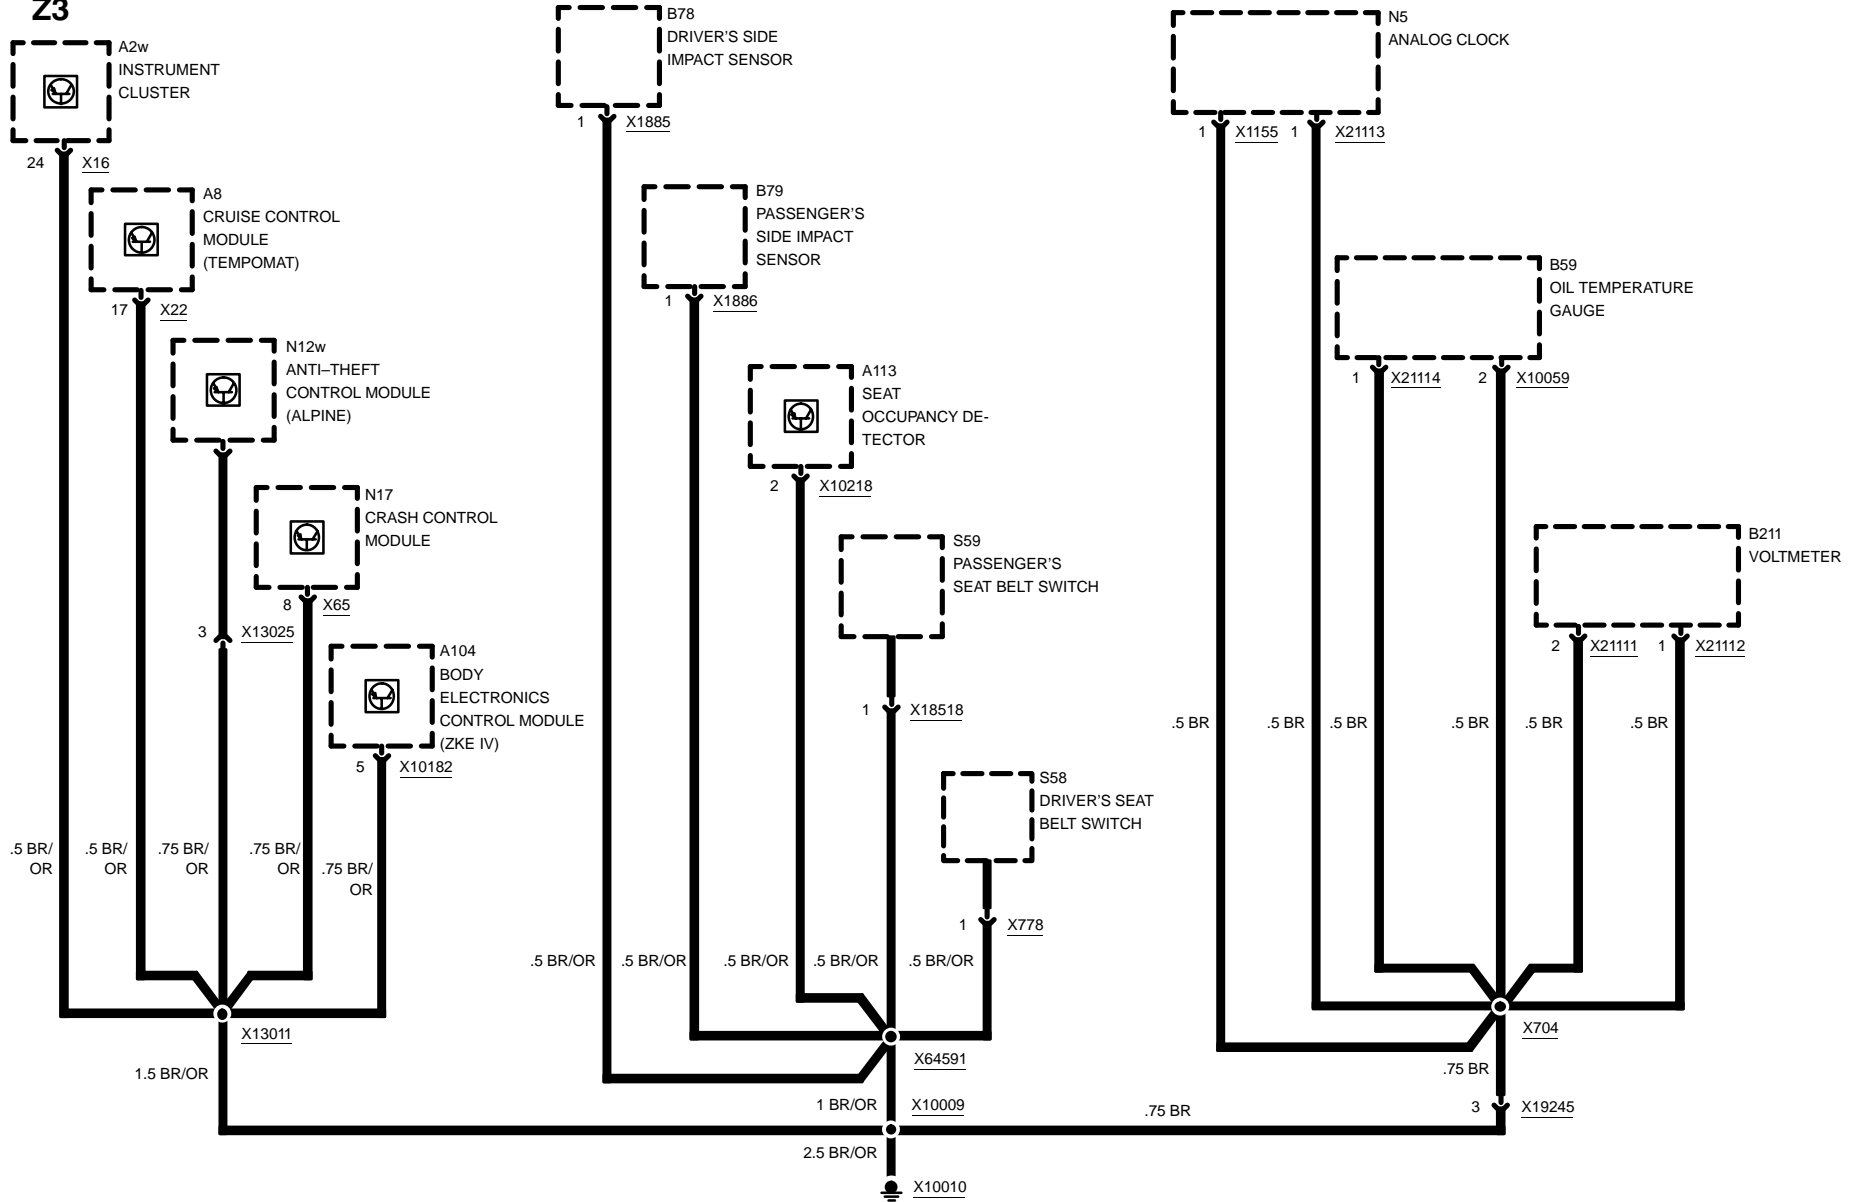








Z3

# GROUND DISTRIBUTION

## GROUND X13006

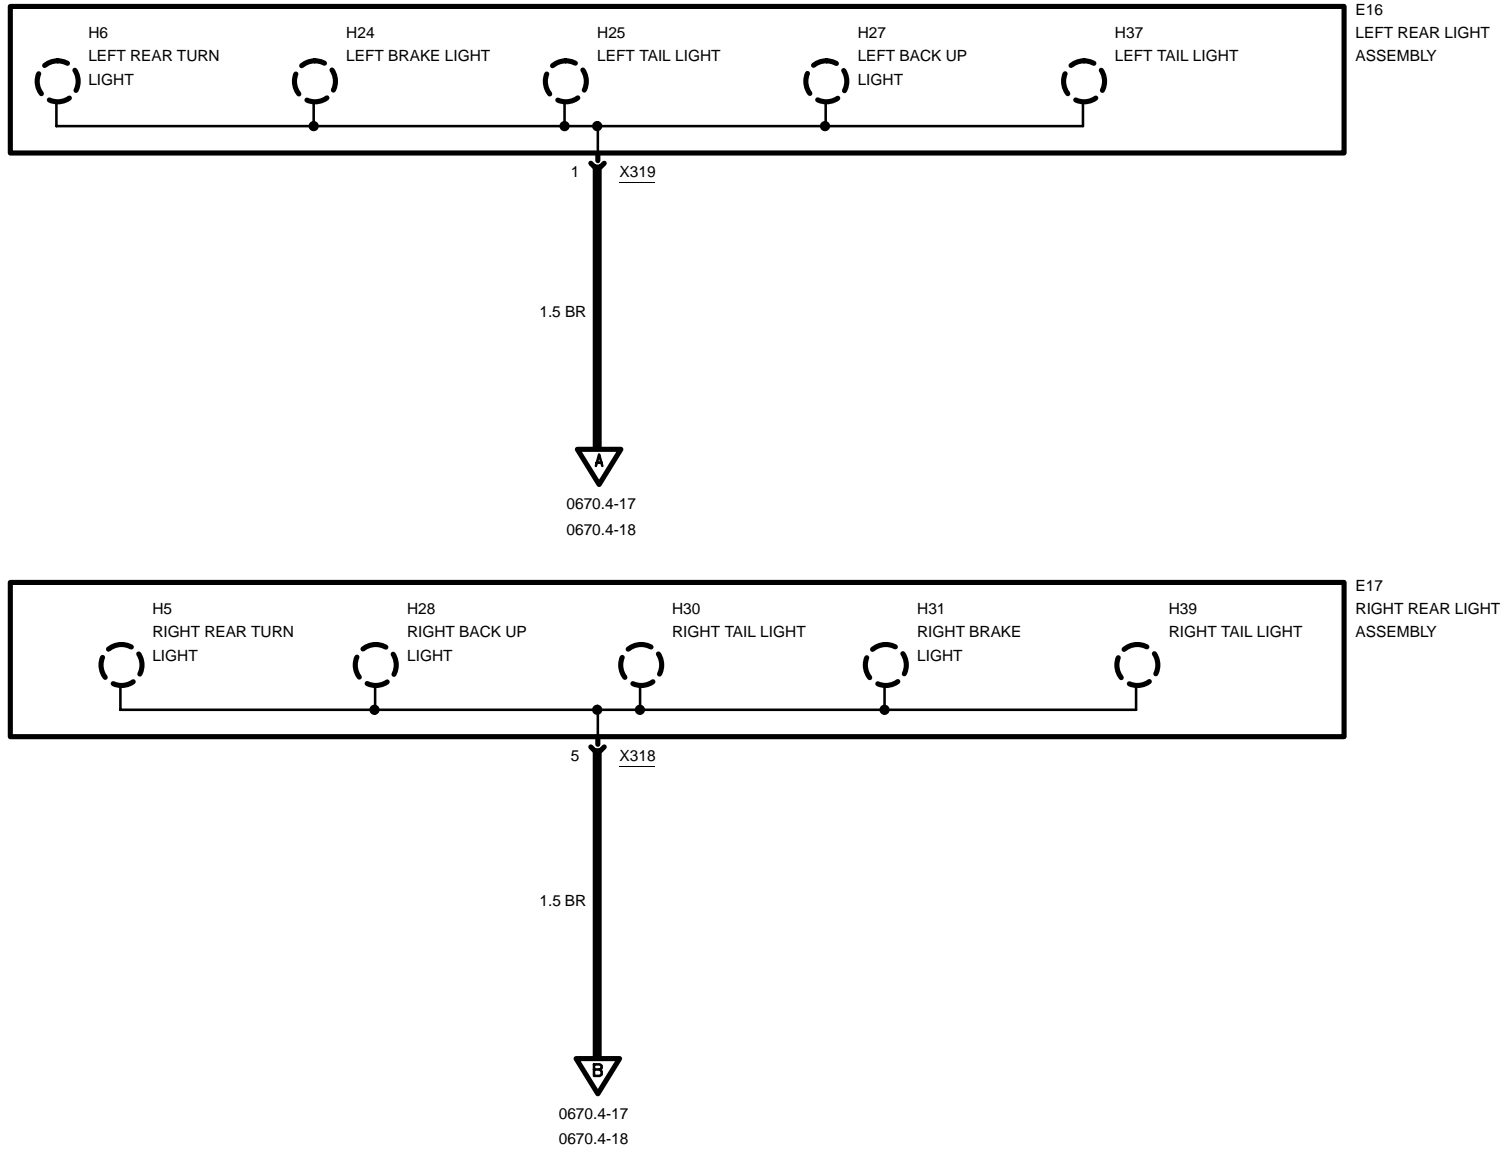




# GROUND DISTRIBUTION

## GROUND X13006

# M VERSIONS

Z3

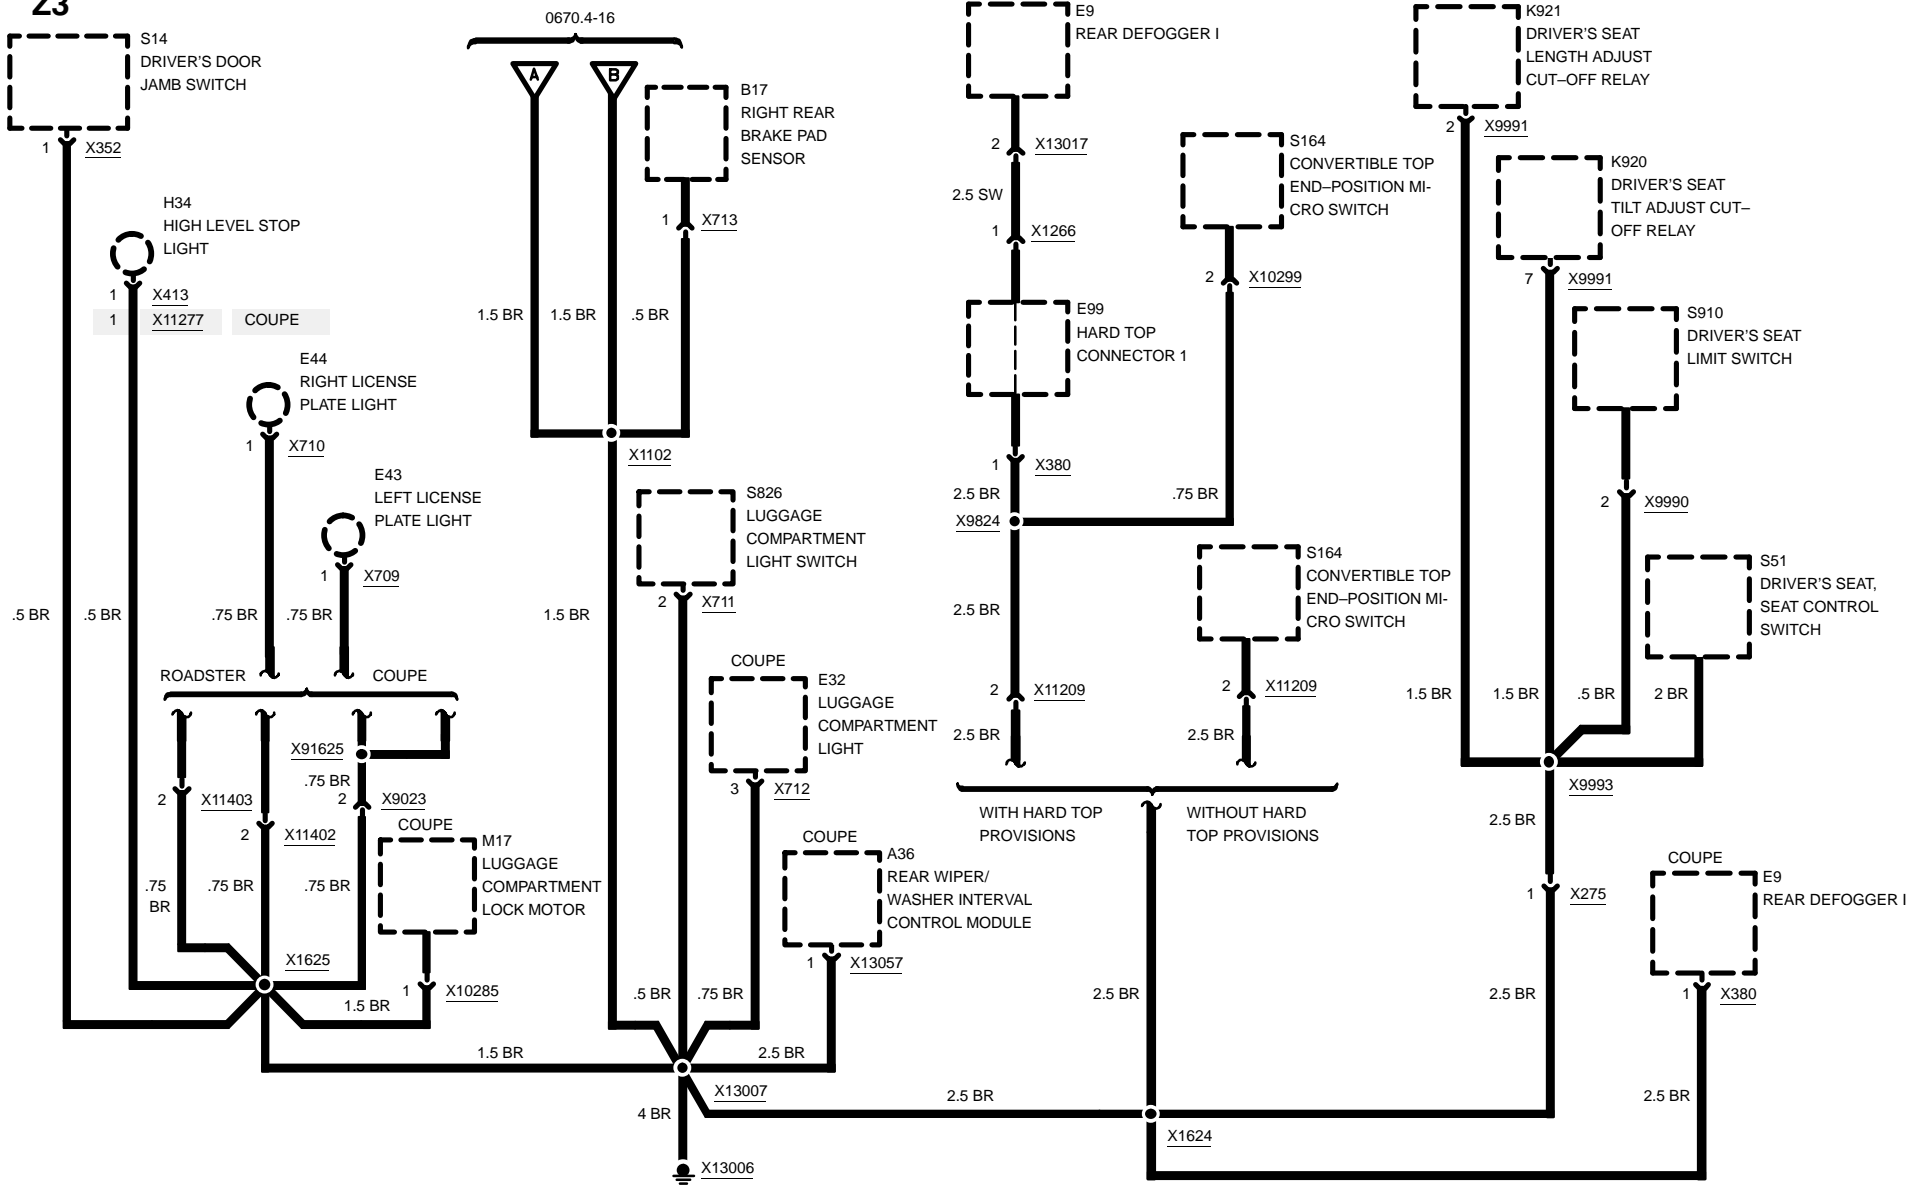








# GROUND DISTRIBUTION

## GROUNDS X13016 AND X13032

Z3

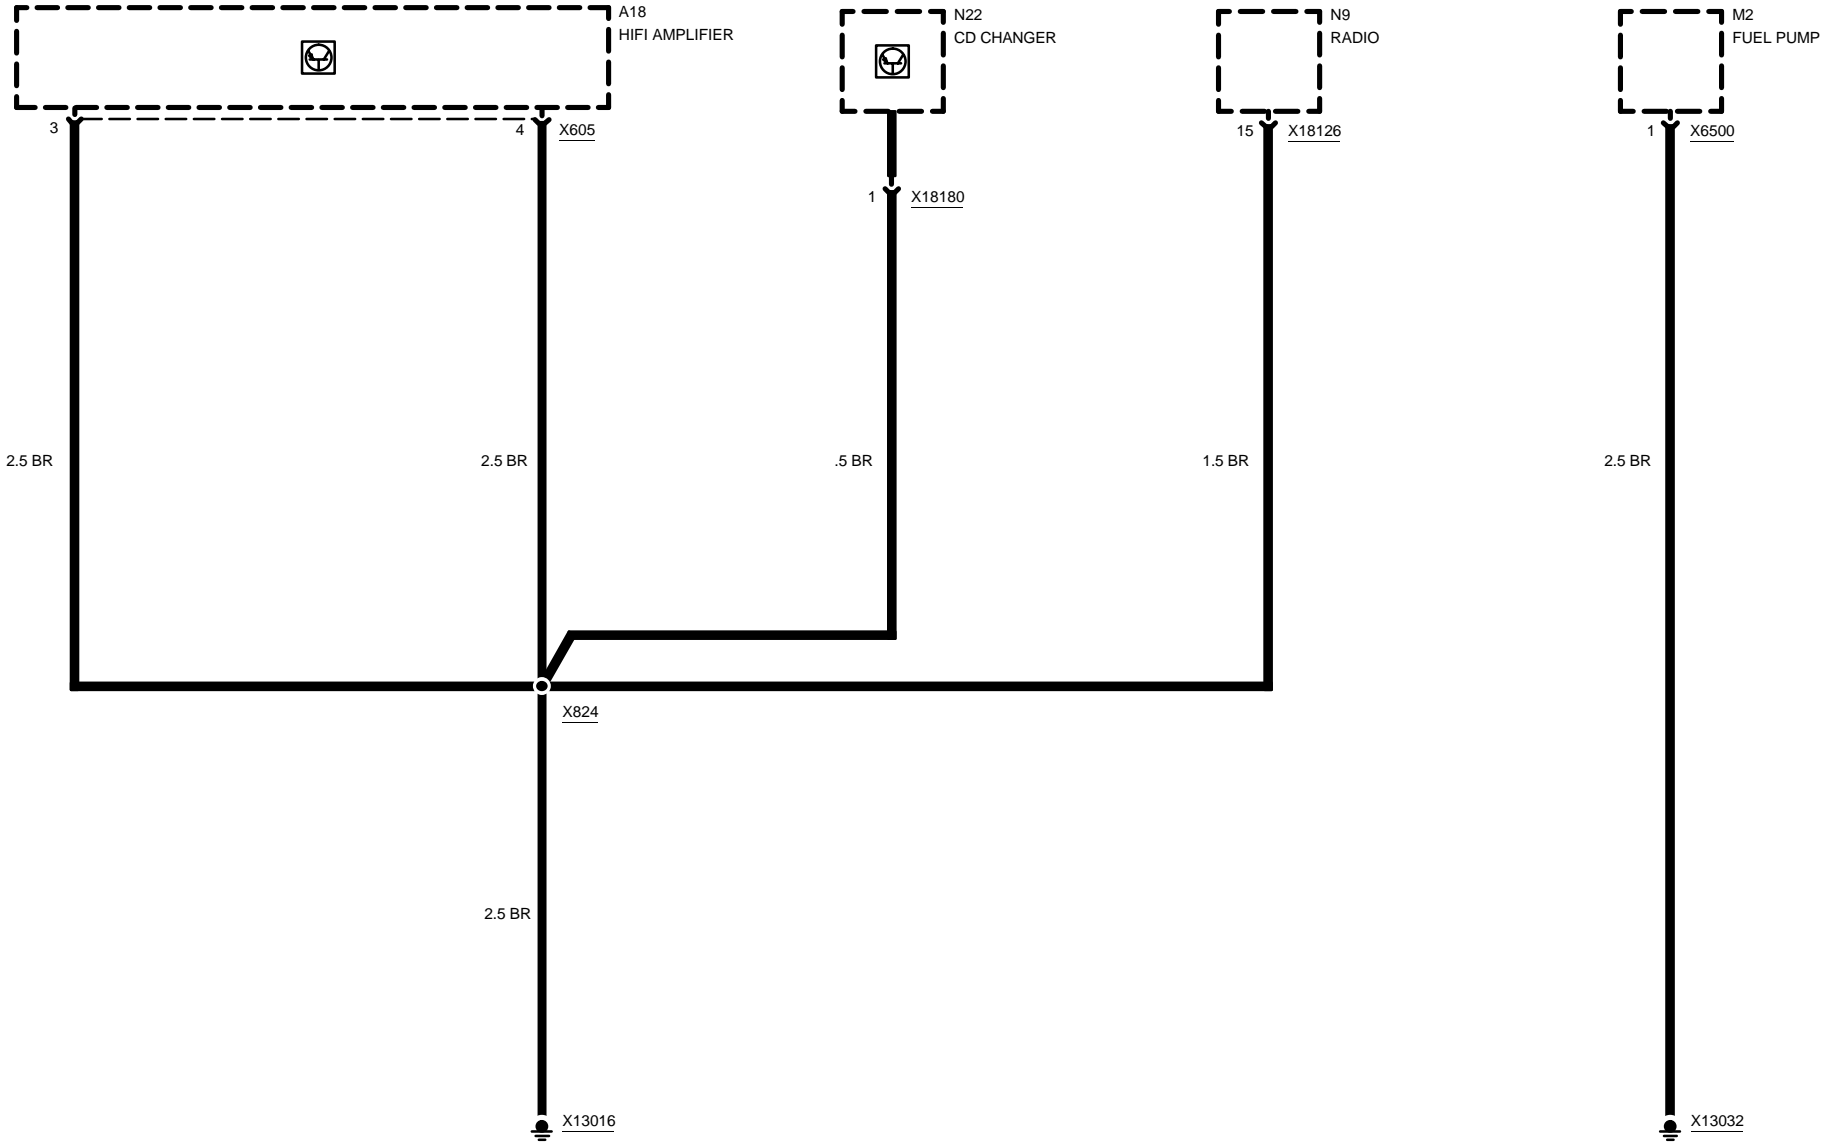




# GROUND DISTRIBUTION


## GROUND X18170

### Z3 VERSIONS

Z3

TELEPHONE CONNECTOR

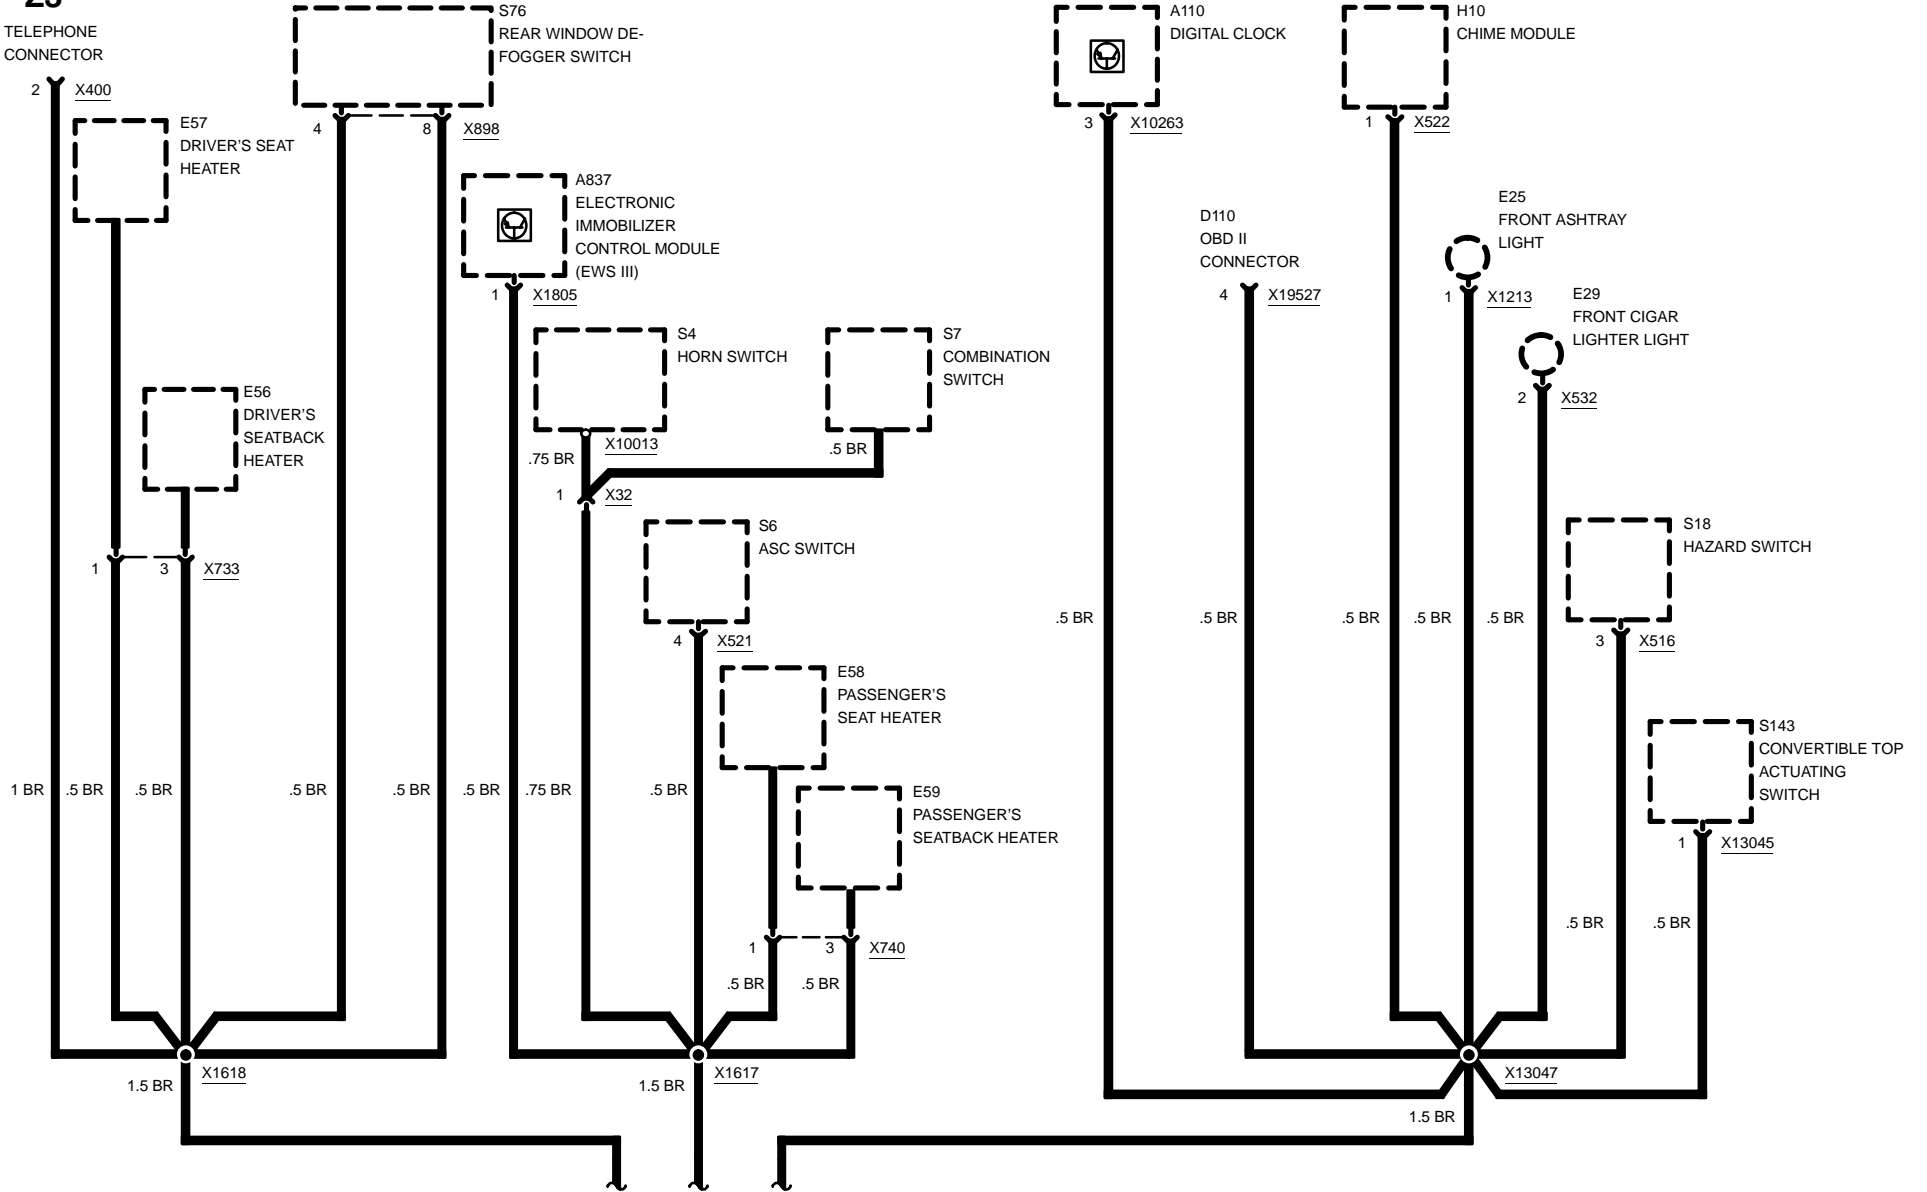

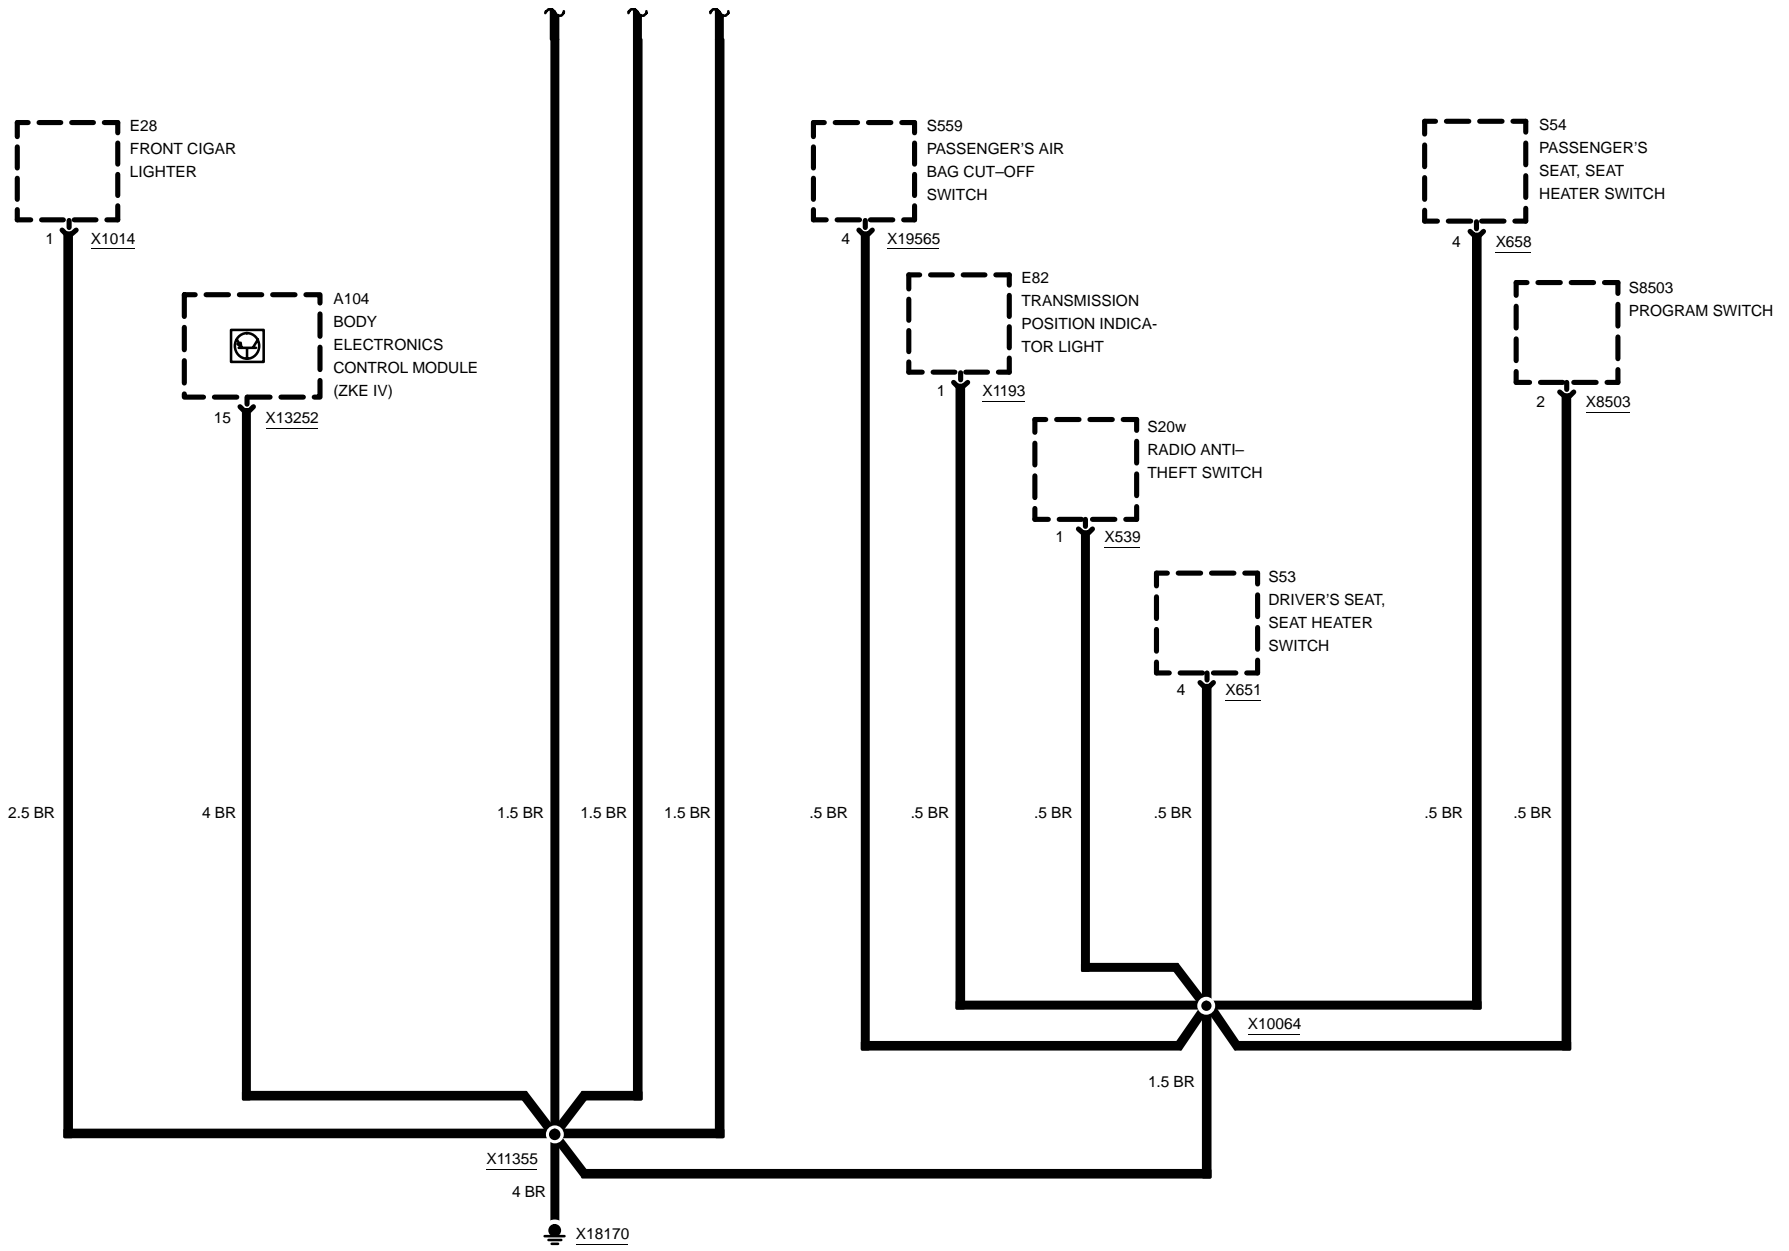




# GROUND DISTRIBUTION



## GROUND X18170

# M VERSIONS

Z3

TELEPHONE CONNECTOR

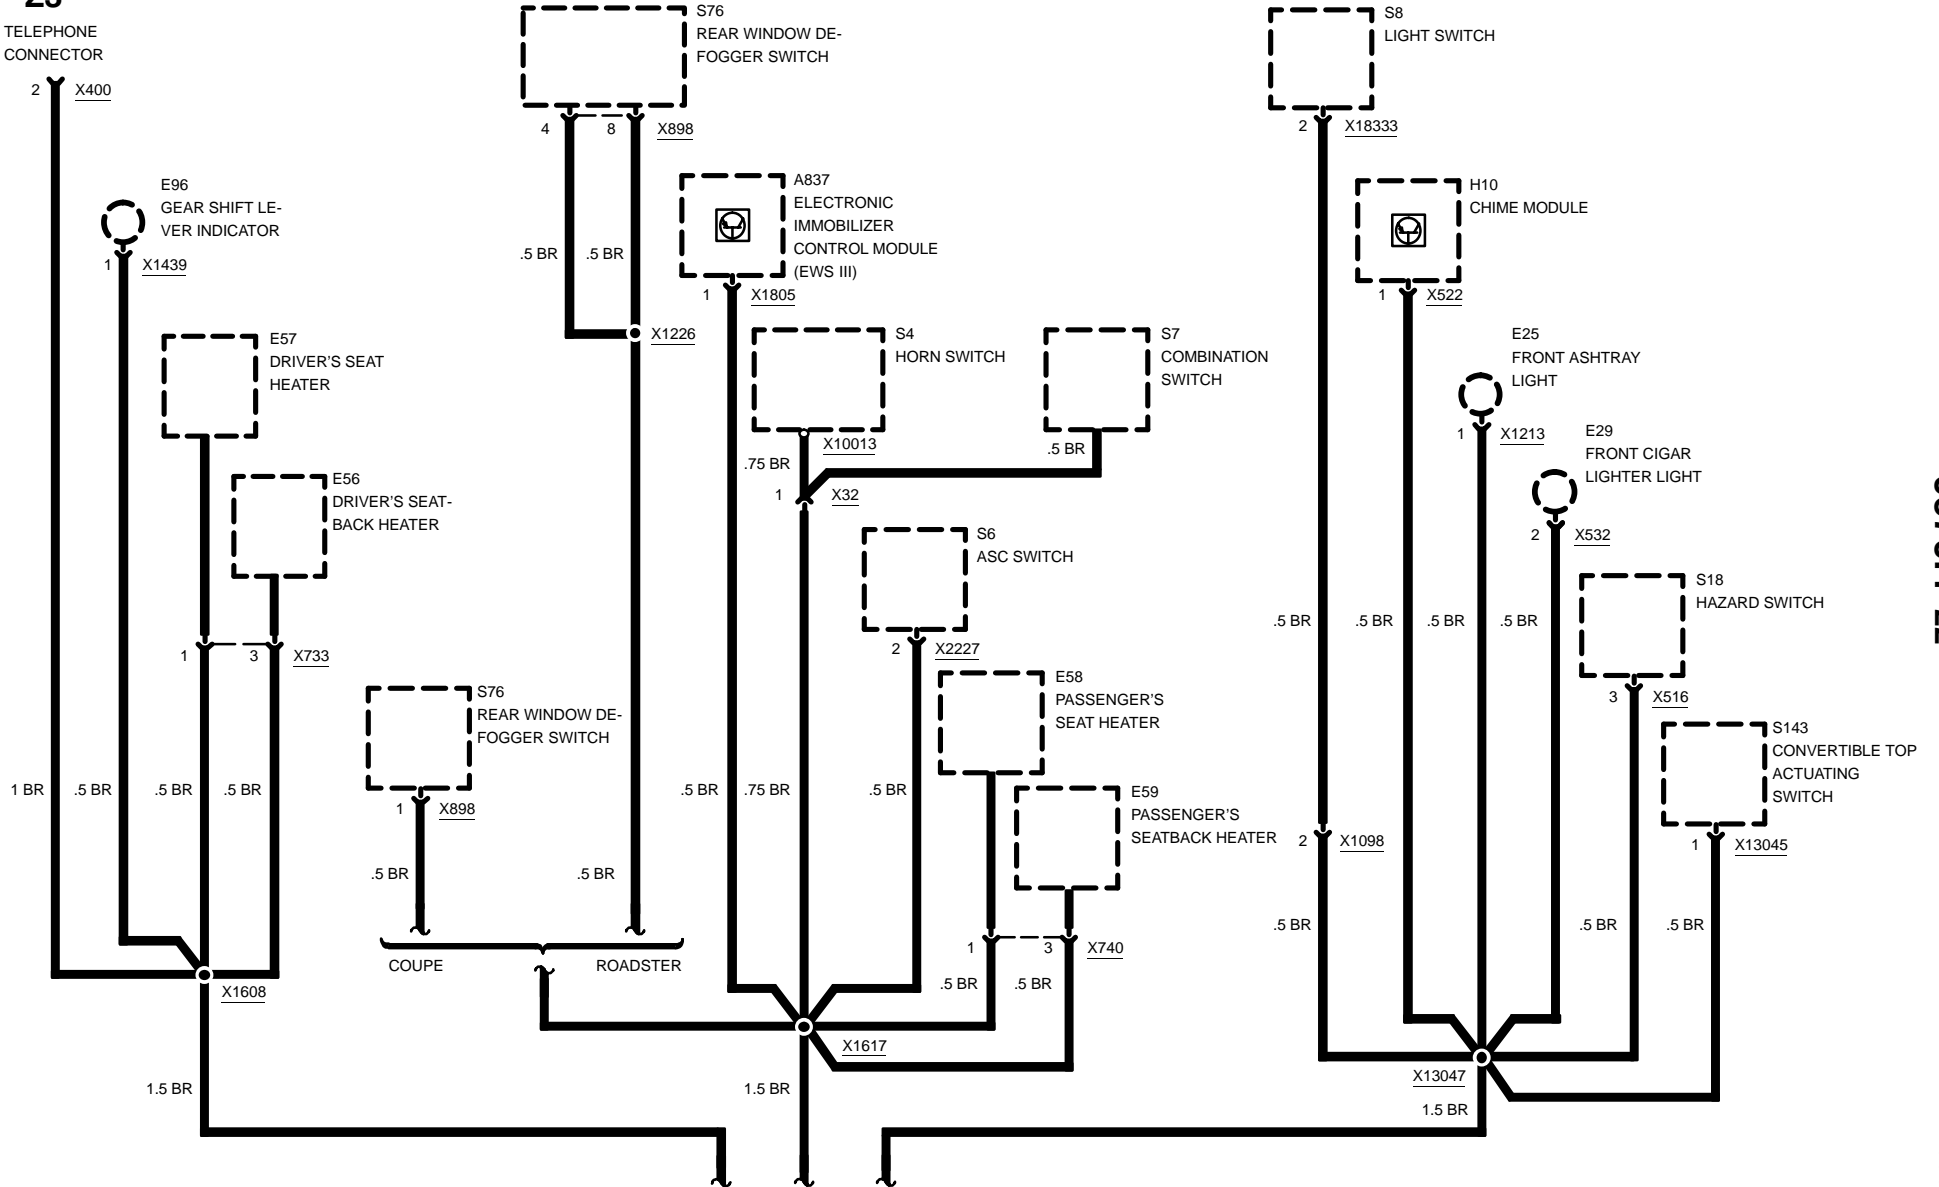

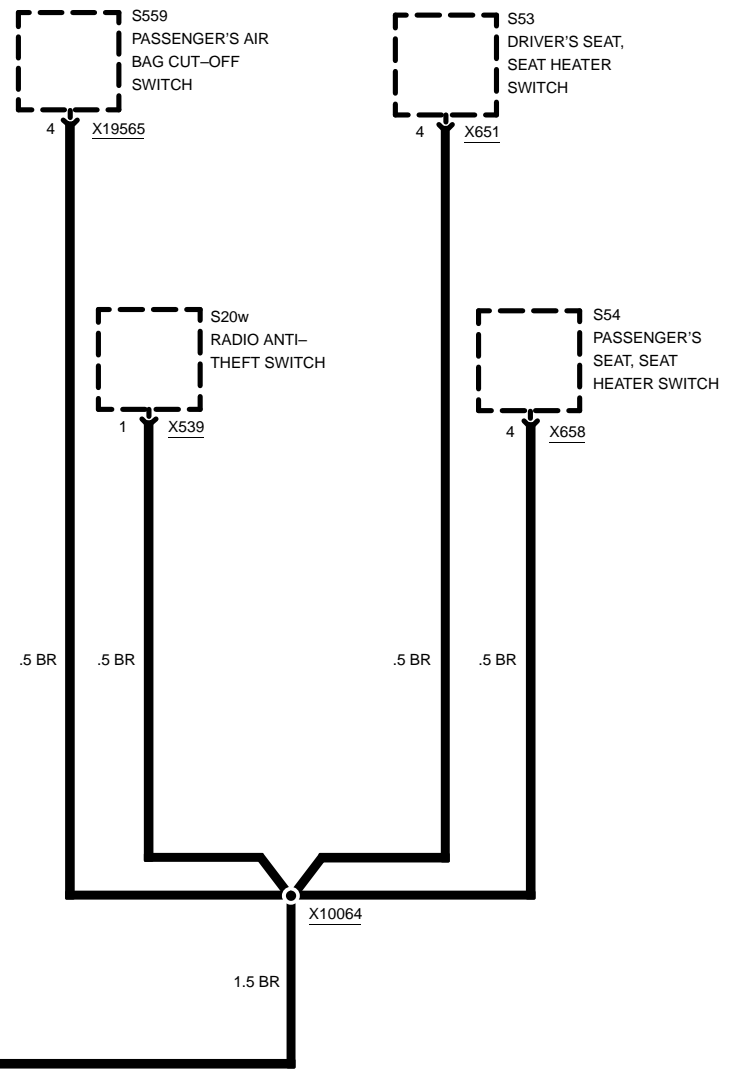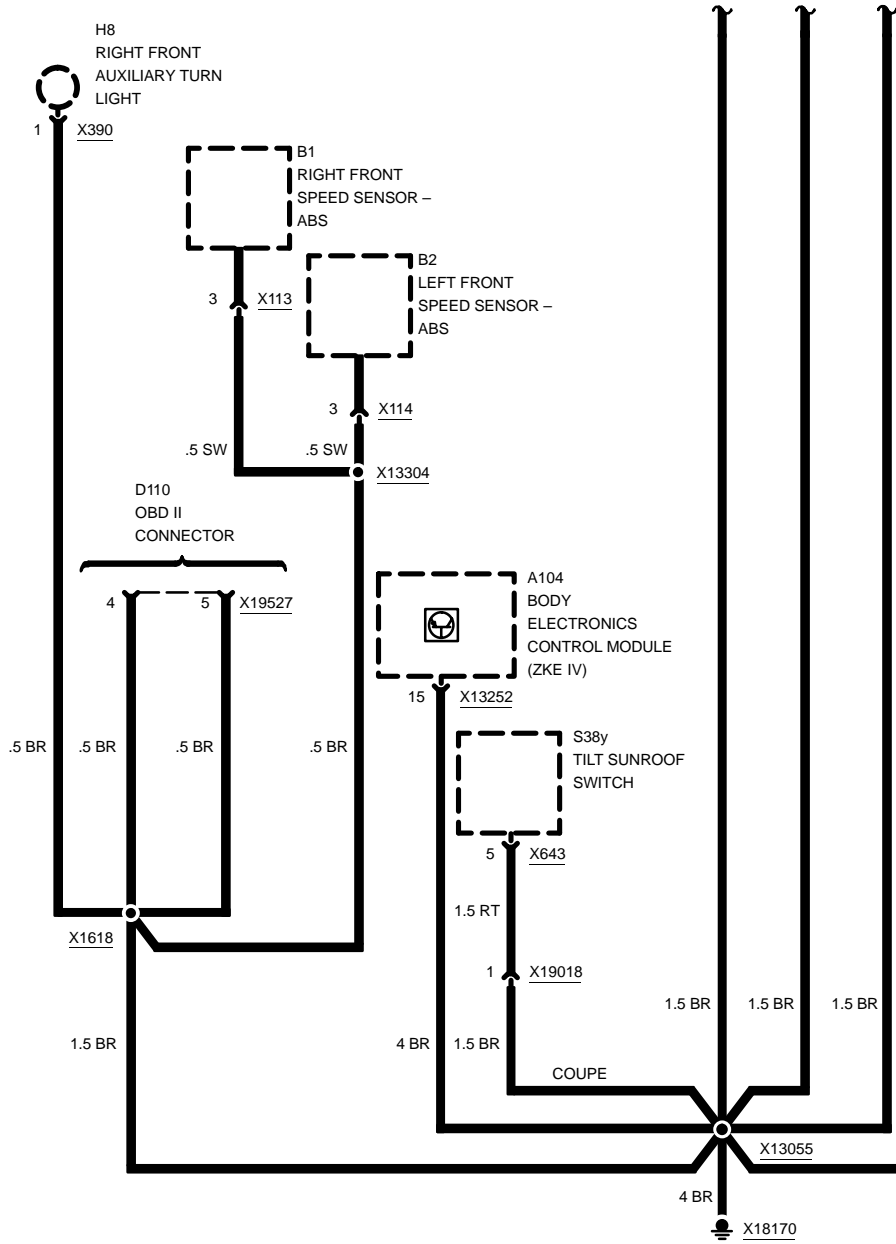




# 0670.5 DATA LINK

## BLOCK DIAGRAM

Z3

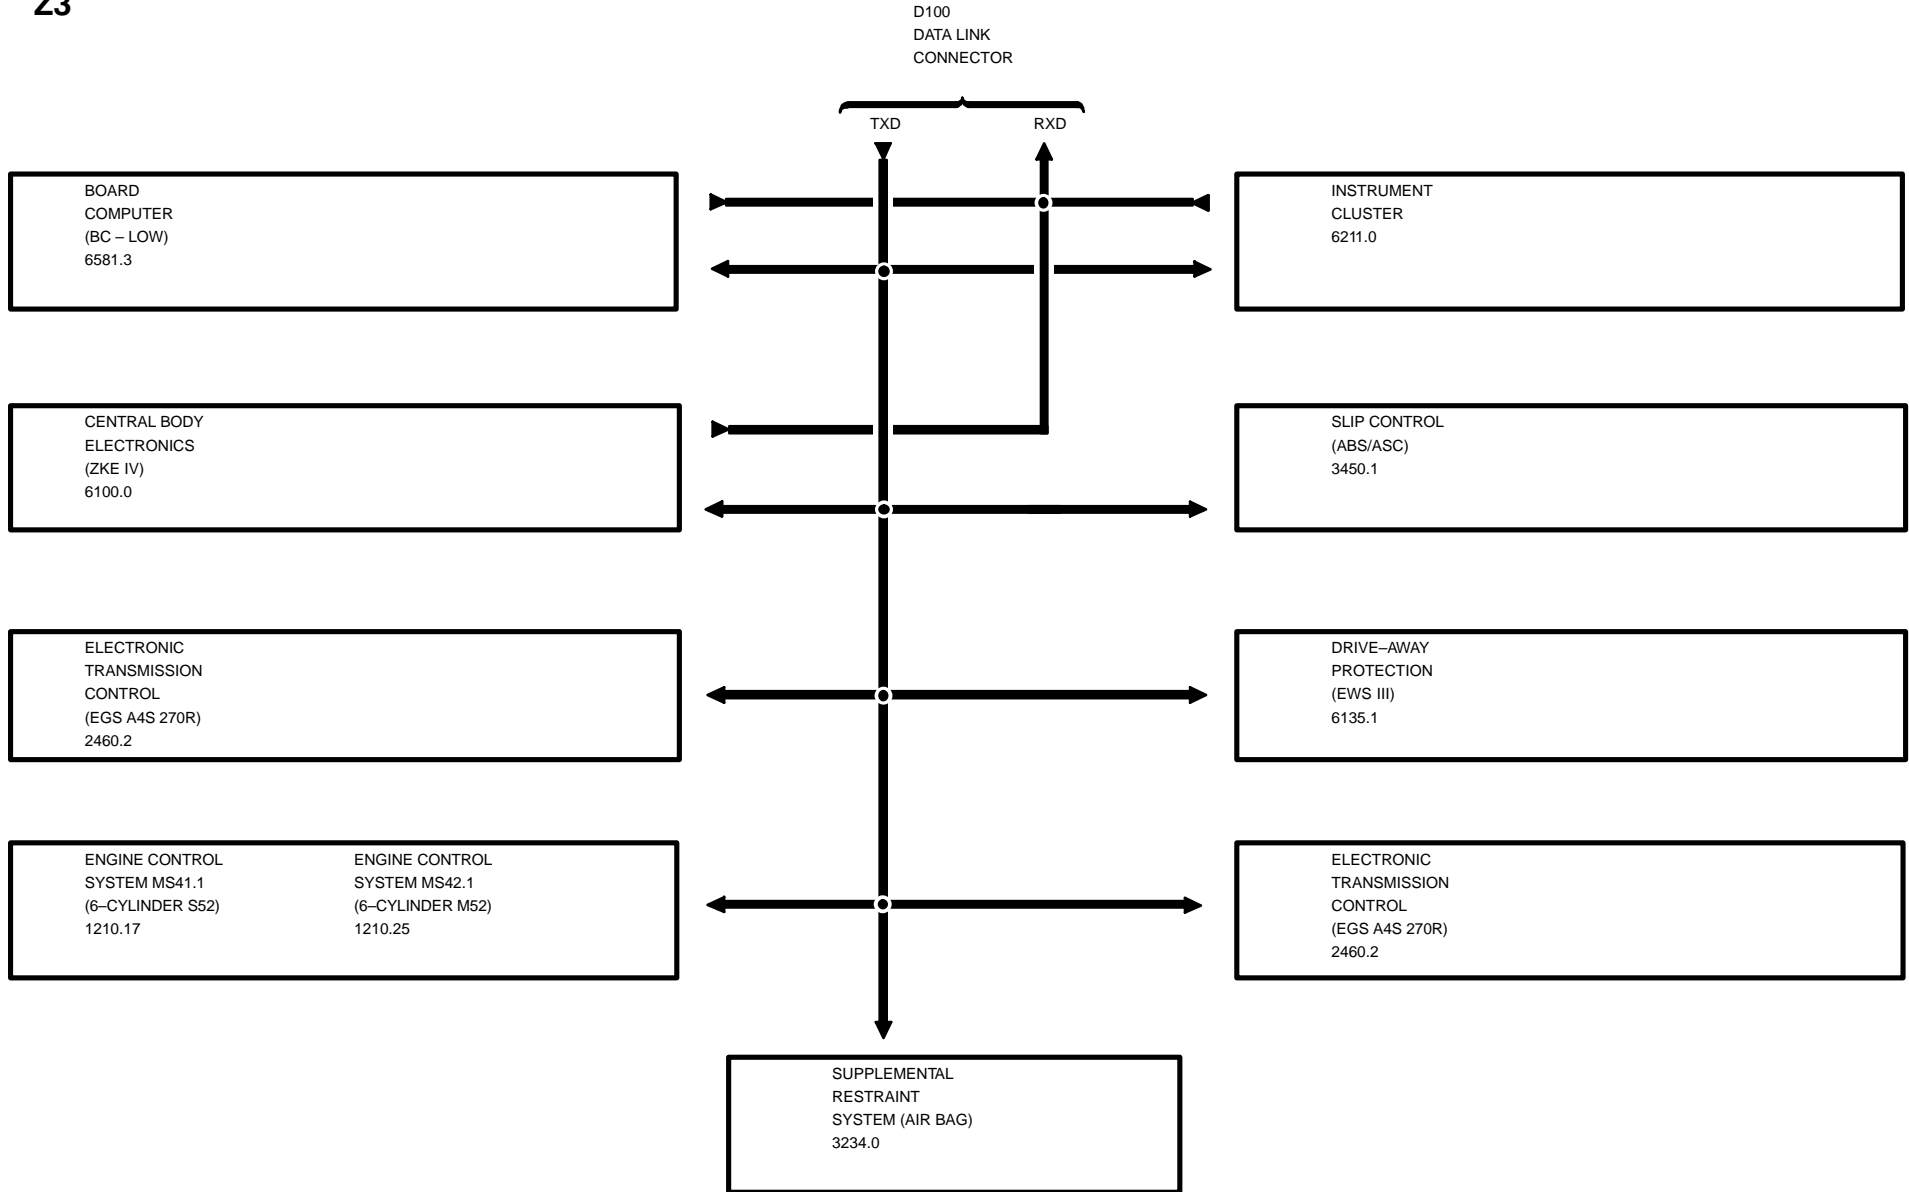






# DATA LINK

## Z3 VERSIONS

### DATA LINK CONNECTOR, PINS 1, 7, 14, AND 16

Z3

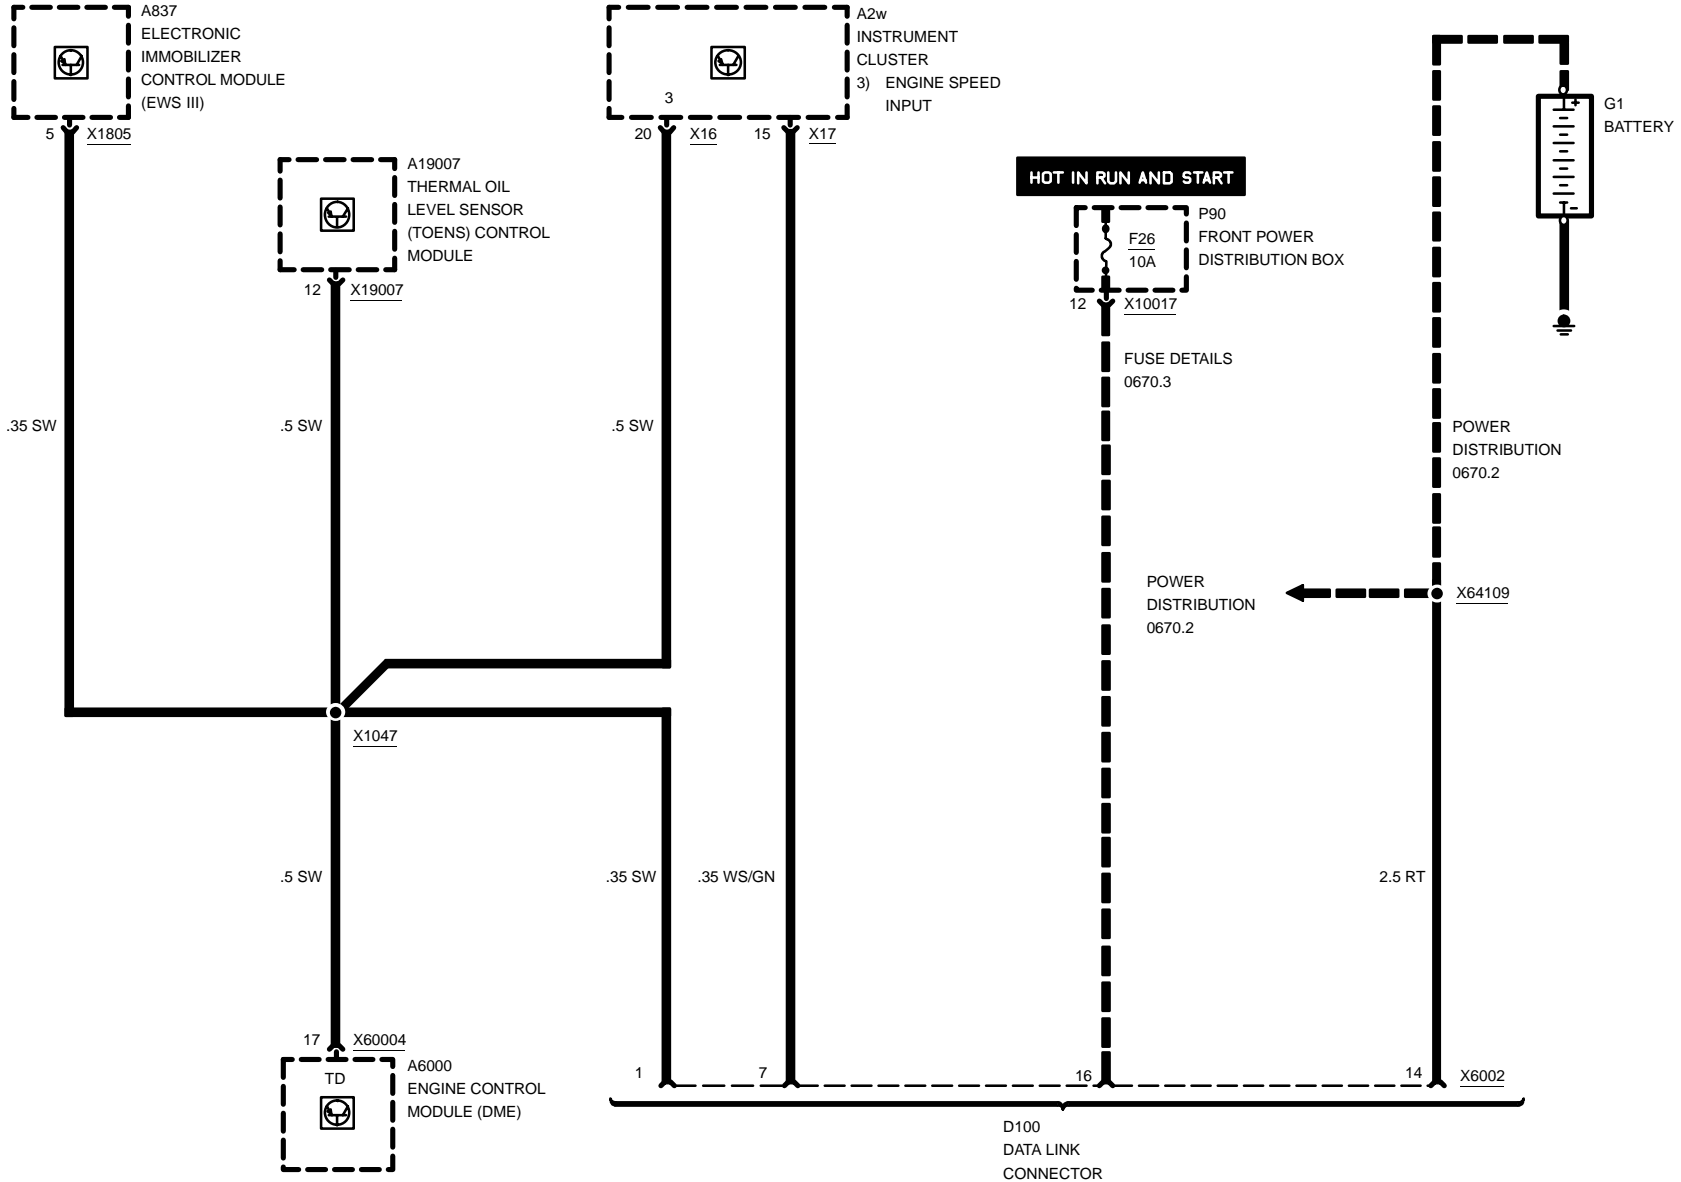






# DATA LINK

Z3 VERSIONS

## DATA LINK CONNECTOR, PINS 2 AND 19, AND OBD II CONNECTOR

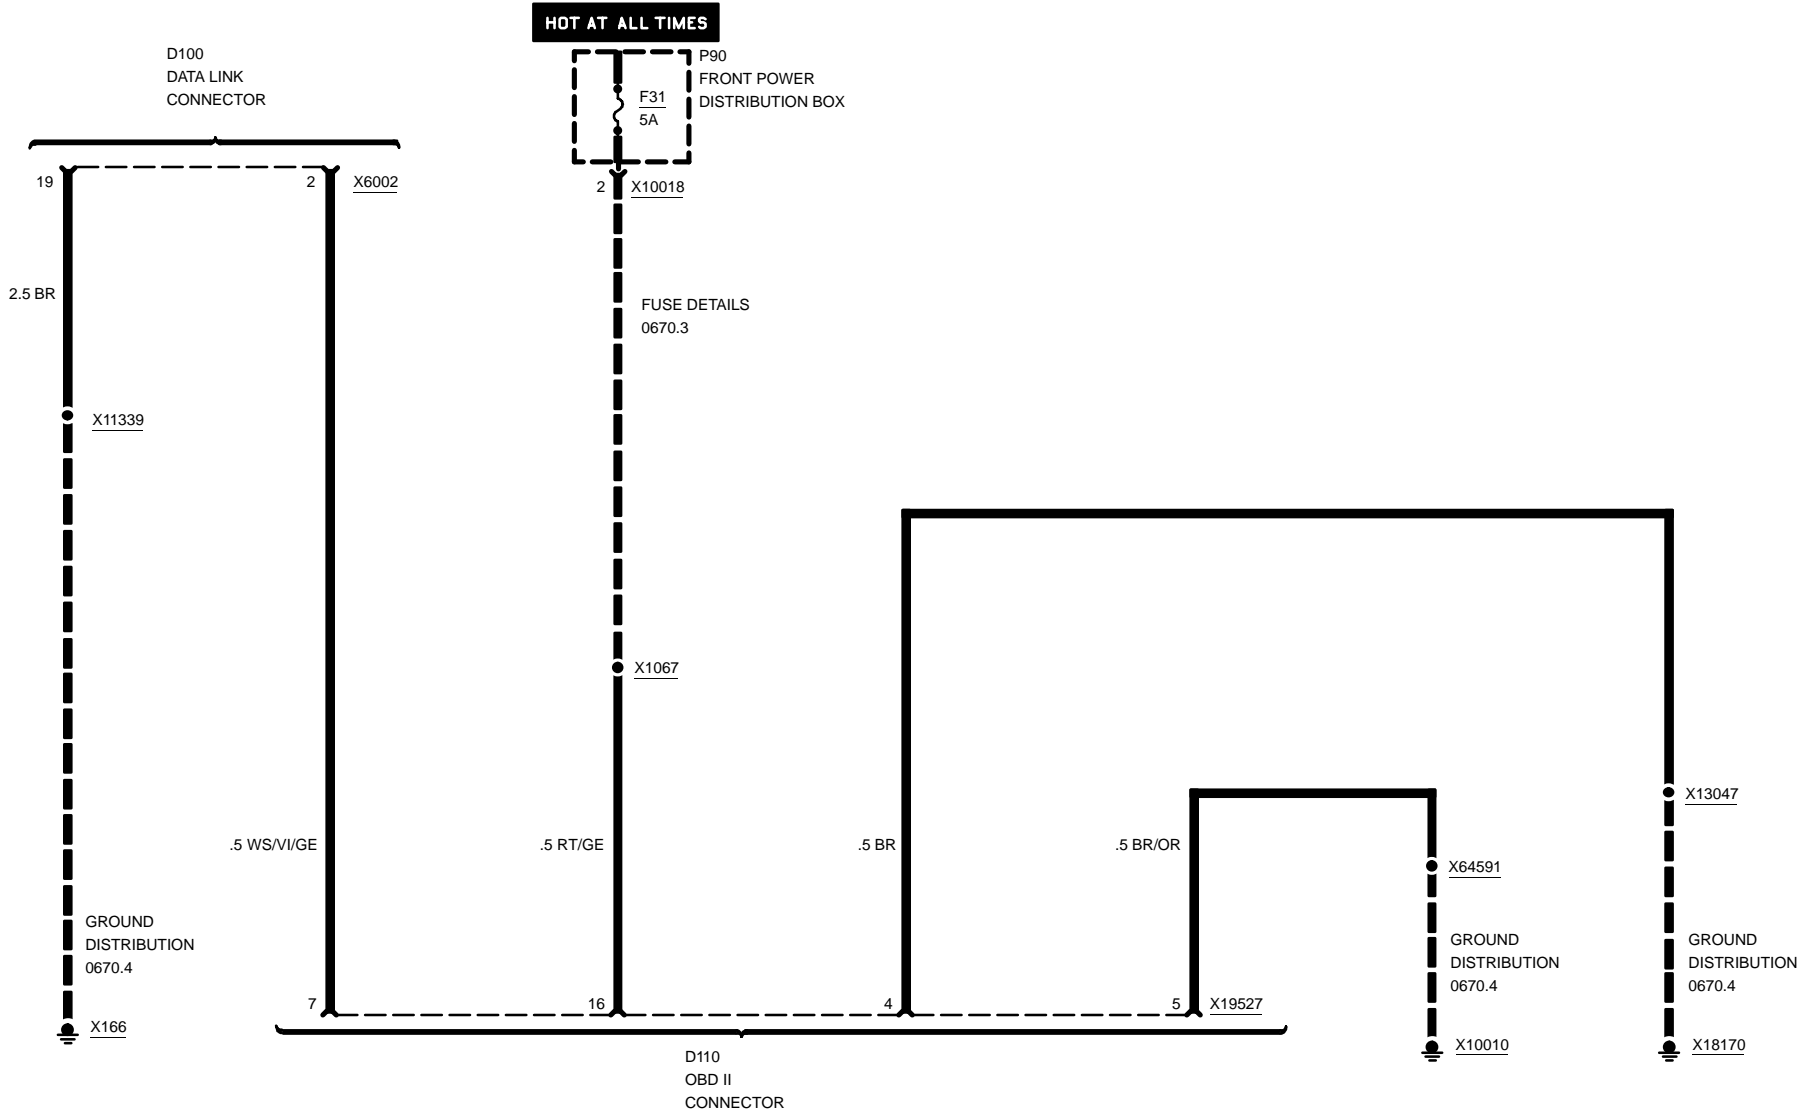

03/00

0670.5-03

1999





# DATA LINK


# M VERSIONS

## DATA LINK CONNECTOR, PINS 1, 7, 16, 4, 12, AND 14

Z3

HOT IN RUN AND START

HOT IN ACCY, RUN AND START

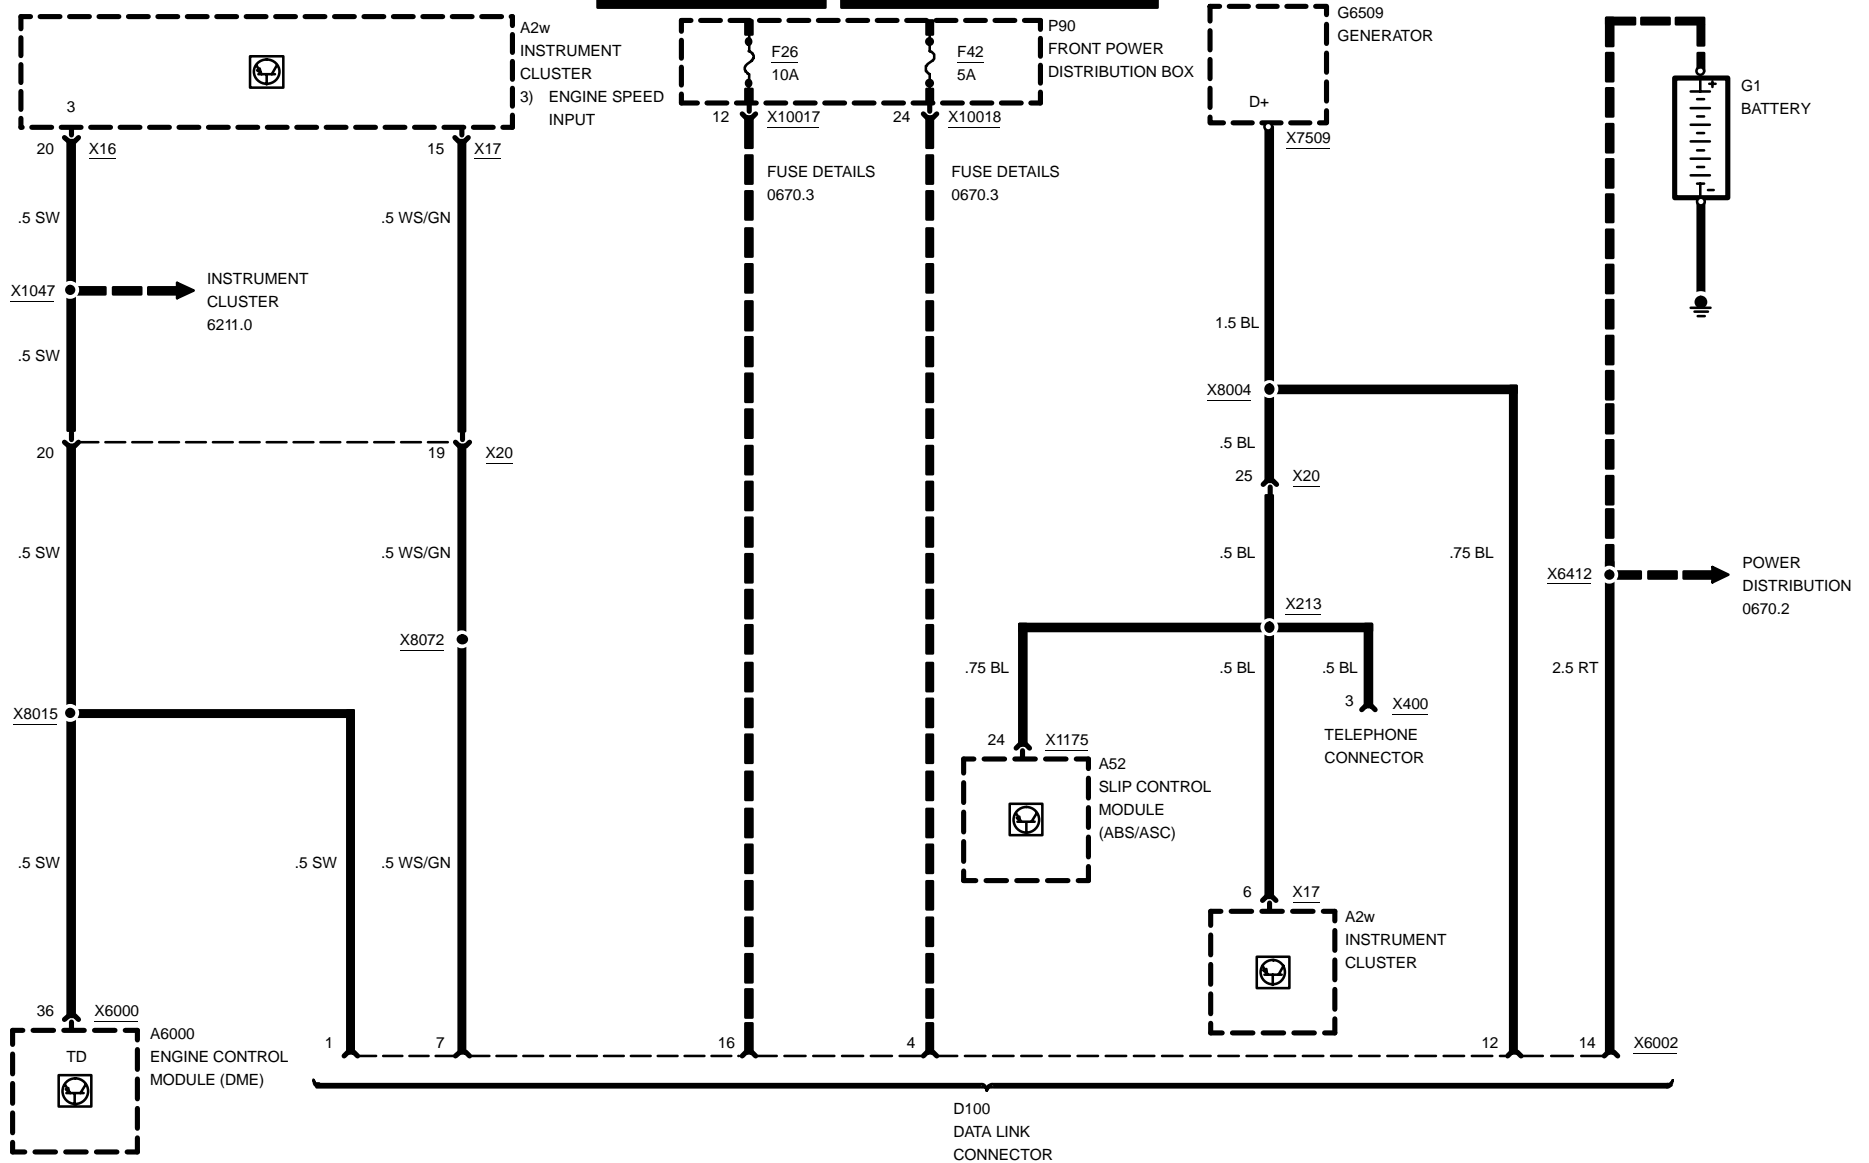

03/00

0670.5-05

1999




Z3

# DATA LINK

## DATA LINK CONNECTOR, PINS 19, 18, 2, AND OBD II CONNECTOR

M VERSIONS

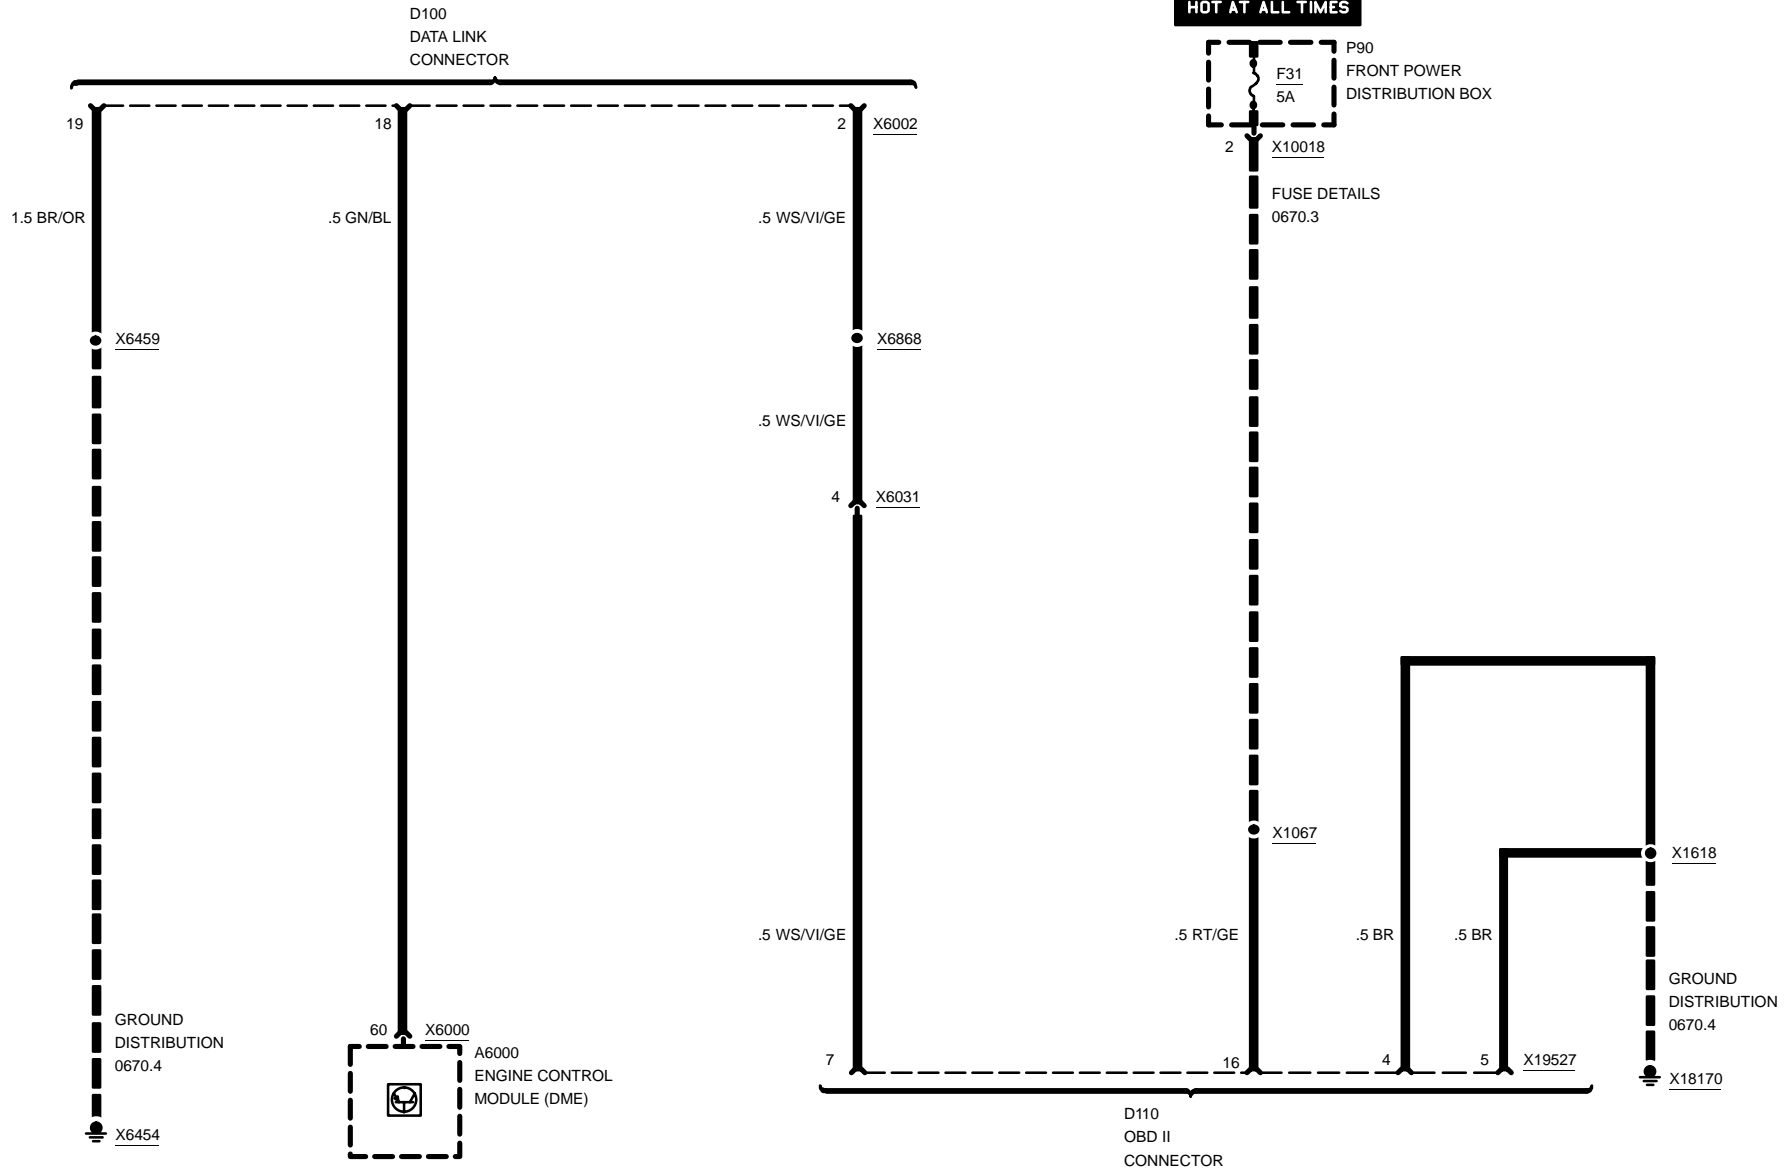

03/00


0670.5-06

1999





# DATA LINK

## DATA LINK CONNECTOR (X6002)

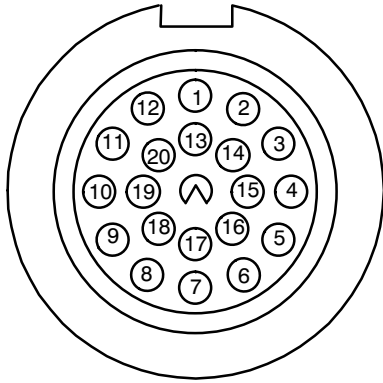

 BRIDGES IN CAP OF D100 DATA LINK CONNECTOR

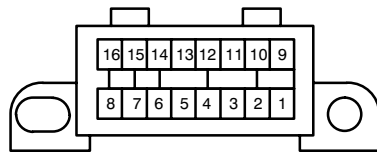

BRIDGE IN CAP OF D110 OBD II CONNECTOR




PIN NUMBER	TERMINAL NUMBER	TERMINAL DESCRIPTION	WIRE COLOR
1	TD	ENGINE	SW
2	TXD2	DIAGNOSTIC DATA LINK	WS/VI/GE
3	—	NOT OCCUPIED	
*4	R	VOLTAGE: HOT IN ACCY, RUN AND START	VI/GN
5	—	NOT OCCUPIED	
6	—	NOT OCCUPIED	
7	SI	SERVICE INTERVAL RESET	WS/GN
8	—	NOT OCCUPIED	
9	—	NOT OCCUPIED	
10	—	NOT OCCUPIED	
11	—	NOT OCCUPIED	
*12	61(D+)	GENERATOR CHARGE INDICATOR	BL
13	—	NOT OCCUPIED	
14	30	VOLTAGE: HOT AT ALL TIMES	RT
15	RXD	DIAGNOSTIC DATA LINK	WS/GE
16	15S	VOLTAGE: IGNITION SWITCH IN RUN AND START	GN/WS
17	TXD2	DIAGNOSTIC DATA LINK	WS/VI (*WS/VI/GE)
*18	PGSP	PROGRAM SELECT FOR ENGINE CONTROL MODULE (DME)	GN/BL
19	31	GROUND	BR (*BR/OR)
20	TXD	DIAGNOSTIC DATA LINK	WS/VI

\* M VERSIONS





 Z3


**Pin Assignments****X6000**

Pin	Type	Description/Function	Connection
1	A	Cyl. 2 ignition coil control	Cyl. 2 ignition coil
2	A	Cyl. 4 ignition coil control	Cyl. 4 ignition coil
3	A	Cyl. 6 ignition coil control	Cyl. 6 ignition coil
4	M	Ground	Ground point
5	A	Cyl. 2 fuel injection valve control	Cyl. 2 fuel injection valve
6	A	Cyl. 1 fuel injection valve control	Cyl. 1 fuel injection valve
7	M	Ground	Hot wire air mass meter
8	E	Hot wire air mass meter	Hot wire air mass meter
9	E	TI-measurement signal (fuel consumption)	Not used
10	E	Engine coolant temperature	Engine coolant temperature sensor
11	E	Fuel tank pressure	Fuel tank pressure sensor
12	E	Throttle position signal	Throttle position sensor
13		Not used	
14	E	Intake air temperature	Intake air temperature sensor
15	E	Speed signal right rear	ABS/ASC control module
16	E	Activate A/C	Pressure switch
17		Not used	
18	E	Drive away protection signal (code)	Electronic immobilizer control module (EWS III)
19	E	A/C-ON-signal	Air conditioning operating unit
20	A	"Check engine" indicator control	Instrument cluster
21	A	Camshaft control	Variable camshaft control valve
22	A	Cyl. 3 fuel injection valve control	Cyl. 3 fuel injection valve
23	A	Cyl. 6 fuel injection valve control	Cyl. 6 fuel injection valve
24	A	Cyl. 4 fuel injection valve control	Cyl. 4 fuel injection valve
25	M	Oxygen sensor heating ground	Oxygen sensor I (in front of catalytic converter)
26	E	Battery voltage	B+ jump start junction point
27	A	Activate valve	Idle speed control valve
28	M	Ground	Ground point
29	A	Cyl. 1 ignition coil control	Cyl. 1 ignition coil

E = Input, A = Output, M = Ground



 Z3

**Pin Assignments**


Pin	Type	Description/Function	Connection
30	A	Cyl. 3 ignition coil control	Cyl. 3 ignition coil
31	A	Cyl. 5 ignition coil control	Cyl. 5 ignition coil
32	M	Ground	Ground point
33	A	Cyl. 5 fuel injection valve control	Cyl. 5 fuel injection valve
34	M	Ground	Ground point
35	A	Activate relay	Secondary air pump relay
36	A	Crankshaft RPM speed signal TD	Instrument cluster
37		Not used	
38	M	Ground	Shield knock sensor
39	M	Ground	Temperature sensors
40	M	Ground	Crankshaft position/RPM sensor Fuel tank pressure sensor
41	M	Ground	Shield camshaft position sensor
42	M	Ground	Throttle position sensor
43	M	Ground	Camshaft position sensor
44	A	Voltage supply	Throttle position sensor Fuel tank pressure sensor
45	A	Throttle position signal	ABS/ASC control module
46	E	TI-measurement signal (fuel consumption)	Instrument cluster
47		Not used	
48	A	Voltage supply	Crankshaft position/RPM sensor (Early Production)
49	E	Terminal 15	Ignition switch
50	A	Running losses	Solenoid valve
51	A	Activate valve	Charcoal filter shut off valve
52		Not used	
53	A	Activate valve	Idle speed control valve
54	E	Battery voltage, terminal 87	Engine control module relay
55	M	Oxygen sensor heating ground	Oxygen sensor II (in front of catalytic converter)
56	M	Ground	Ground point
57	E	Cyl. 1-3 knock sensor	Knock sensor
58	E	Cyl. 1-3 knock sensor	Knock sensor

E = Input, A = Output, M = Ground





 Z3


**Pin Assignments**

Pin	Type	Description/Function	Connection
59	E	Cyl. 4-6 knock sensor	Knock sensor
60	E	Programming voltage	Data link connector
61	M	Oxygen sensor heating ground	Oxygen sensor II (behind catalytic converter)
62	E	Activate valve	Secondary air pump valve
63	E	Cyl. 4-6 knock sensor	Knock sensor
64	E	Camshaft position	Camshaft position sensor
65	E	Camshaft position	Camshaft position sensor
66		Not used	
67	M	Oxygen sensor signal ground	Oxygen sensor I (in front of catalytic converter)
68	E	Activate valve	Evaporative emission valve
69	E	Activate relay	Fuel pump relay
70	M	Oxygen sensor signal ground	Oxygen sensor II (in front of catalytic converter)
71	M	Oxygen sensor signal ground	Oxygen sensor I (behind catalytic converter)
72	M	Oxygen sensor signal ground	Oxygen sensor II (behind catalytic converter)
73	E	Activate relay	Engine control module relay
74	A	Activate A/C compressor	Compressor control relay
75	E	Sensor signal	Oxygen sensor I (in front of catalytic converter)
76	E	Sensor signal	Oxygen sensor II (in front of catalytic converter)
77	E	Sensor signal	Oxygen sensor I (behind catalytic converter)
78	E	Sensor signal	Oxygen sensor II (behind catalytic converter)
79	M	Oxygen sensor heating ground	Oxygen sensor I (behind catalytic converter)
80	A	ASC signal ZA	Slip control module ABS/ASC
81	A	ASC signal ZWV	Slip control module ABS/ASC
82	A	ASC signal MSR	Slip control module ABS/ASC
83	E	Sensor signal	Crankshaft position/RPM sensor

E = Input, A = Output, M = Ground



 Z3



## Pin Assignments

Pin	Type	Description/Function	Connection
84		Not used	
85		Not used	
86		Not used	
87	E	Battery voltage, terminal 87	Engine control module relay
88	E/A	TxD diagnosis data link	Data link connector




Z3

# ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER S52)

M VERSIONS

## POWER

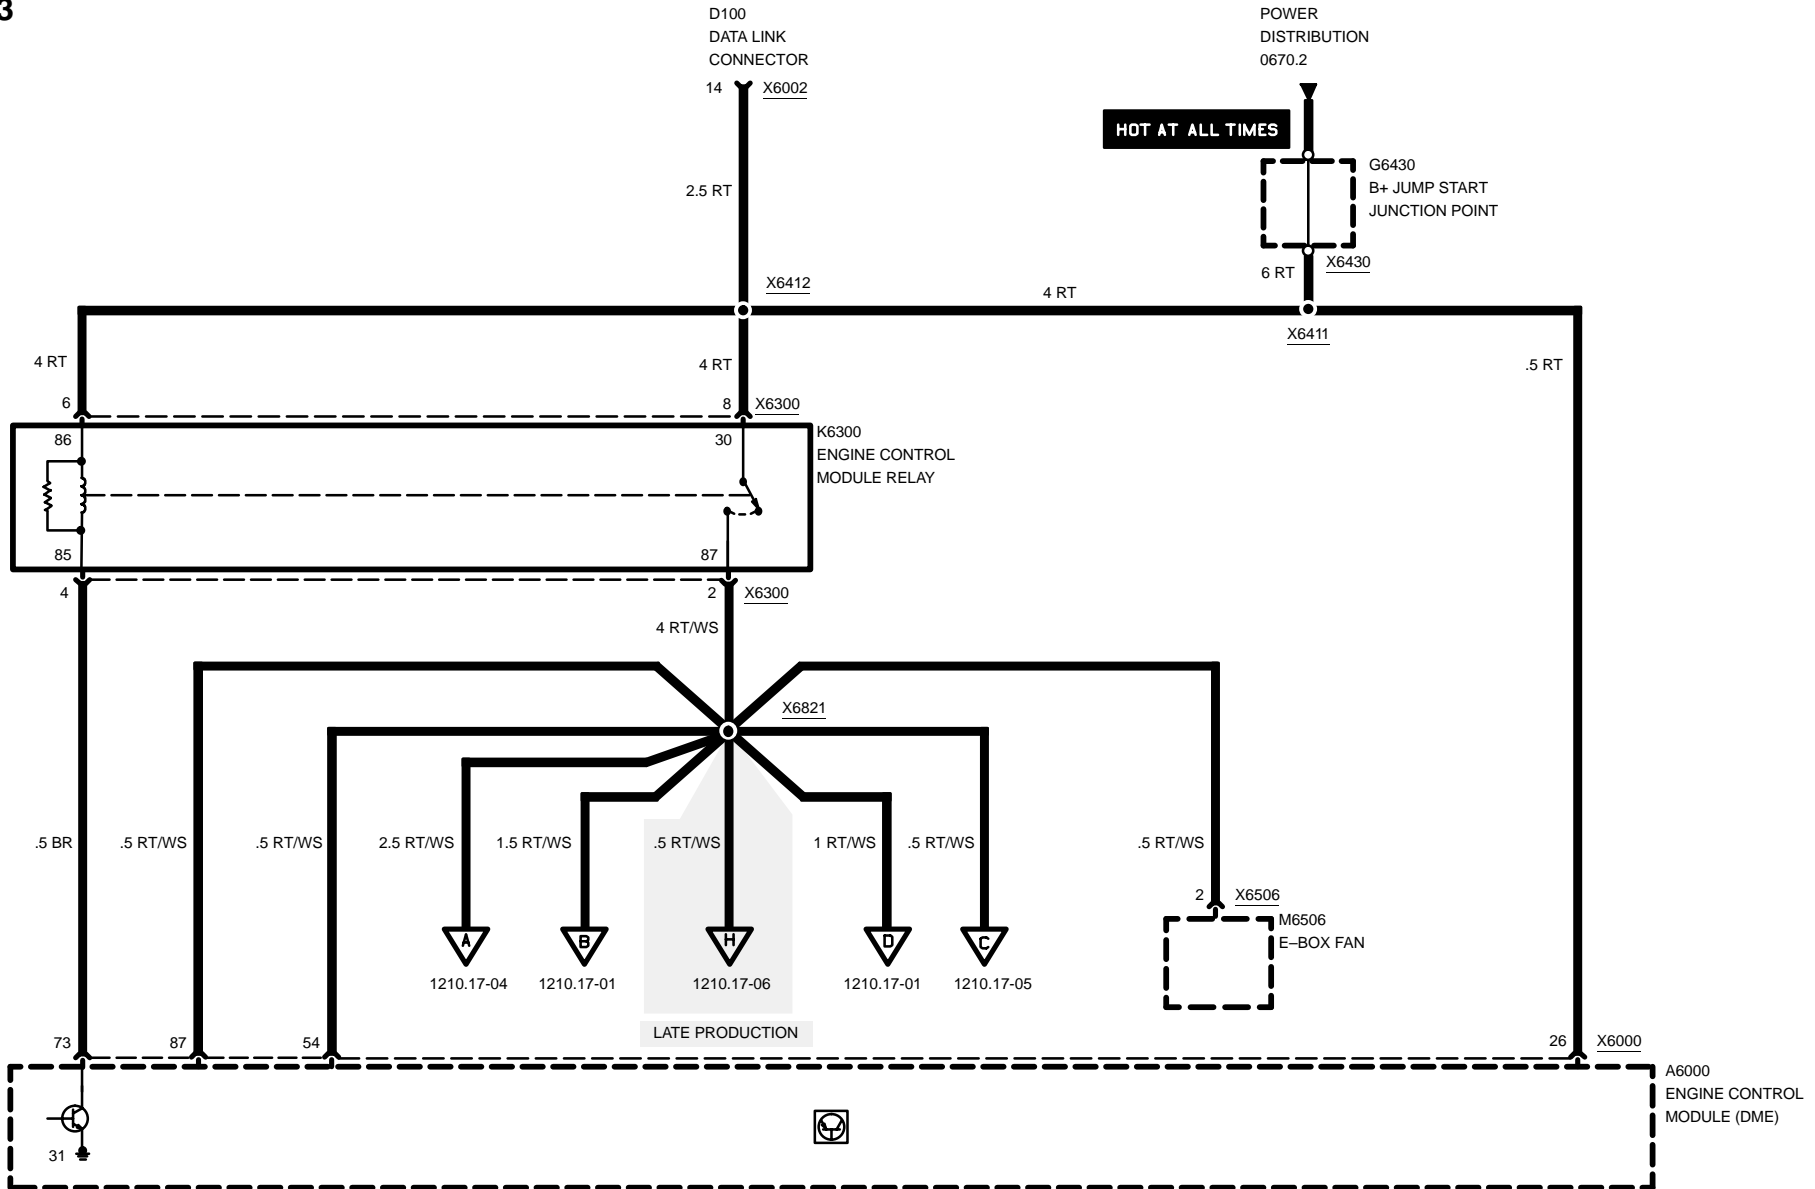

03/00

1210.17-00


1999



# ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER S52)

## M VERSIONS

Z3

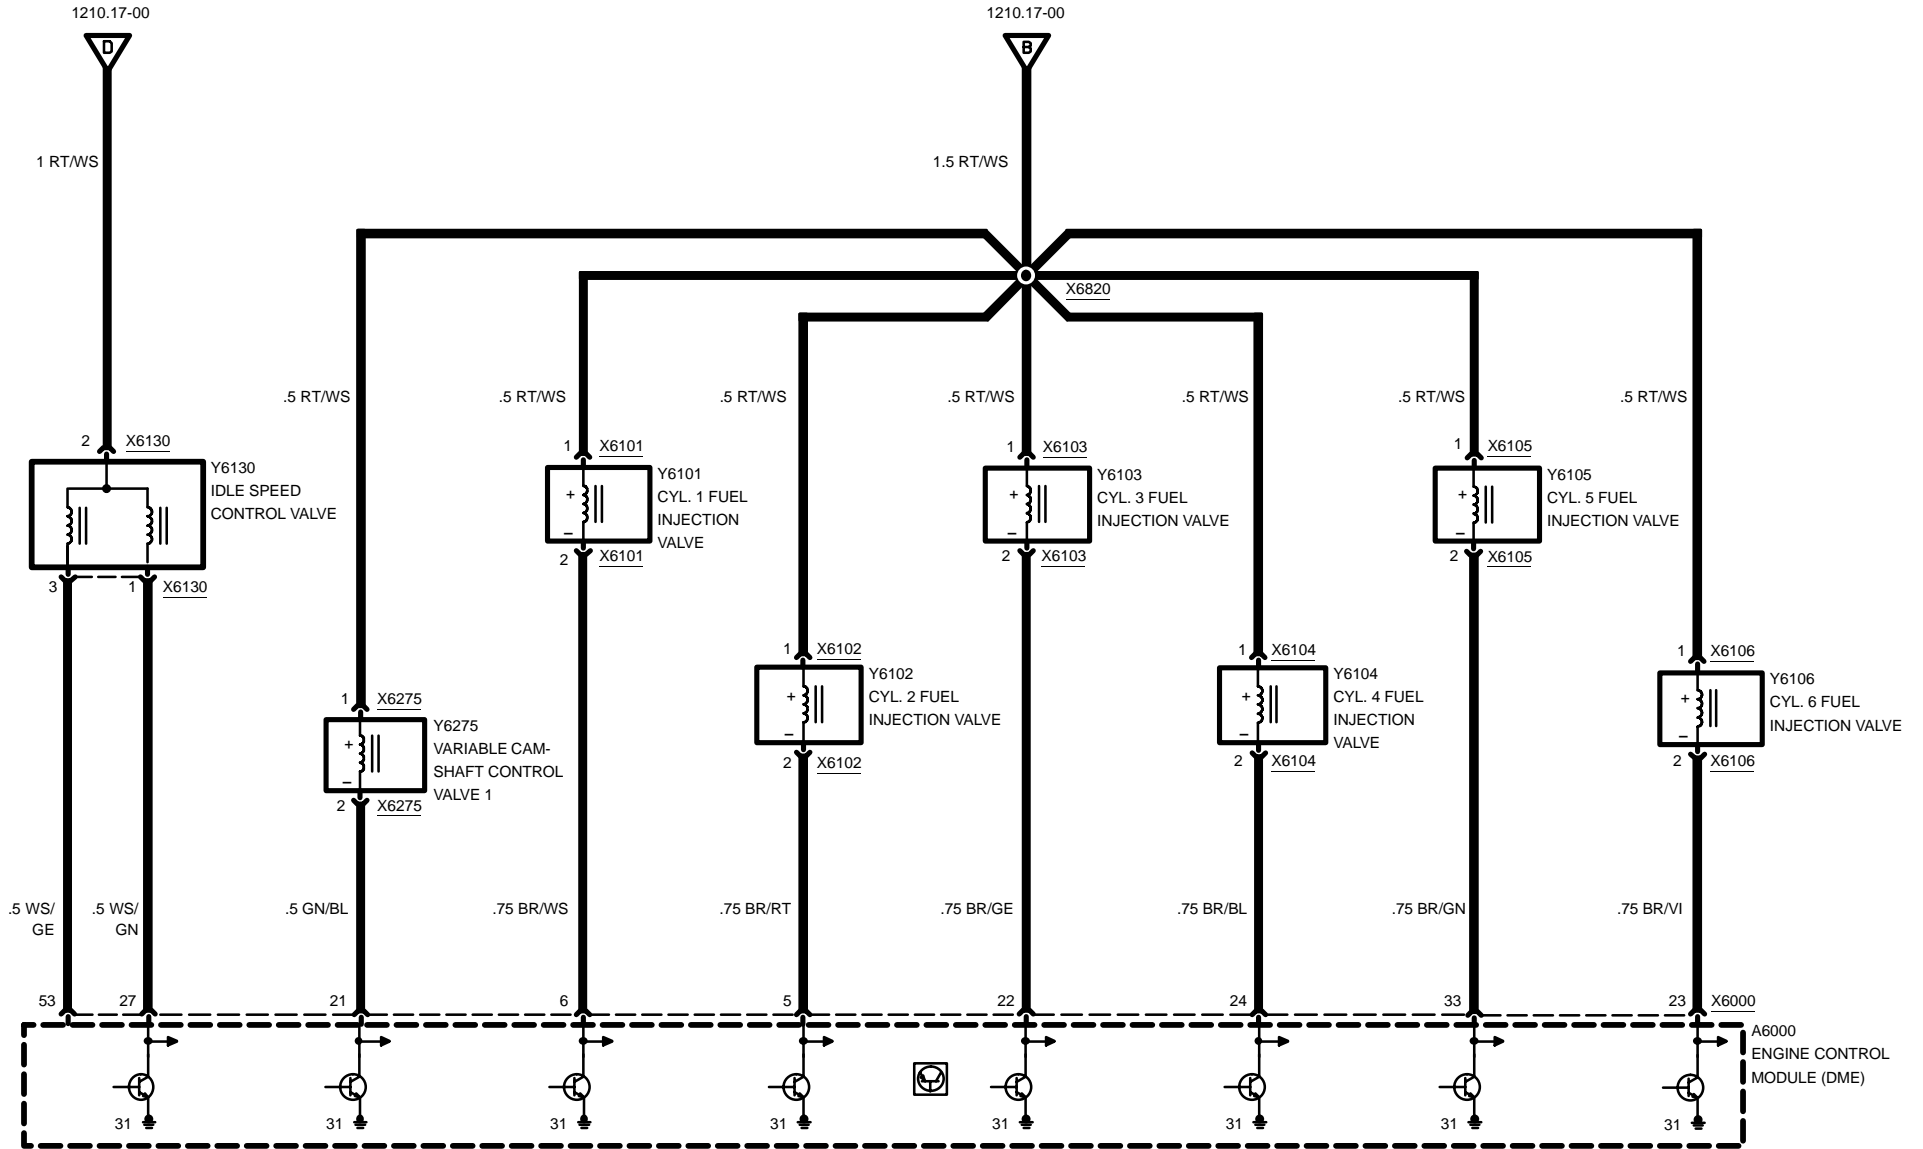

03/00

1210.17-01


1999



# ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER S52)

## M VERSIONS


Z3

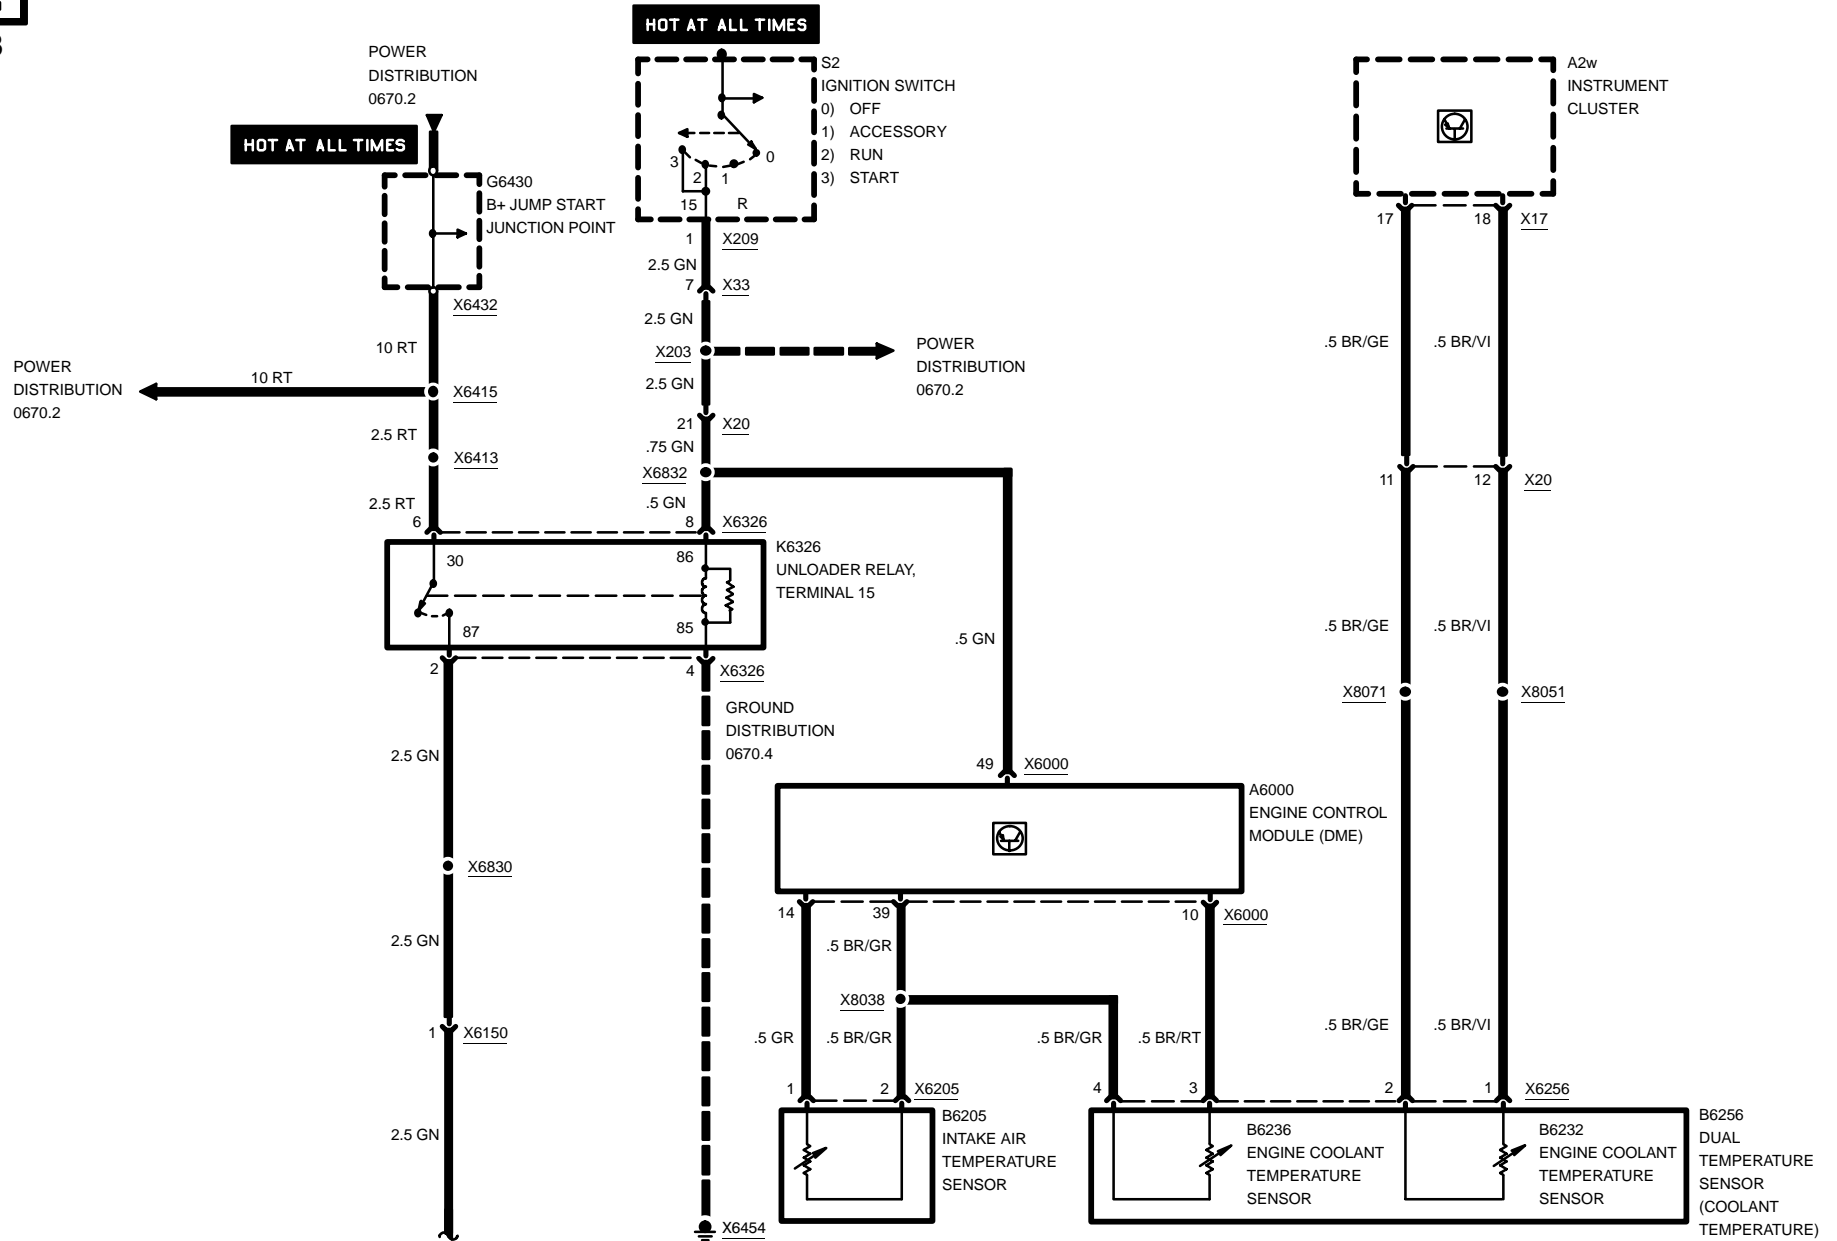

03/00

1210.17-02


1999

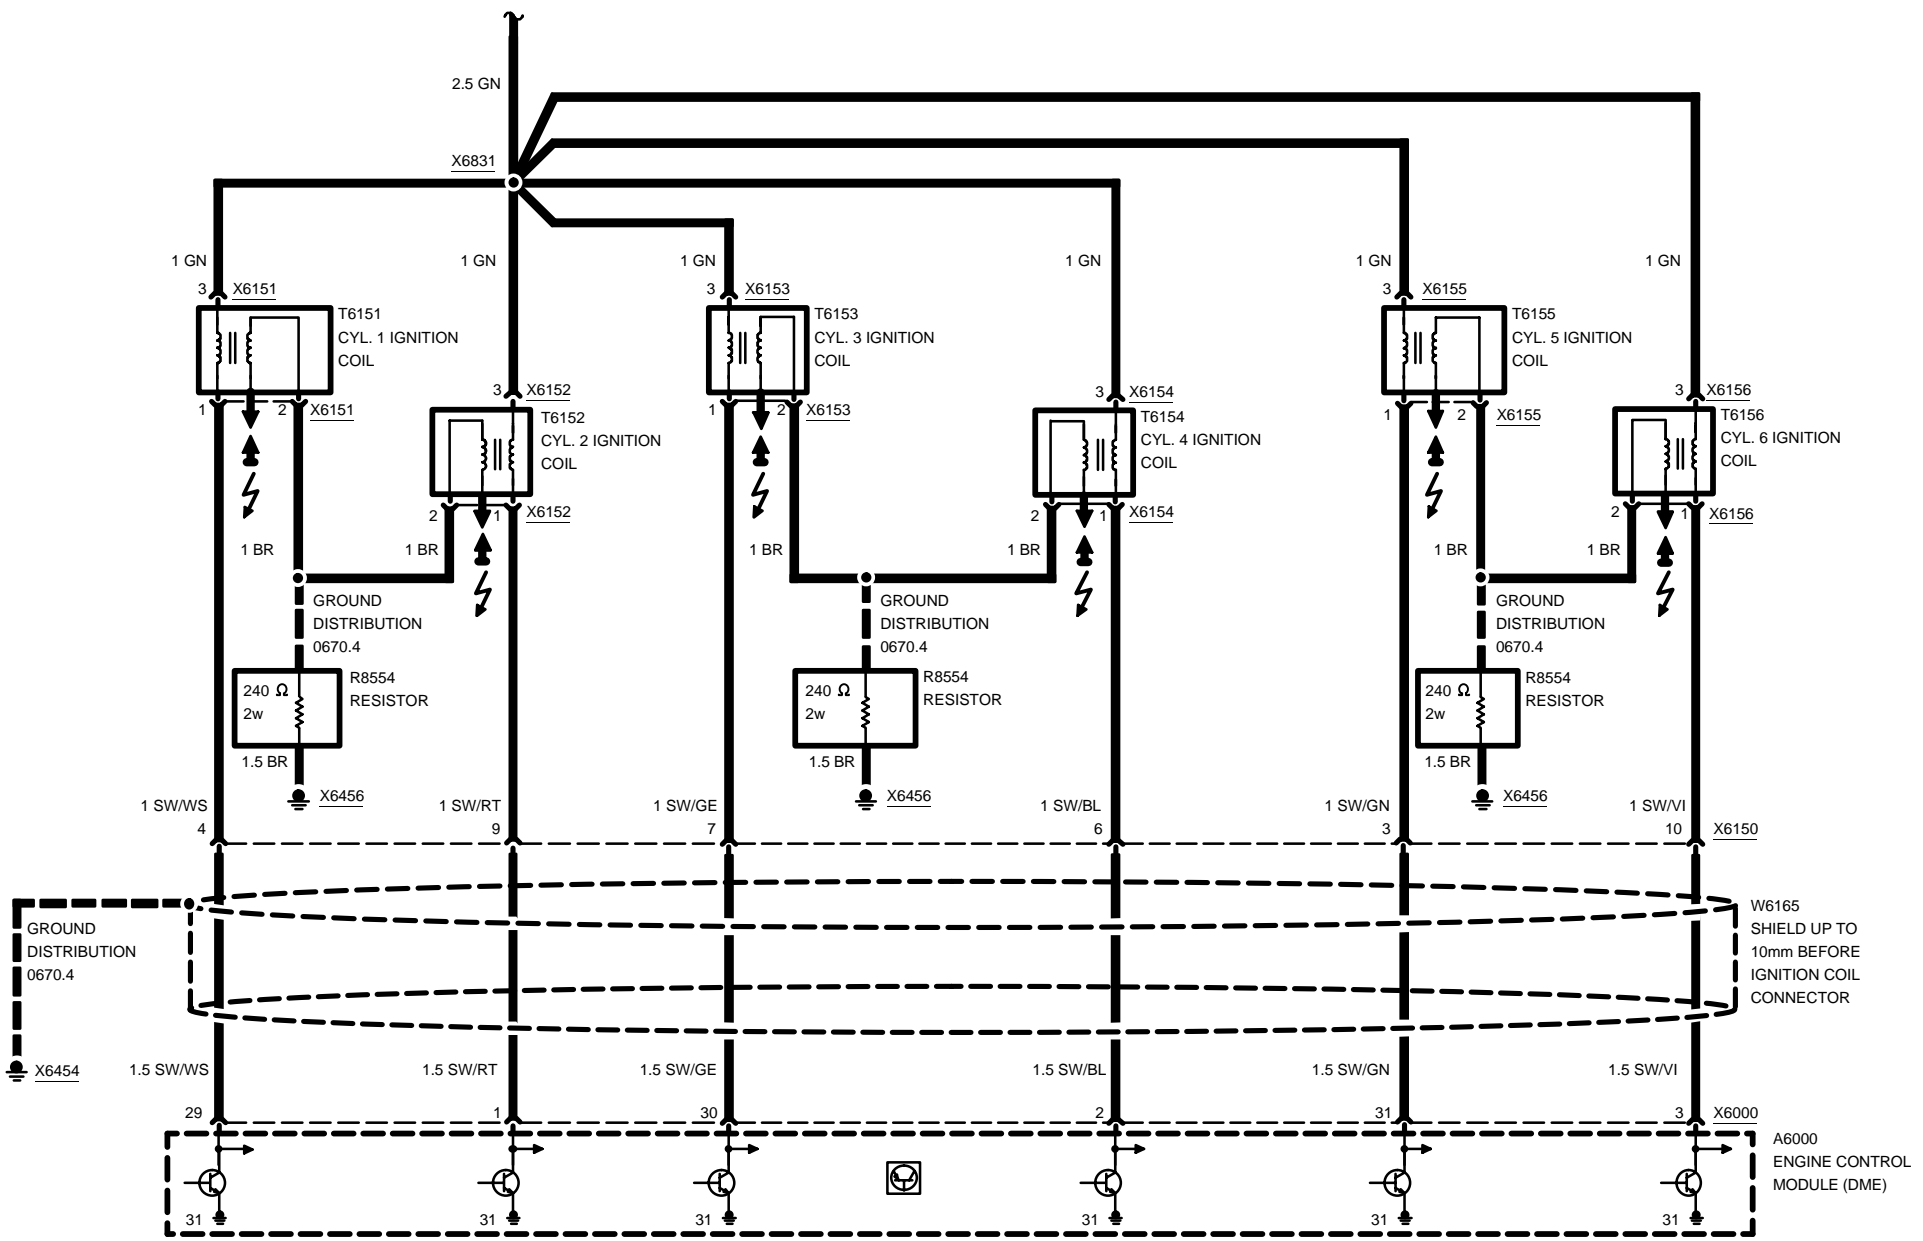








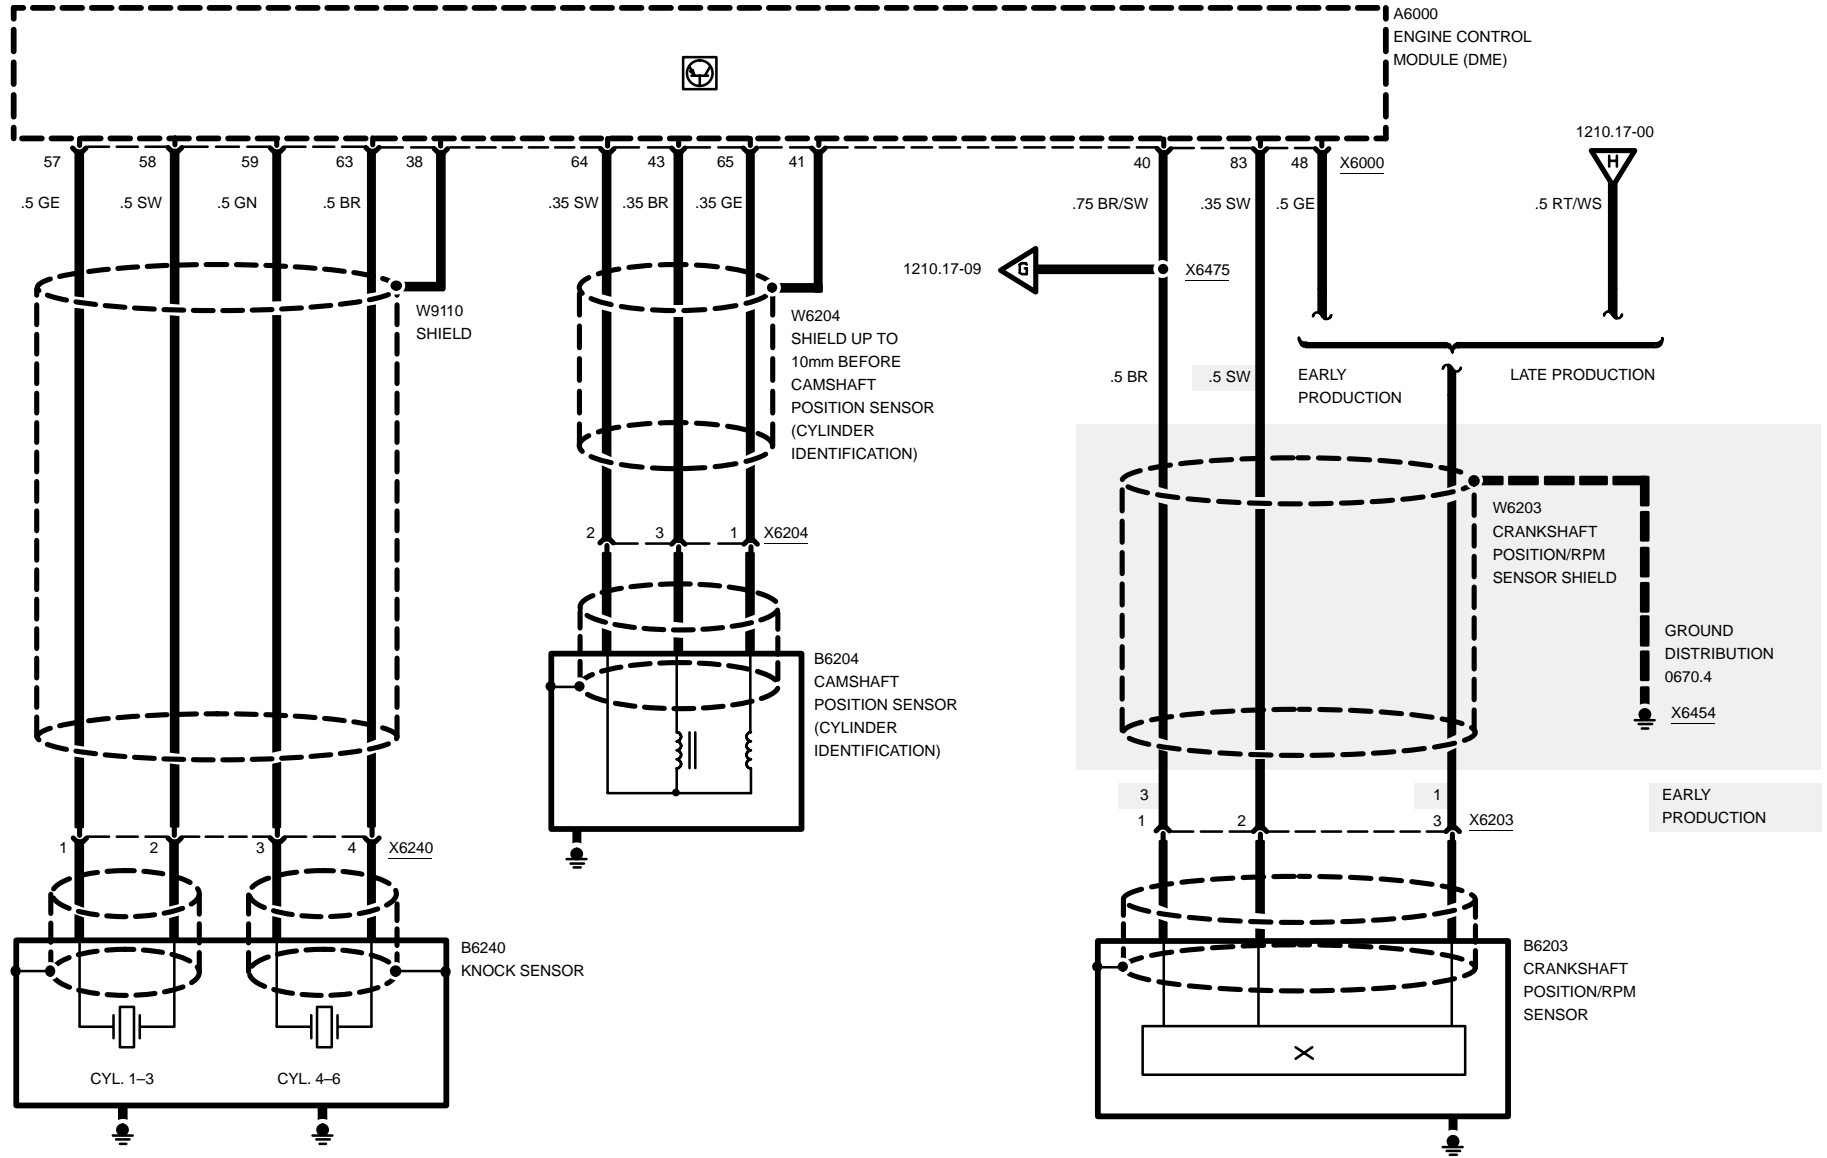


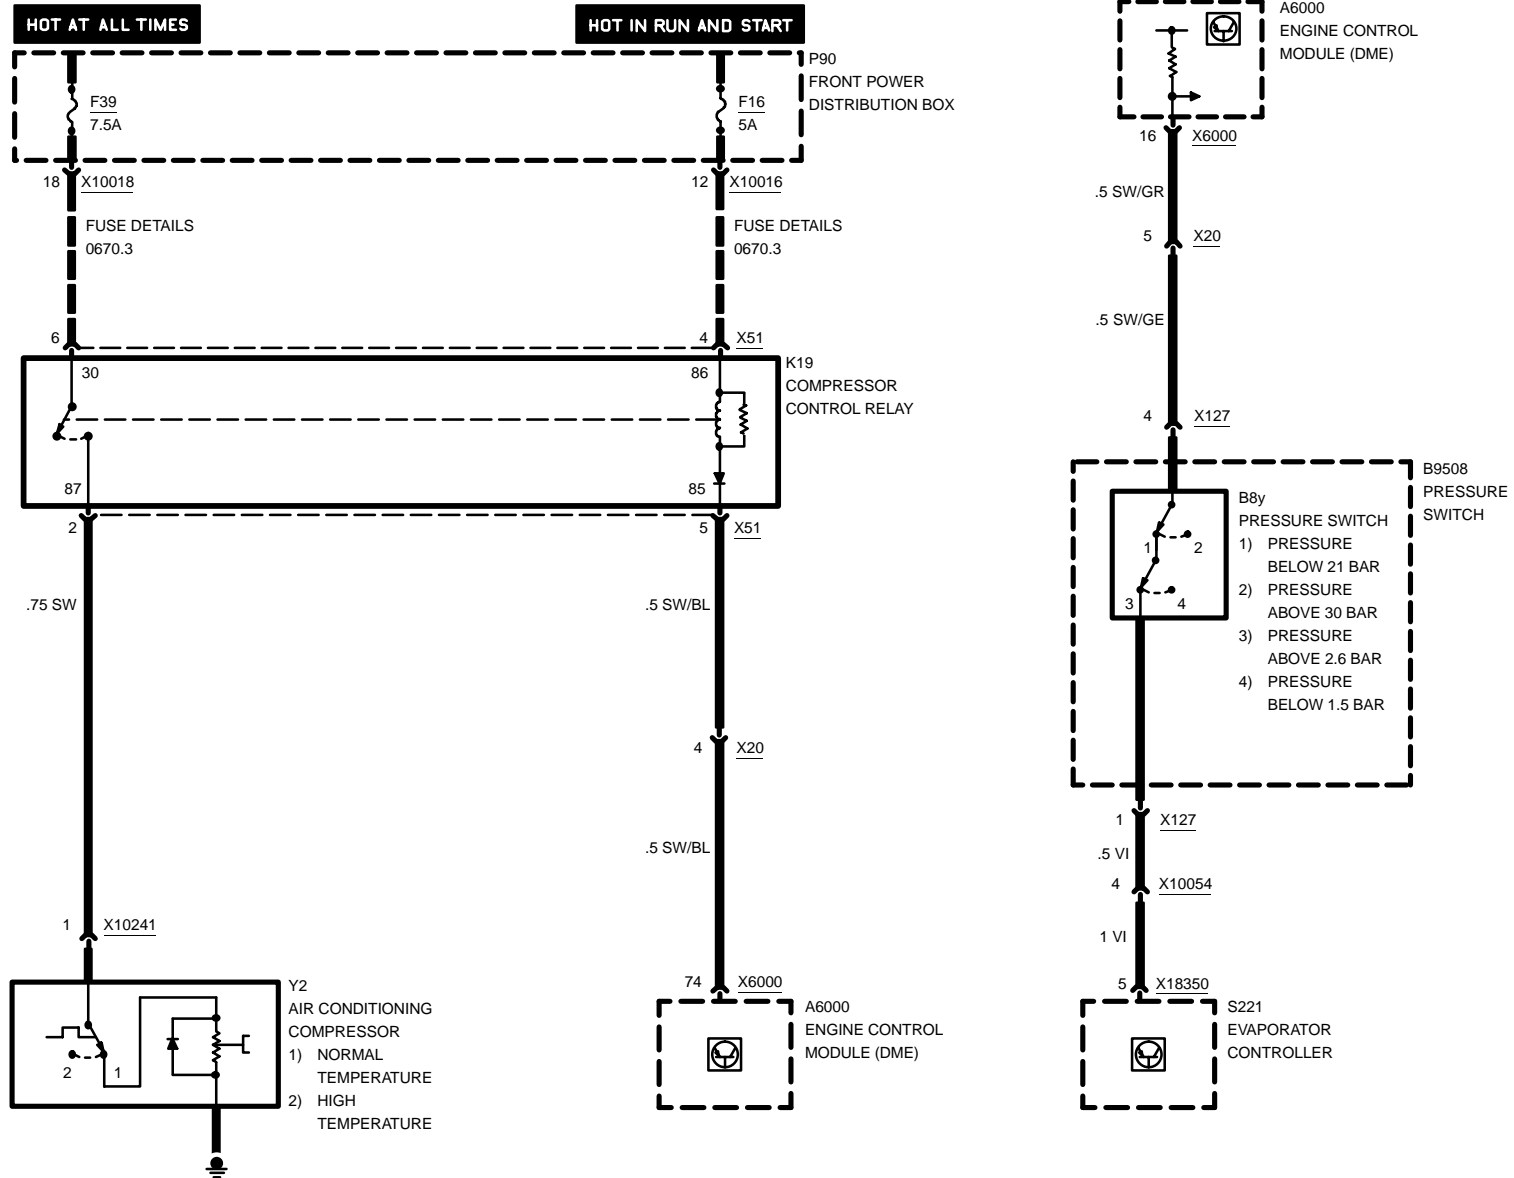



# ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER S52)

## M VERSIONS

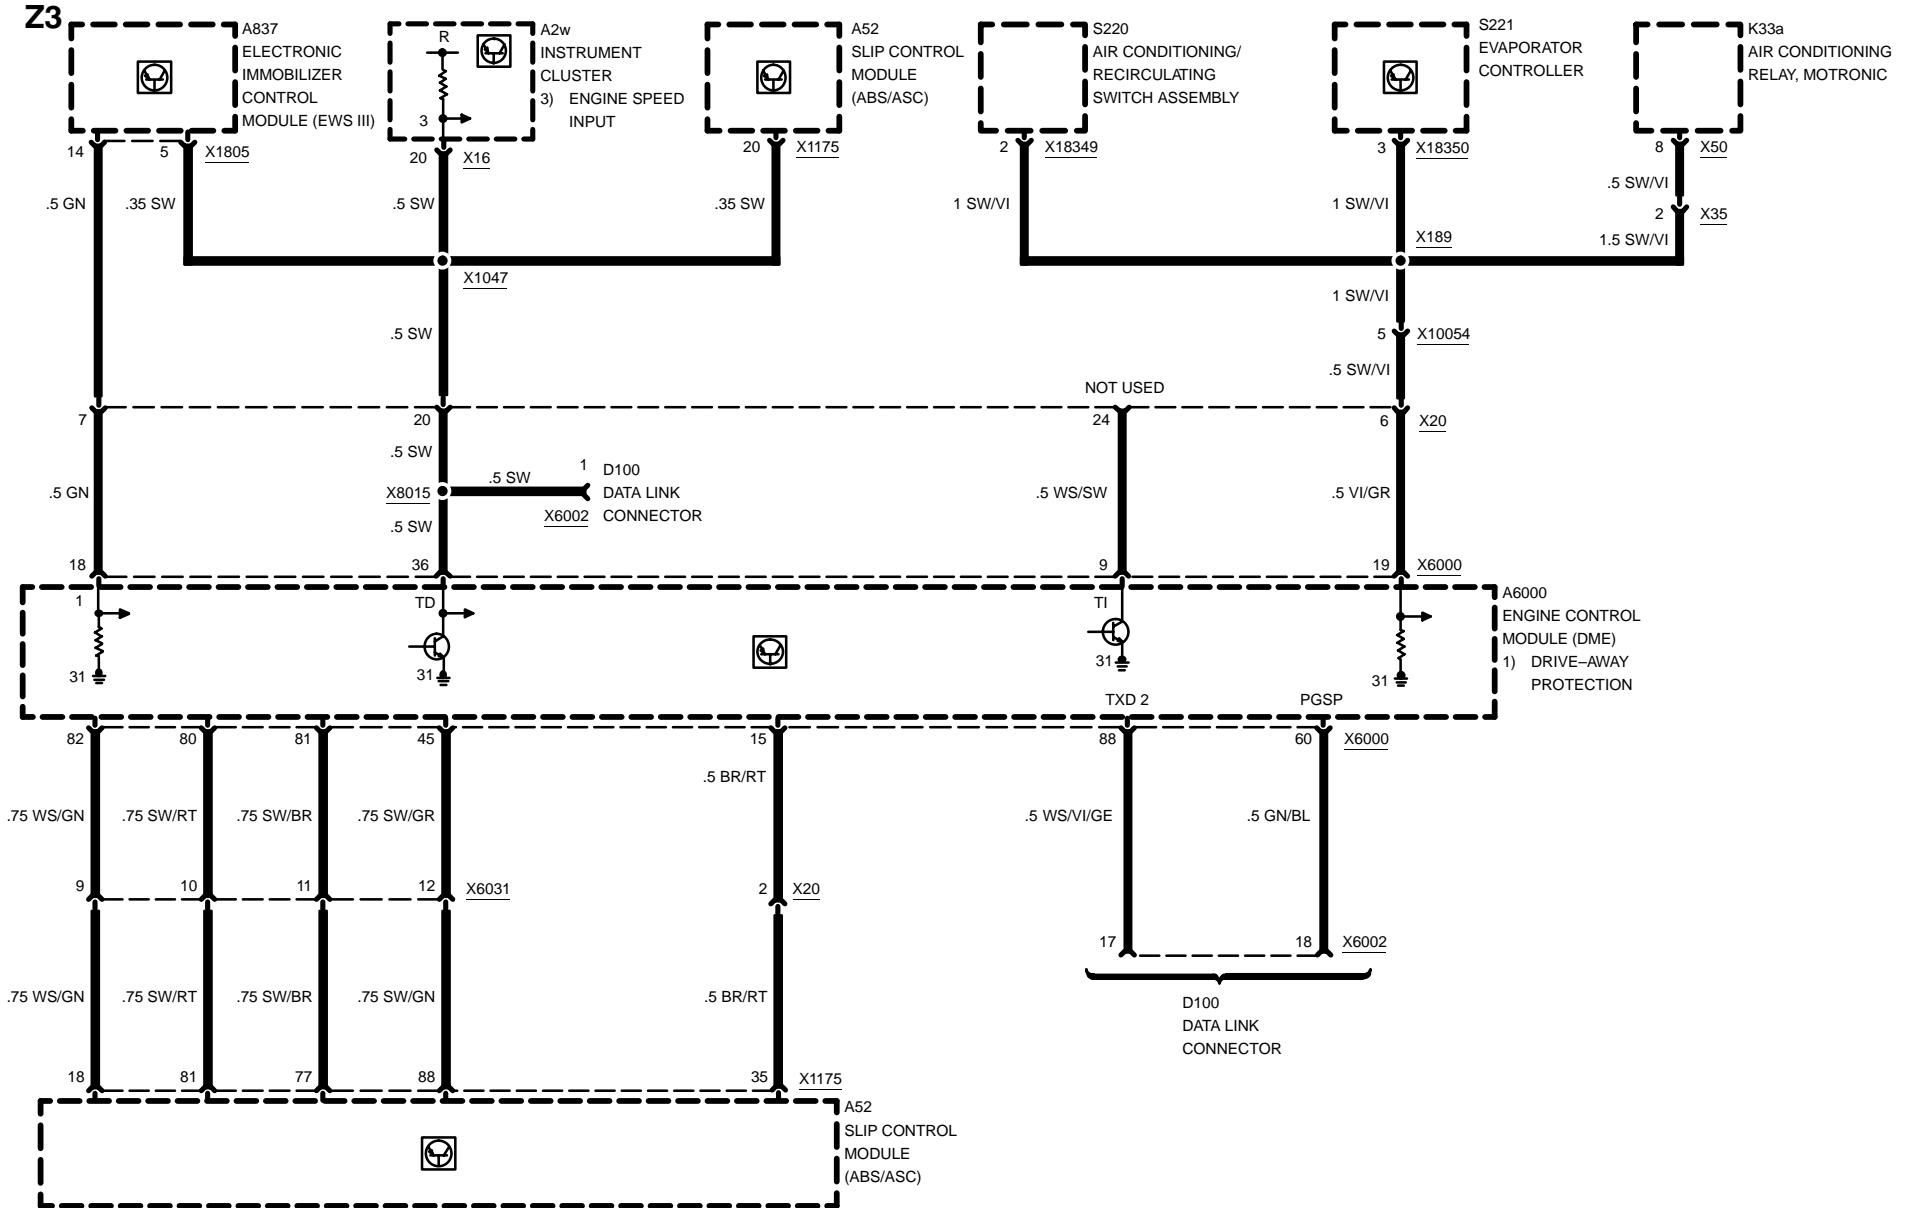

03/00

1210.17-08

1999





# ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER S52)

M VERSIONS


## OBD II DIAGNOSIS

Z3

HOT IN ACCY RUN AND START

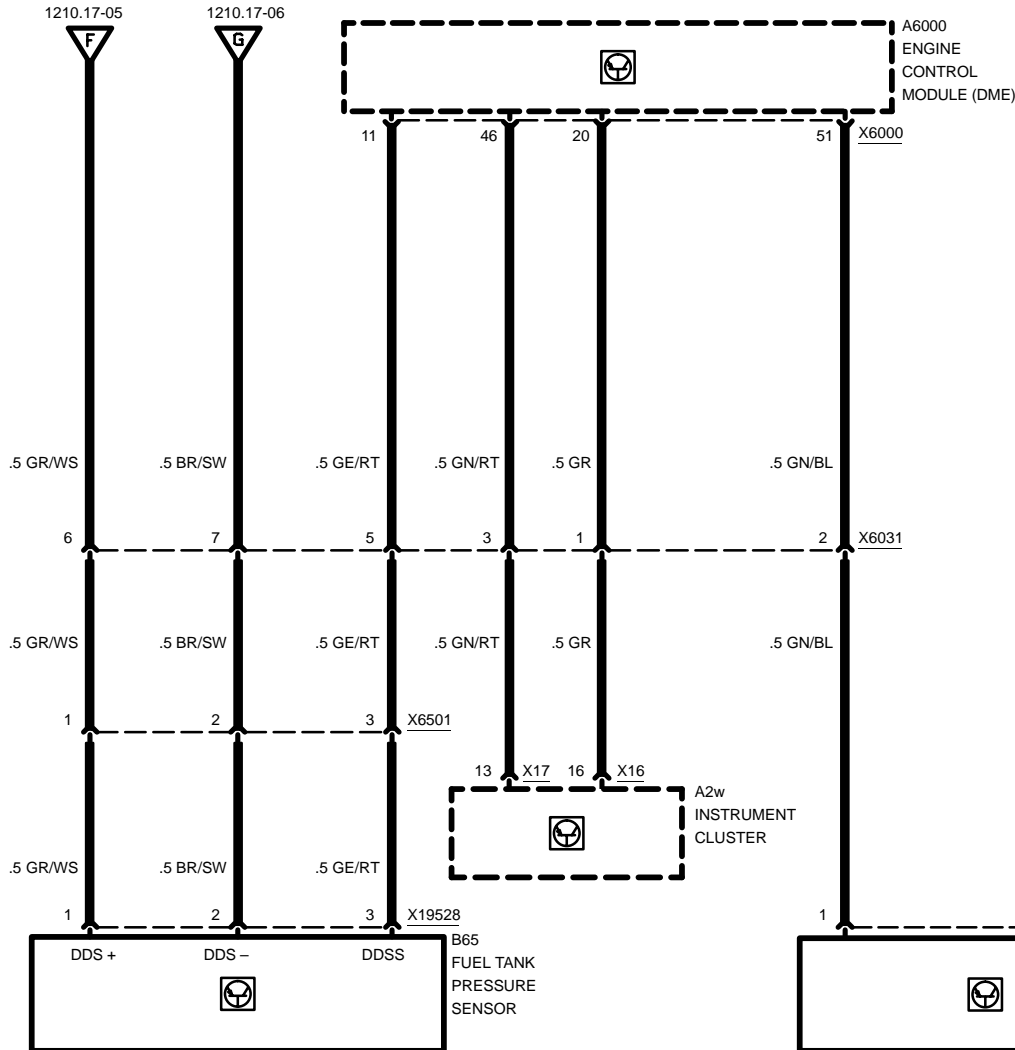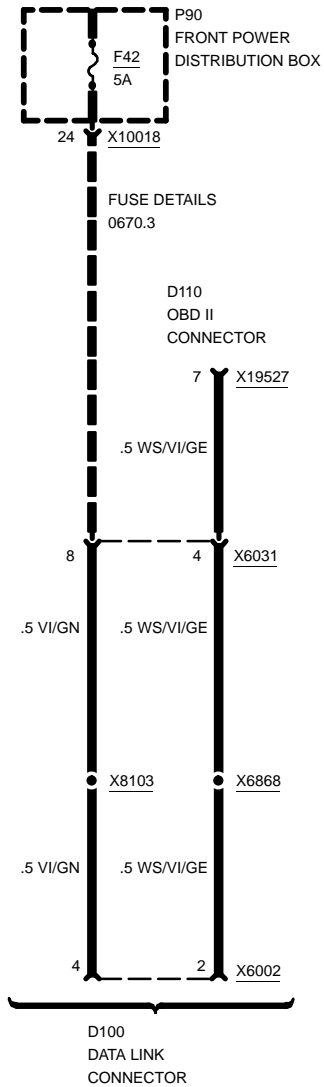

HOT IN RUN AND START

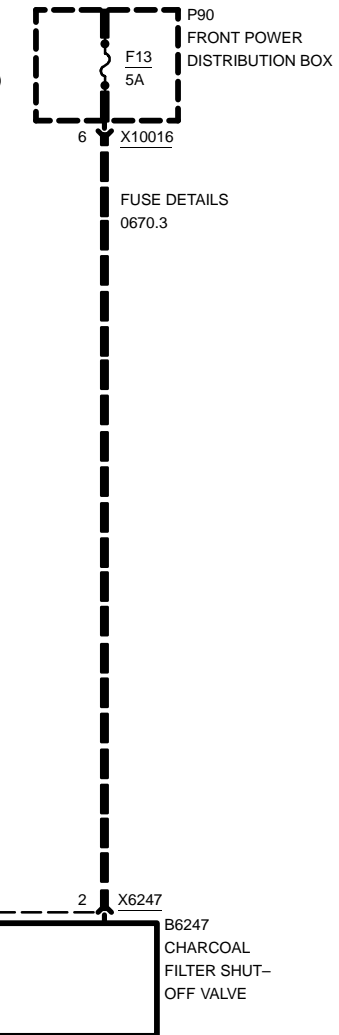

03/00

 
1210.17-09

1999





Z3

**Pin Assignments**

A = X60001	9 Pins, black
B = X60002	24 Pins, black
C = X60003	52 Pins, black
D = X60004	40 Pins, black
E = X60005	9 Pins, black


**X60001**

 Pin	Type	Signal	Description/Function	Connection
1	A	15	Activate relay	Unloader relay terminal 15
2			Not used	
3			Not used	
4	M	31E	Ground	Ground point
5	M	31L	Ground	Ground point
6	M	31L	Ground	Ground point
7	E	30	Voltage supply	B+ junction point E-box
8	E	U_HR<2	Voltage supply	Fuse holder in E-box
9	E	U_HR<2	Voltage supply	Fuse holder in E-box

**X60002**

Pin	Type	Signal	Description/Function	Connection
1	M	T_LHV1	Oxygen sensor heating ground	Oxygen sensor 1 (in front of catalytic converter)
2			Not used	
3	E/A	D_CAN-L	CAN bus low	Transmission control module (EGS)
4	E/A	D_CAN-H	CAN bus high	Transmission control module (EGS)
5			Not used	
6	E/A	D_TXD2	Diagnosis	Transmission control module (EGS)
7	M	T_LHH1	Oxygen sensor heating ground	Oxygen sensor 1 (behind catalytic converter)
8			Not used	

E = Input, A = Output, M = Ground




## Pin Assignments

Pin	Type	Signal	Description/Function	Connection
9			Not used	
10			Not used	
11			Not used	
12	A	S_KKU	Activate valve	Solenoid valve (Running Losses)
13	M	T_LHV2	Oxygen sensor heating ground	Oxygen sensor 2 (in front of catalytic converter)
14	E	A_LSV1	Sensor signal	Oxygen sensor 1 (in front of catalytic converter)
15	E	A_LSV2	Sensor signal	Oxygen sensor 2 (in front of catalytic converter)
16	E	A_LSH1	Sensor signal	Oxygen sensor 1 (behind catalytic converter)
17			Not used	
18	E	A_LSH2	Sensor signal	Oxygen sensor 2 (behind catalytic converter)
19	M	T_LHH2	Oxygen sensor heating ground	Oxygen sensor 2 (behind catalytic converter)
20	M	M_LSV1	Signal ground	Oxygen sensor 1 (in front of catalytic converter)
21	M	M_LSV2	Signal ground	Oxygen sensor 2 (in front of catalytic converter)
22	M	M_LSH1	Signal ground	Oxygen sensor 1 (behind catalytic converter)
23	A	S_HR	Activate relay	Engine control module relay
24	M	M_LSH2	Signal ground	Oxygen sensor 2 (behind catalytic converter)

### **X60003**

Pin	Type	Signal	Description/Function	Connection
1	E	A_HFM	Signal air mass meter	Hot film air mass meter
2	E	P_NWGA1	Signal camshaft position	Camshaft position sensor 2 (outlet)
3			Not used	
4	A	U_DKFW1	Voltage supply	Throttle position sensor 1

 E = Input, A = Output, M = Ground



## Pin Assignments

 
Pin	Type	Signal	Description/Function	Connection
5	E	P_NWGE1	Signal camshaft position	Camshaft position sensor 1 (inlet)
6			Not used	
7	A	U_DKFW2	Voltage supply	Throttle position sensor 2
8	E	P_KWG	Signal crankshaft position	Crankshaft position sensor
9	E	A_FWG2	Throttle position signal	Throttle position sensor 2
10	E	A_DKG2	Throttle position signal	Throttle position sensor 2
11			Not used	
12	E	S_30H	Start signal	Starter
13	E	S_61-1	Charging signal	Generator
14	M	M_DKFW1	Ground	Throttle position sensor 1
15	M	M_NWGA1	Ground	Camshaft position sensor 2 (outlet)
16	E	A_FWG1	Throttle position signal	Throttle position sensor 1
17	M	M_HFM	Ground	Hot film air massmeter
18	M	M_NWGE1	Ground	Crankshaft position sensor 1 (inlet)
19	E	A_DKG1	Throttle position signal	Throttle position sensor 1
20	M	M_DKFW2	Ground	Throttle position sensor 2
21	M	M_KWG	Ground	Crankshaft position sensor
22	E	A_TANS	Temperature signal	Intake air temperature sensor
23	M	M_TANS	Ground	Intake air temperature sensor
24	E	A_TMOT	Temperature signal	Engine coolant temperature sensor
25	M	M_TMOT	Ground	Engine coolant temperature sensor
26	E	A_OLD	Pressure signal	Oil pressure switch
27	E	A_TOEL	Temperature signal	Oil temperature sensor
28	M	M_TOEL	Ground	Oil temperature sensor
29	E	A_KS1A	Cyl. 1-3 knock sensor	Knock sensor
30	E	A_KS1B	Cyl. 1-3 knock sensor	Knock sensor
31	E	A_KS2A	Cyl. 4-6 knock sensor	Knock sensor
32	E	A_KS2B	Cyl. 4-6 knock sensor	Knock sensor
33	A	P_EVZ1	Activate valve	Cyl. 1 fuel injection valve
34	A	P_EVZ2	Activate valve	Cyl. 2 fuel injection valve
35	A	P_EVZ3	Activate valve	Cyl. 3 fuel injection valve
36	A	P_EVZ4	Activate valve	Cyl. 4 fuel injection valve

E = Input, A = Output, M = Ground





Z3

**Pin Assignments**

Pin	Type	Signal	Description/Function	Connection
37	A	P_EVZ5	Activate valve	Cyl. 5 fuel injection valve
38	A	P_EVZ6	Activate valve	Cyl. 6 fuel injection valve
39	E	F_OLN	Level signal	Oil level sensor
40	A	T_NWE1	Activate valve	Variable camshaft control valve 1 (inlet)
41	A	T_NWA1	Activate valve	Variable camshaft control valve 2 (outlet)
42	A	T_TEV	Activate valve	Evaporative emission valve
43	A	T_MDK1	Activate motor	Cruise control actuator
44	A	T_MDK2	Activate motor	Cruise control actuator
45	A	S_KFK	Cooling signal	Thermostat, characteristic map cooling
46	A	T_LLFSS	CLOSE signal	Idle speed control valve
47	A	T_LLFSO	OPEN signal	Idle speed control valve
48	M	W_KS	Ground	Shield knock sensor
49	A	S_DISA	Activate valve	Valve, individual control intake system
50			Not used	
51			Not used	
52	A	S_SLPV	Activate valve	Secondary air pump valve


**X60004**

 Pin	Type	Signal	Description/Function	Connection
1	A	61	Charging signal	Instrument cluster
2	A	30H	Start signal	Body electronics control module (ZKE IV)
3	A	S_SLP	Activate relay	Secondary air pump relay
4			Not used	
5			Not used	
6			Not used	
7			Not used	
8			Not used	

E = Input, A = Output, M = Ground



Z3




## Pin Assignments

Pin	Type	Signal	Description/Function	Connection
9			Not used	
10	A	EKP	Activate relay	Fuel pump relay
11	A	OELD	Oil pressure signal	Instrument cluster
12			Not used	
13			Not used	
14			Not used	
15			Not used	
16			Not used	
17	A	TD	Crankshaft RPM speed signal TD	Instrument cluster
18			Not used	
19	E	RFL	Reverse signal	Reversing light switch/ Automatic transmission range switch
20			Not used	
21	A	A-OELN	Oil level signal	Thermal oil level sensor (TOENS) control module
22	E	DFAHR	Speed signal right rear	ABS/ASC control module
23	E	KUPP	Clutch signal	Clutch switch
24	E	KL 54 ON	Brake signal	Brake light switch
25			Not used	
26	E	15A26	Terminal 15	Fuse 26
27	E	MFL	Cruise control signal	Cruise control interface
28	E	S_BLTS	Brake signal	Brake light switch
29	A	S_KOREL	Activate relay	Compressor control relay
30	A	LDPV	Activate valve	Leakage diagnosis pump
31			Not used	
32	E/A	TXDII	TXD diagnosis data link	Data link connector
33	E	S_DWA	Drive-away protection signal (code)	Electronic immobilizer control module (EWS III)
34	E	LDPS	Leakage signal	Leakage diagnosis pump
35	M	31	Ground	Cruise control interface
36	E/A	CAN+	CAN bus high	Instrument cluster, ABS/ASC control module

E = Input, A = Output, M = Ground



 Z3

**Pin Assignments**

Pin	Type	Signal	Description/Function	Connection
37	E/A	CAN-	CAN bus low	Instrument cluster, ABS/ASC control module
38			Not used	
39			Not used	
40			Not used	

**X60005**

Pin	Type	Signal	Description/Function	Connection
1	A	P_ZSZ3	Ignition coil signal	Cyl. 3 ignition coil
2	A	P_ZSZ2	Ignition coil signal	Cyl. 2 ignition coil
3	A	P_ZSZ1	Ignition coil signal	Cyl. 1 ignition coil
4			Not used	
5	M	31L	Ground	Ground point
6	M	A_ZSR	Ground	Ground point
7	A	P_ZSZ6	Ignition coil signal	Cyl. 6 ignition coil
8	A	P_ZSZ5	Ignition coil signal	Cyl. 5 ignition coil
9	A	P_ZSZ4	Ignition coil signal	Cyl. 4 ignition coil

E = Input, A = Output, M = Ground



# ENGINE CONTROL SYSTEM MS42.1 (6-CYLINDER M52)


## Z3 VERSIONS

### POWER

Z3

**HOT AT ALL TIMES**

POWER DISTRIBUTION  
0670.2

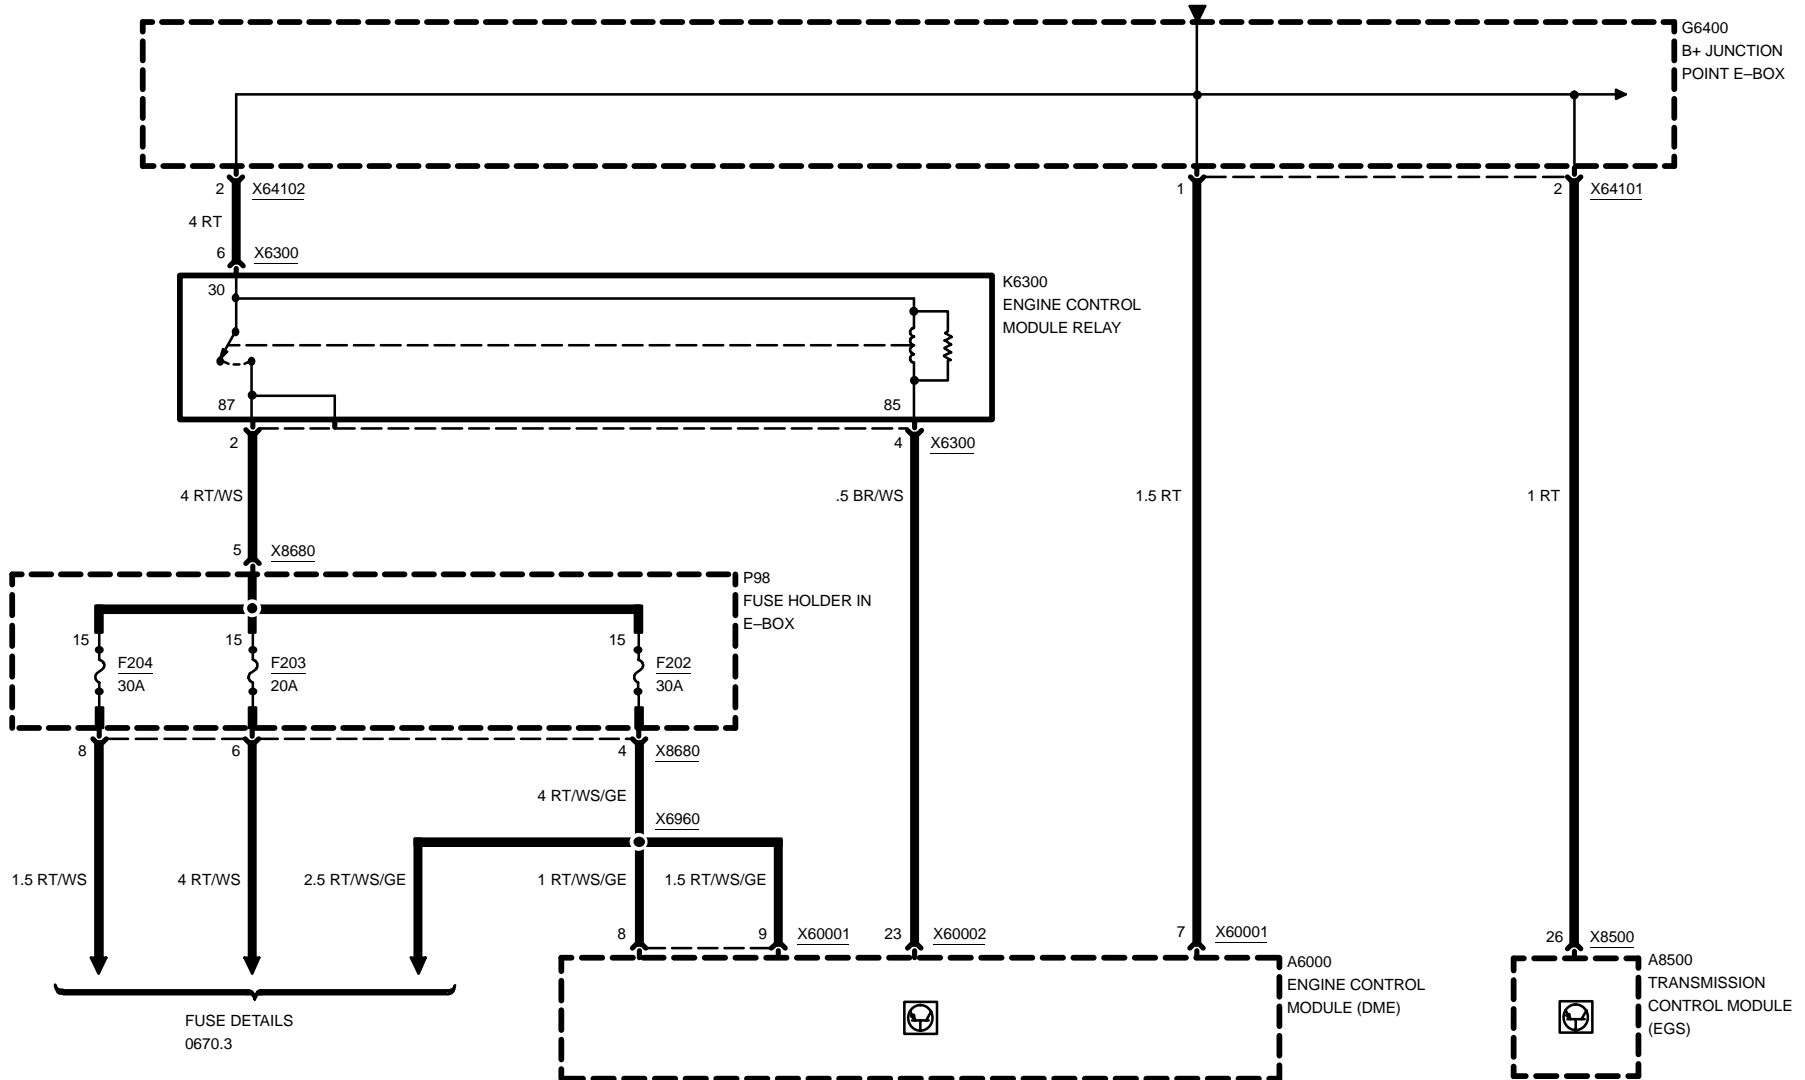




# ENGINE CONTROL SYSTEM MS42.1 (6-CYLINDER M52)

## Z3 VERSIONS

Z3

**HOT AT ALL TIMES**

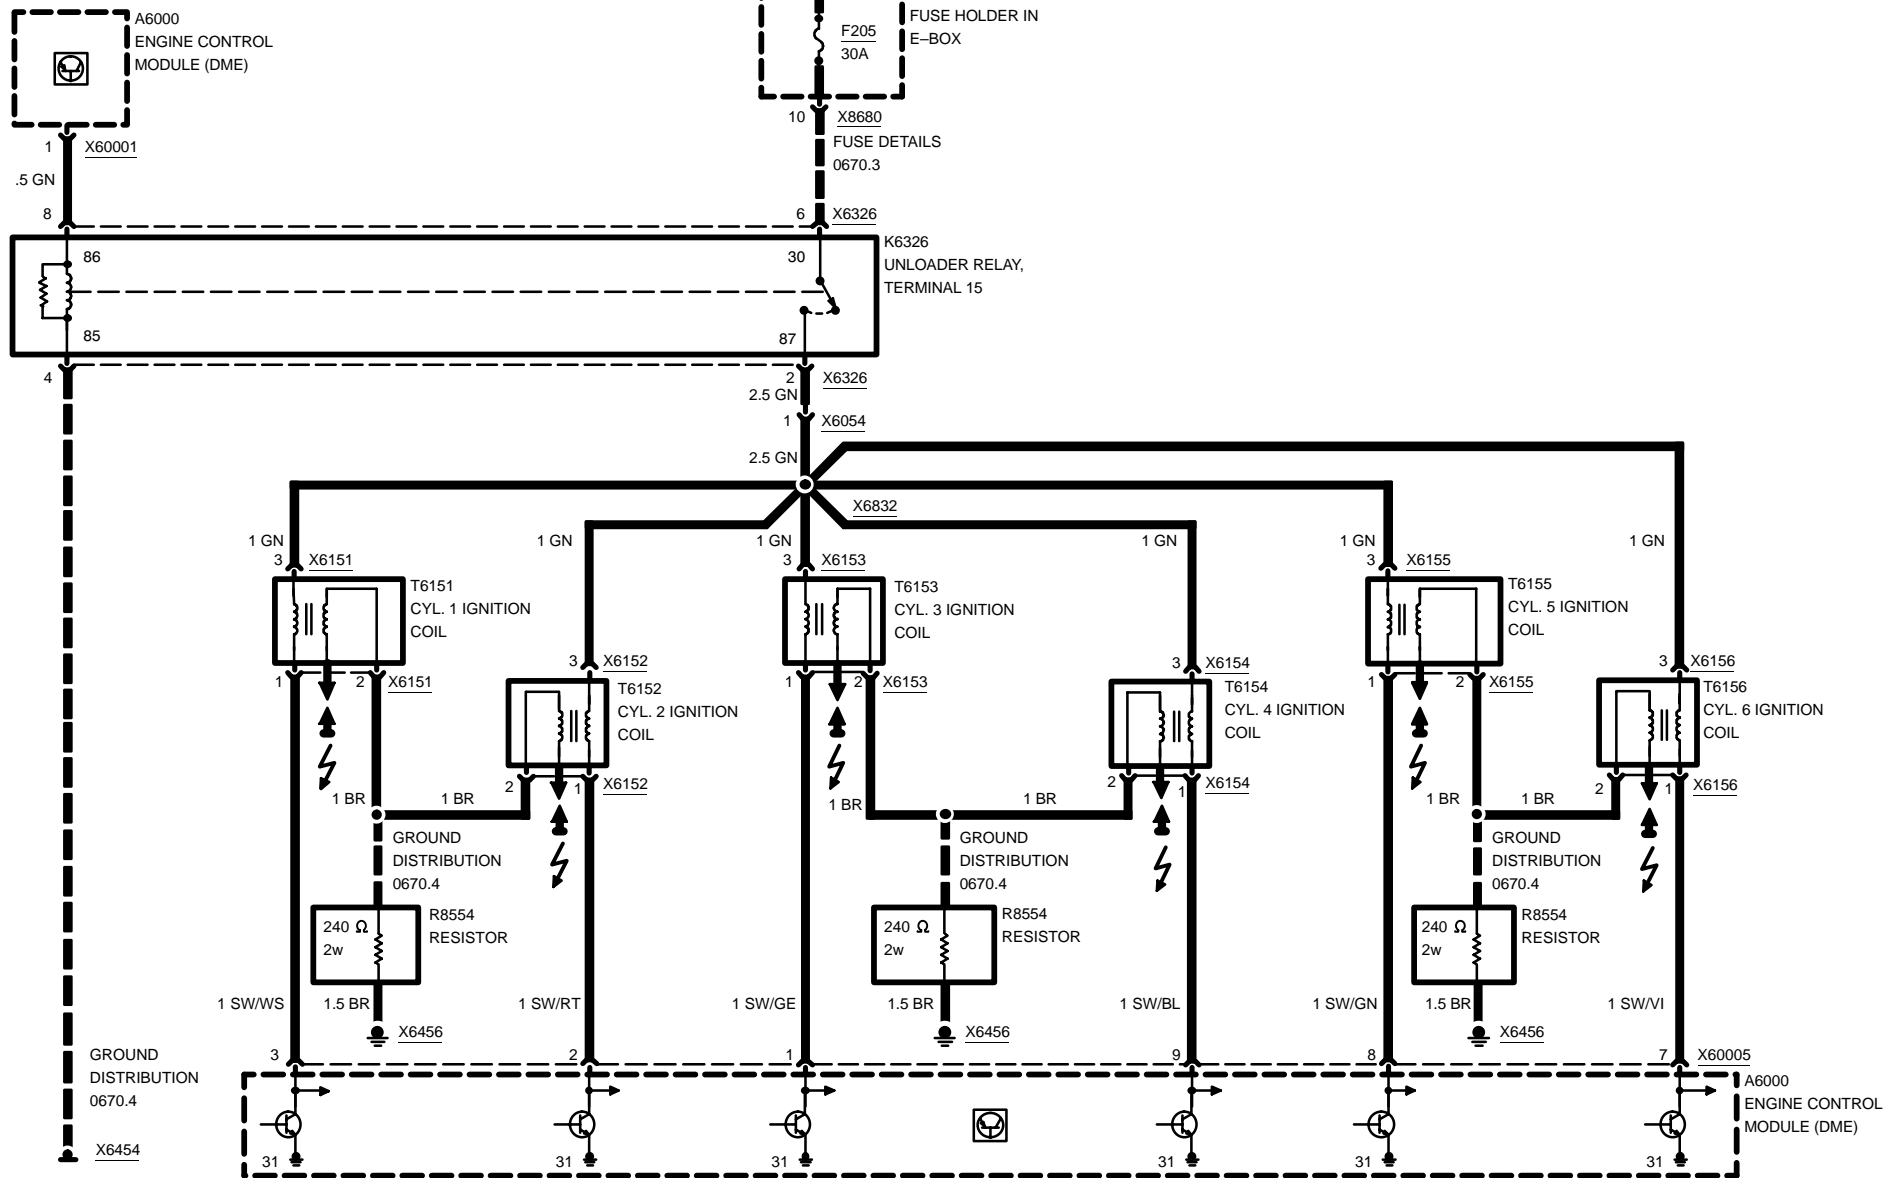

03/00


1210.25-01

1999



# ENGINE CONTROL SYSTEM MS42.1 (6-CYLINDER M52)

Z3 VERSIONS

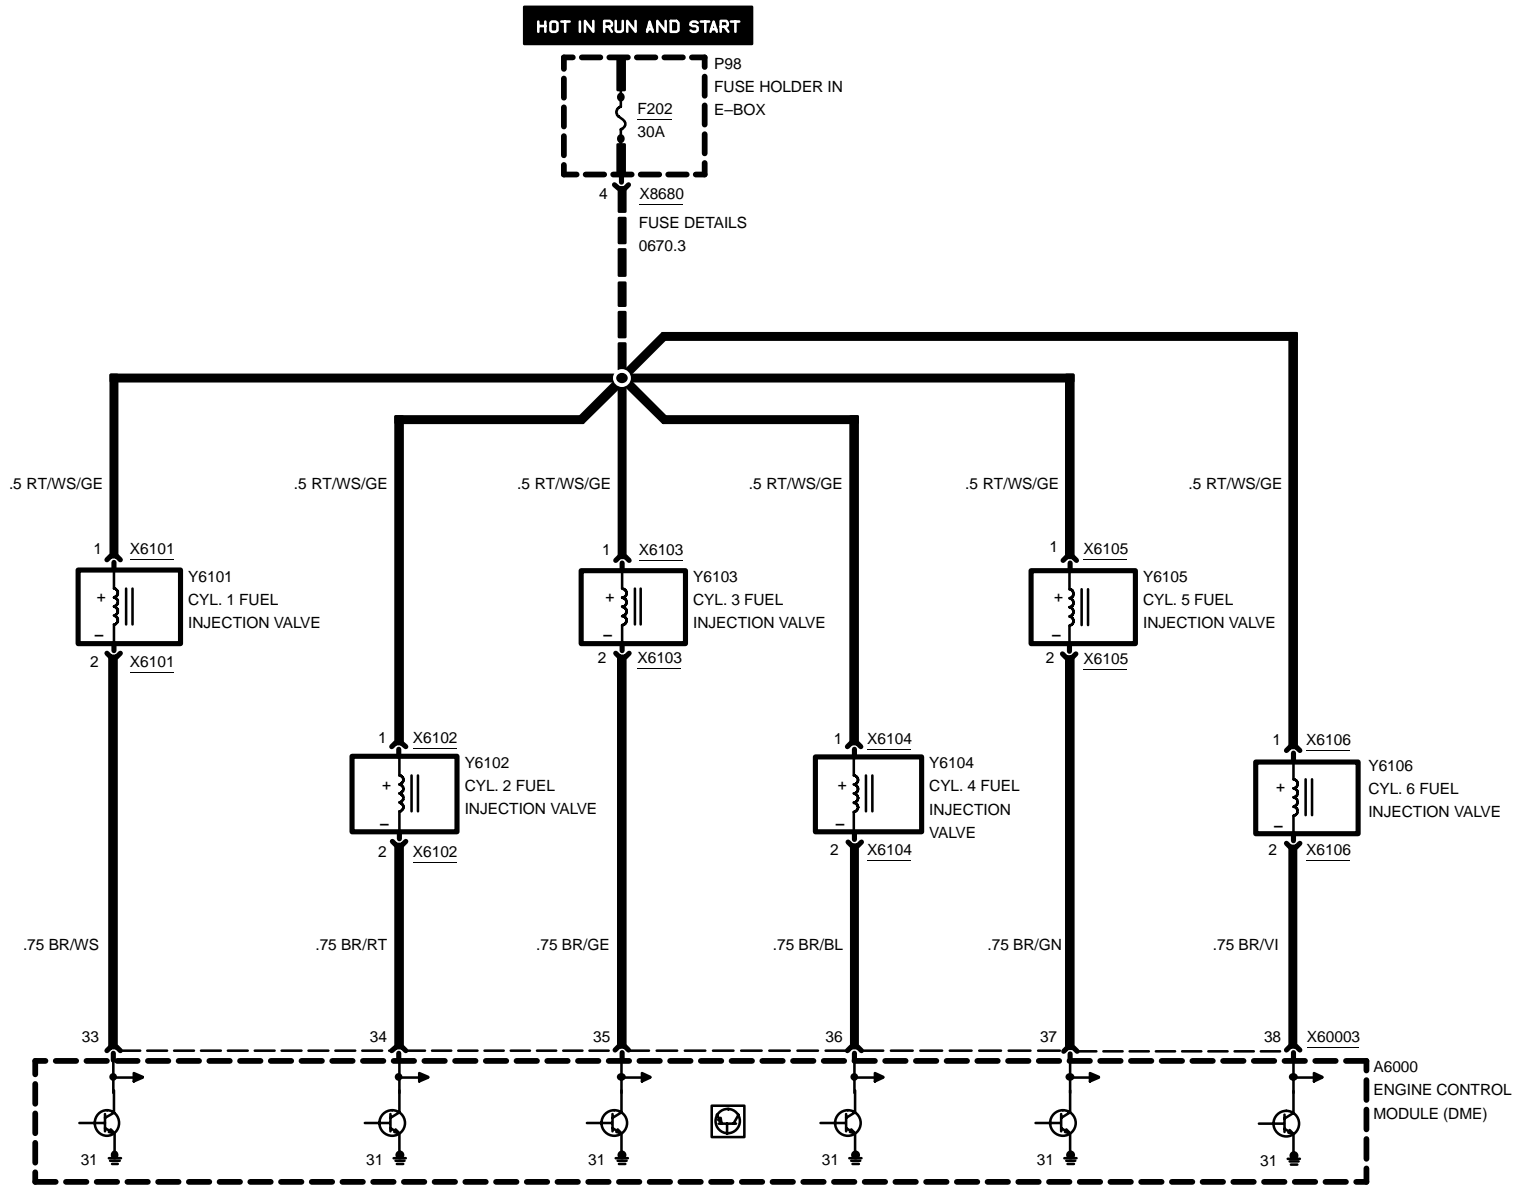

03/00

1210.25-02

1999




# ENGINE CONTROL SYSTEM MS42.1 (6-CYLINDER M52)


## Z3 VERSIONS

Z3

**HOT IN RUN AND START**

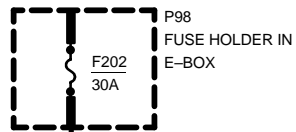

X8680  
FUSE DETAILS  
0670.3

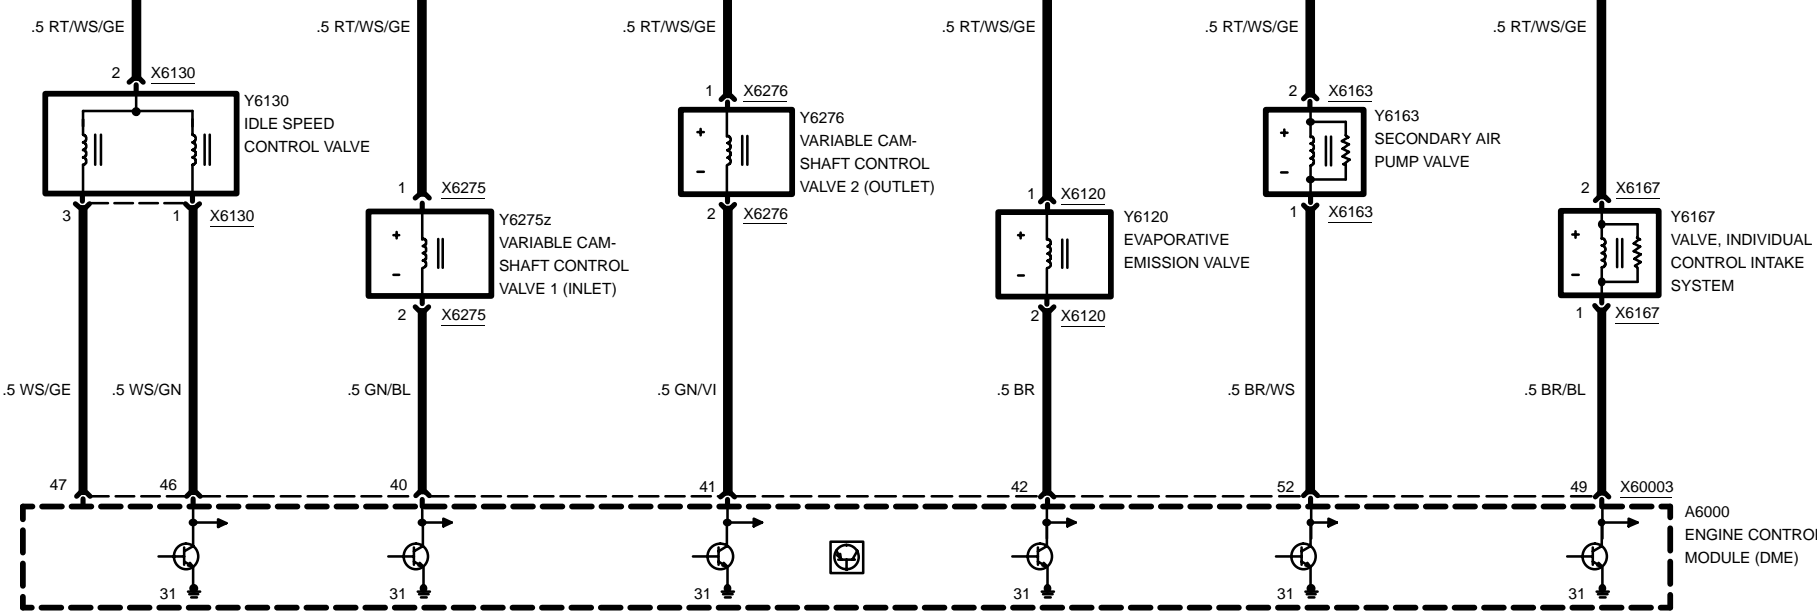


03/00

1210.25-03

1999





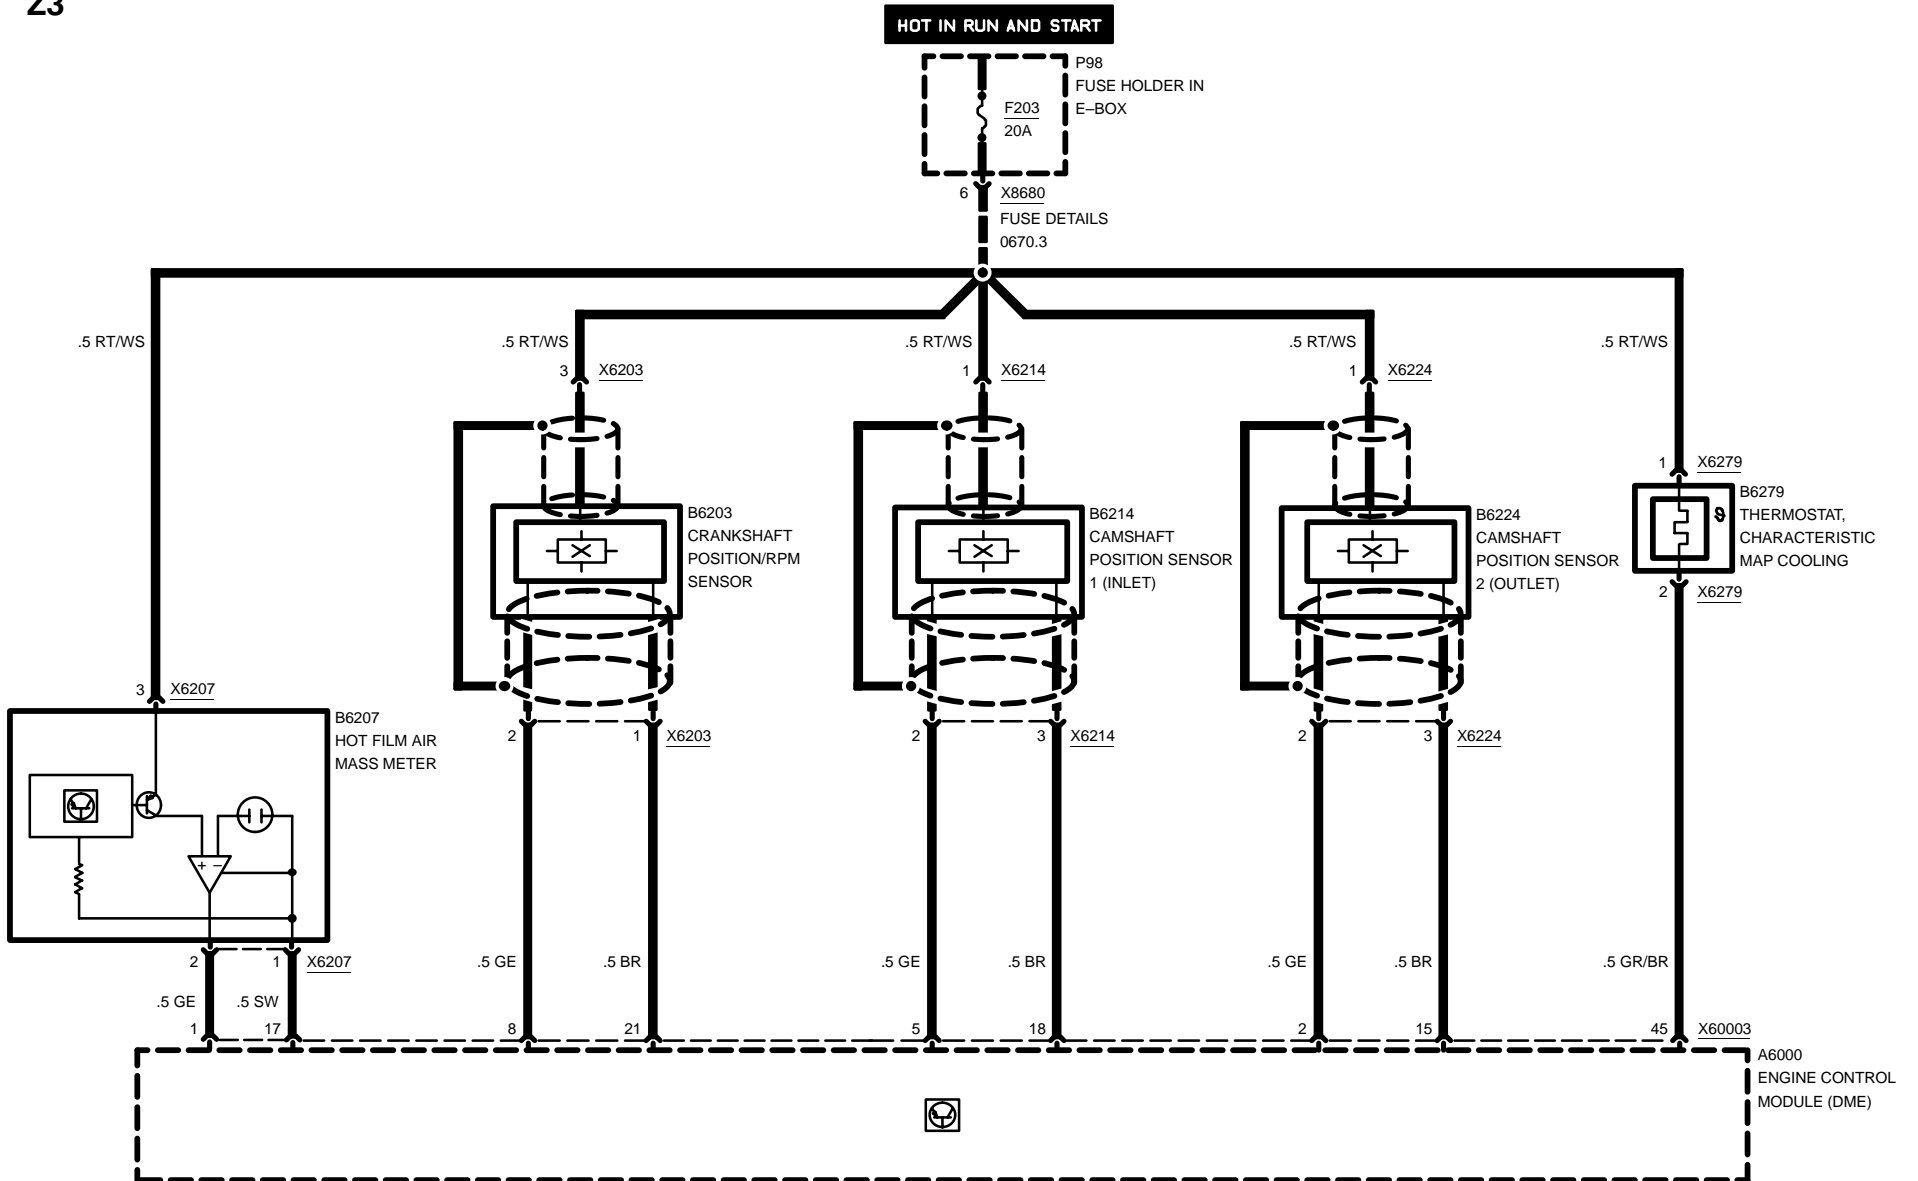




# ENGINE CONTROL SYSTEM MS42.1 (6-CYLINDER M52)

## Z3 VERSIONS

Z3

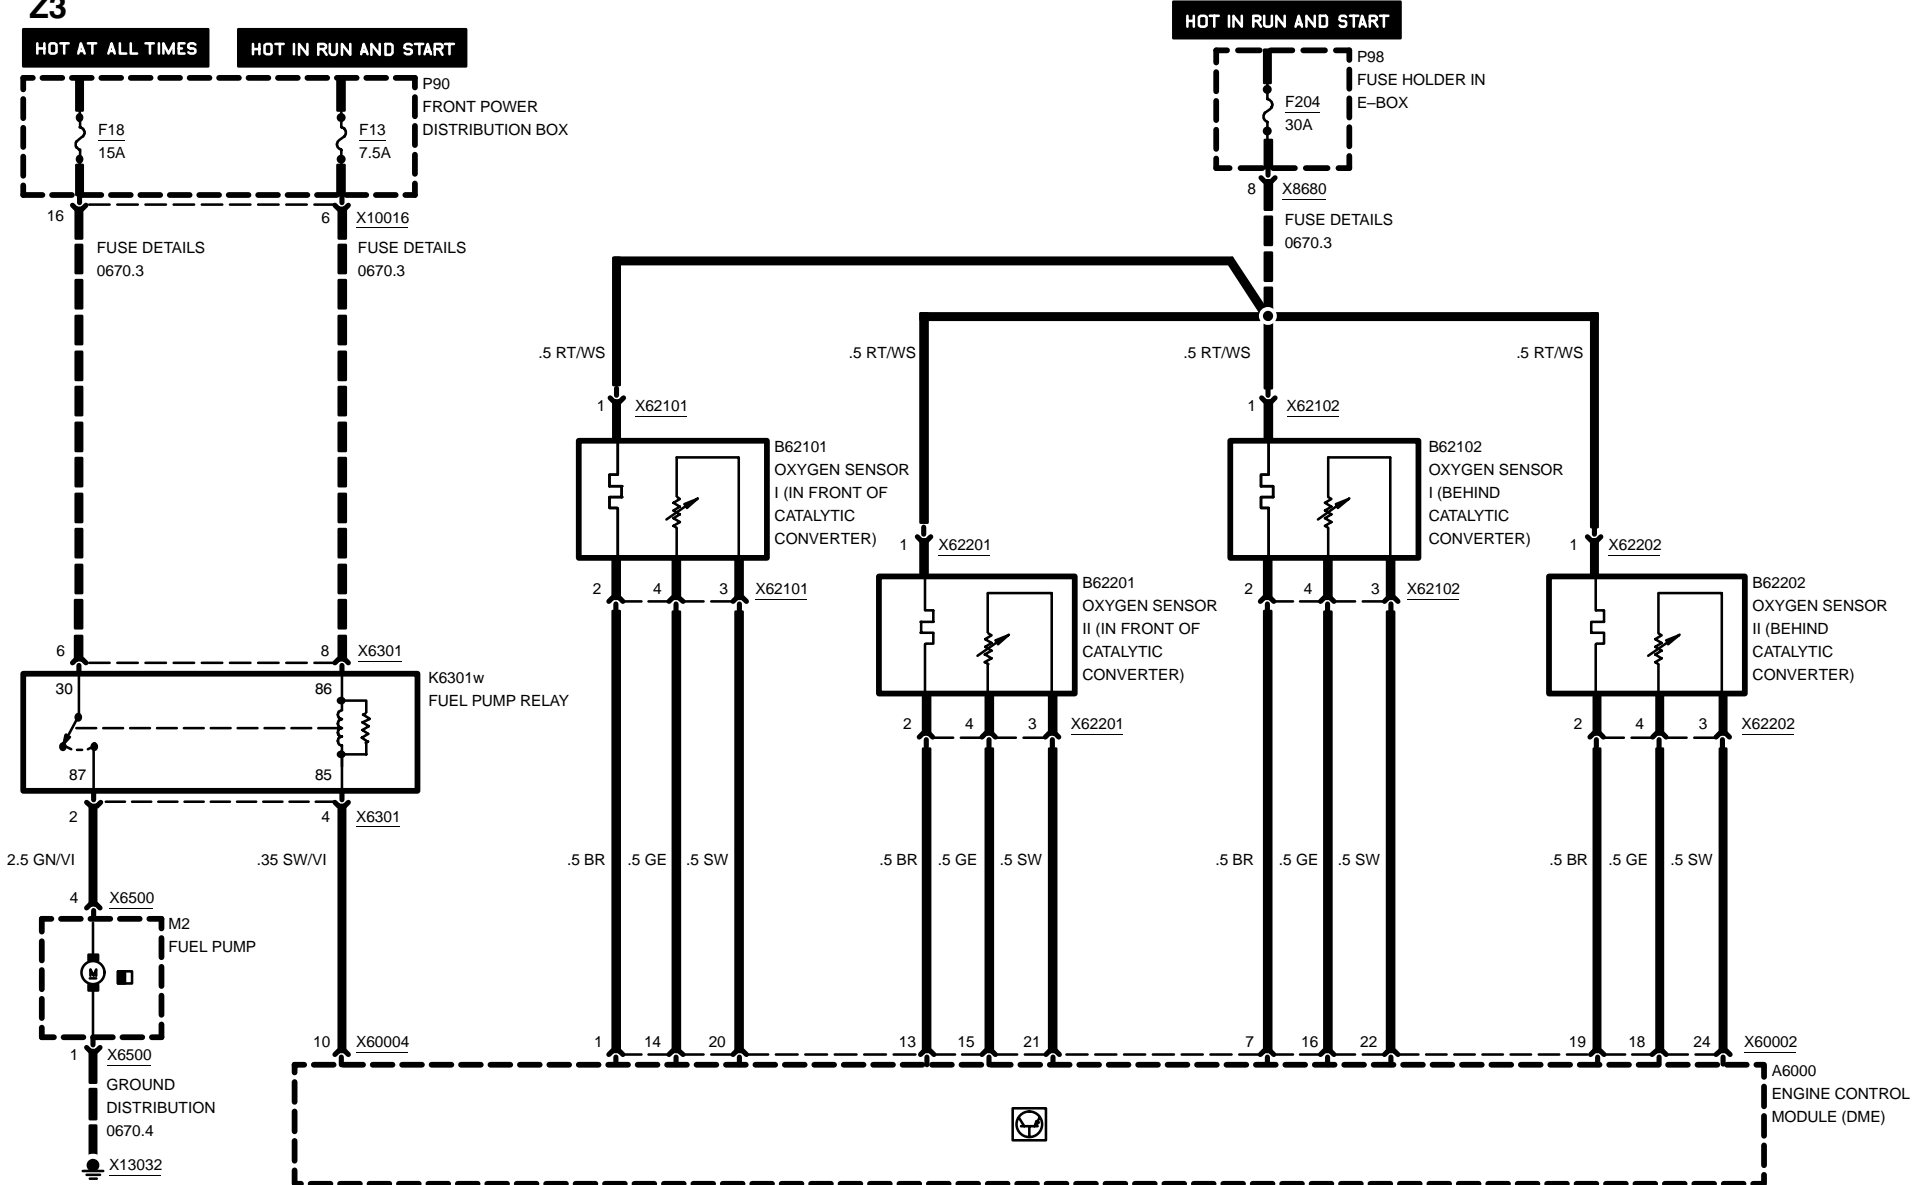

03/00

1210.25-06


1999



# ENGINE CONTROL SYSTEM MS42.1 (6-CYLINDER M52)

## Z3 VERSIONS

Z3

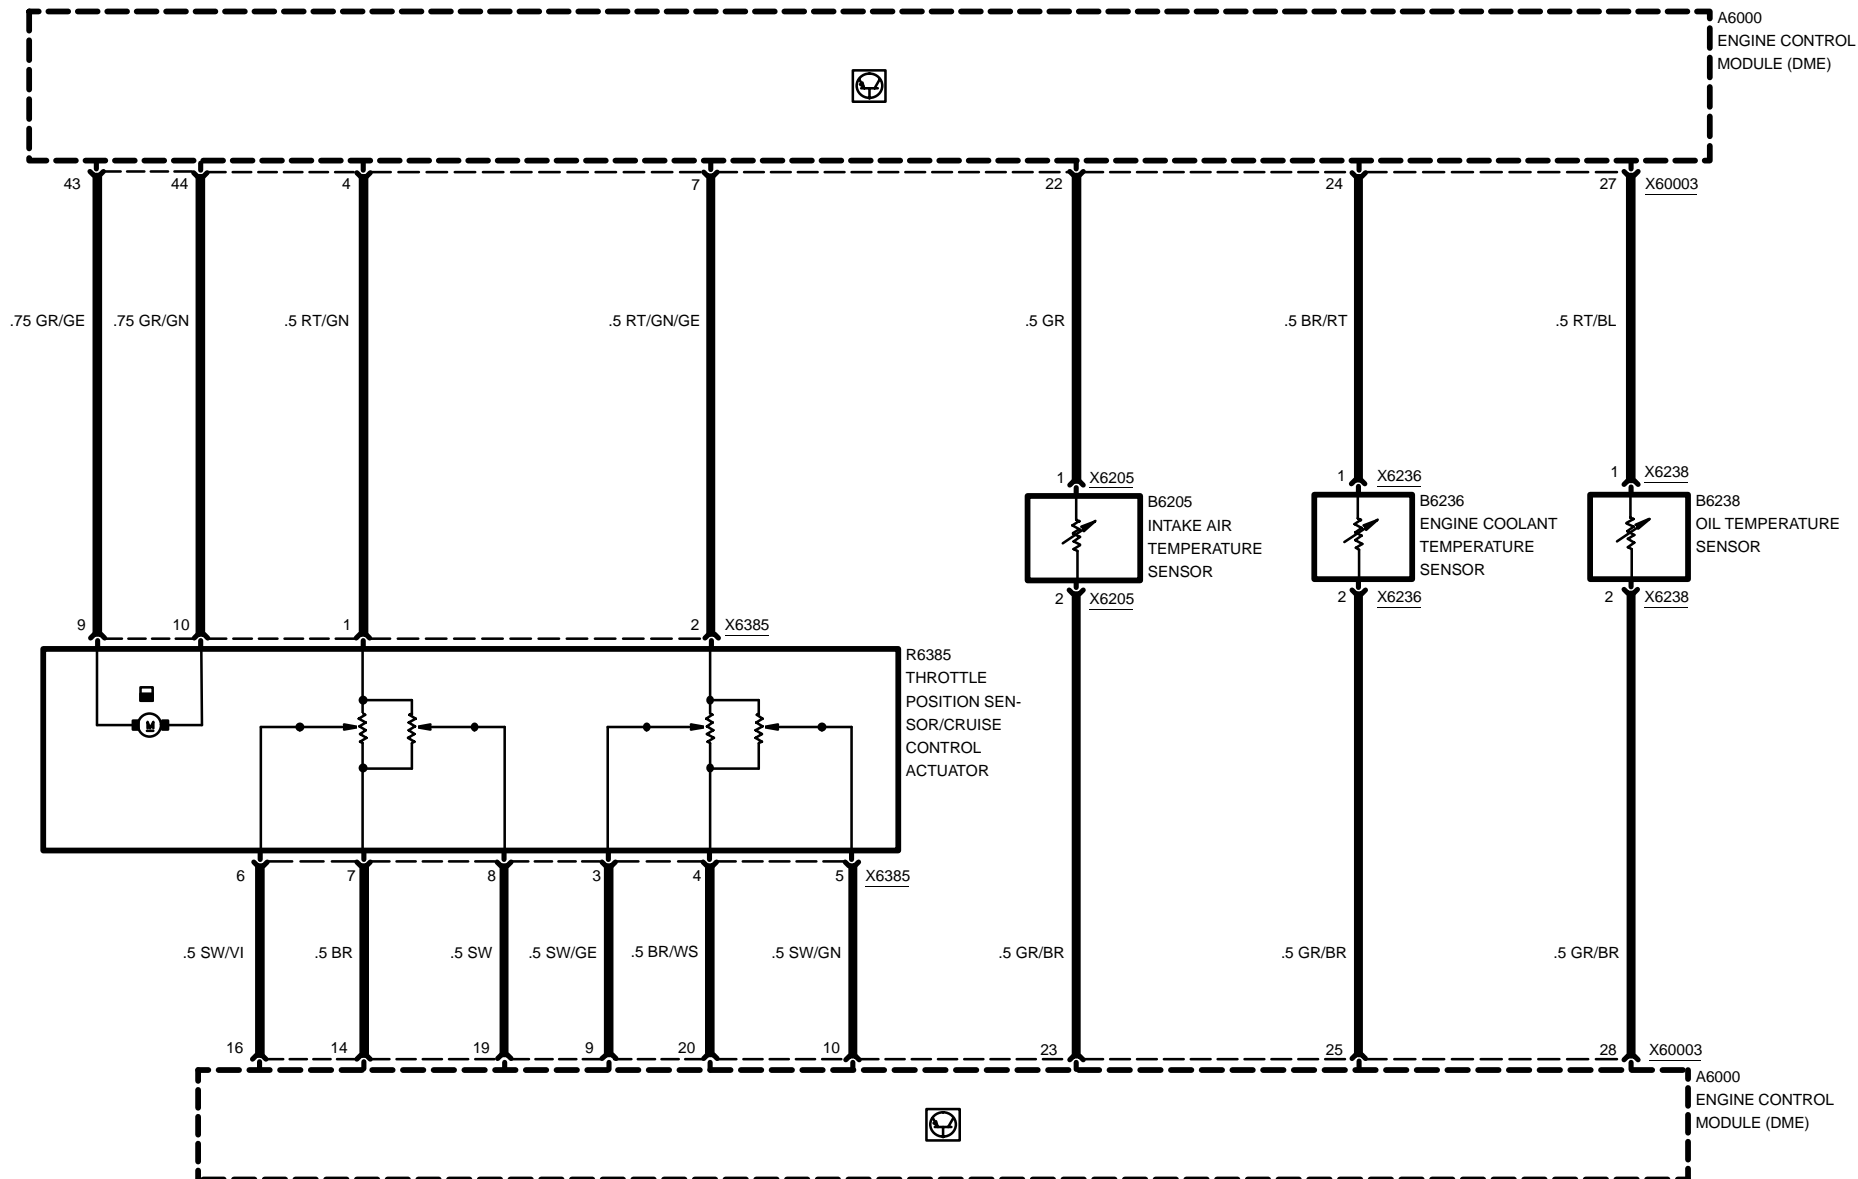

03/00

1210.25-07


1999



Z3

# ENGINE CONTROL SYSTEM MS42.1 (6-CYLINDER M52)


## Z3 VERSIONS

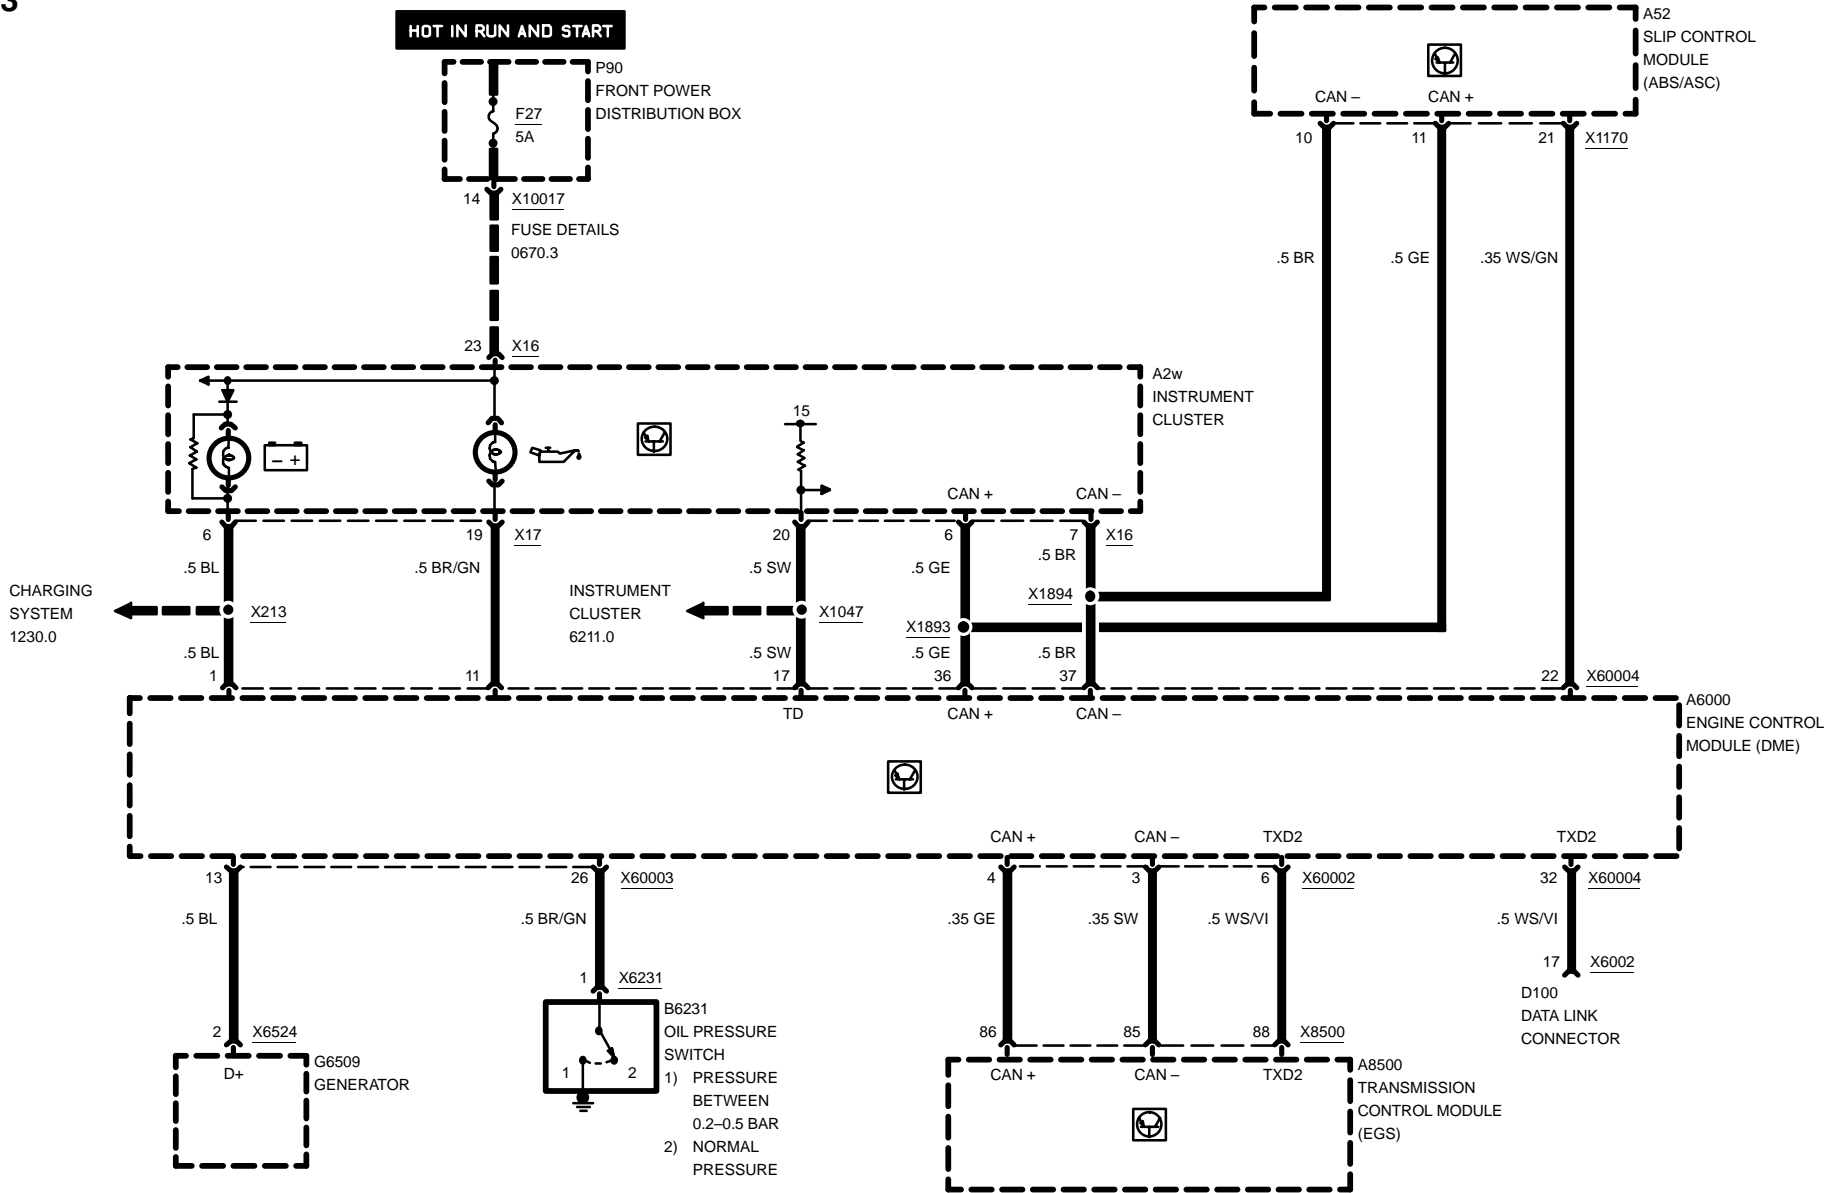

03/00

1210.25-08

1999

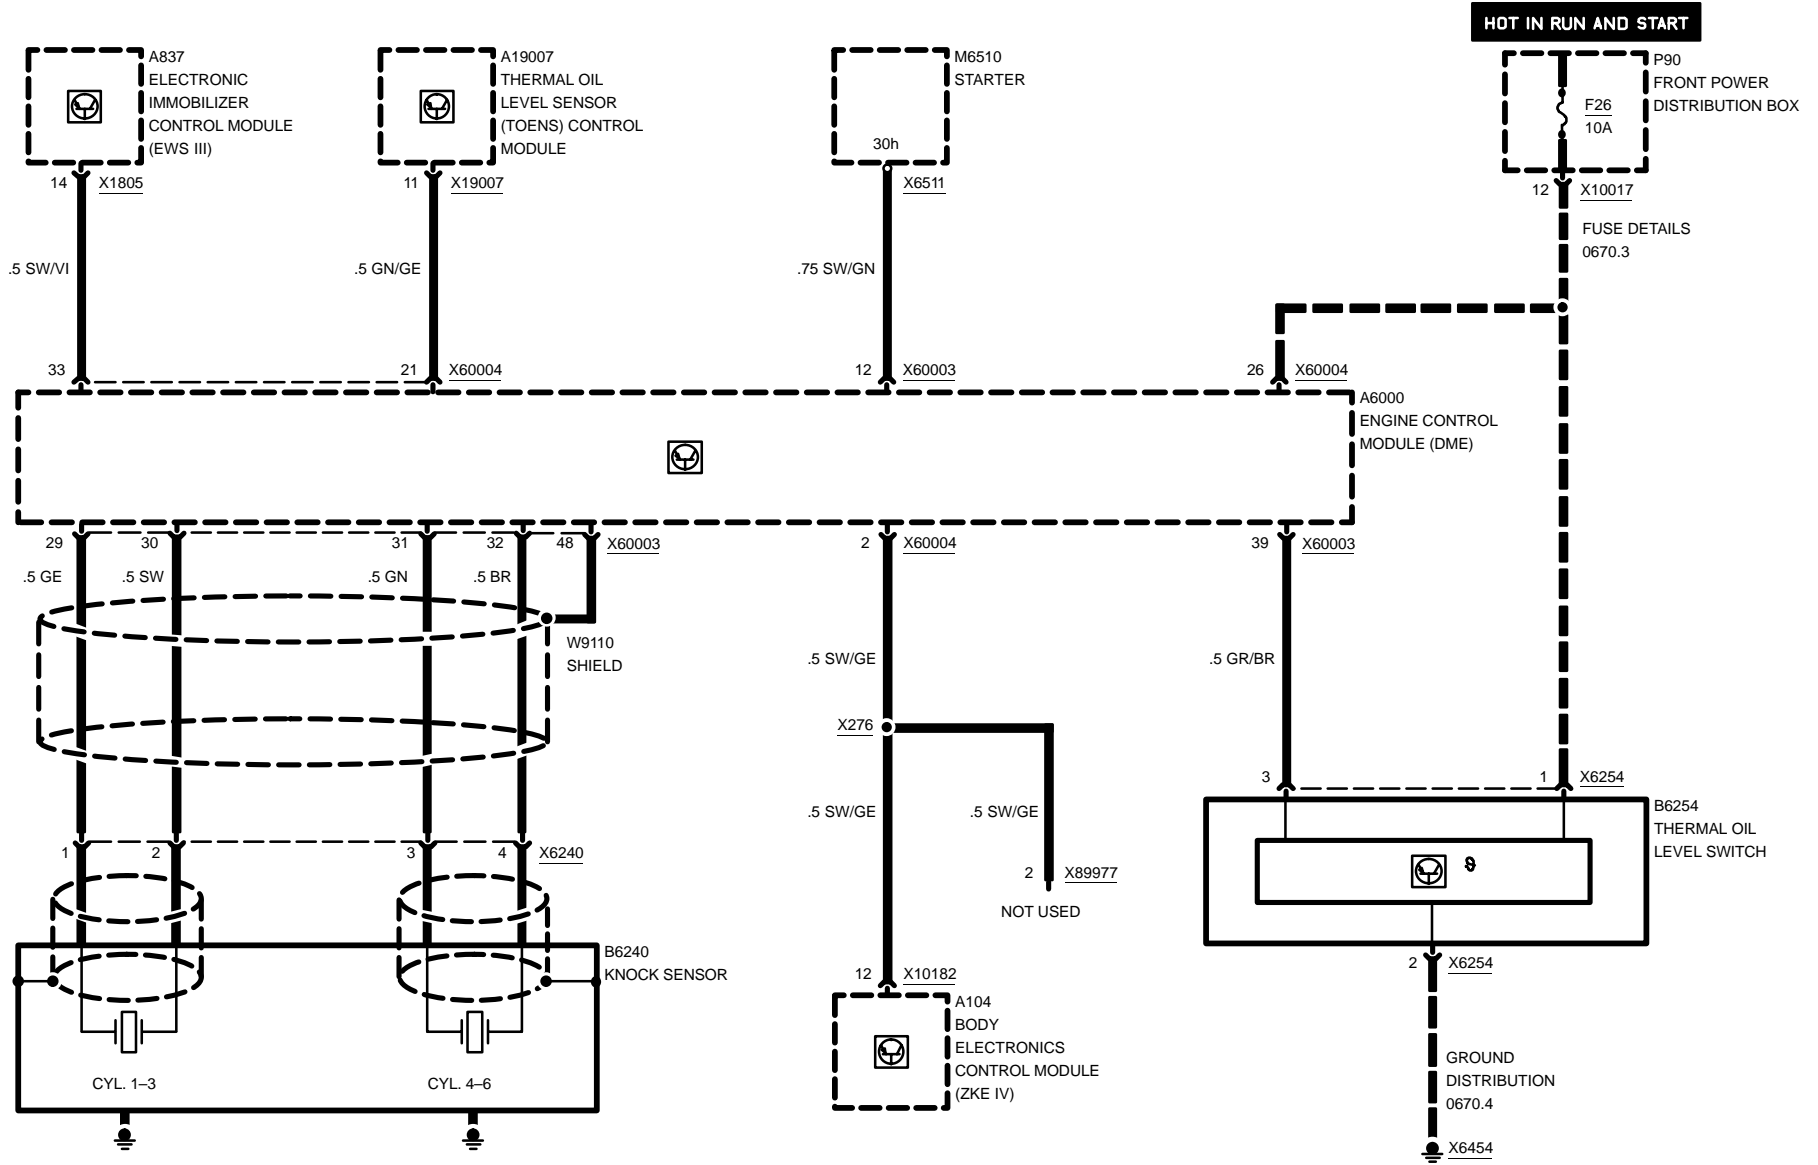






Z3

# 1230.0 CHARGING SYSTEM

## M VERSIONS

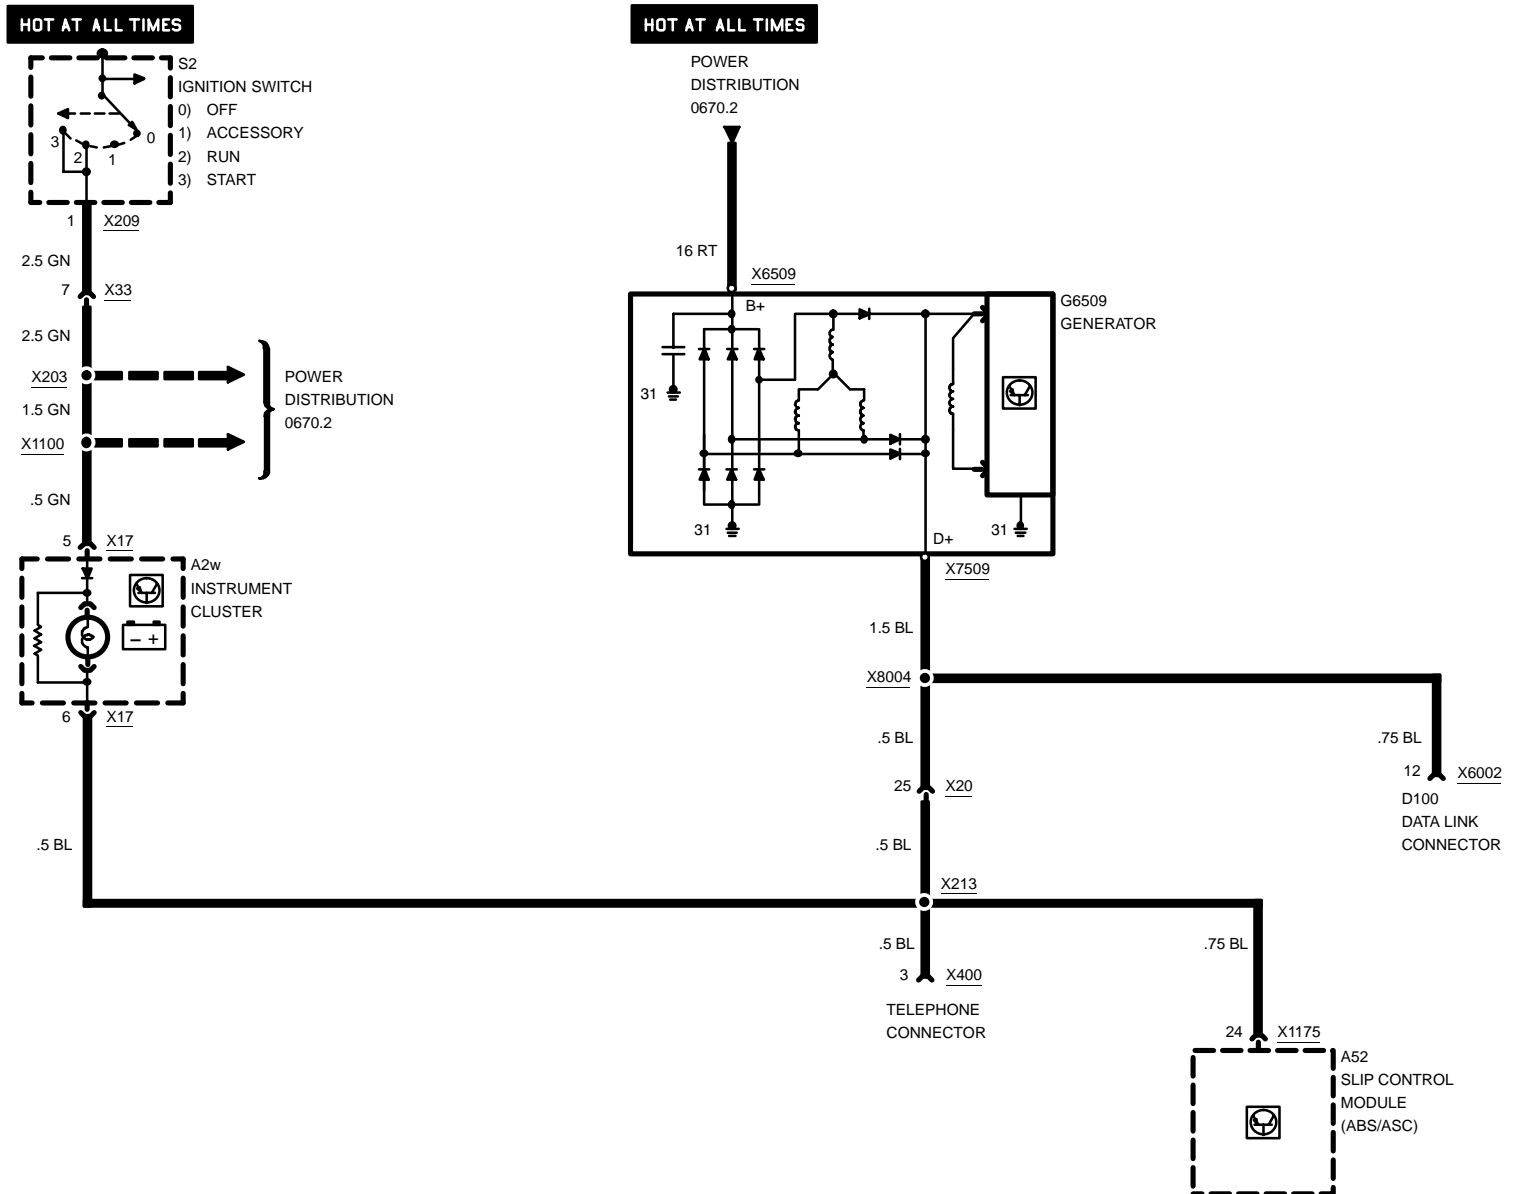

03/00


1230.0-00

1999



# CHARGING SYSTEM

Z3 VERSIONS

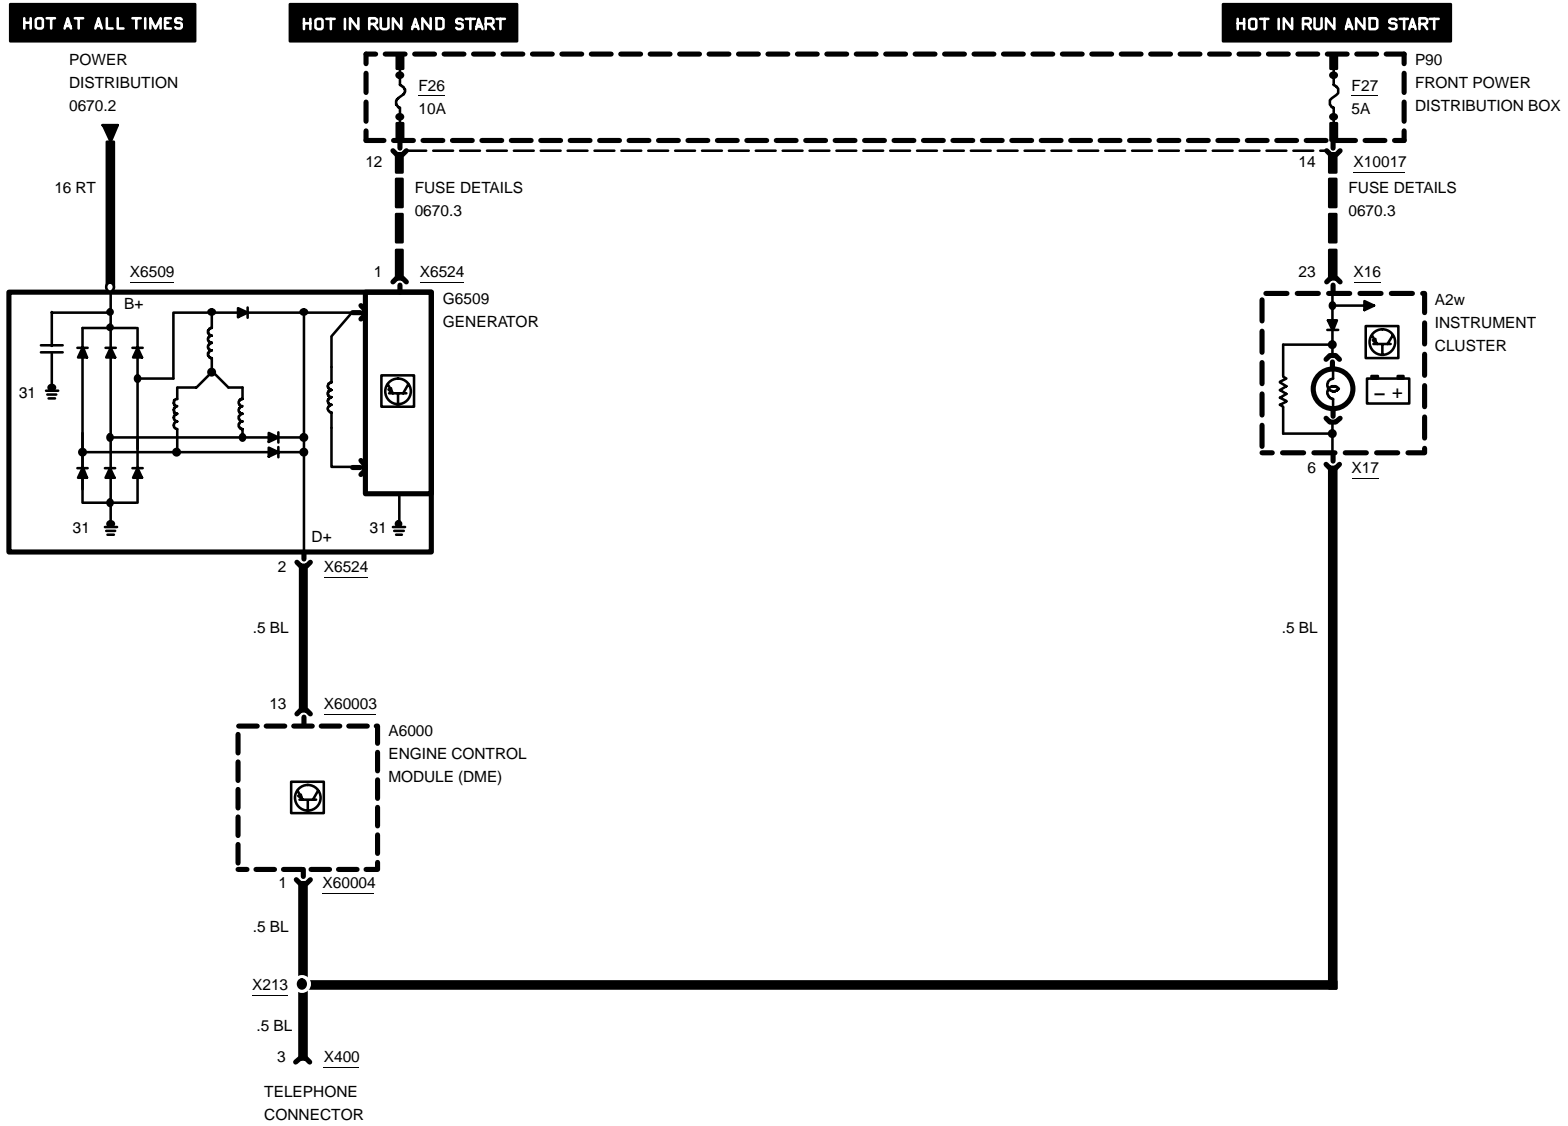






# 1240.0 START


# M VERSIONS

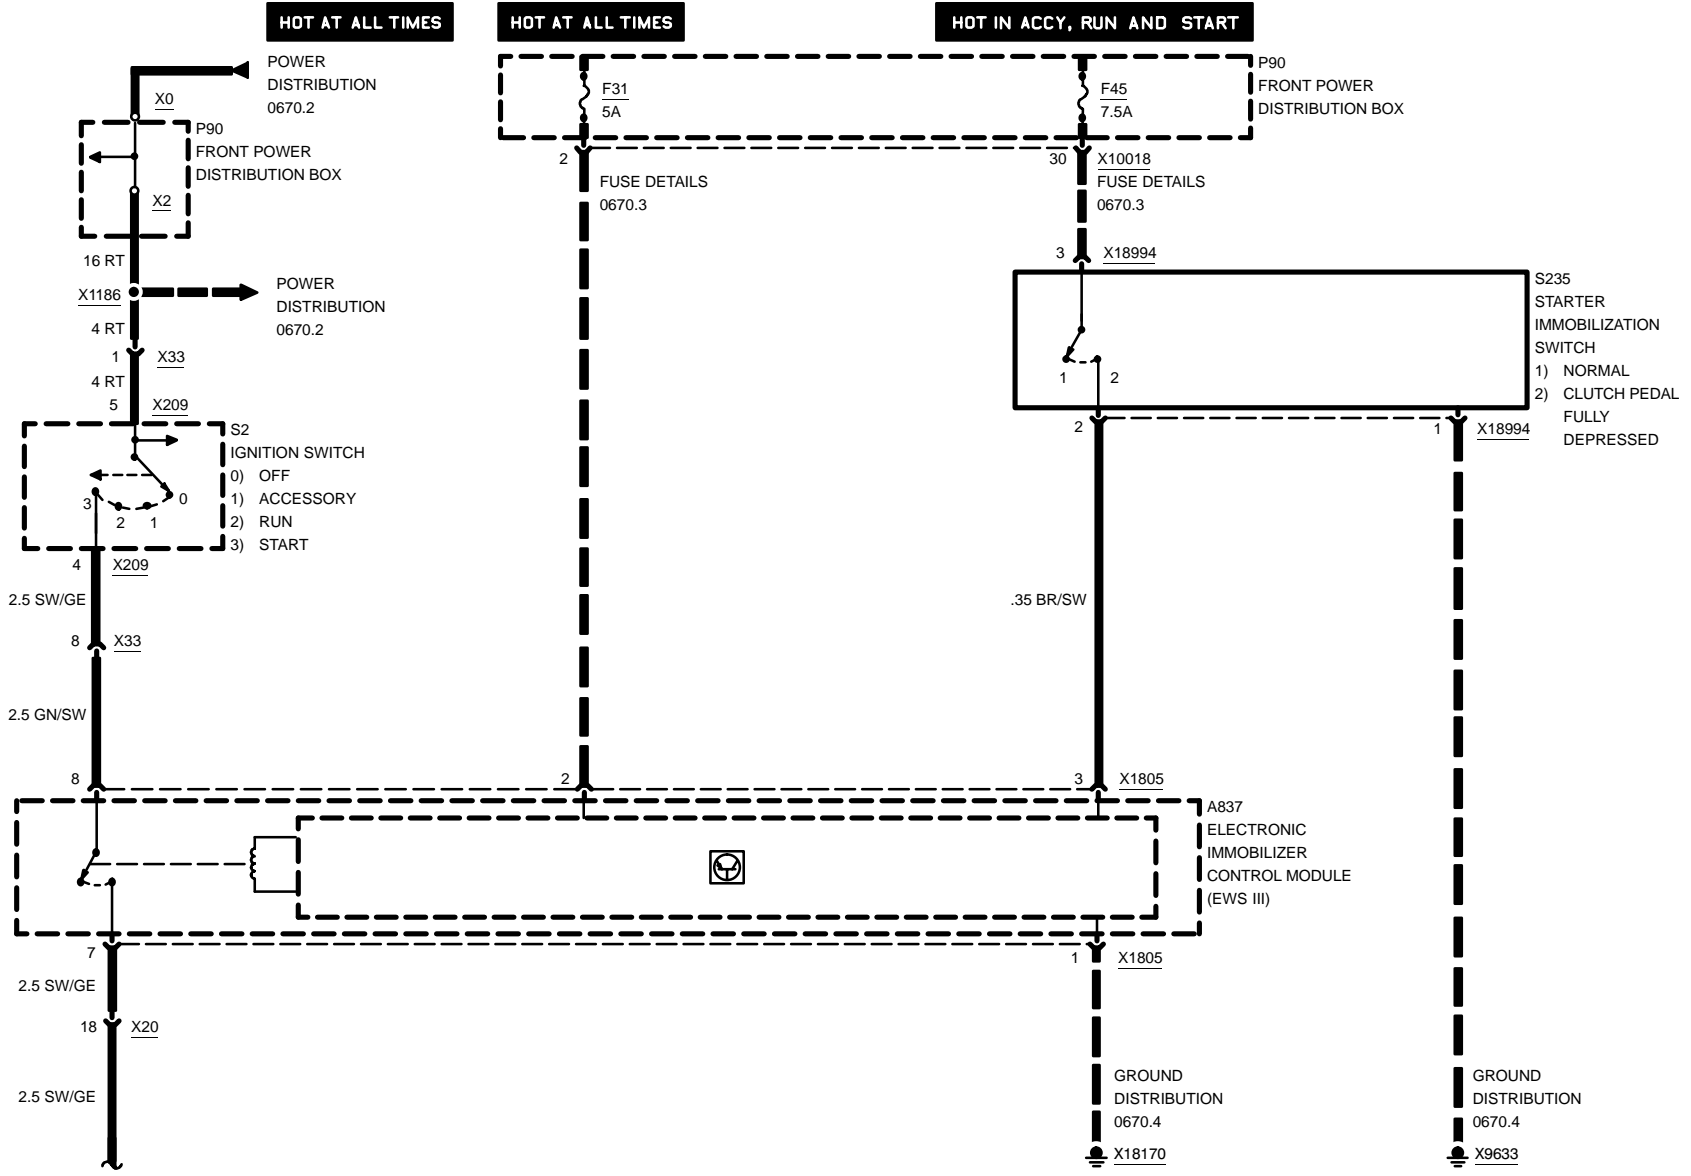



03/00

1240.0-00



1999

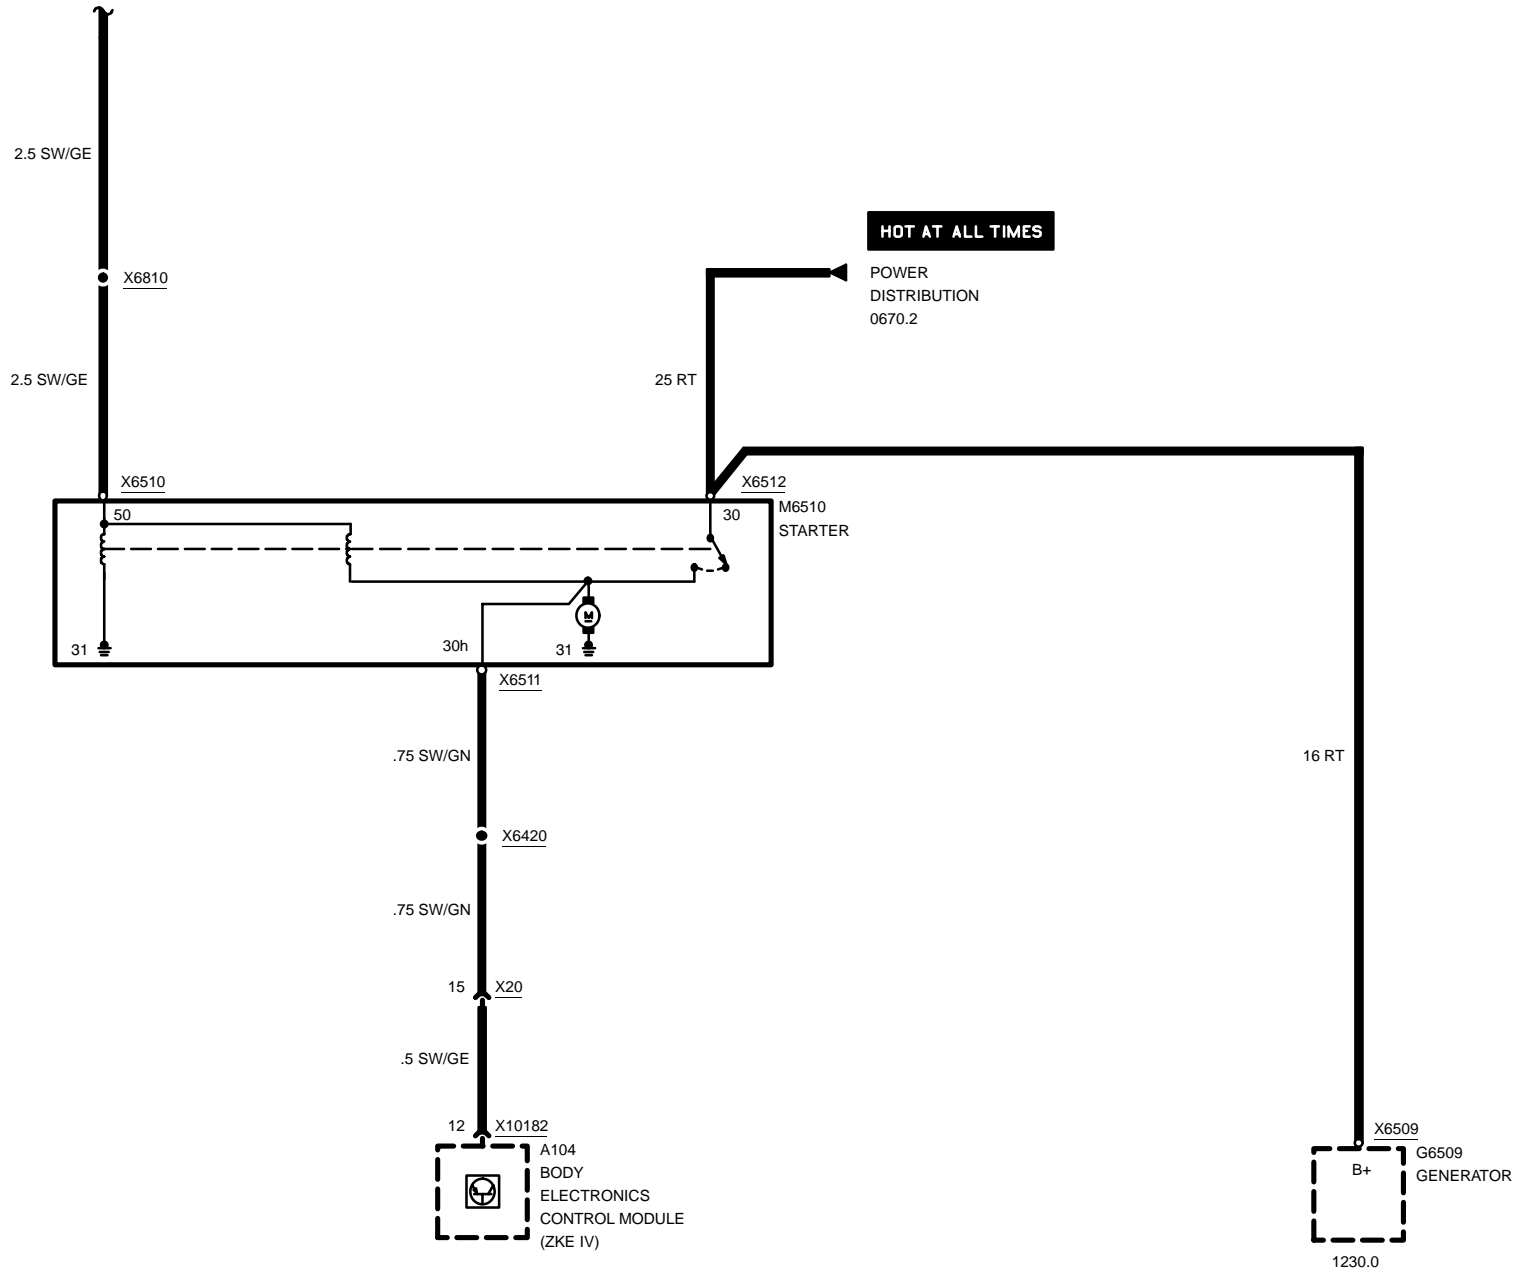

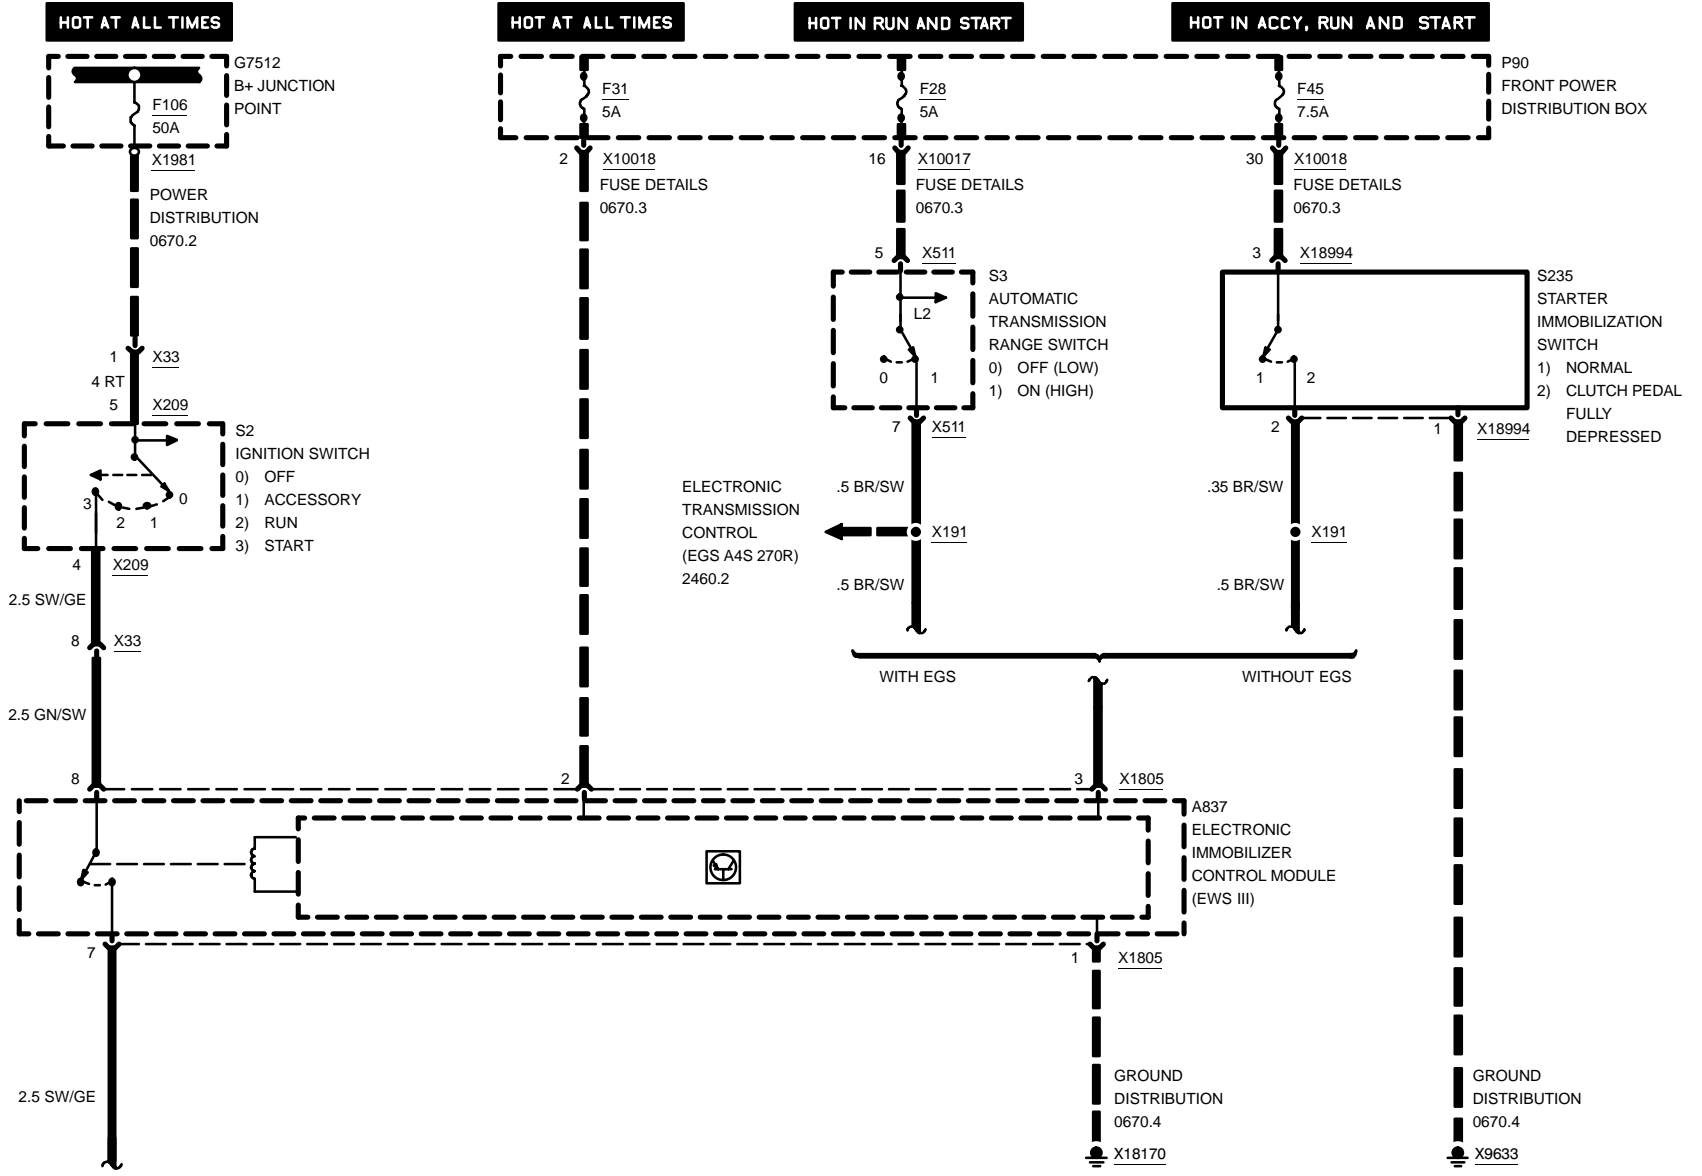

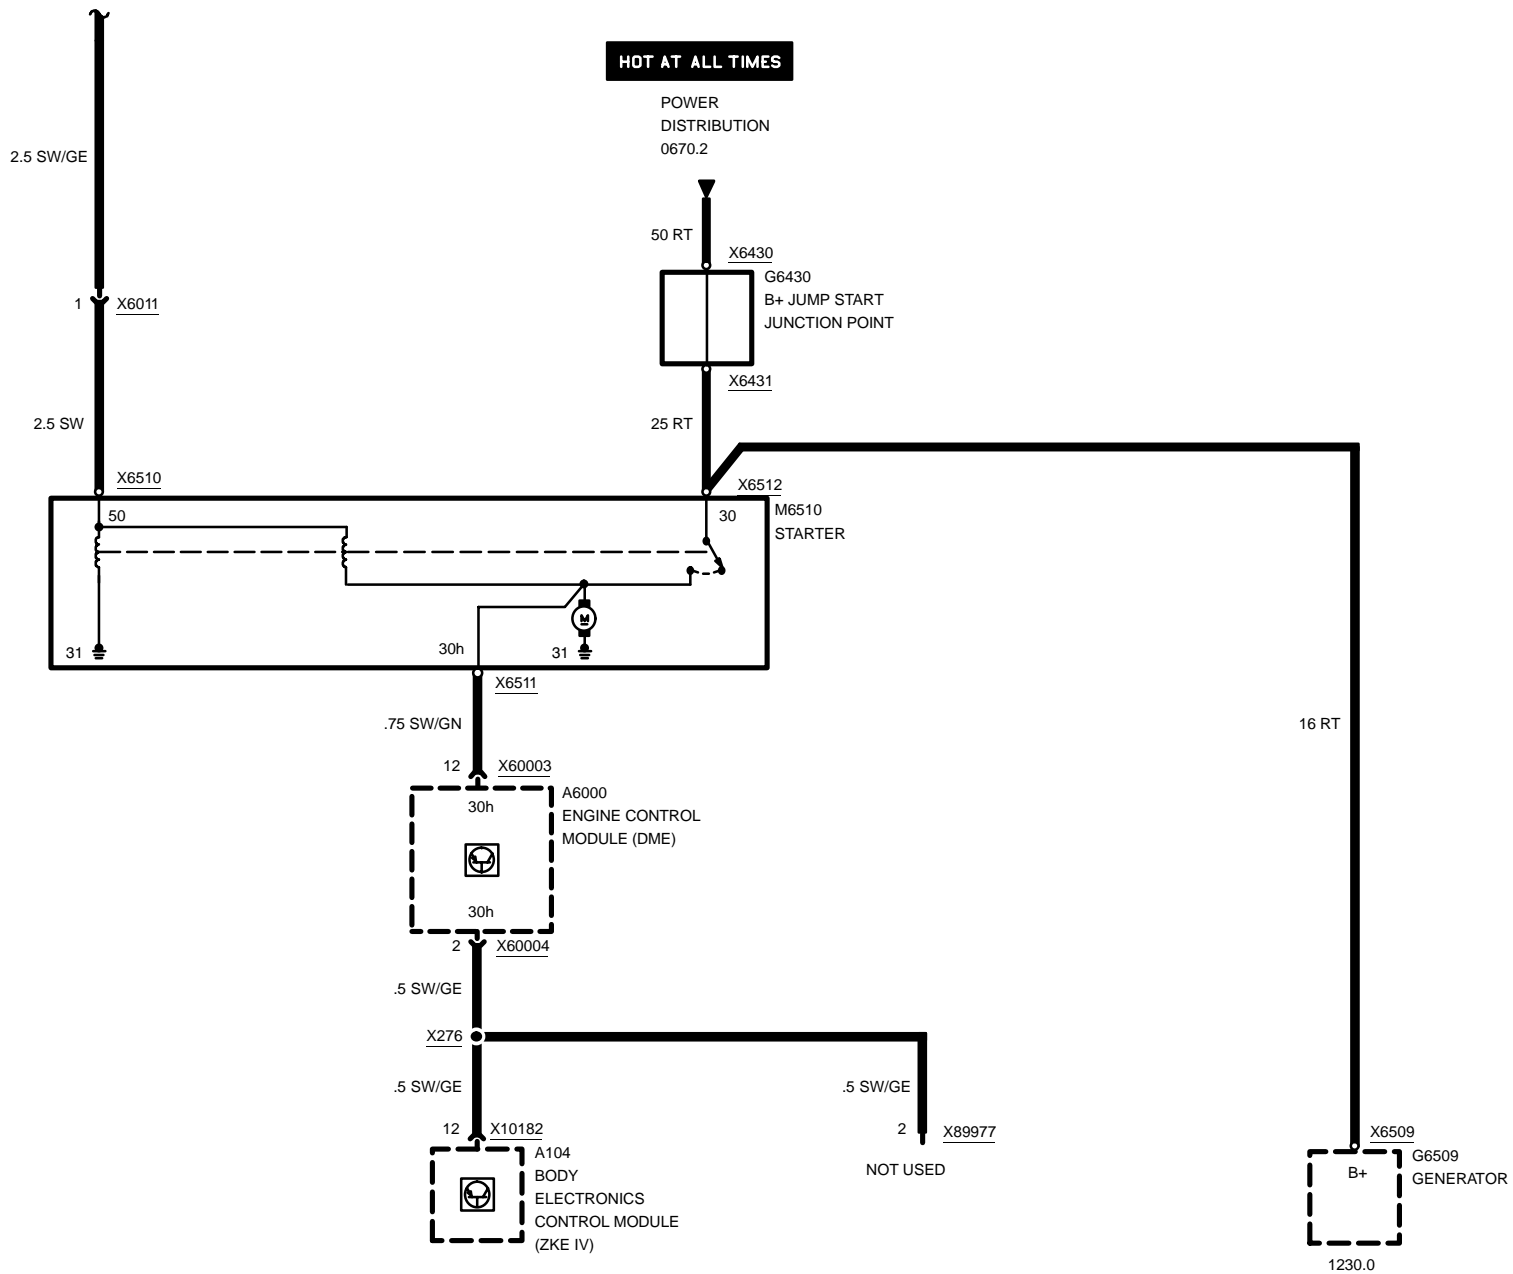


# 1290.0 E-BOX FAN

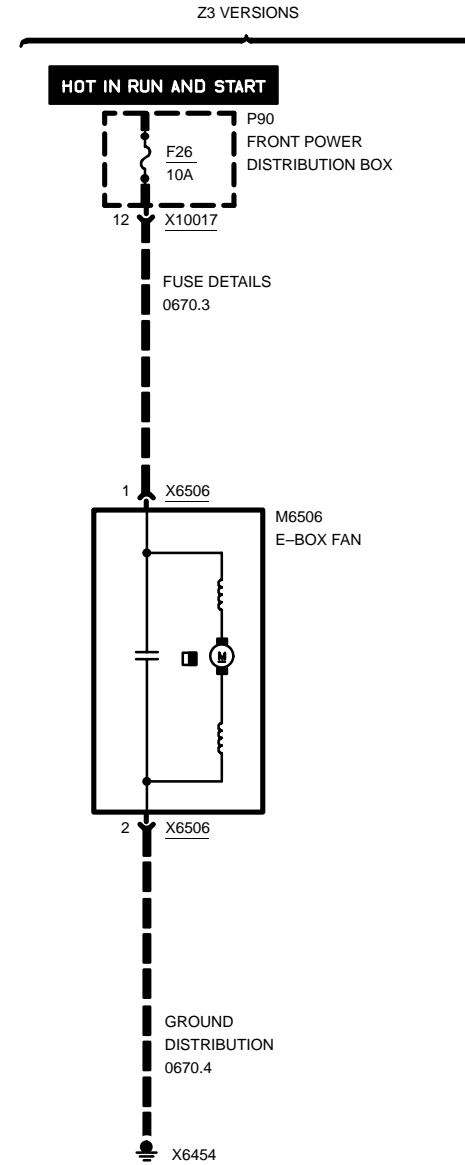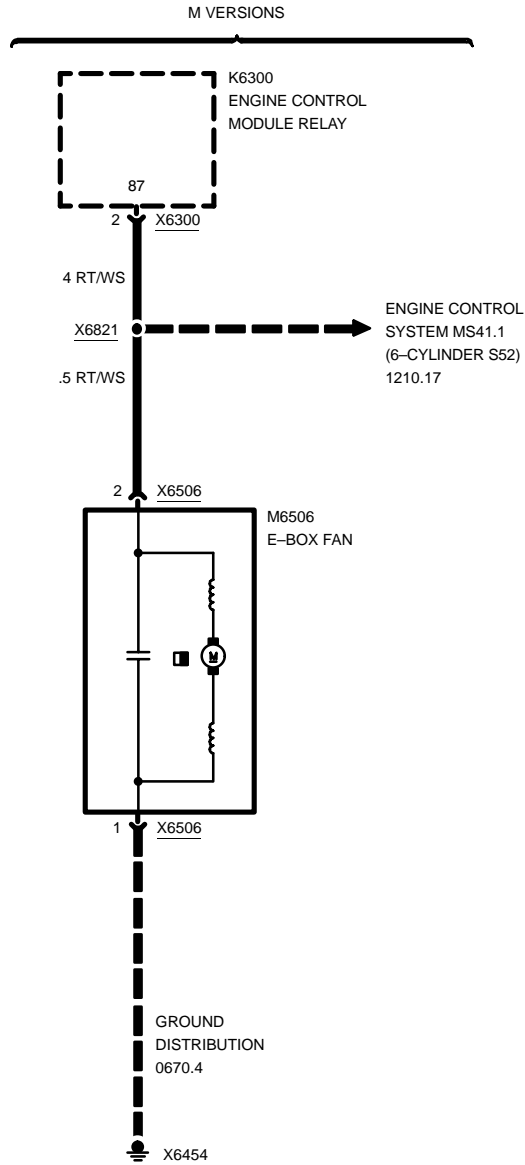





Z3

 
**Pin Assignments****X8500**

Pin	Type	Description/Function	Connection
10		Not used	
11	M	Ground	Shift-lock
12		Not used	
13	A	Solenoid valve 3 control (-)	Transmission valve unit
14	A	Hydraulic pressure regulator control (-)	Transmission valve unit
15		Not used	
16		Not used	
17	E	Gear range signal L2	Automatic transmission range switch
18	E	Gear range signal L4	Automatic transmission range switch
19	E	Brake pedal position	Brake light switch
20		Not used	
21		Not used	
22	E	Manual mode signal	Program switch
23	E	Output speed (-)	Transmission valve unit
24	M	Ground for shield	Shield for speed sensor
25		Not used	
26		Not used	
27	E	Kick-down signal	Kick-down switch
28		Not used	
29	E	Automatic mode signal	Program switch
30	E	Oil temperature signal (-)	Transmission valve unit
31	E	Oil temperature signal (+)	Transmission valve unit
32		Not used	
33		Not used	
34		Not used	
35	E	Battery voltage	B+ junction point E-box
36	A	M-program indication	Program switch
37	M	Ground	Ground point
38		Not used	
39	A	Solenoid valve 1 control (-)	Transmission valve unit

E = Input, A = Output, M = Ground



 Z3



## Pin Assignments

 
Pin	Type	Description/Function	Connection
40		Not used	
41	A	Torque converter clutch solenoid valve control (-)	Transmission valve unit
42	A	Solenoid valve 2 control (-)	Transmission valve unit
43	M	Ground	Ground point
44		Not used	
45	E	Gear range signal L1	Automatic transmission range switch
46	E	Gear range signal L3	Automatic transmission range switch
47		Not used	
48		Not used	
49		Not used	
50		Not used	
51	E	Output speed (+)	Transmission valve unit
52		Not used	
53		Not used	
54	A	A-program indication	Program switch
55		Not used	
56		Not used	
57		Not used	
58		Not used	
59		Not used	
60		Not used	
61	A	Shift-lock solenoid control	Shift-lock
62	A	Voltage solenoid valves	Transmission valve unit
63	E	Voltage supply	Fuse 204
64		Not used	
65		Not used	
66		Not used	
67		Not used	
68		Not used	
69		Not used	
70		Not used	

E = Input, A = Output, M = Ground





Z3




## Pin Assignments

Pin	Type	Description/Function	Connection
71		Not used	
72		Not used	
73		Not used	
74		Not used	
75		Not used	
76		Not used	
77		Not used	
78		Not used	
79		Not used	
80		Not used	
81		Not used	
82		Not used	
83		Not used	
84		Not used	
85		Not used	
86		Not used	
87		Not used	
88		Not used	
89		Not used	
90		Not used	
91		Not used	
92		Not used	
93		Not used	
94	E/A	Can-Low	Engine control module
95	E/A	Can-High	Engine control module
96		Not used	
97	E/A	TxD diagnostic data link	Engine control module


E = Input, A = Output, M = Ground



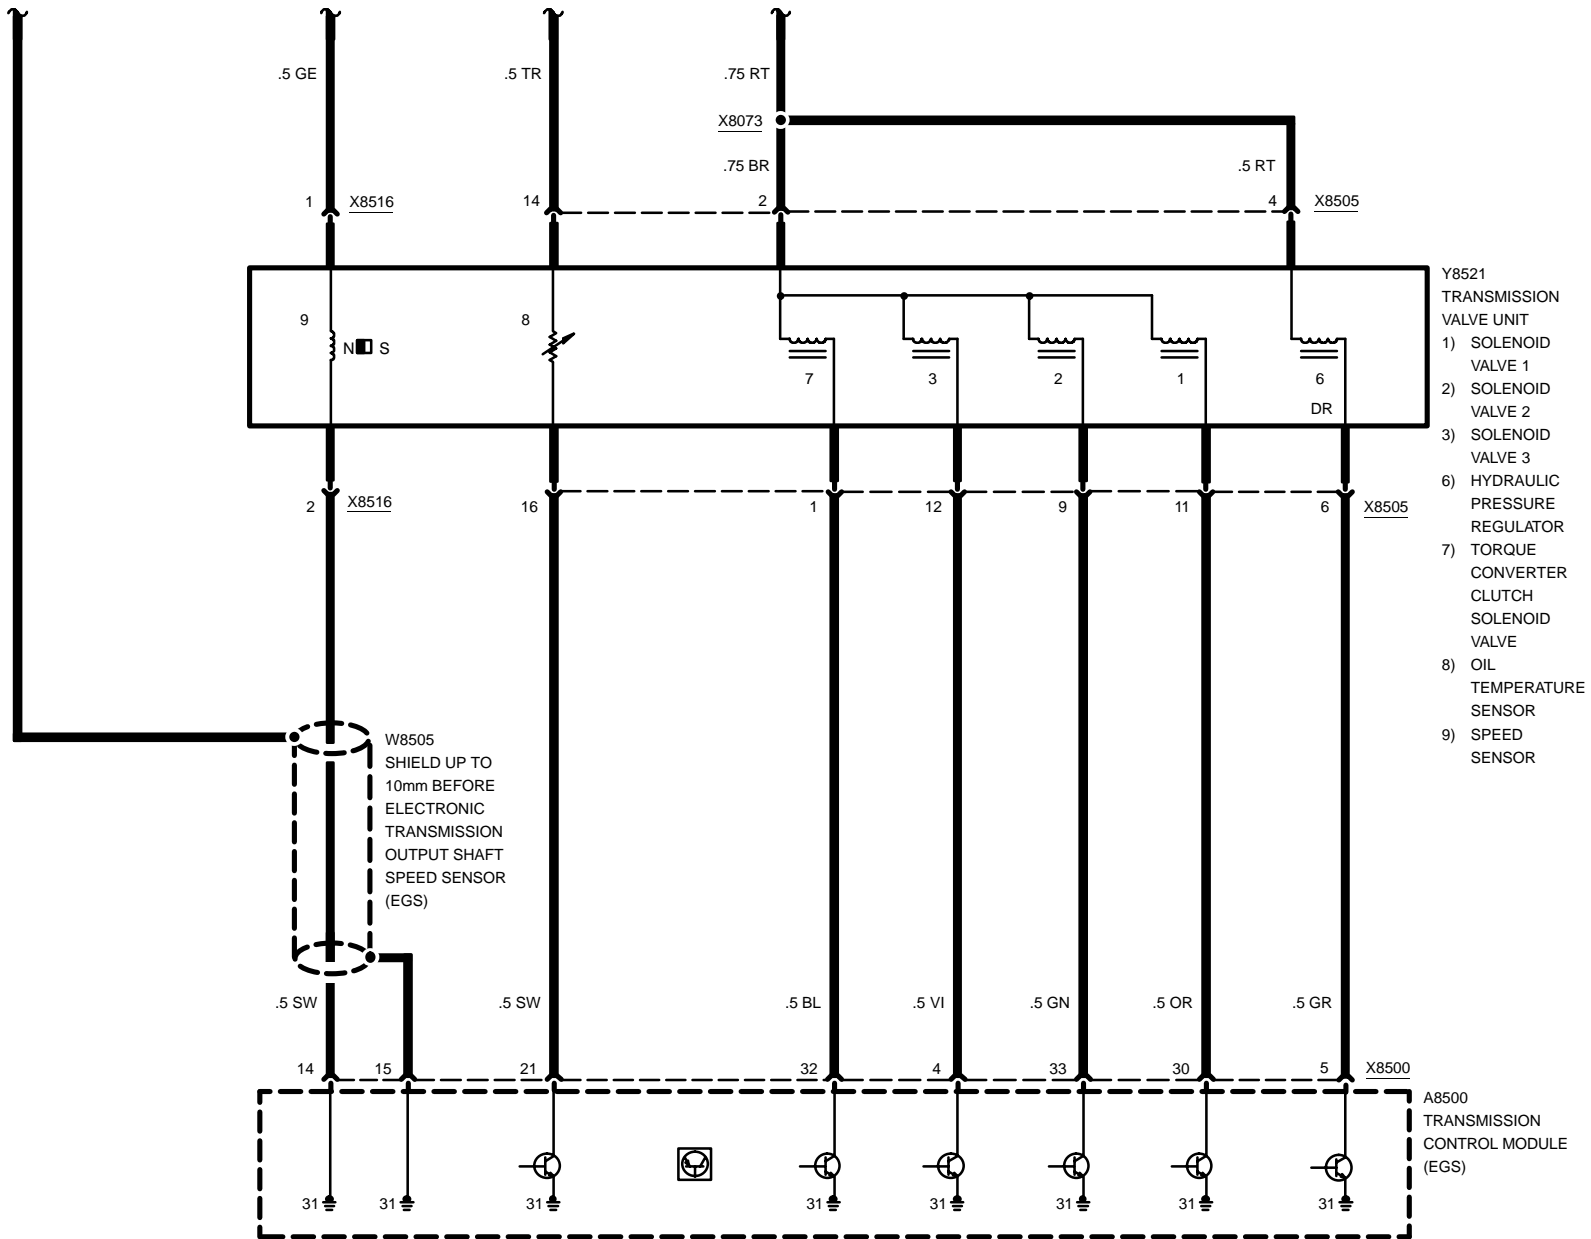



# ELECTRONIC TRANSMISSION CONTROL (EGS A4S 270R)

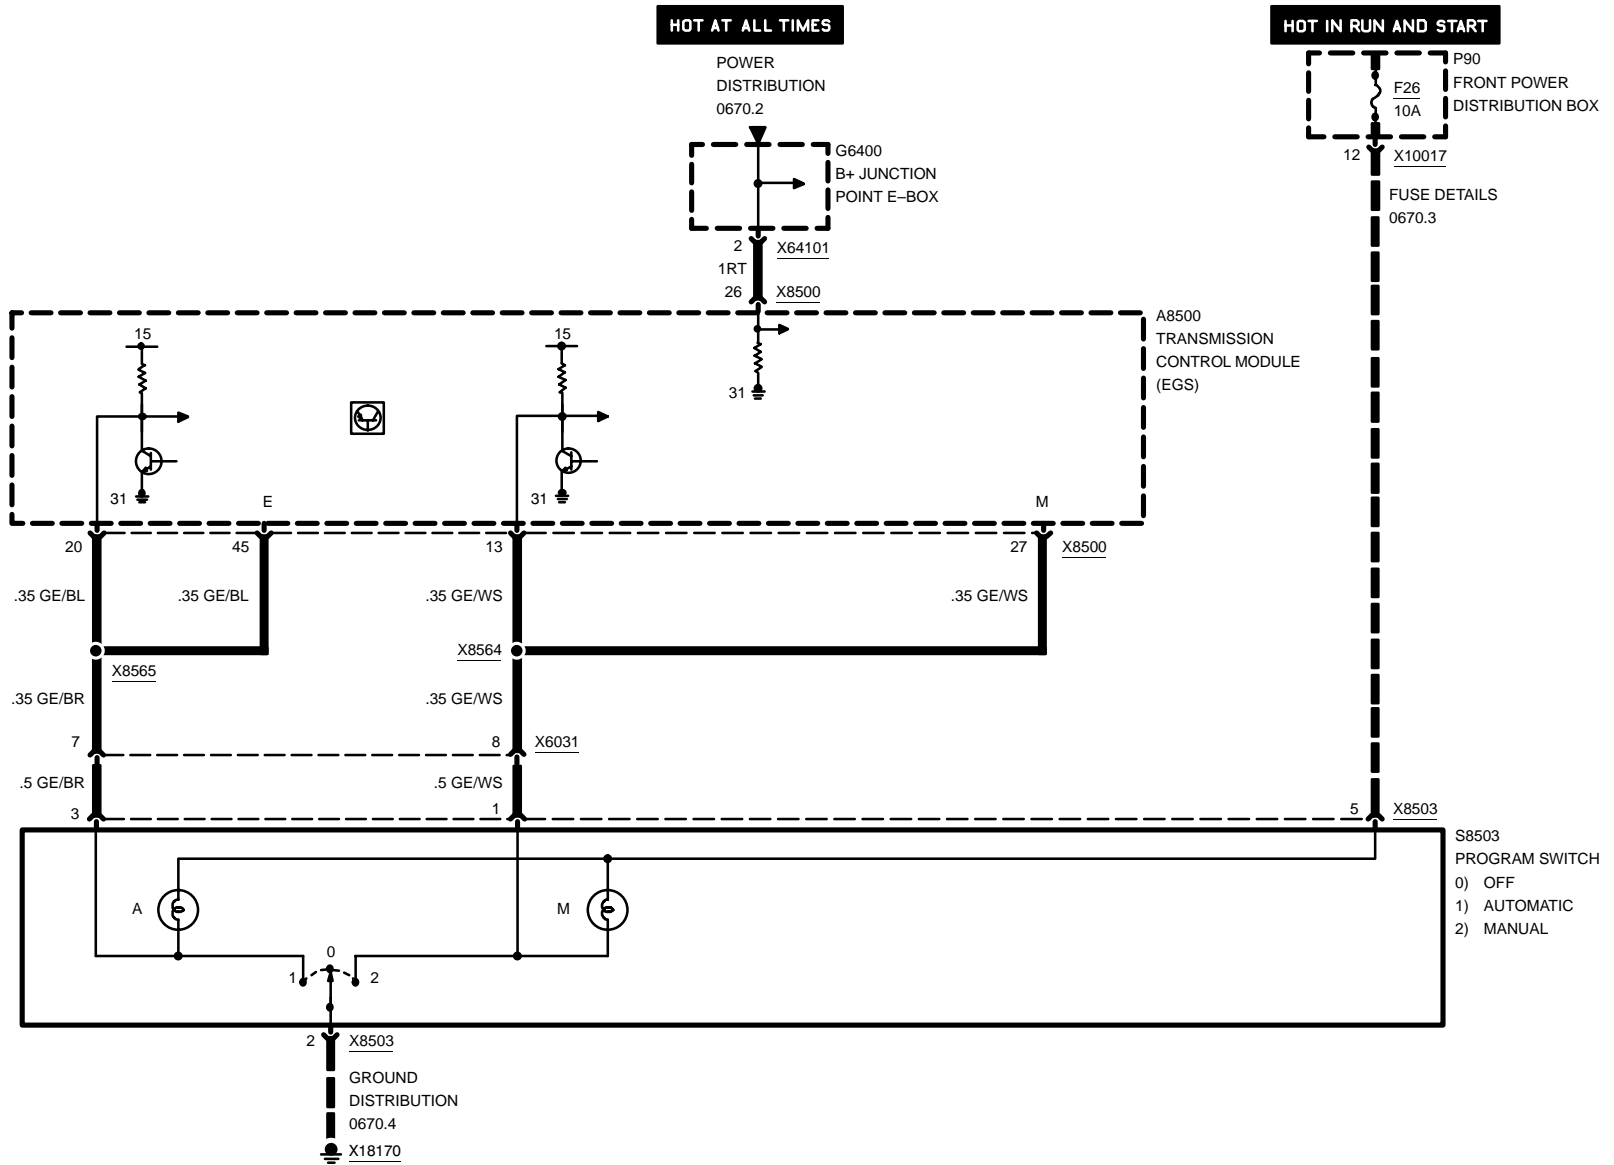




3234.0 SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)

03/00


3234.0

1999

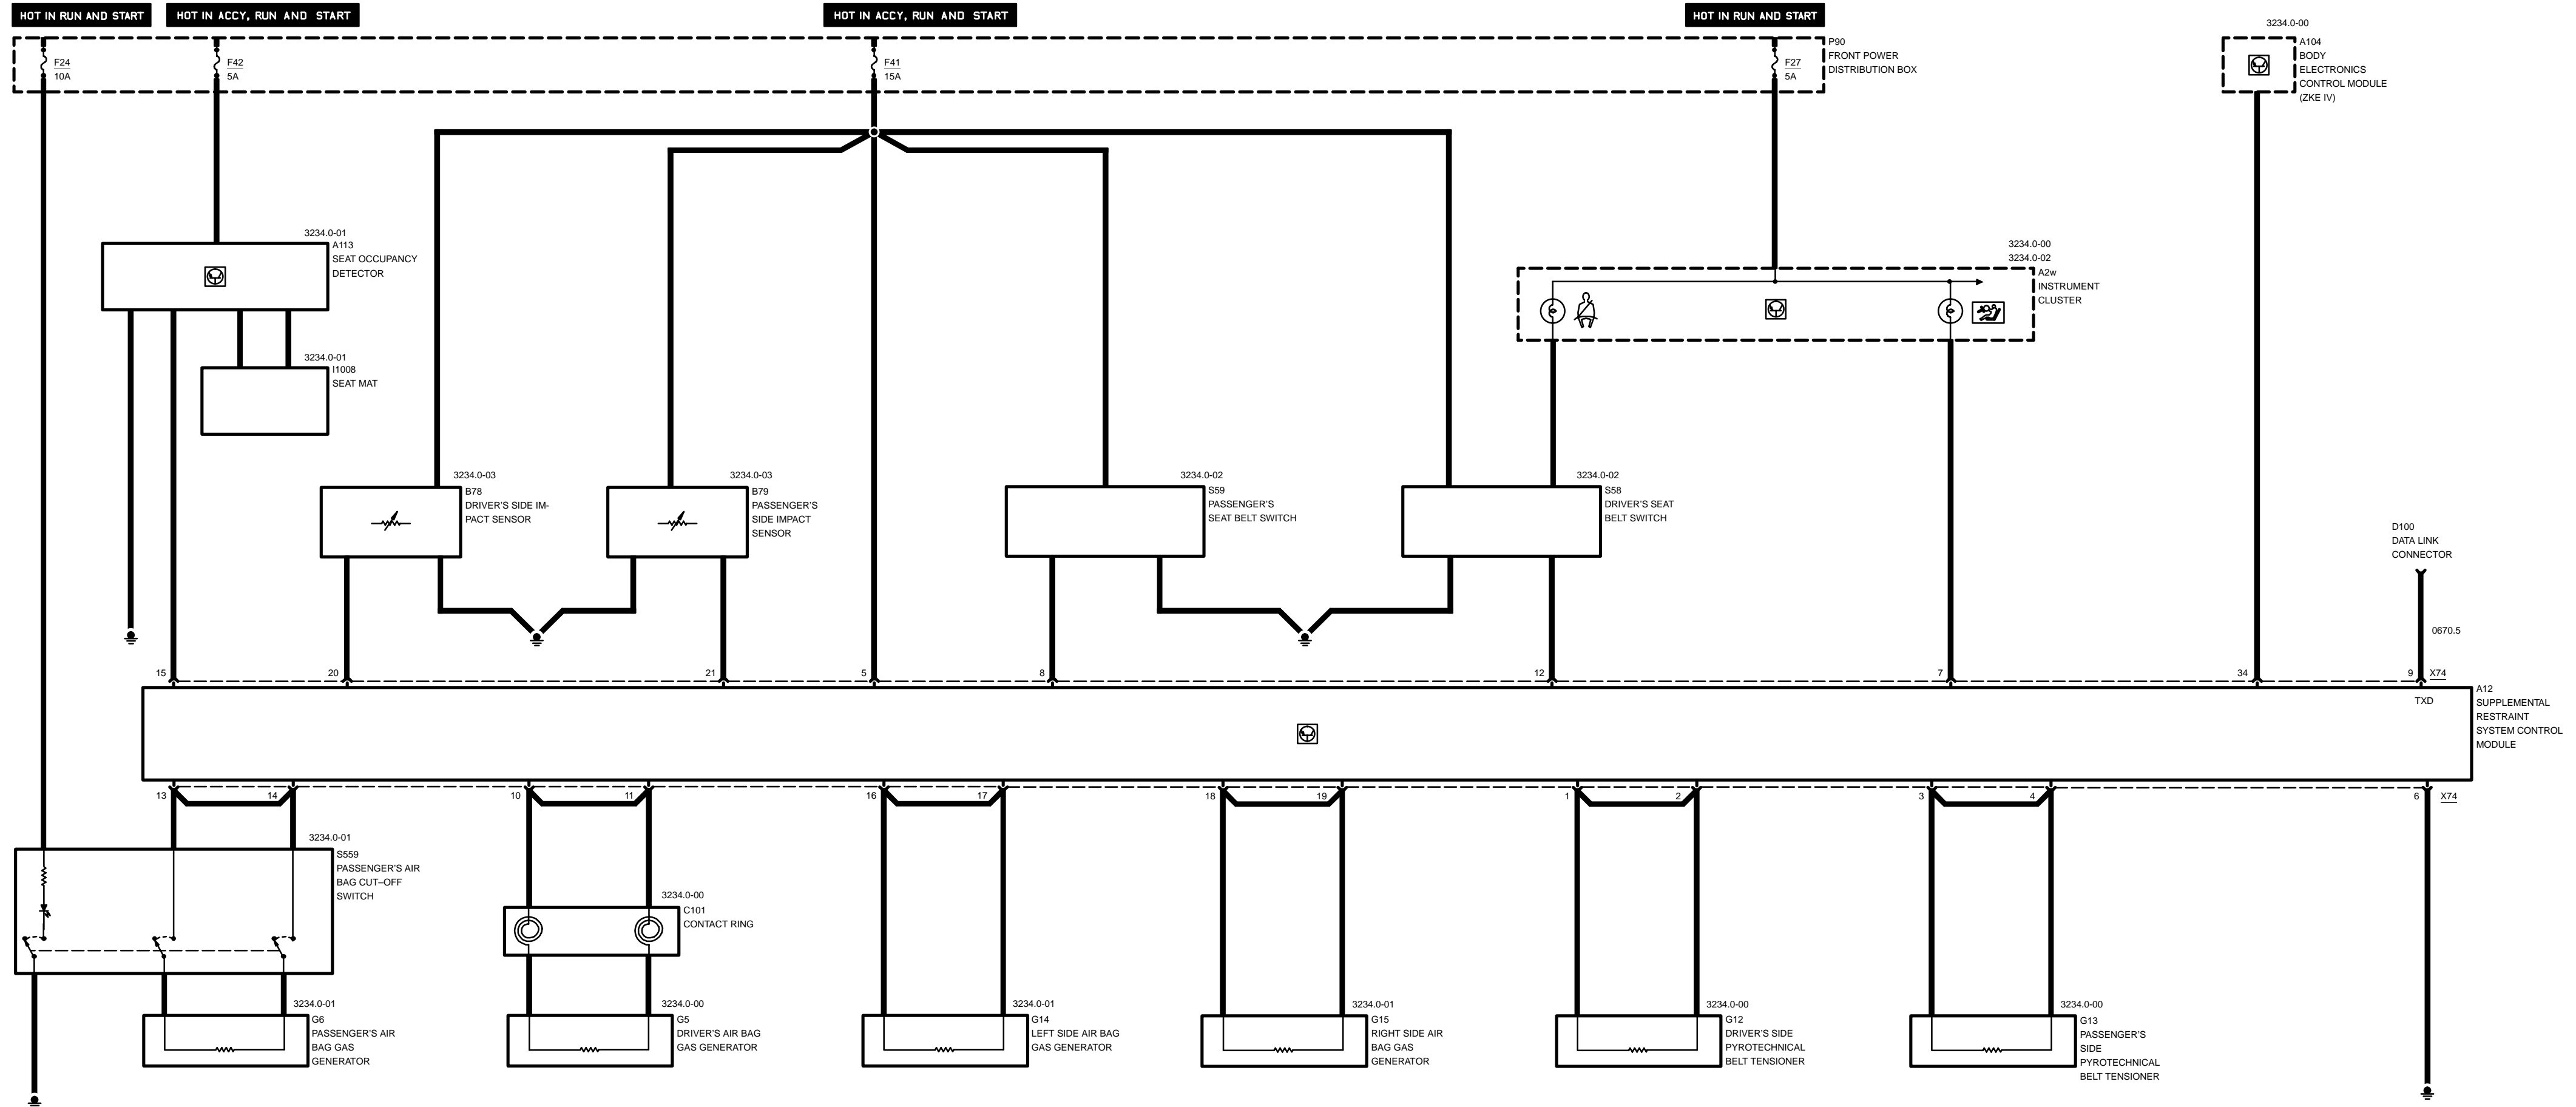



Z3

 **Pin Assignments****X74**


Pin	Type	Description/Function	Connection
1	A	Pyrotechnical belt tensioner (+)	Driver's side pyrotechnical belt tensioner
2	A	Pyrotechnical belt tensioner (-)	Driver's side pyrotechnical belt tensioner
3	A	Pyrotechnical belt tensioner (+)	Passenger's side pyrotechnical belt tensioner
4	A	Pyrotechnical belt tensioner (-)	Passenger's side pyrotechnical belt tensioner
5	E	Power supply	Front power distribution box, fuse 41
6	M	Ground	Ground point
7	A	Air bag warning indicator	Instrument cluster
8	E	Belt switch	Passenger's seat belt switch
9	E/A	TxD diagnostic data line	Data link connector
10	A	Air bag (+)	Driver's air bag gas generator
11	A	Air bag (-)	Driver's air bag gas generator
12	E	Belt switch	Driver's seat belt switch
13	A	Air bag (+)	Passenger's air bag gas generator
14	A	Air bag (-)	Passenger's air bag gas generator
15	E	Seat occupancy detector	Seat occupancy detector
16	A	Gas generator	Gas generator, left side air bag
17	A	Gas generator	Gas generator, left side air bag
18	A	Gas generator	Gas generator, right side air bag
19	A	Gas generator	Gas generator, right side air bag
20	E	Impact sensor	Driver's side impact sensor
21	E	Impact sensor	Passenger's side impact sensor
22		Not used	
23		Not used	
24		Not used	
25		Not used	
26		Not used	
27		Not used	
28		Not used	
29		Not used	

E = Input, A = Output, M = Ground





 Z3




## Pin Assignments

Pin	Type	Description/Function	Connection
30		Not used	
31		Not used	
32		Not used	
33		Not used	
34	A	Crash signal	Body electronics control module (ZKE IV)
35		Not used	
36		Not used	
37		Not used	
38		Not used	
39		Not used	
40		Not used	
41		Not used	
42		Not used	
43		Not used	
44		Not used	
45		Not used	
46		Not used	
47		Not used	
48		Not used	
49		Not used	
50		Not used	



# SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)


Z3

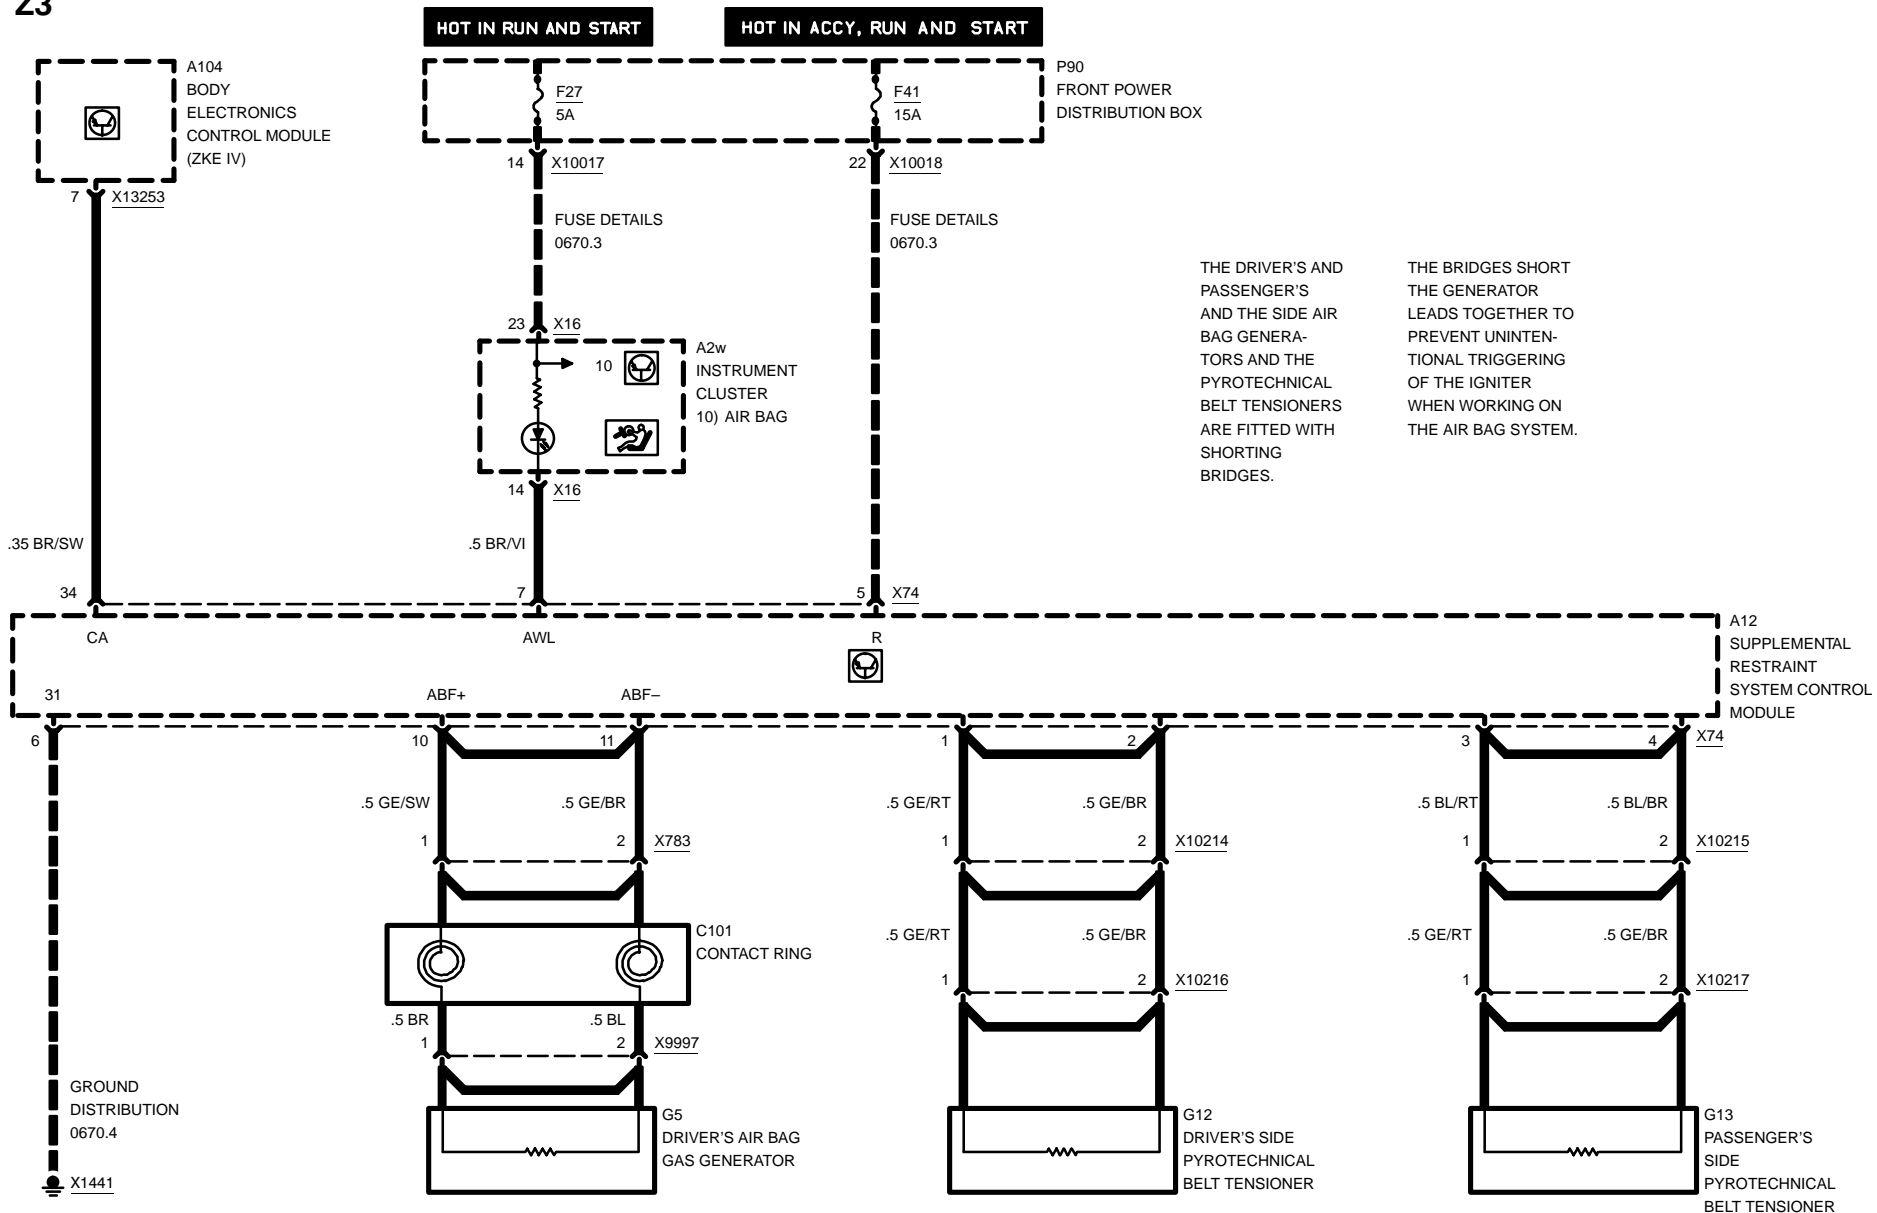

# SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)

**HOT IN RUN AND START**


**HOT IN ACCY, RUN AND START**

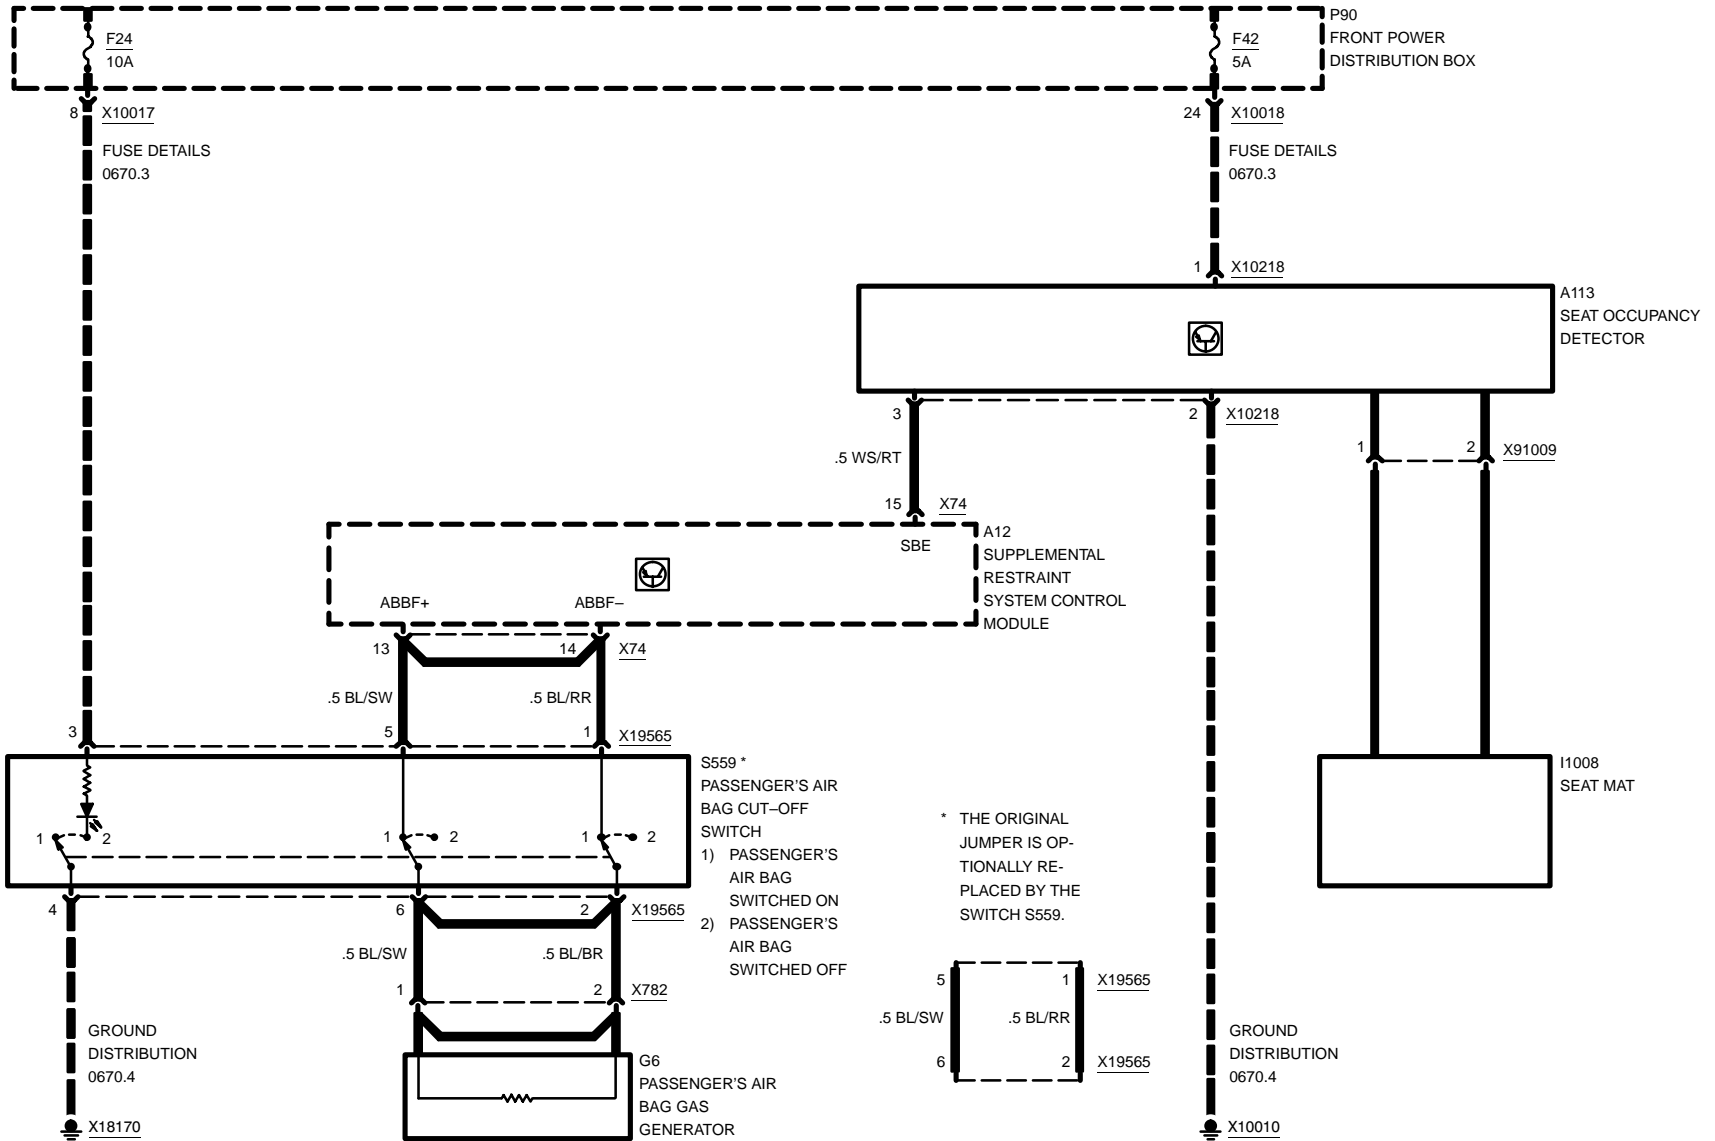

S559 \*  
PASSENGER'S AIR BAG CUT-OFF SWITCH

- 1) PASSENGER'S AIR BAG SWITCHED ON
- 2) PASSENGER'S AIR BAG SWITCHED OFF

\* THE ORIGINAL JUMPER IS OPTIONALLY REPLACED BY THE SWITCH S559.

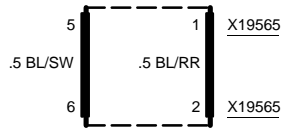






# SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)

## SIDE AIR BAG


HOT IN ACCY, RUN AND START

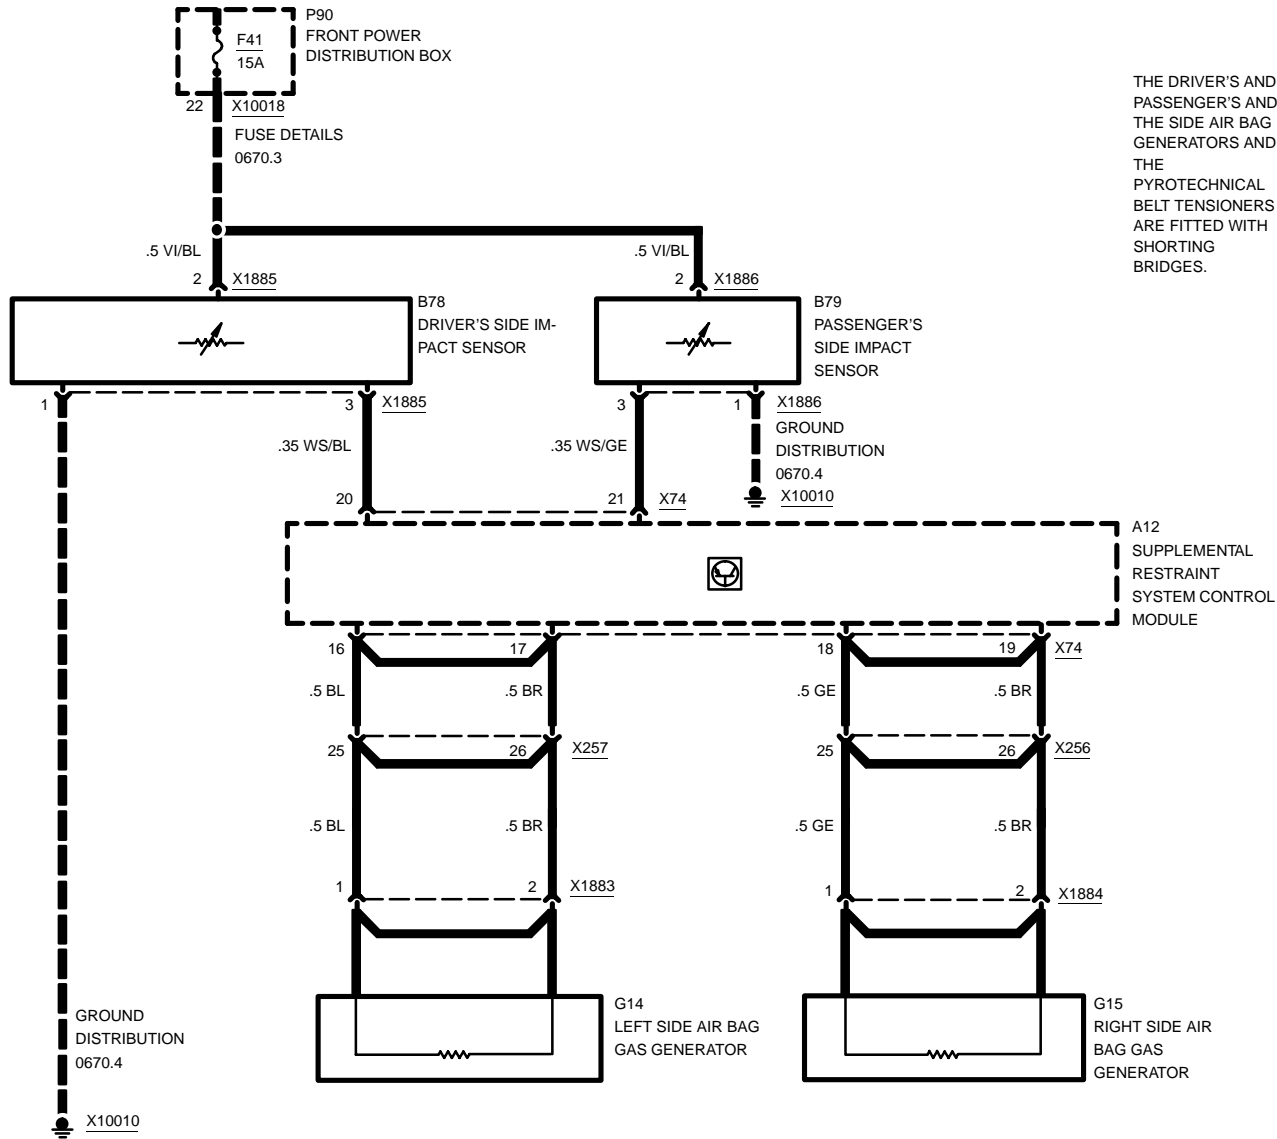


THE DRIVER'S AND PASSENGER'S AND THE SIDE AIR BAG GENERATORS AND THE PYROTECHNICAL BELT TENSIONERS ARE FITTED WITH SHORTING BRIDGES.

THE BRIDGES SHORT THE GENERATOR LEADS TOGETHER TO PREVENT UNINTENTIONAL TRIGGERING OF THE IGNITER WHEN WORKING ON THE AIR BAG SYSTEM.

M VERSIONS

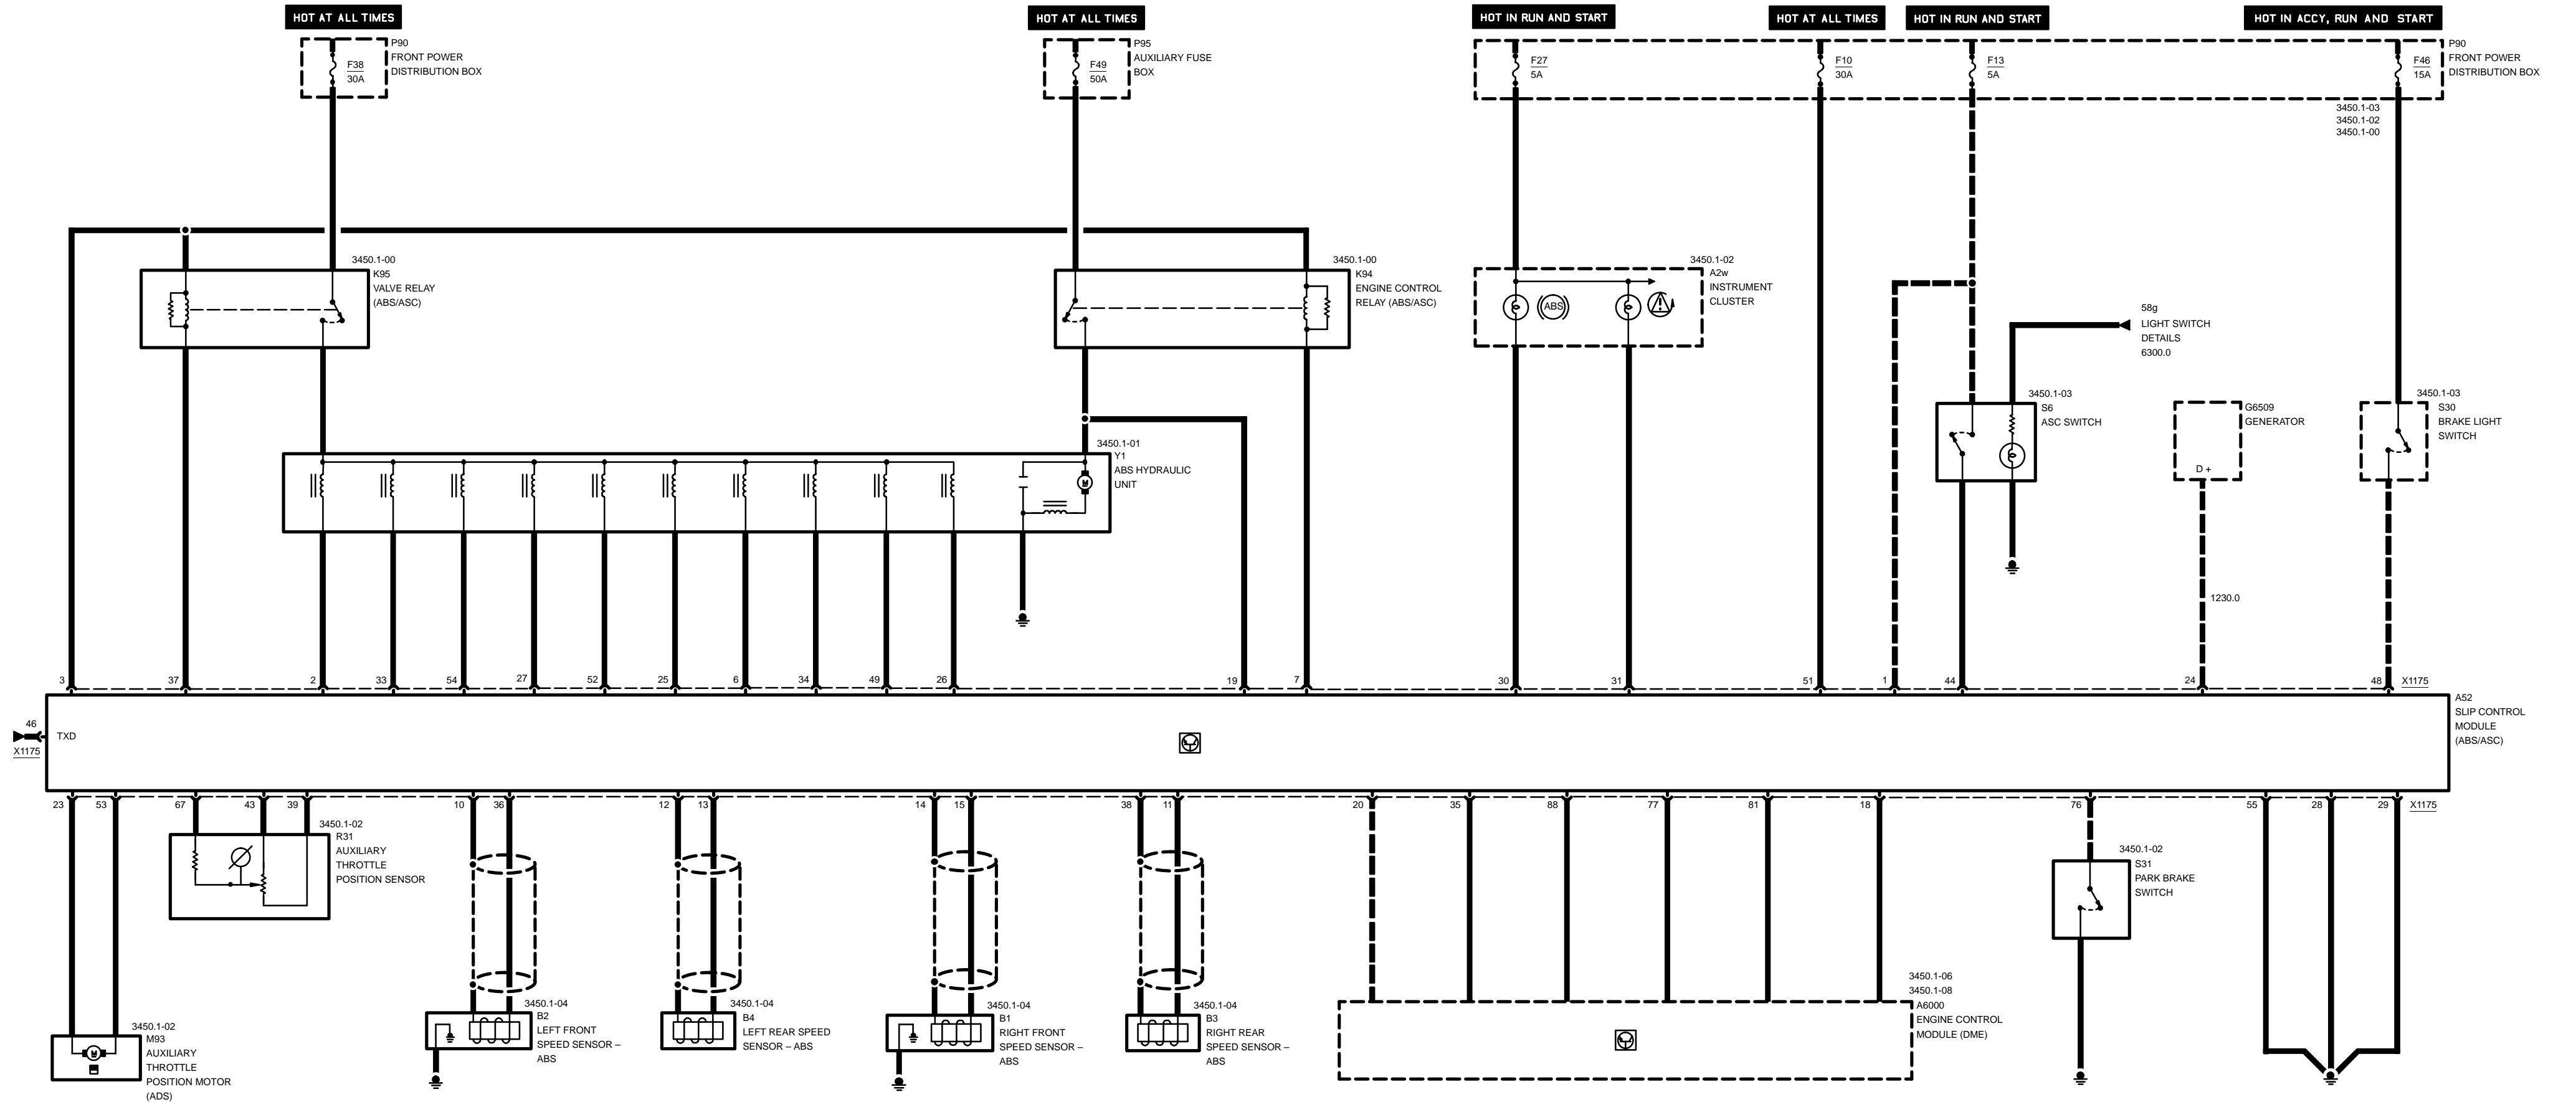


Z3 VERSIONS

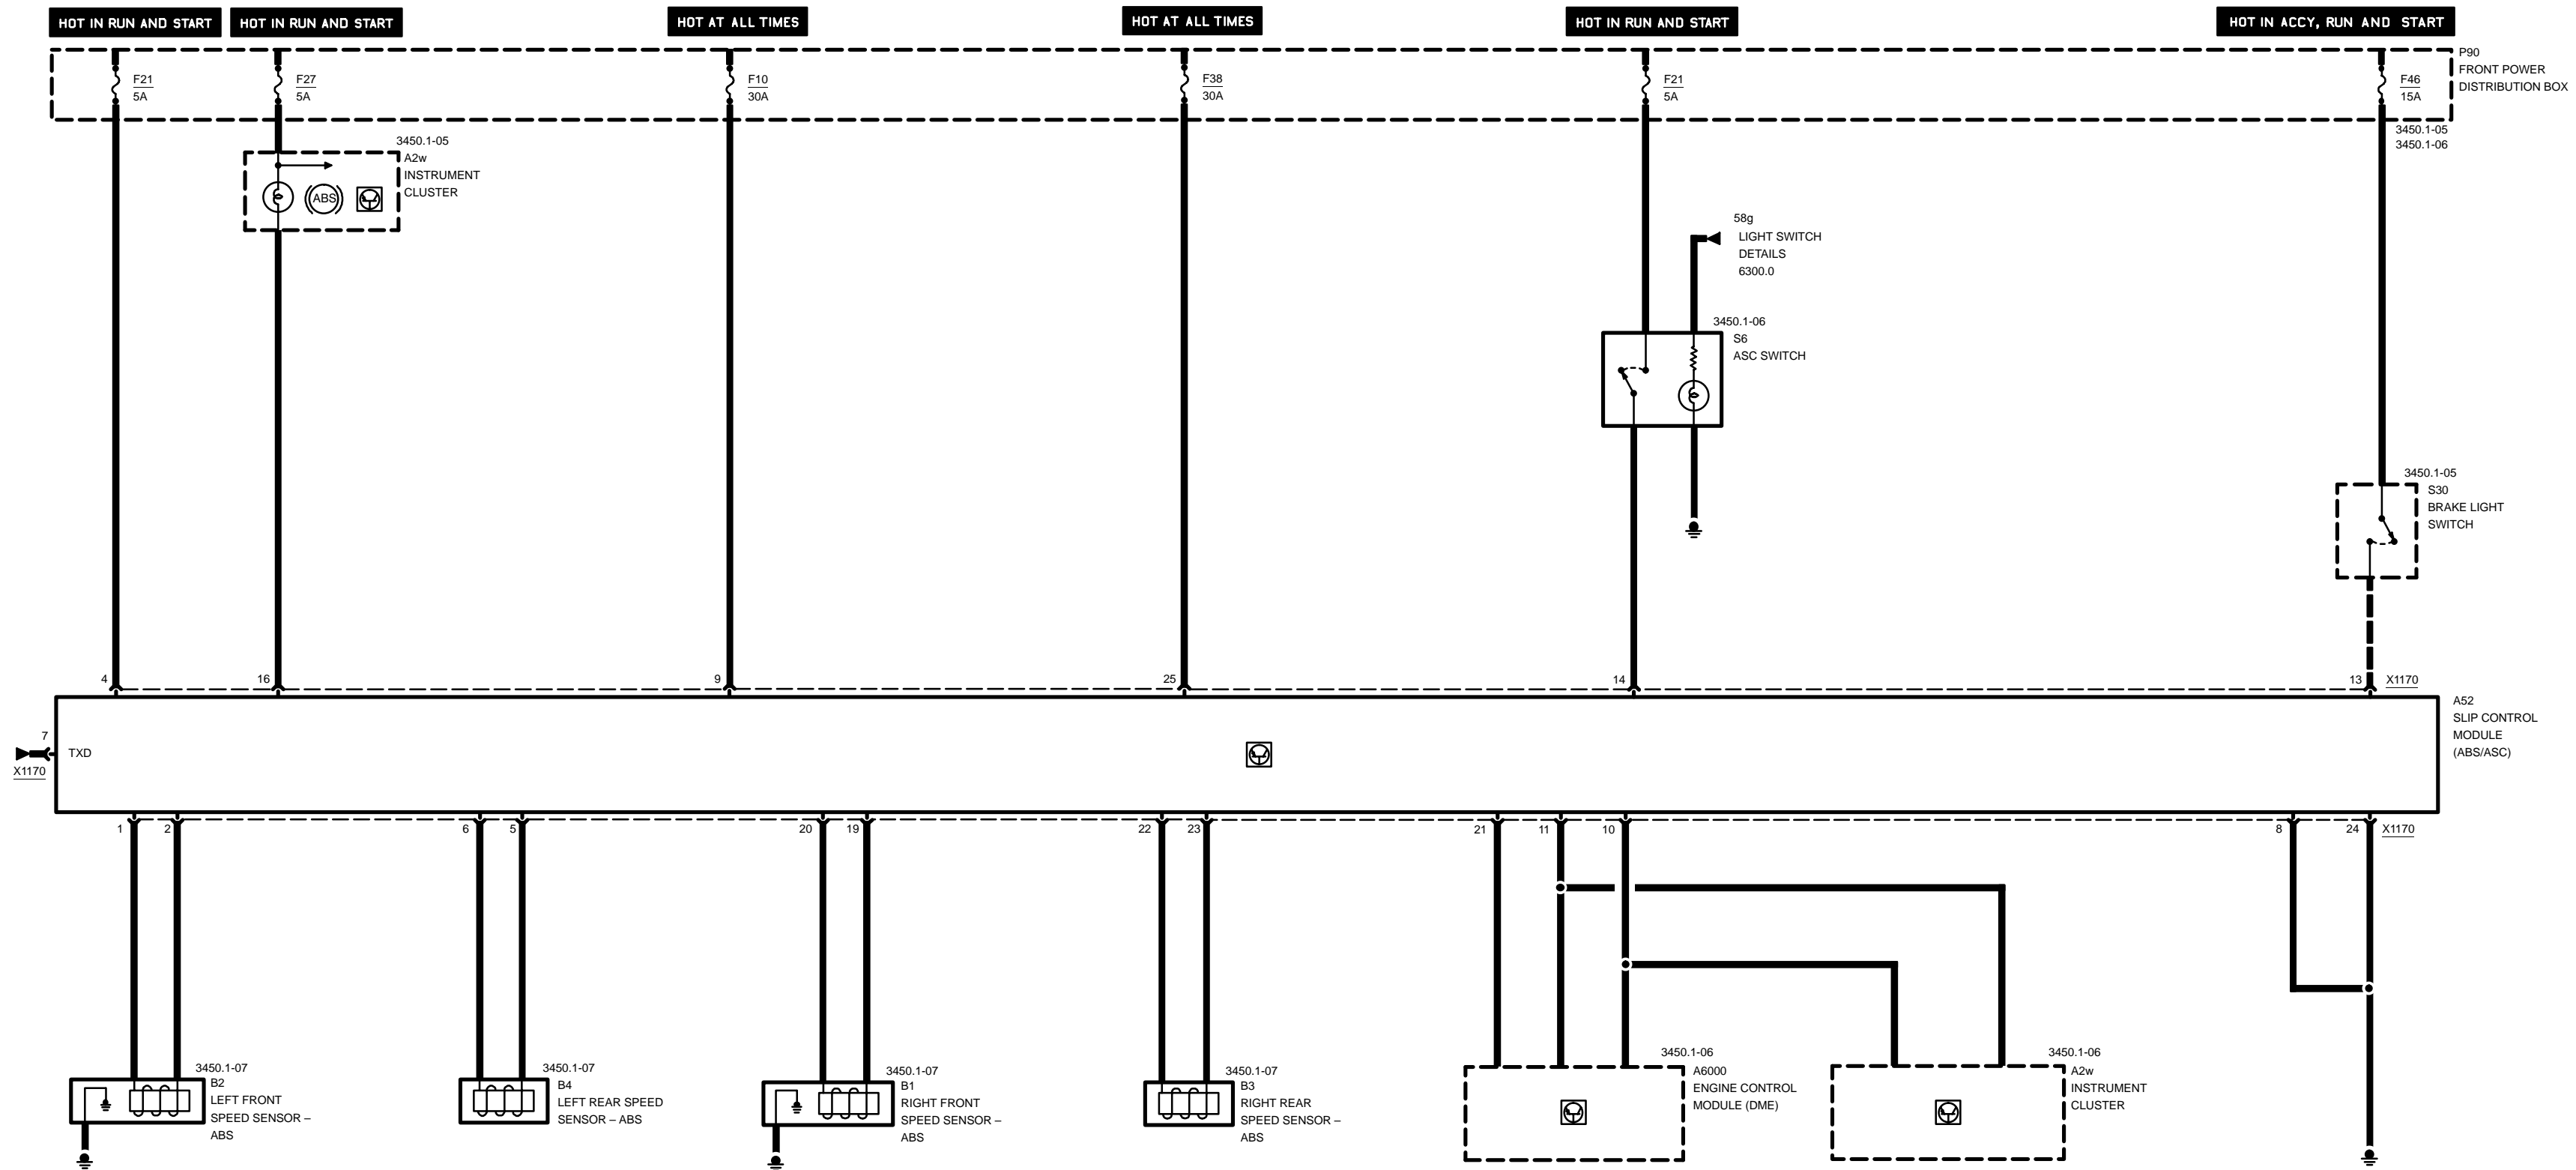



Z3

 **Pin Assignments****X1175**


Pin	Type	Description/Function	Connection
51	E	Voltage supply	Fuse 13
52	A	Left front inlet valve	ABS hydraulic unit
53	A	Voltage supply	Valve – Engine control relay
54		Not used	
55		Not used	
56	A	Right rear inlet valve	ABS hydraulic unit
57	A	Activate relay	Engine control relay
58		Not used	
59		Not used	
60	M	Sensor ground	ABS speed sensor front left
61	E	Speed signal	ABS speed sensor rear right
62	M	Sensor ground	ABS speed sensor rear left
63	E	Speed signal	ABS speed sensor rear left
64	M	Sensor ground	ABS speed sensor front right
65	E	Speed signal	ABS speed sensor front right
66		Not used	
67		Not used	
68	E	Engine signal 1	Engine control module (DME)
69	E	Relay activation feedback	Engine control relay
70	E	Speed signal	Engine control module (DME)
71		Not used	
72		Not used	
73	A	ADS step motor (+)	ADS step motor
74	E	Charge indicator	Generator
75	A	Left rear outlet valve	ABS hydraulic unit
76	A	Shut-off valve (ASC)	ABS hydraulic unit
77	A	Right front outlet valve	ABS hydraulic unit
78	M	Ground	Ground point
79	M	Ground	Ground point
80	A	ABS lamp control	Instrument cluster

E = Input, A = Output, M = Ground





 Z3




## Pin Assignments

Pin	Type	Description/Function	Connection
81	A	ASC lamp control	Instrument cluster
82		Not used	
83	A	Left front outlet valve	ABS hydraulic unit
84	A	Right rear outlet valve	ABS hydraulic unit
85	A	Right rear speed signal	Engine control module (DME)
86	E	Speed signal	ABS speed sensor front left
87	A	Activate relay	Valve relay
88	M	Sensor ground	ABS speed sensor rear right
89	A	Throttle position sensor (-)	Auxiliary throttle position sensor
90		Not used	
91		Not used	
92		Not used	
93	A	Throttle position sensor (+)	Auxiliary throttle position sensor
94	E	ASC-ON-signal	ASC switch
95		Not used	
96	E/A	TXD signal	Diagnostic link
97		Not used	
98	E	Brake signal	Brake light switch
99	A	Changeover valve (ASC)	ABS hydraulic unit
100		Not used	
101	E	Voltage supply	Fuse 10
102	A	Left rear inlet valve	ABS hydraulic unit
103	A	ADS step motor (-)	ADS step motor
104	A	Right front inlet valve	ABS hydraulic unit
105	M	Ground	Ground point
106		Not used	
107		Not used	
108		Not used	
109		Not used	
110		Not used	
111		Not used	
112		Not used	

E = Input, A = Output, M = Ground



 Z3




## Pin Assignments

Pin	Type	Description/Function	Connection
113		Not used	
114		Not used	
115		Not used	
116		Not used	
117	E	ASC throttle flap signal	Auxiliary throttle position sensor
118		Not used	
119		Not used	
120		Not used	
121		Not used	
122		Not used	
123		Not used	
124		Not used	
125		Not used	
126	E	Signal park brake set	Park brake switch
127	E	Engine signal 3	Engine control module (DME)
128		Not used	
129		Not used	
130		Not used	
131	E	Engine signal 2	Engine control module (DME)
132		Not used	
133		Not used	
134		Not used	
135		Not used	
136		Not used	
137		Not used	
138	E	Throttle flap position	Engine control module (DME)

E = Input, A = Output, M = Ground



 Z3

**Pin Assignments****X1170**

Pin	Type	Signal	Description/Function	Connection
1	M	VL-	Sensor ground	Left front speed sensor (ABS)
2	E	VL+	Speed signal	Left front speed sensor (ABS)
3			Not used	
4	E	15A21	Voltage supply	Fuse 21
5	M	HL-	Sensor ground	Left rear speed sensor (ABS)
6	E	HL+	Speed signal	Left rear speed sensor (ABS)
7	E/A	TXD	TXD signal	Diagnostic link
8	M	31L	Ground	Ground point
9	E	30<10	Voltage supply	Fuse 10
10	E/A	CAN-	CAN bus low	Instrument cluster/engine control module
11	E/A	CAN+	CAN bus high	Instrument cluster/engine control module
12			Not used	
13	E	54	Brake signal	Brake light switch
14	E	ASCS	ASC-ON-signal	ASC switch
15			Not used	
16	A	WLAS	Warning lamp	Instrument cluster
17			Not used	
18			Not used	
19	M	VR-	Sensor ground	Right front speed sensor (ABS)
20	E	VR+	Speed signal	Right front speed sensor (ABS)
21	A	DFAHR	Right rear speed signal	Engine control module (DME)
22	E	HR+	Speed signal	Right rear speed sensor (ABS)
23	M	HR-	Sensor ground	Right rear speed sensor (ABS)
24	M	31L	Ground	Ground point
25	E	30<38	Voltage supply	Fuse 38


E = Input, A = Output, M = Ground



# SLIP CONTROL (ABS/ASC)

## M VERSIONS


Z3

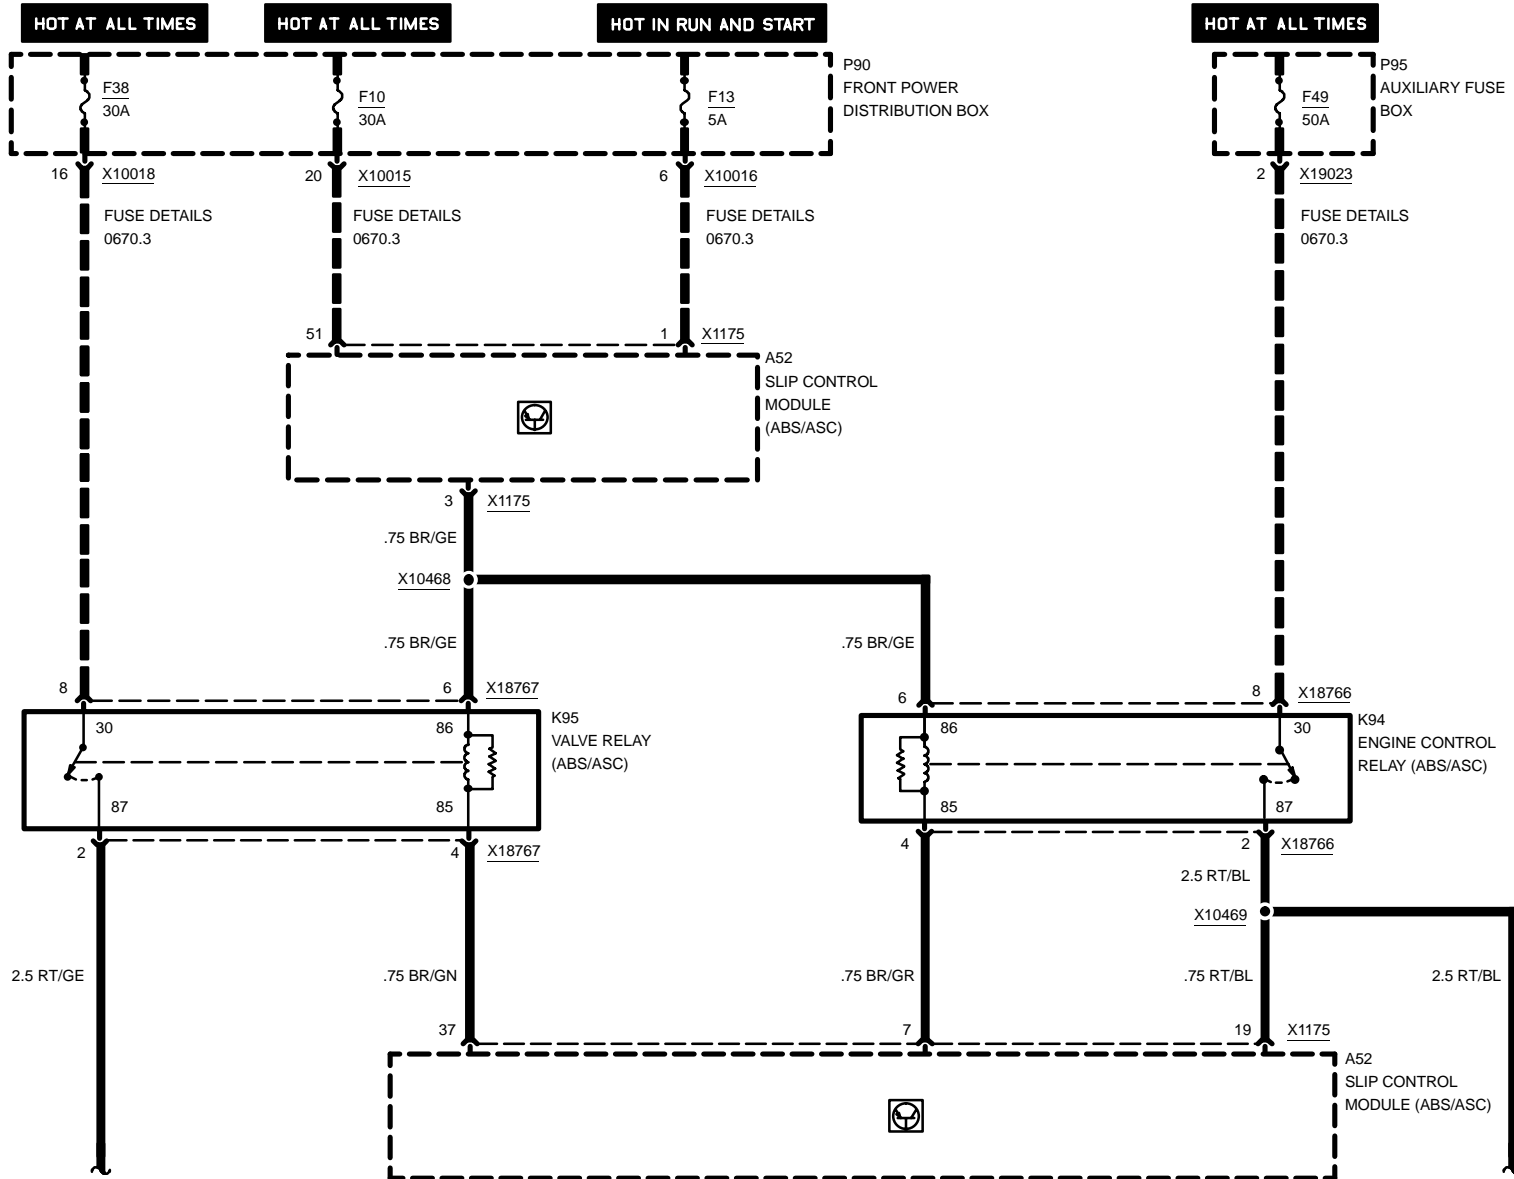

03/00

3450.1-00

1999

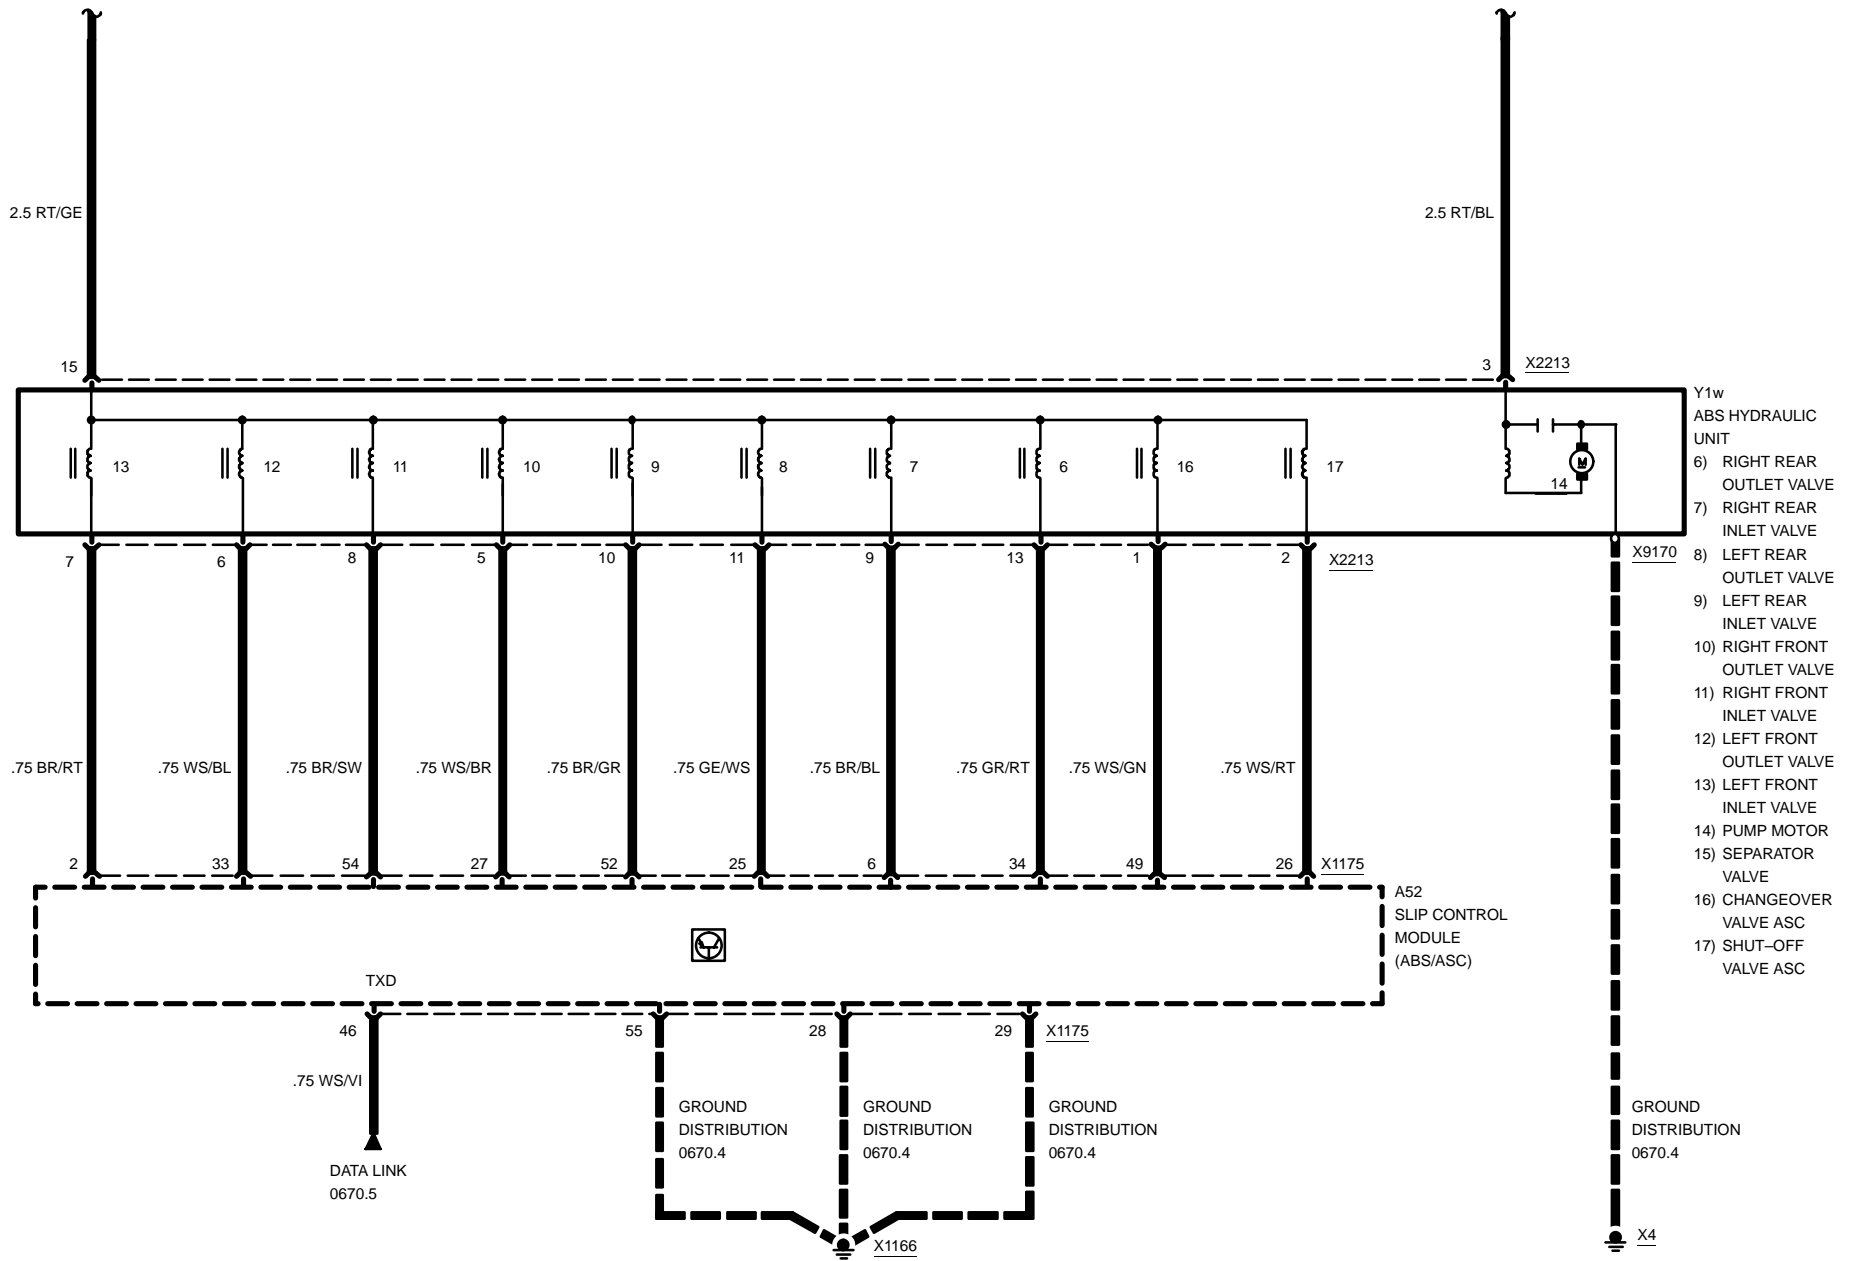






# SLIP CONTROL (ABS/ASC)

## M VERSIONS


### Z3

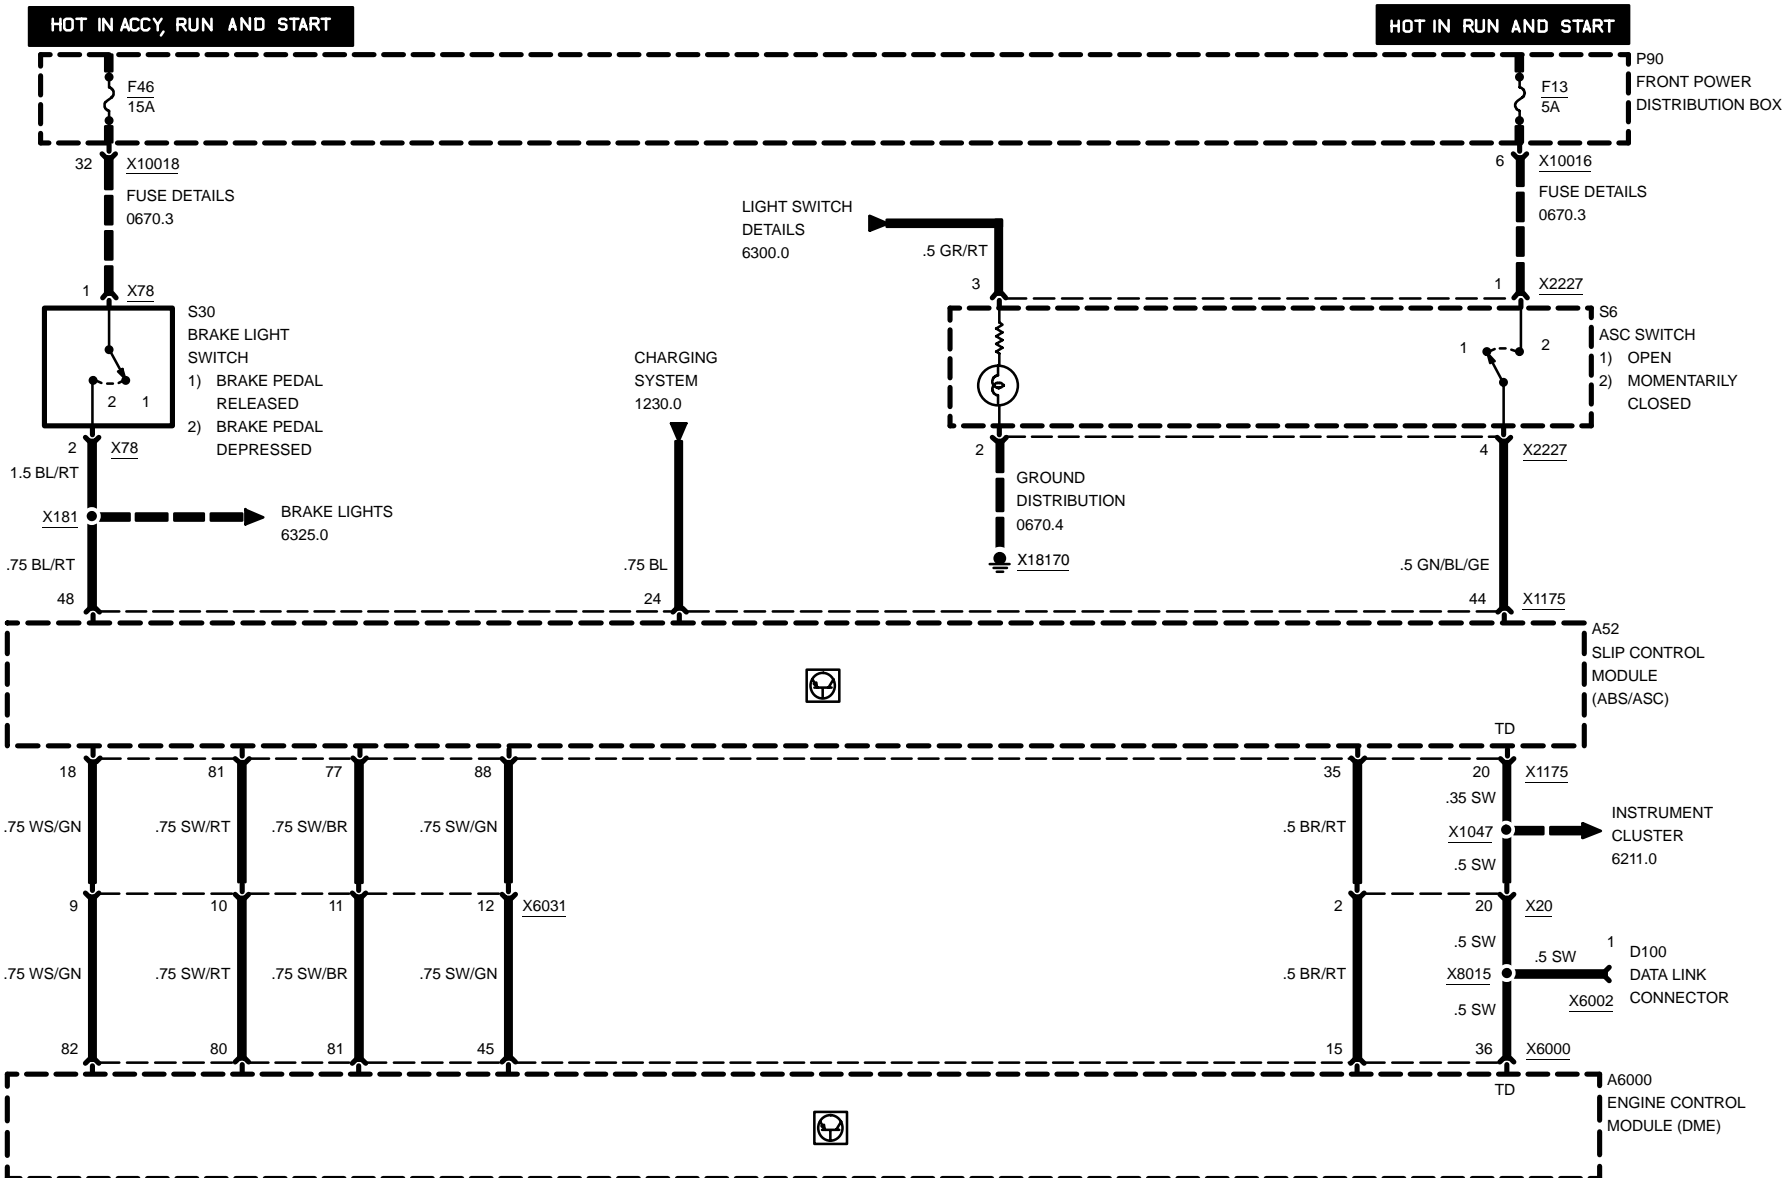

03/00

3450.1-03

1999

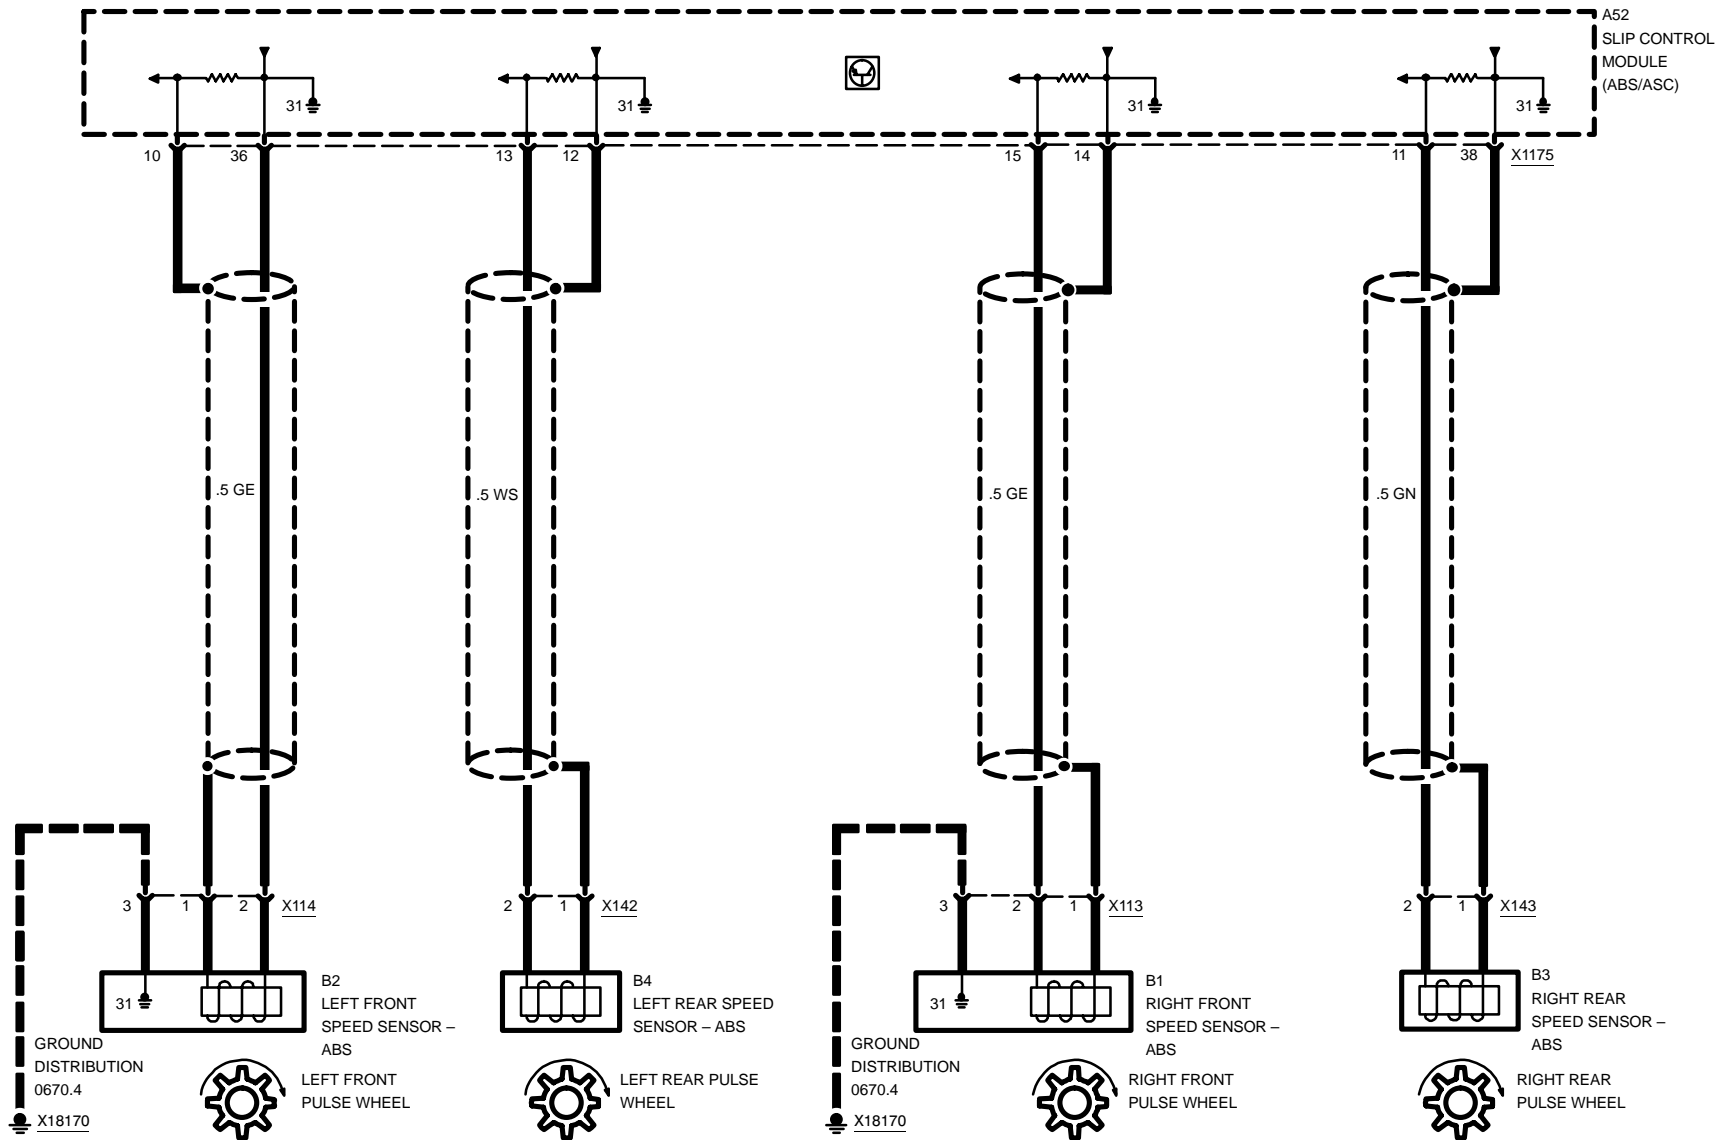






Z3

# SLIP CONTROL (ABS/ASC)

## Z3 VERSIONS

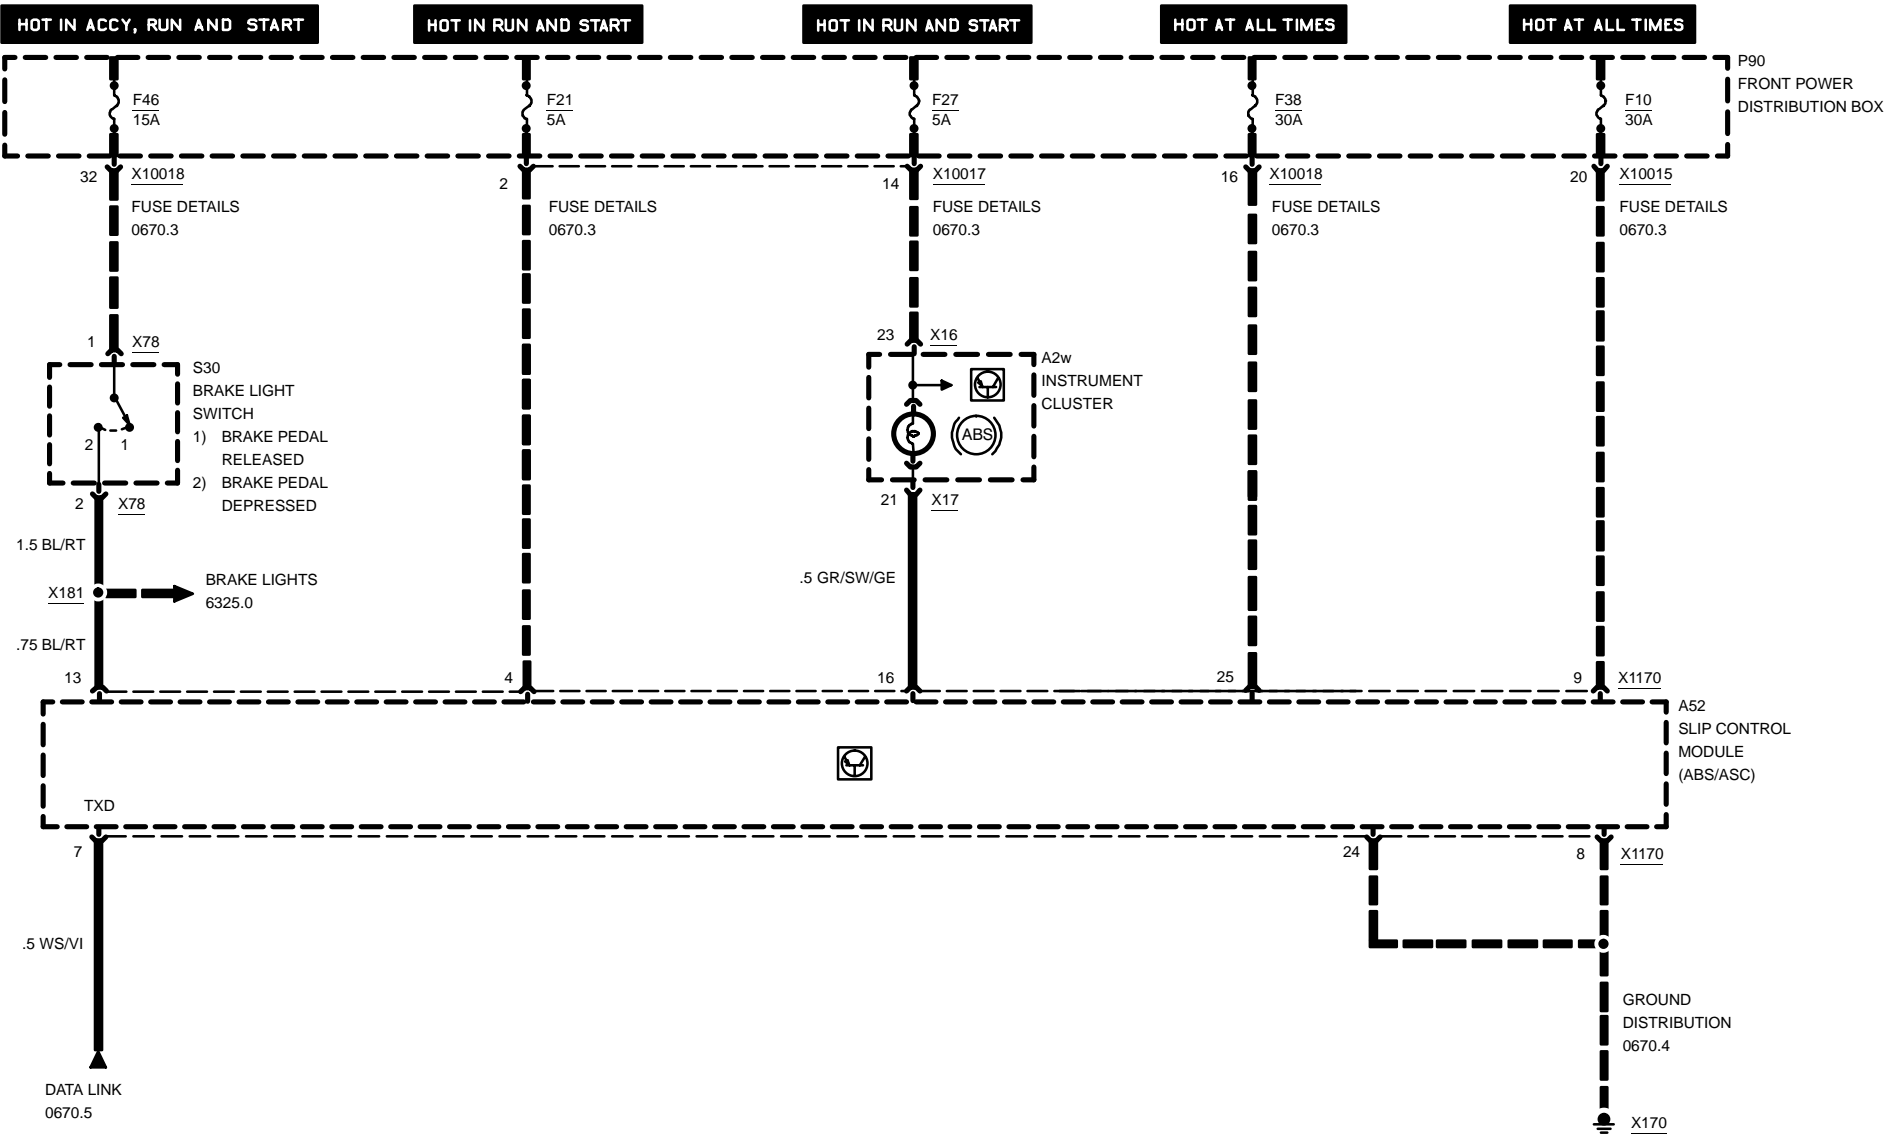




# SLIP CONTROL (ABS/ASC)

# Z3 VERSIONS


Z3

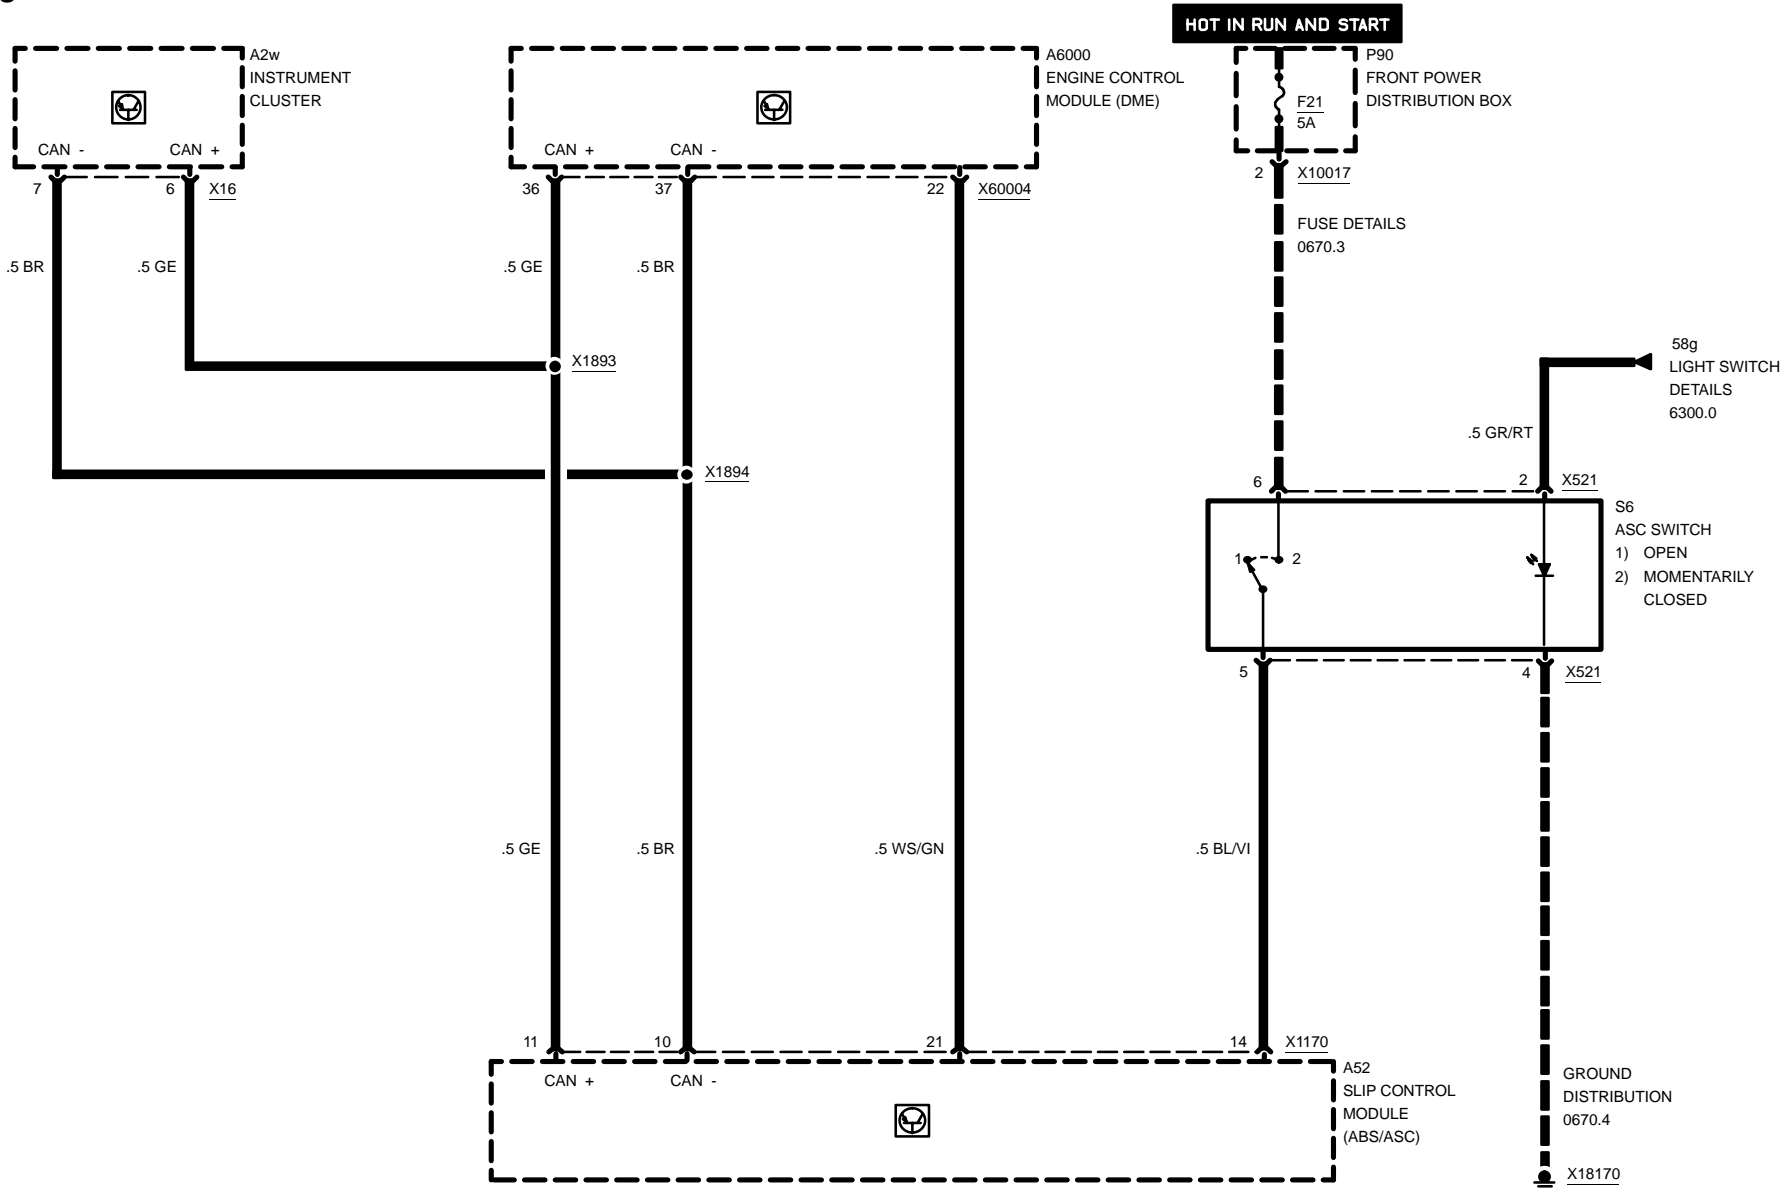



# SLIP CONTROL (ABS/ASC)

Z3 VERSIONS

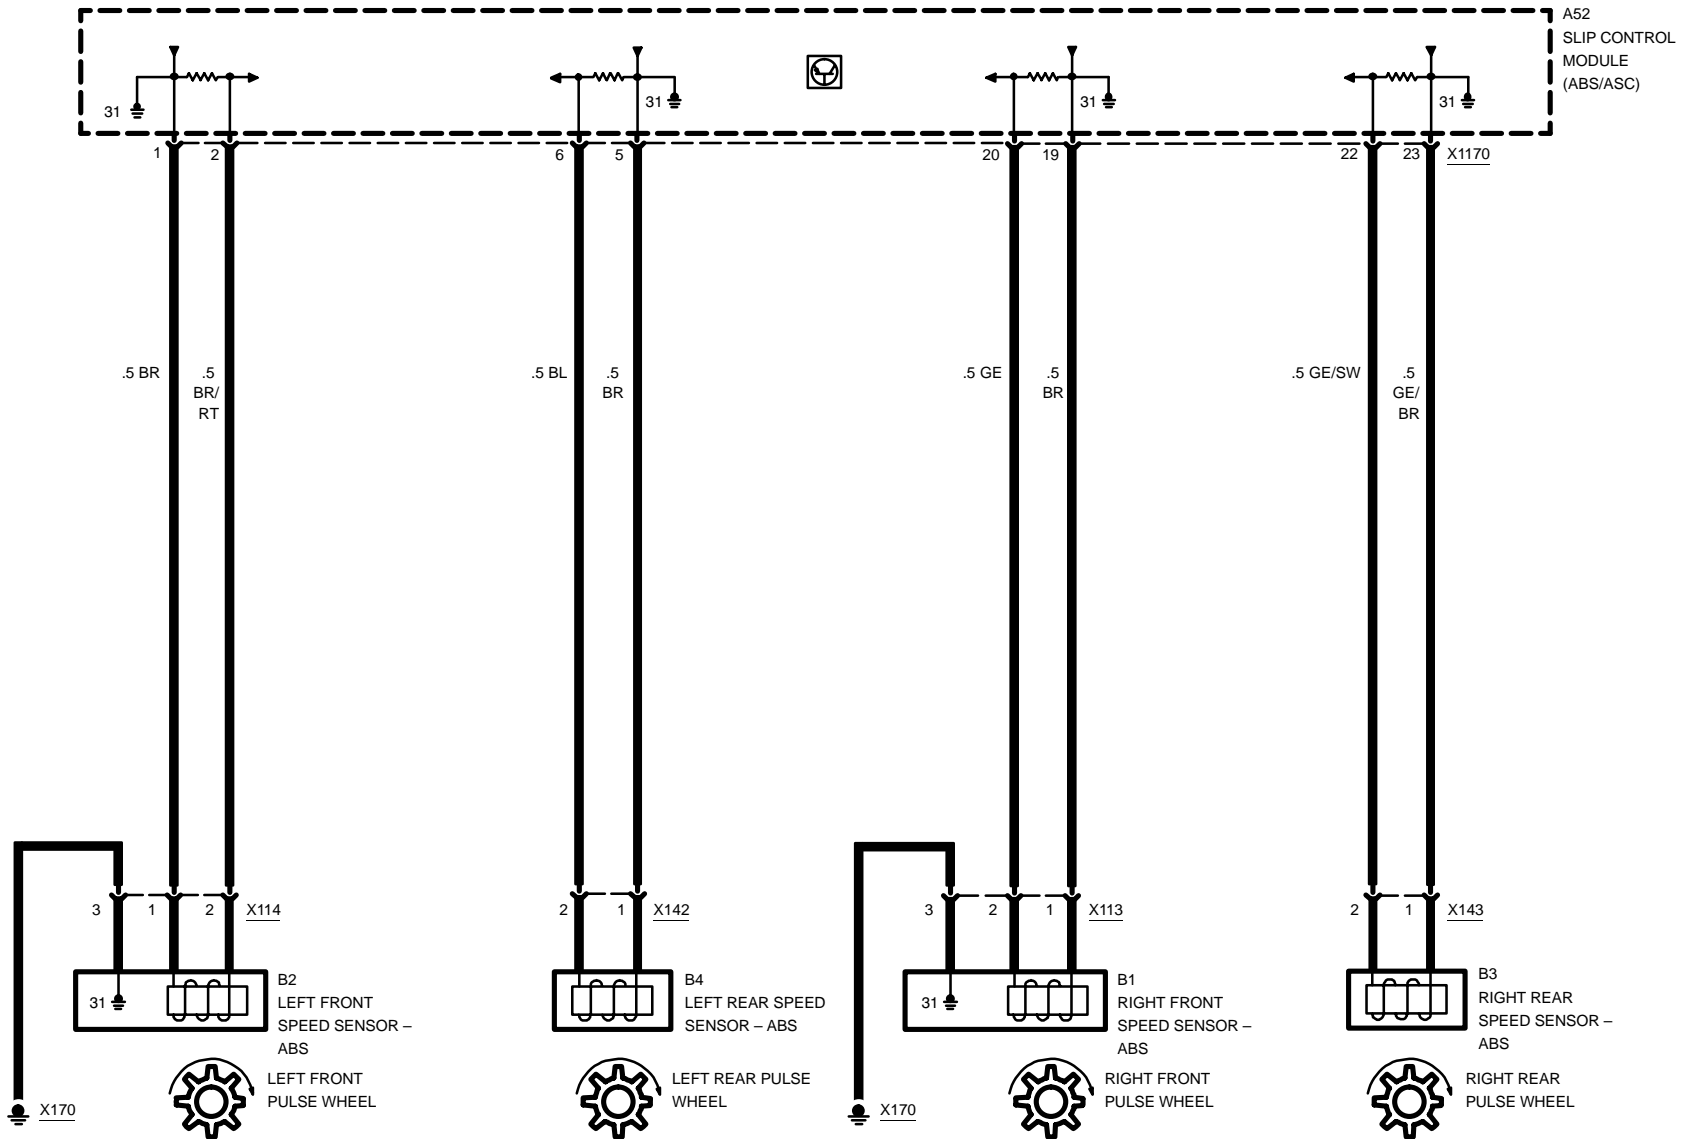




Z3

# 3614.0 TIRE INFLATION SYSTEM

M VERSIONS

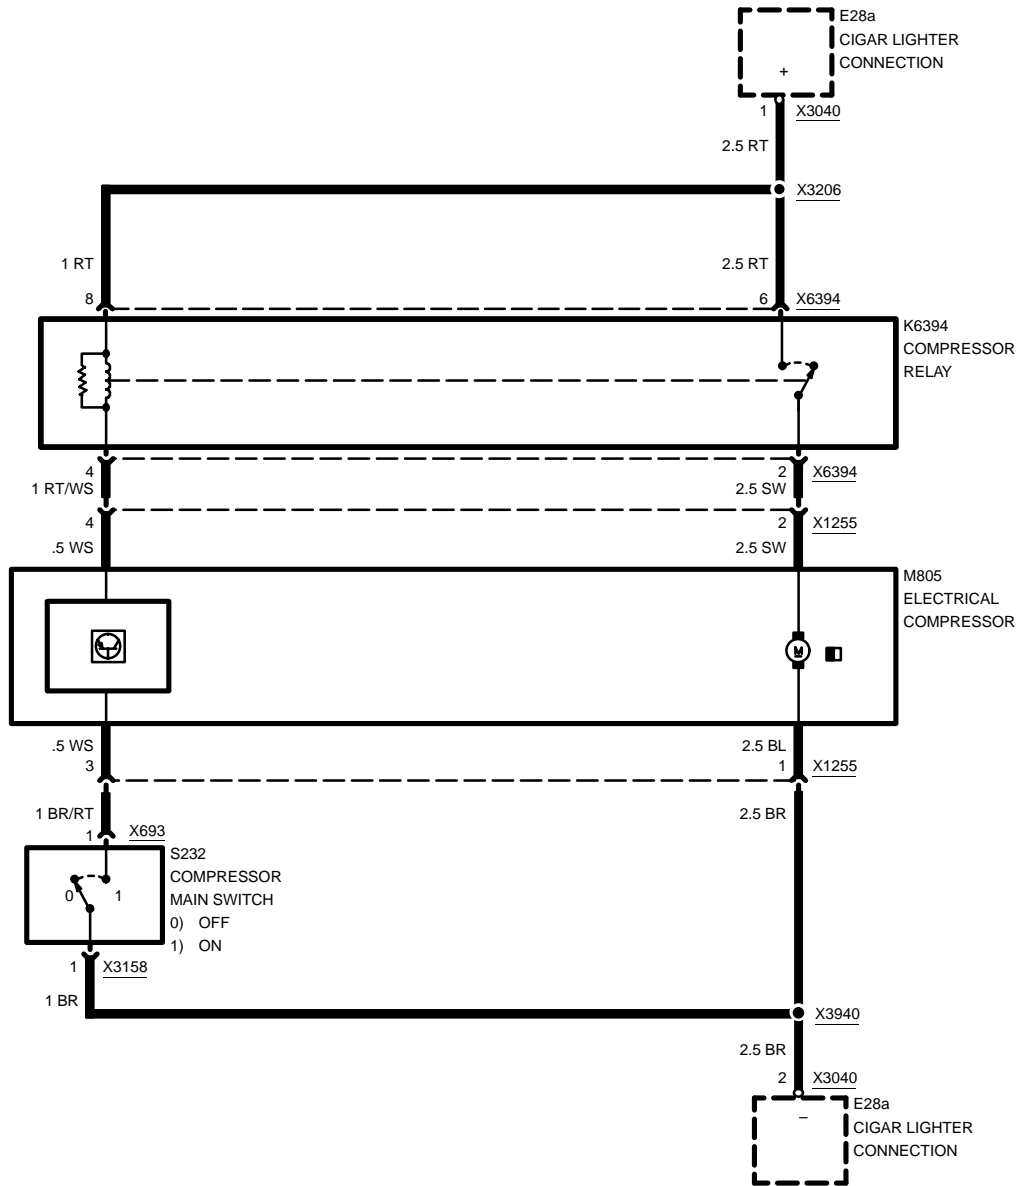





# 5116.0 POWER MIRRORS

## OUTSIDE MIRROR

**HOT IN RUN AND START**

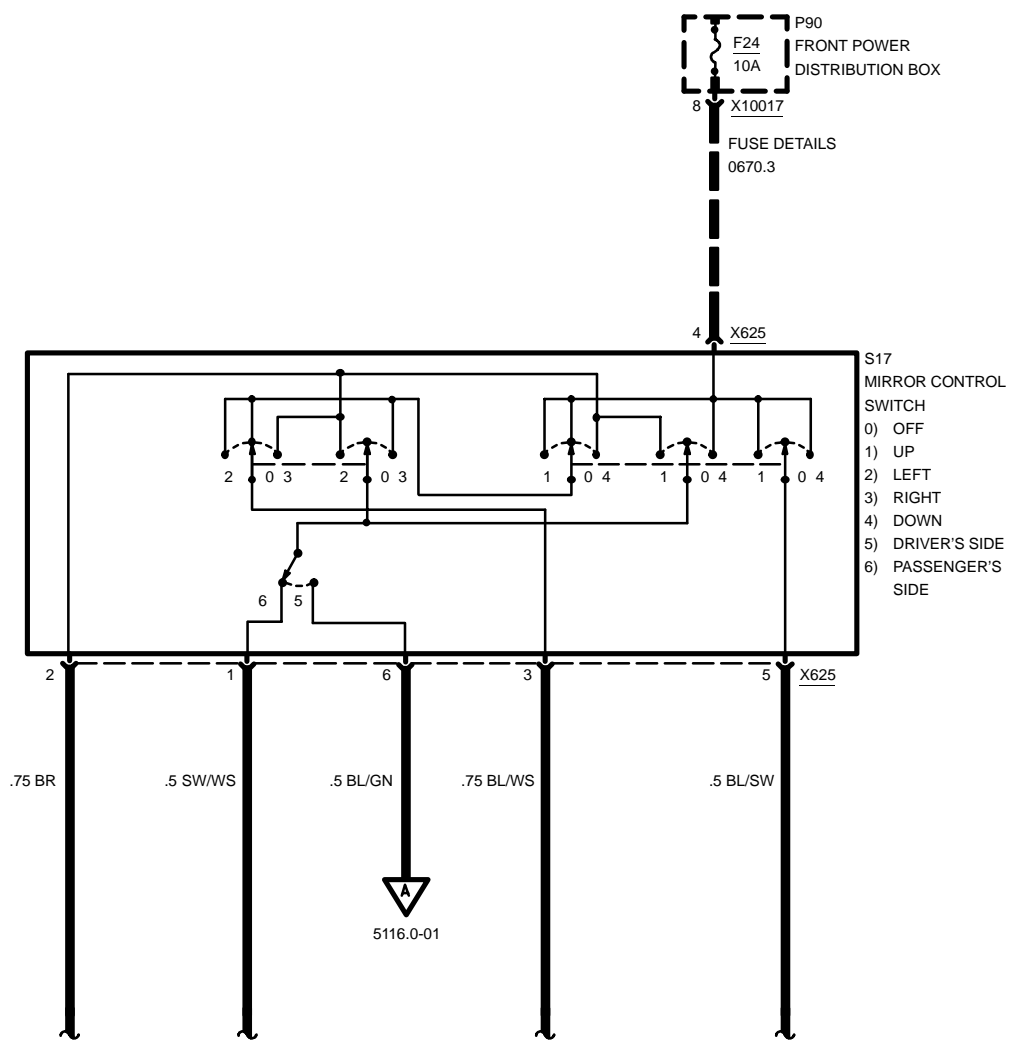

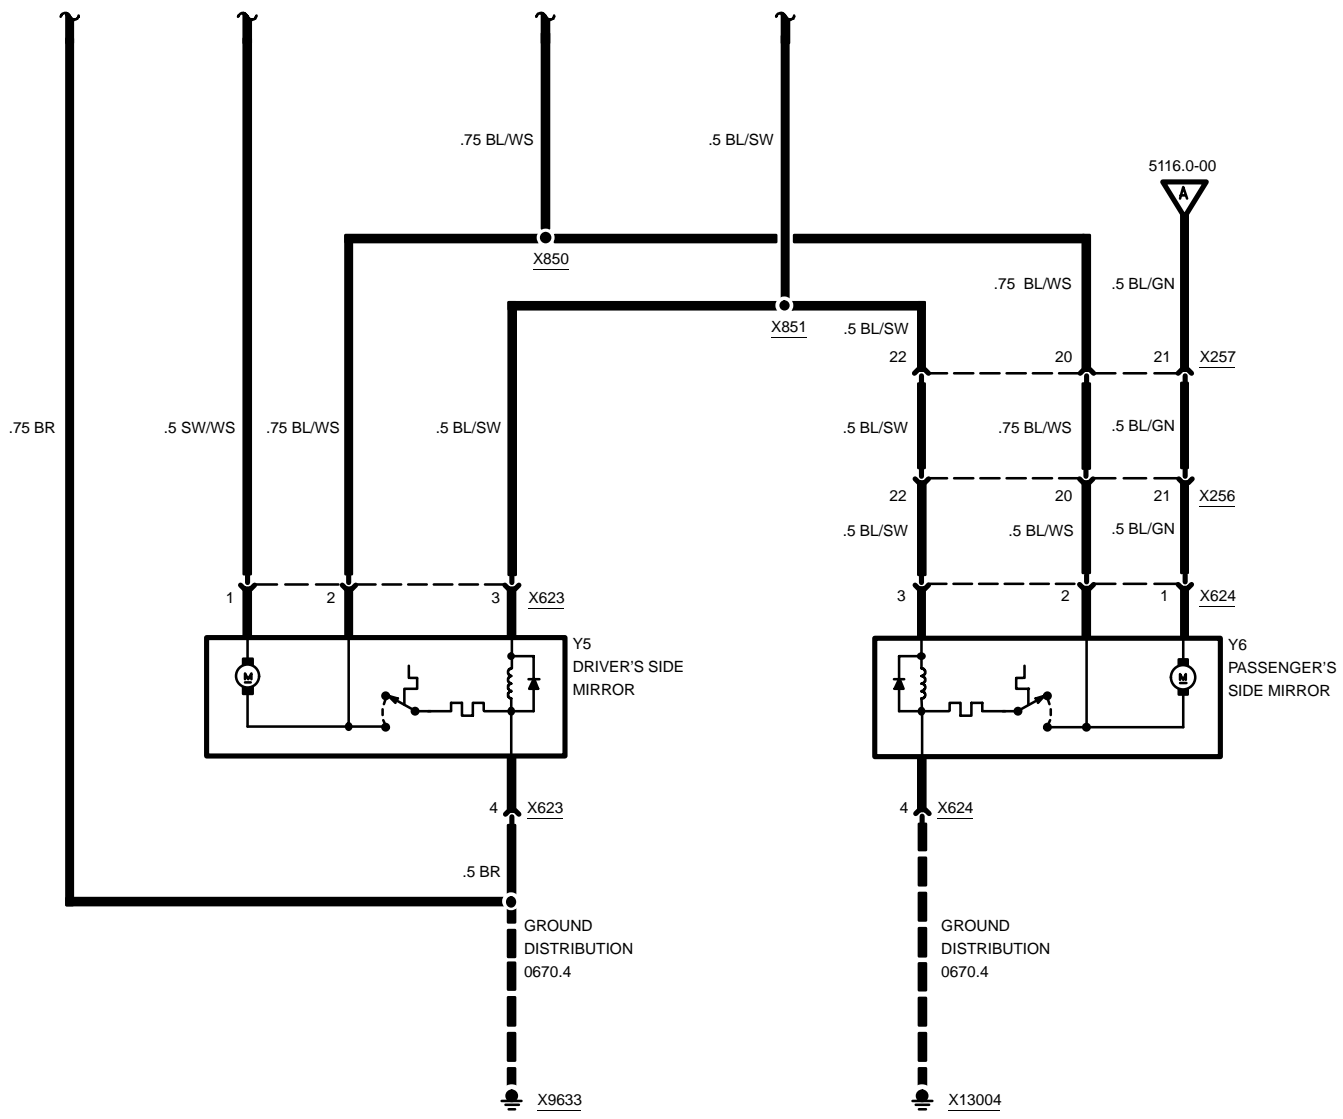




# 5126.0 ZKE CENTRAL LOCKING (ZV)

## INPUTS, DRIVE-AWAY PROTECTION

Z3

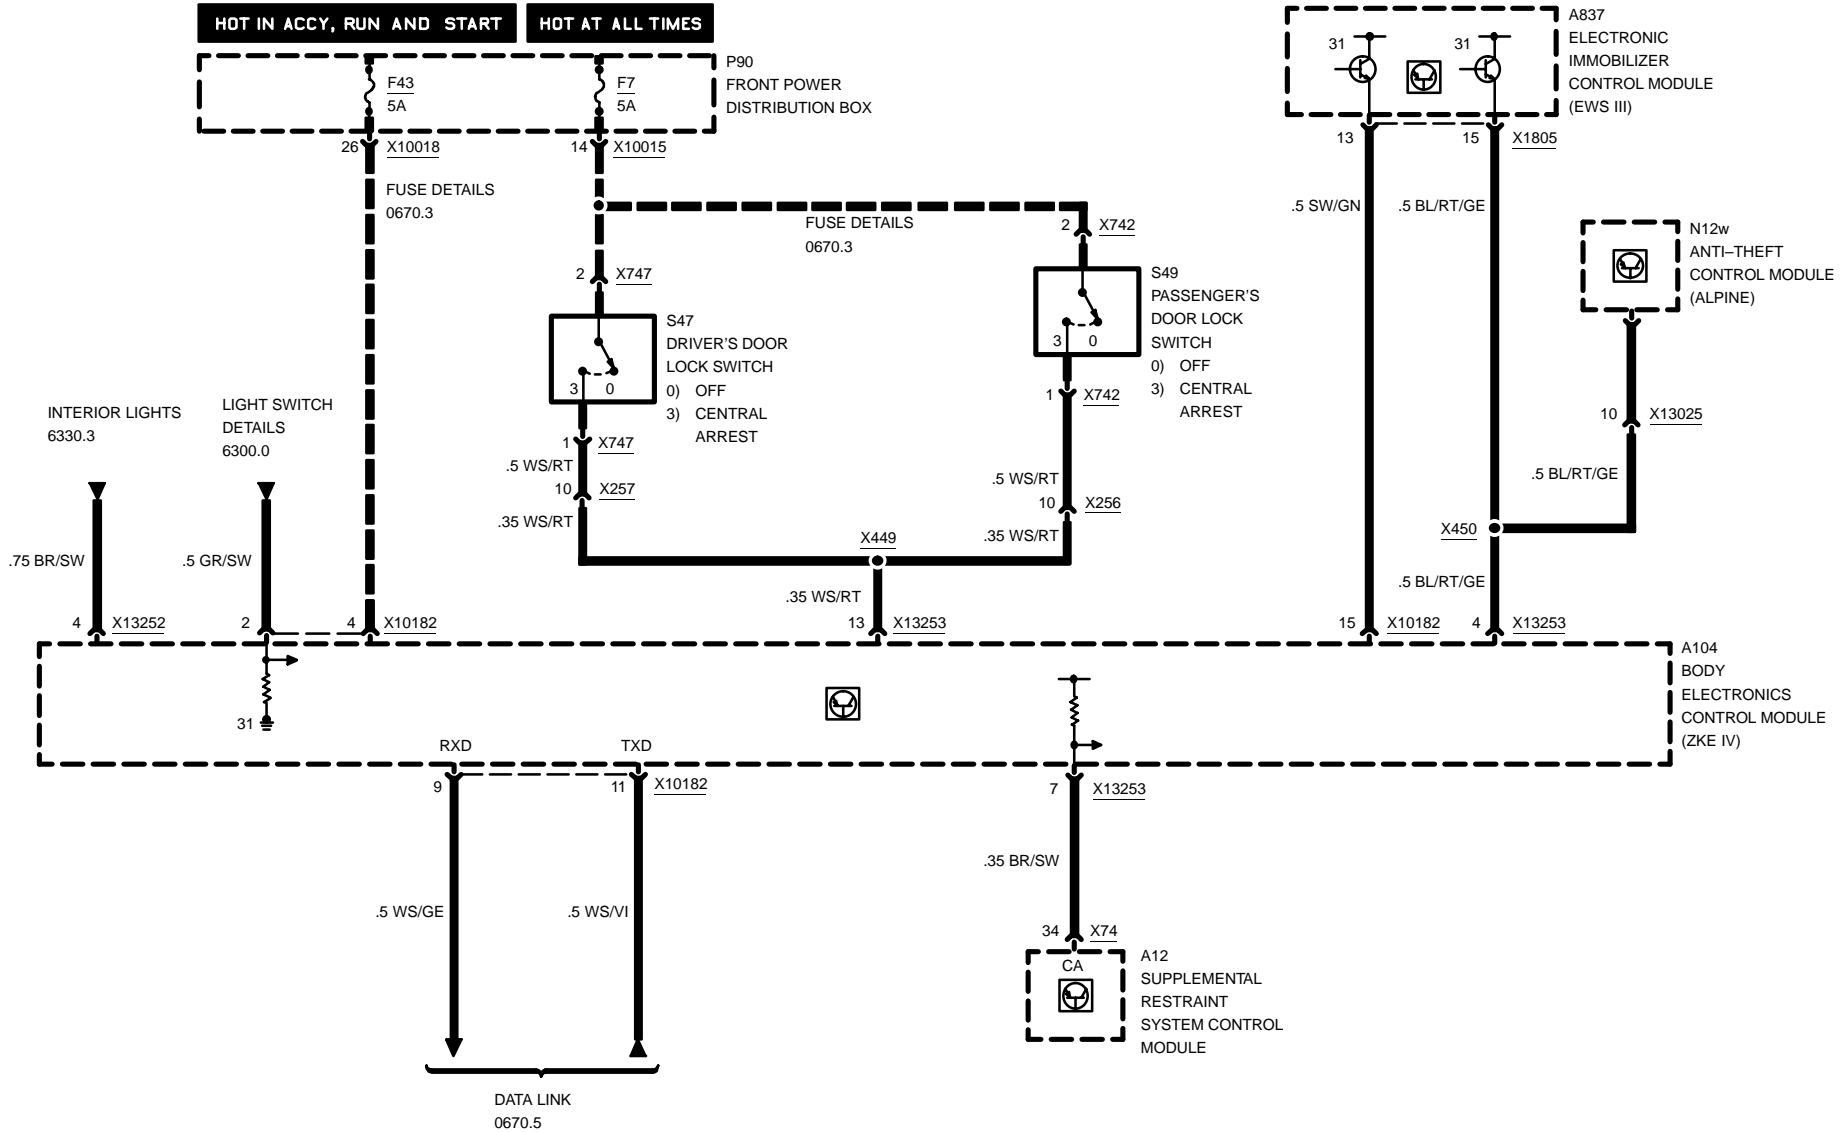




# ZKE CENTRAL LOCKING (ZV)

## INPUT DETAILS

Z3

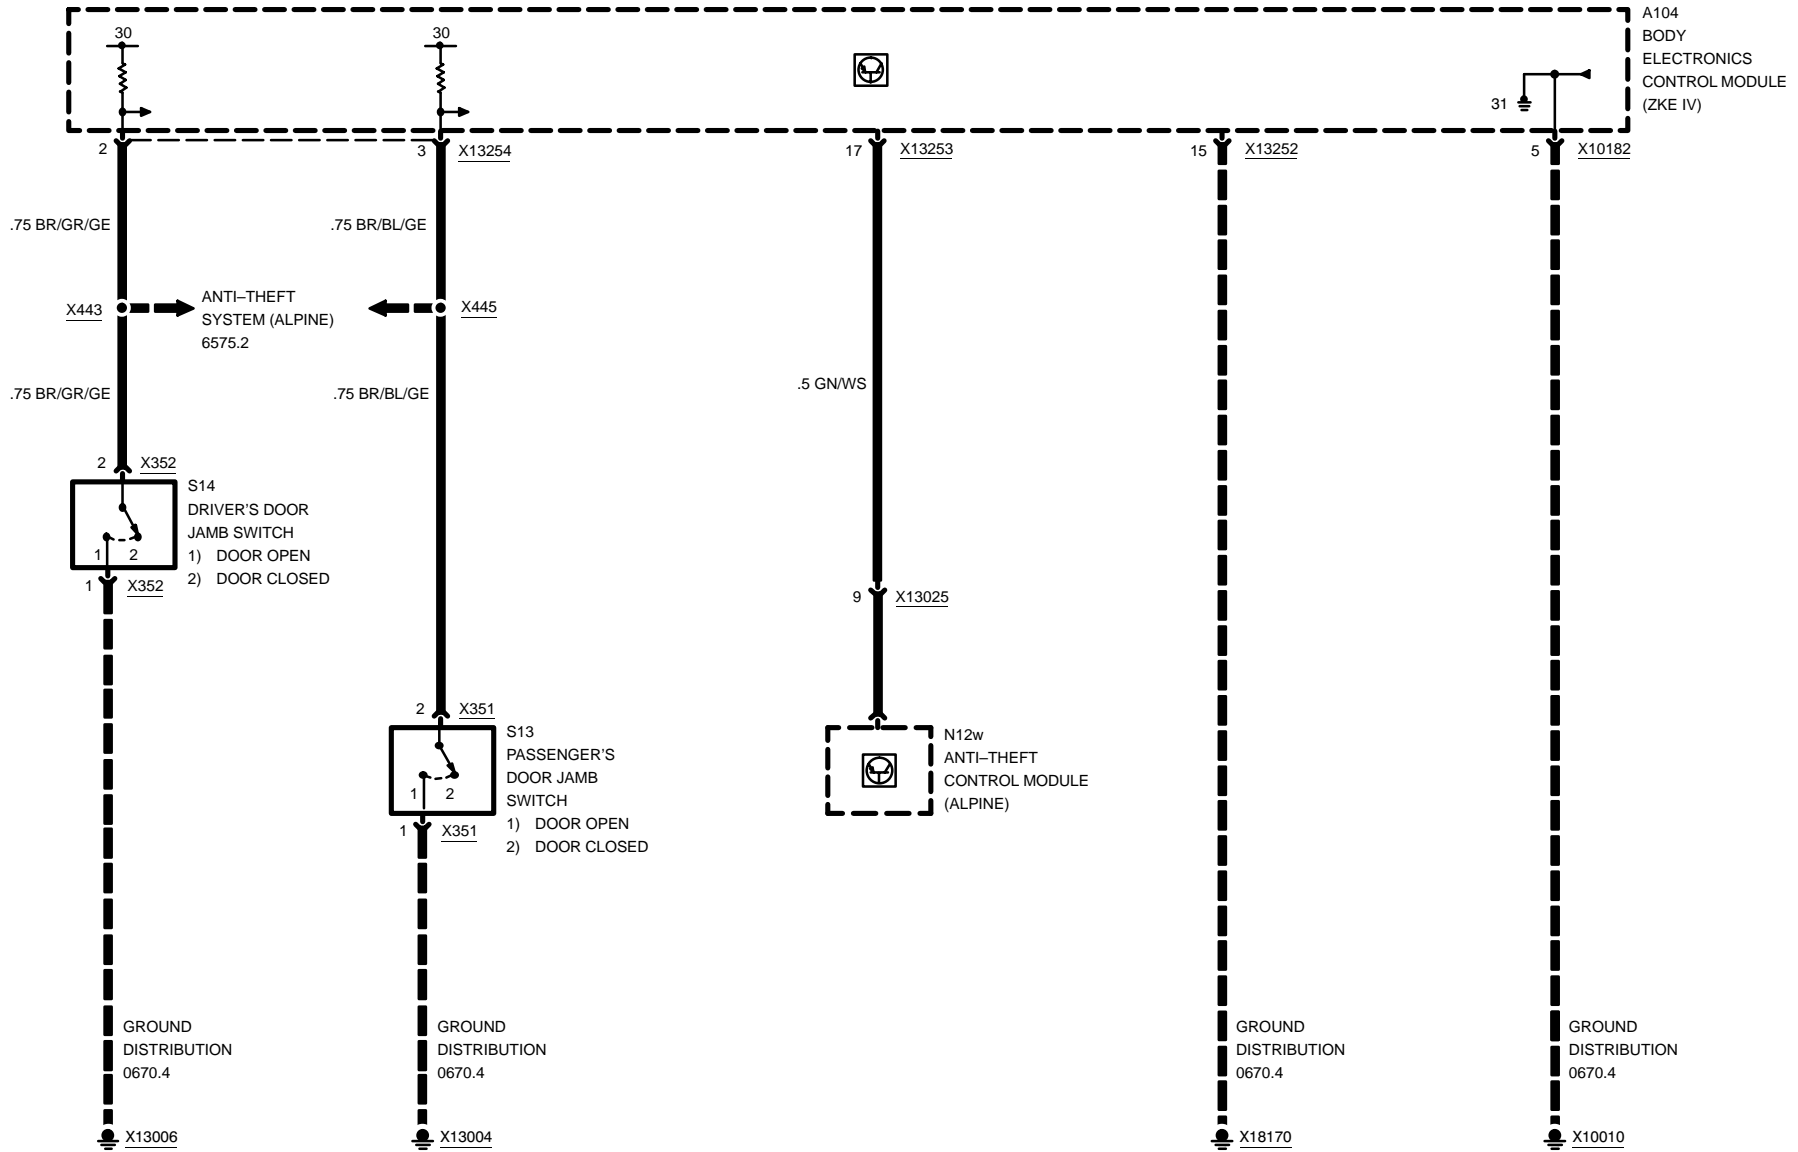







# ZKE CENTRAL LOCKING (ZV) OUTPUT DETAILS


Z3 VERSIONS AND M ROADSTER

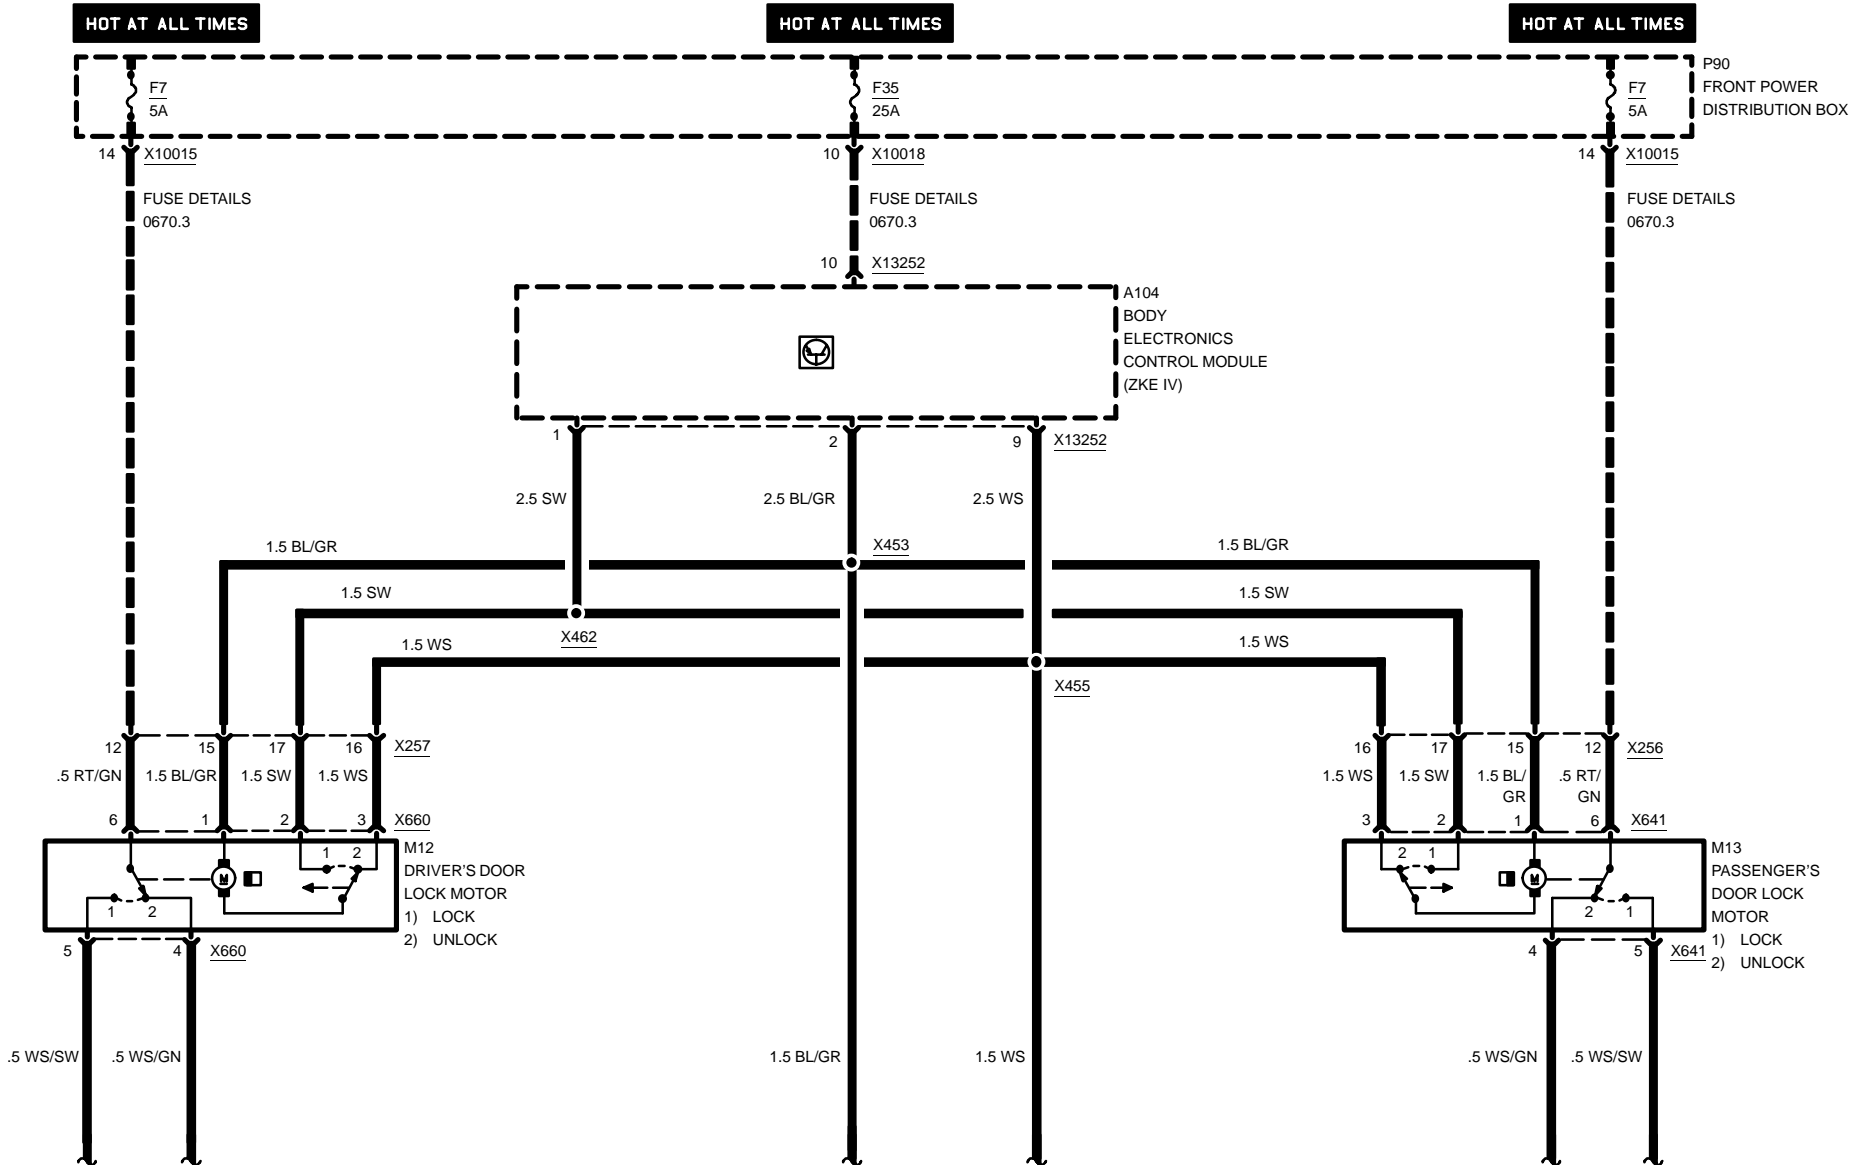


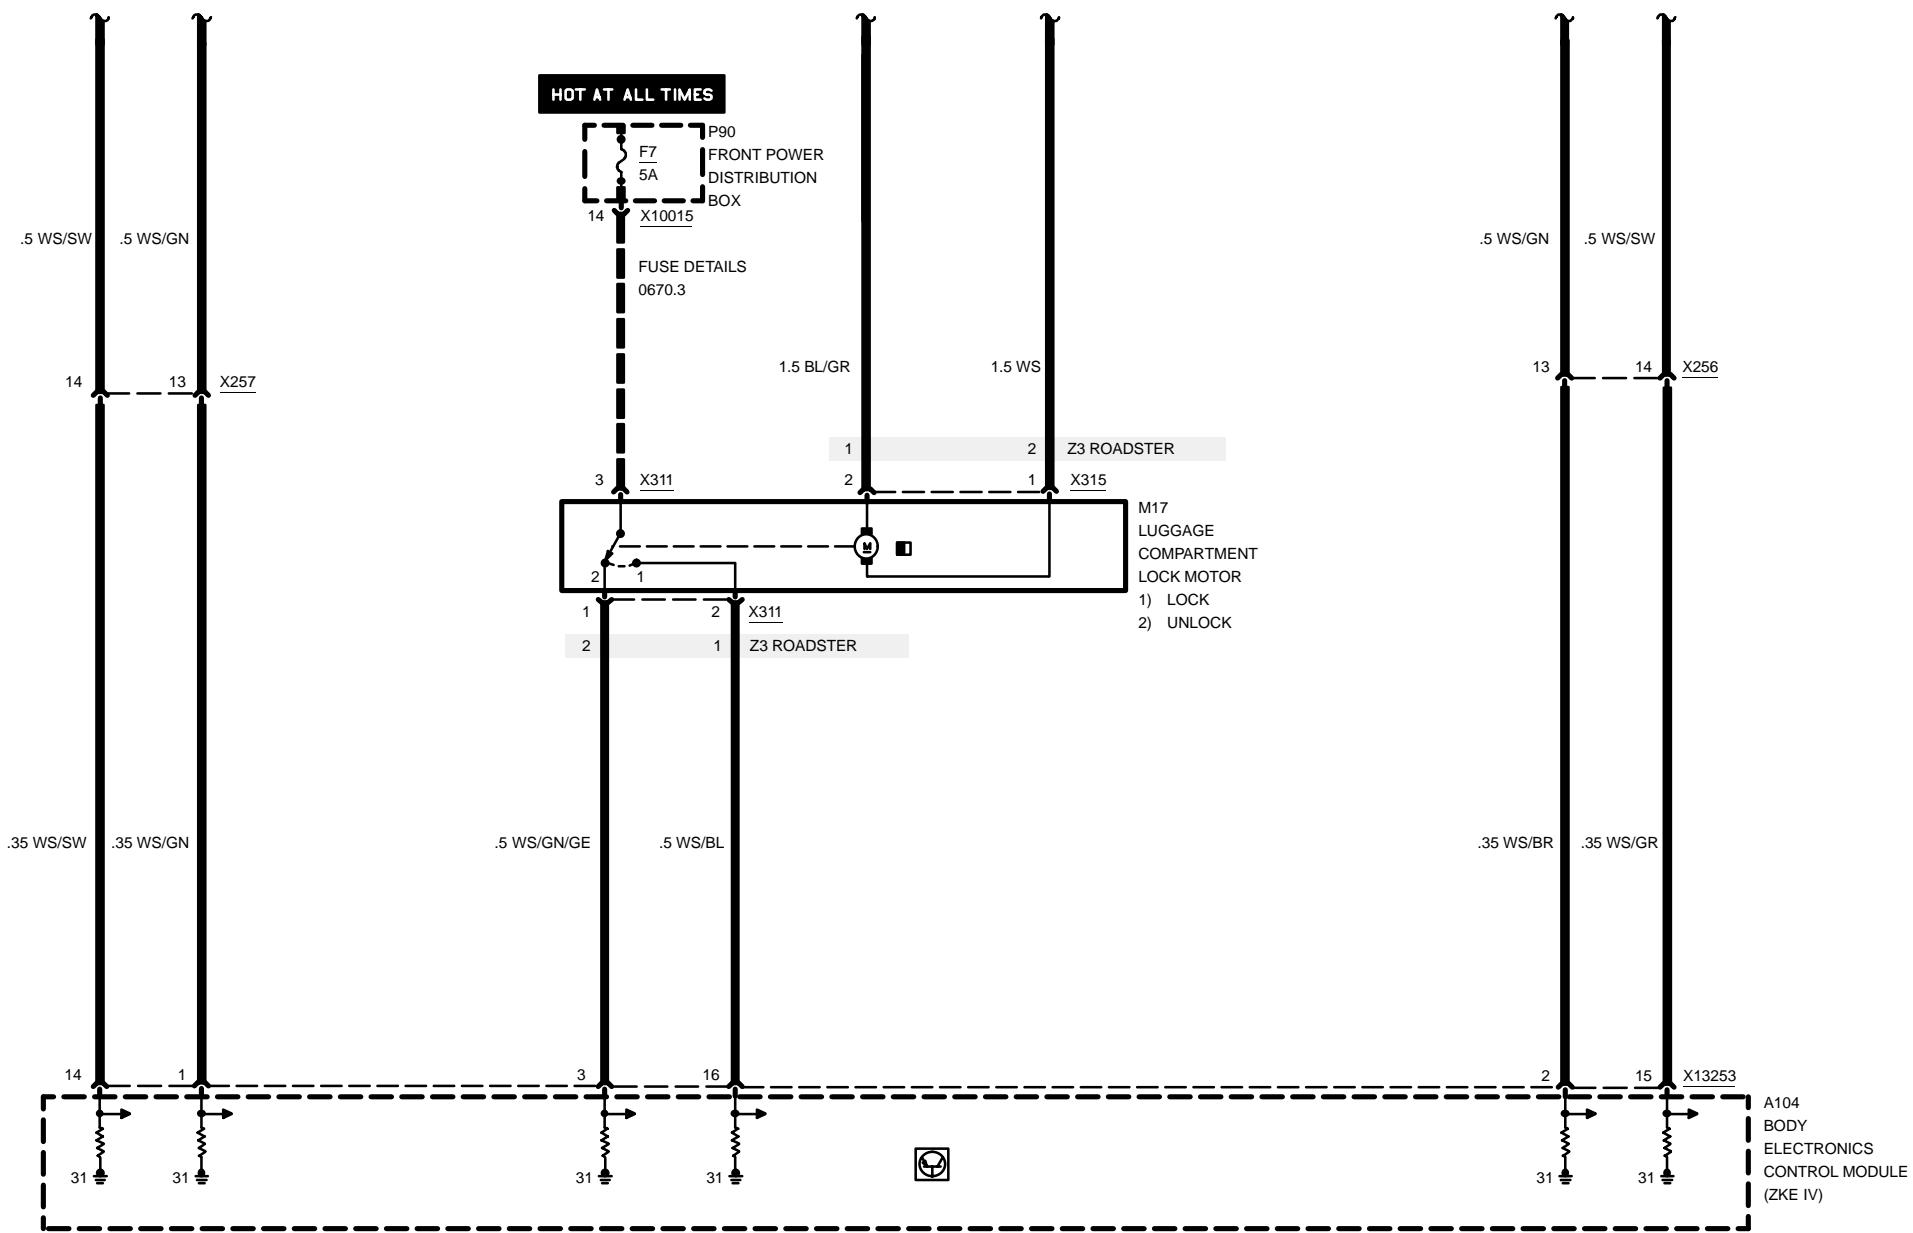

ZKE CENTRAL LOCKING (ZV)  
OUTPUT DETAILS

M COUPE

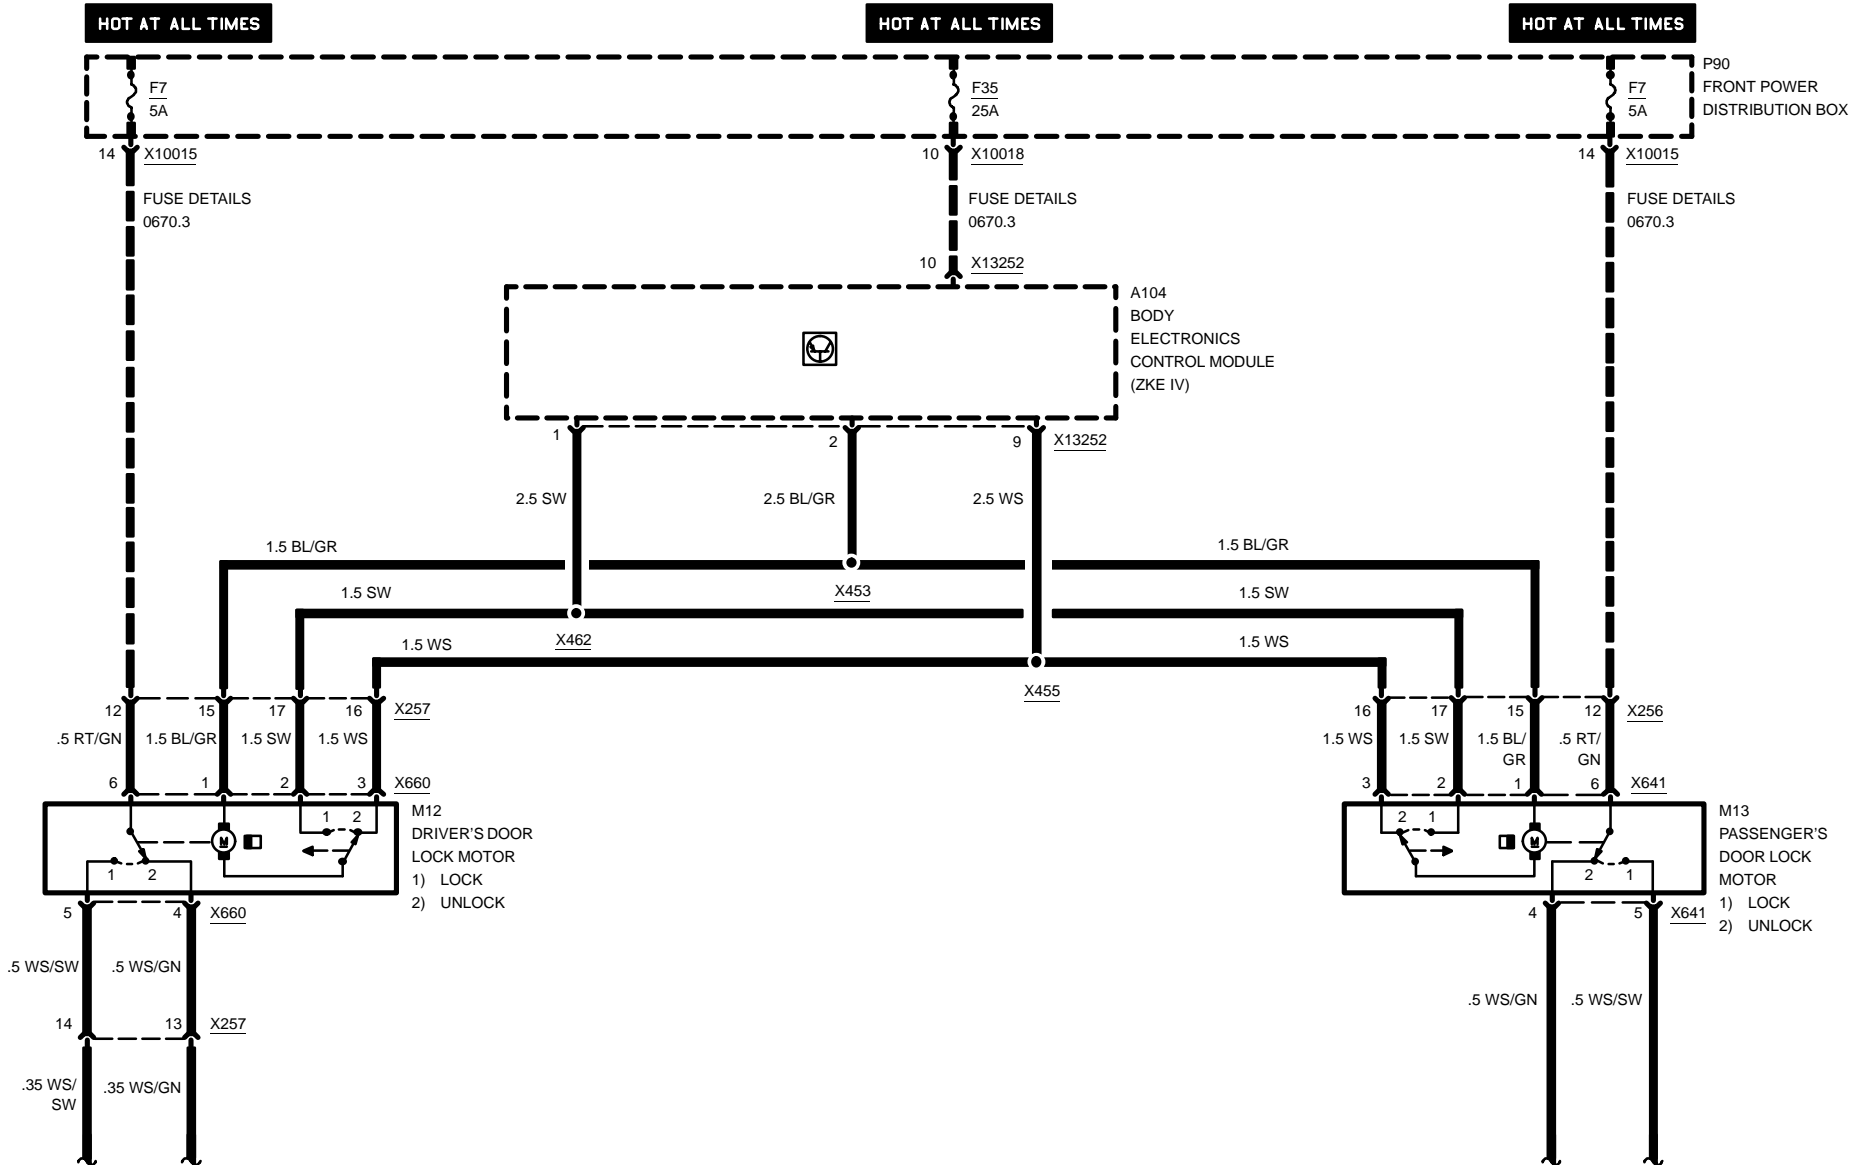


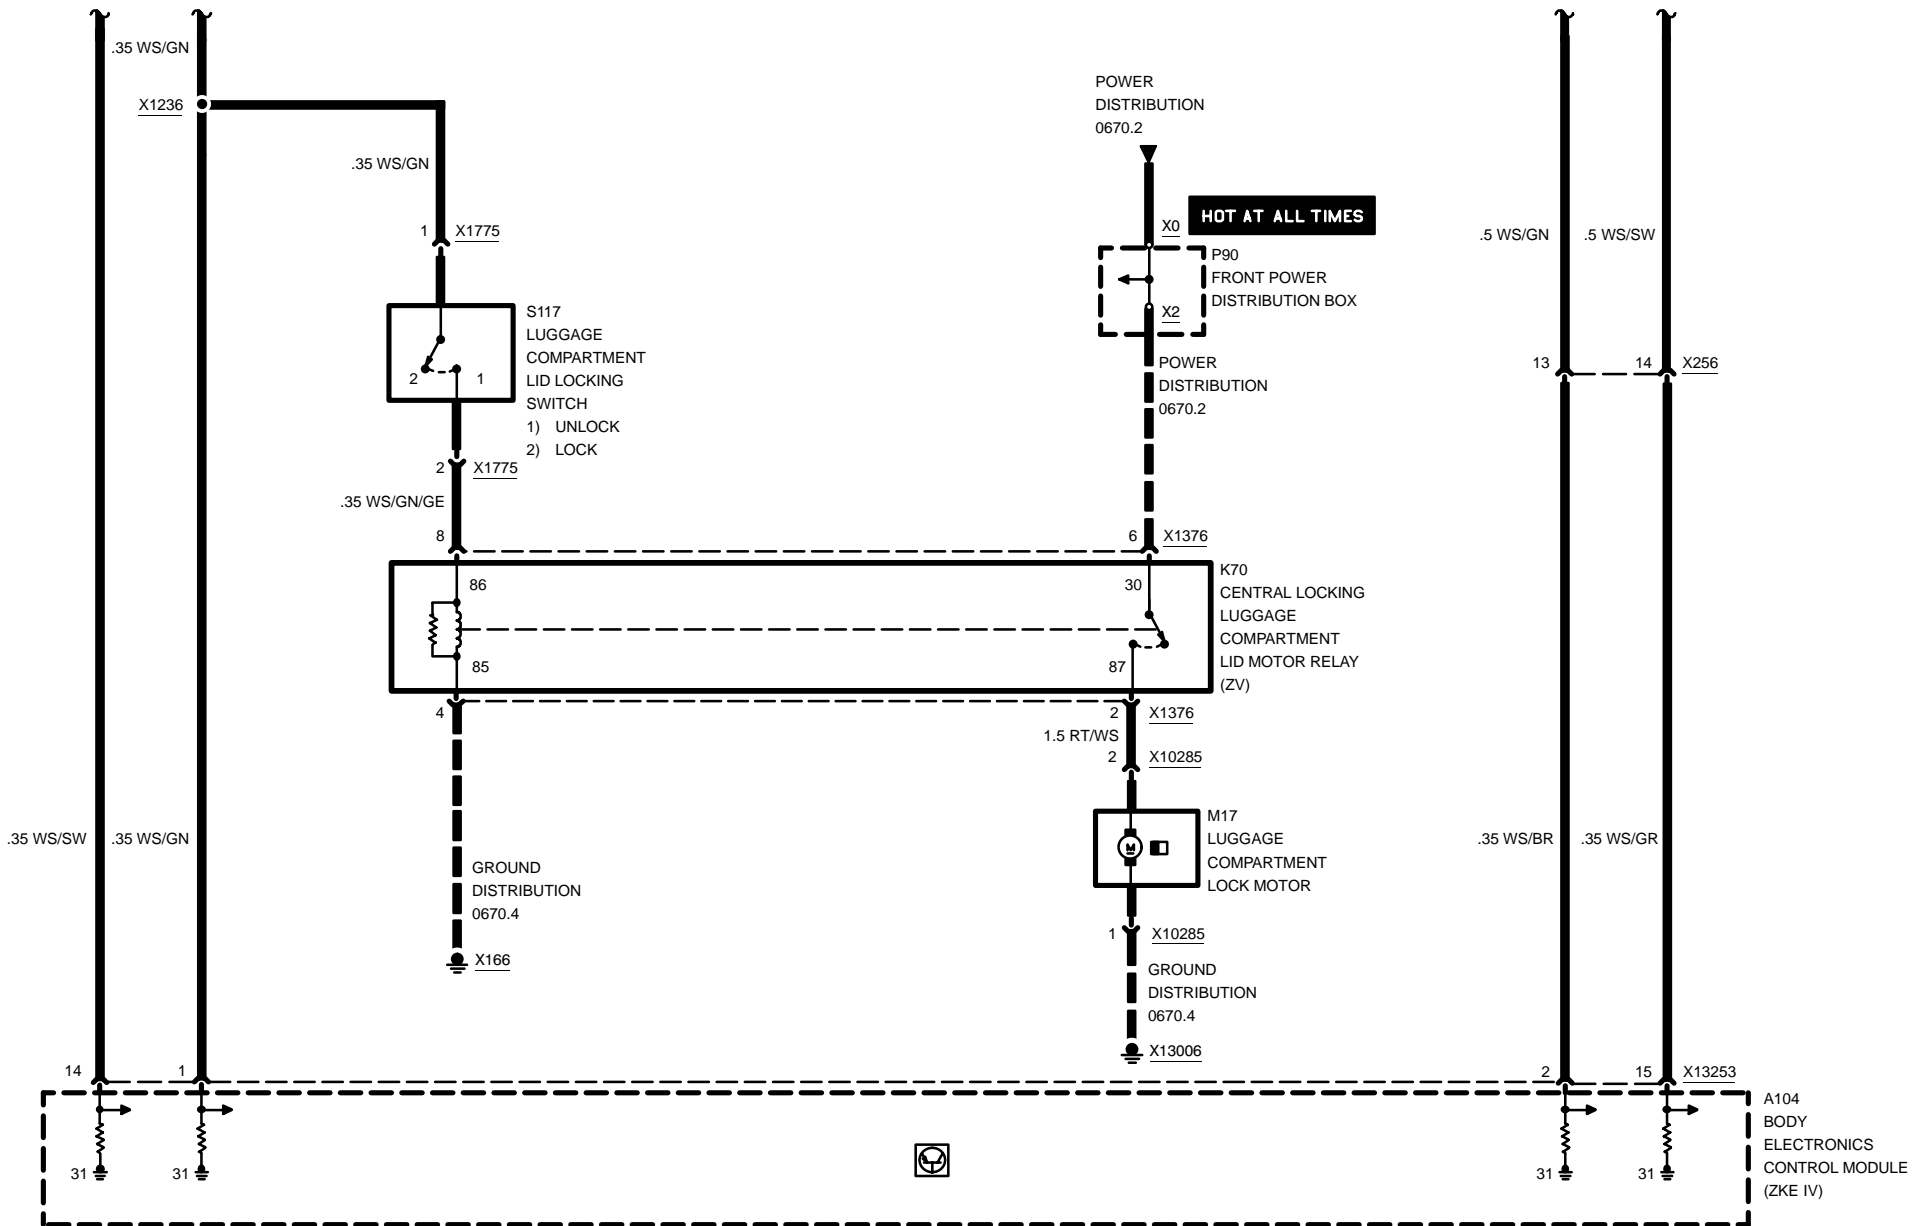



# 5133.0 ZKE POWER WINDOWS (FH)

## INPUT DETAILS

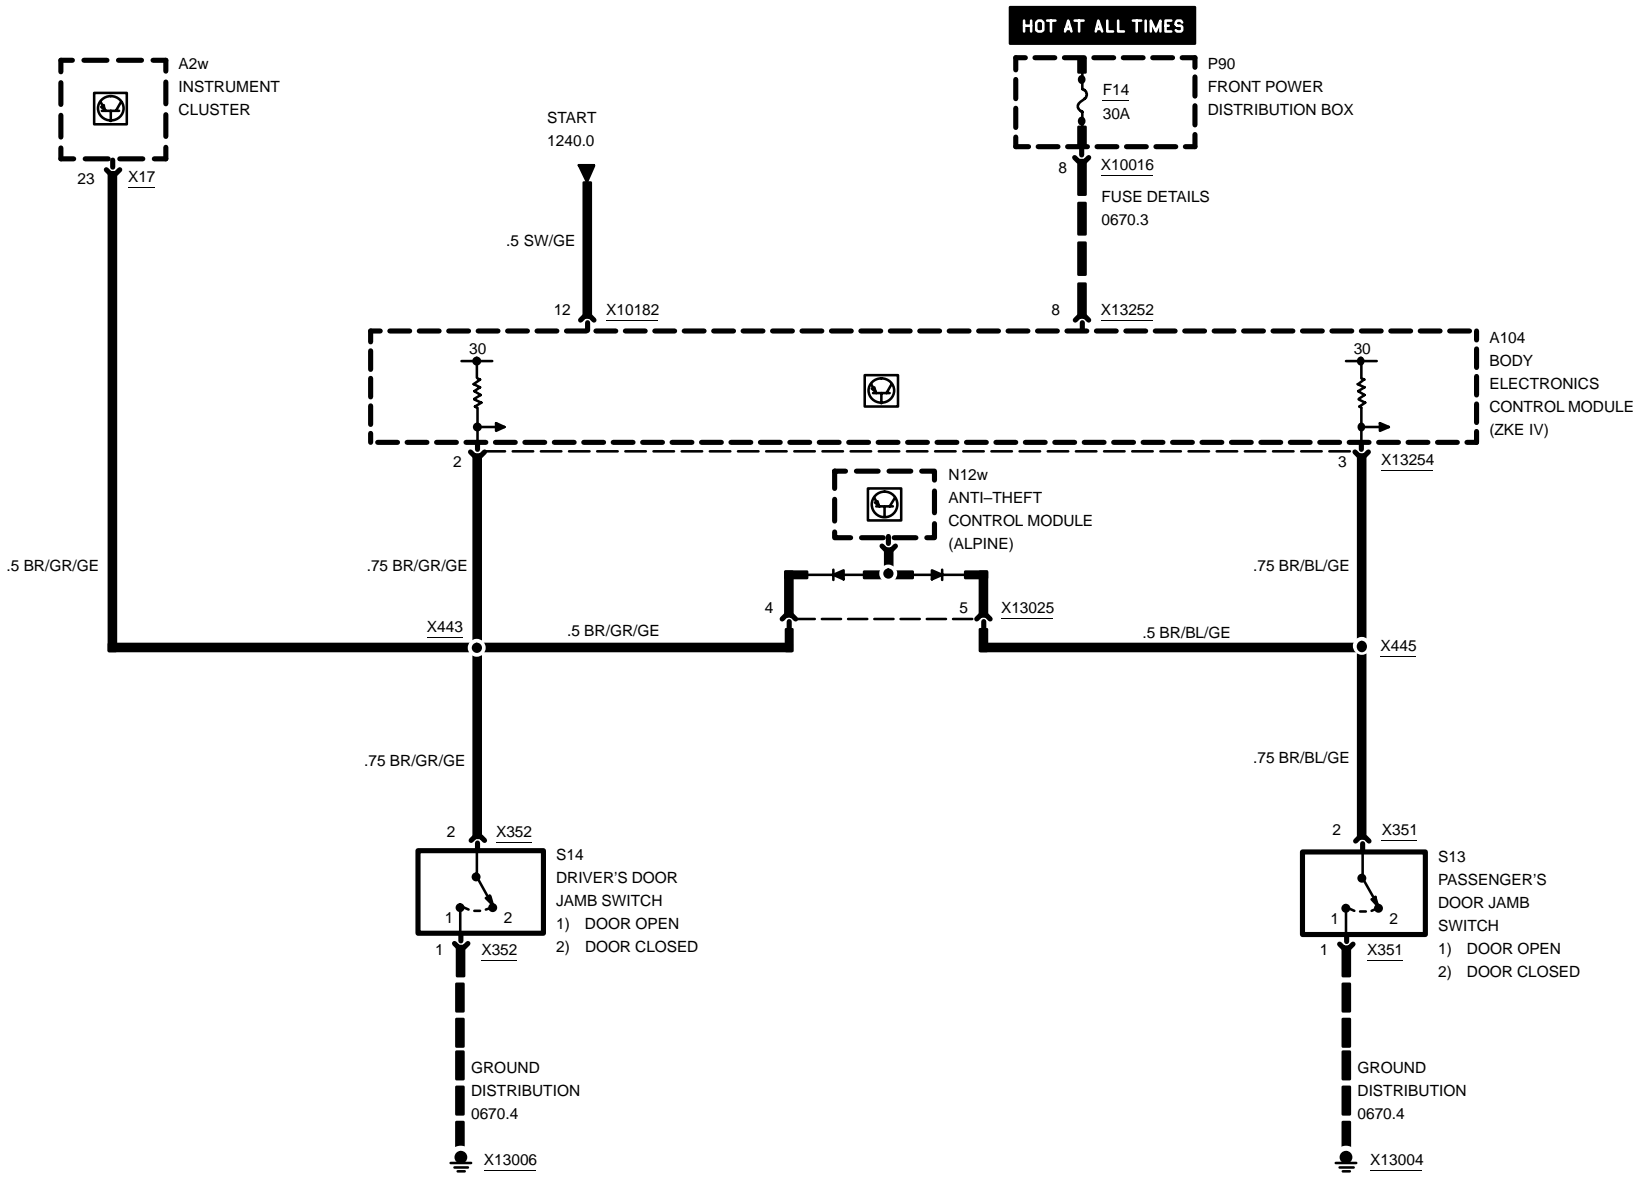




# ZKE POWER WINDOWS (FH)

## INPUT DETAILS

Z3

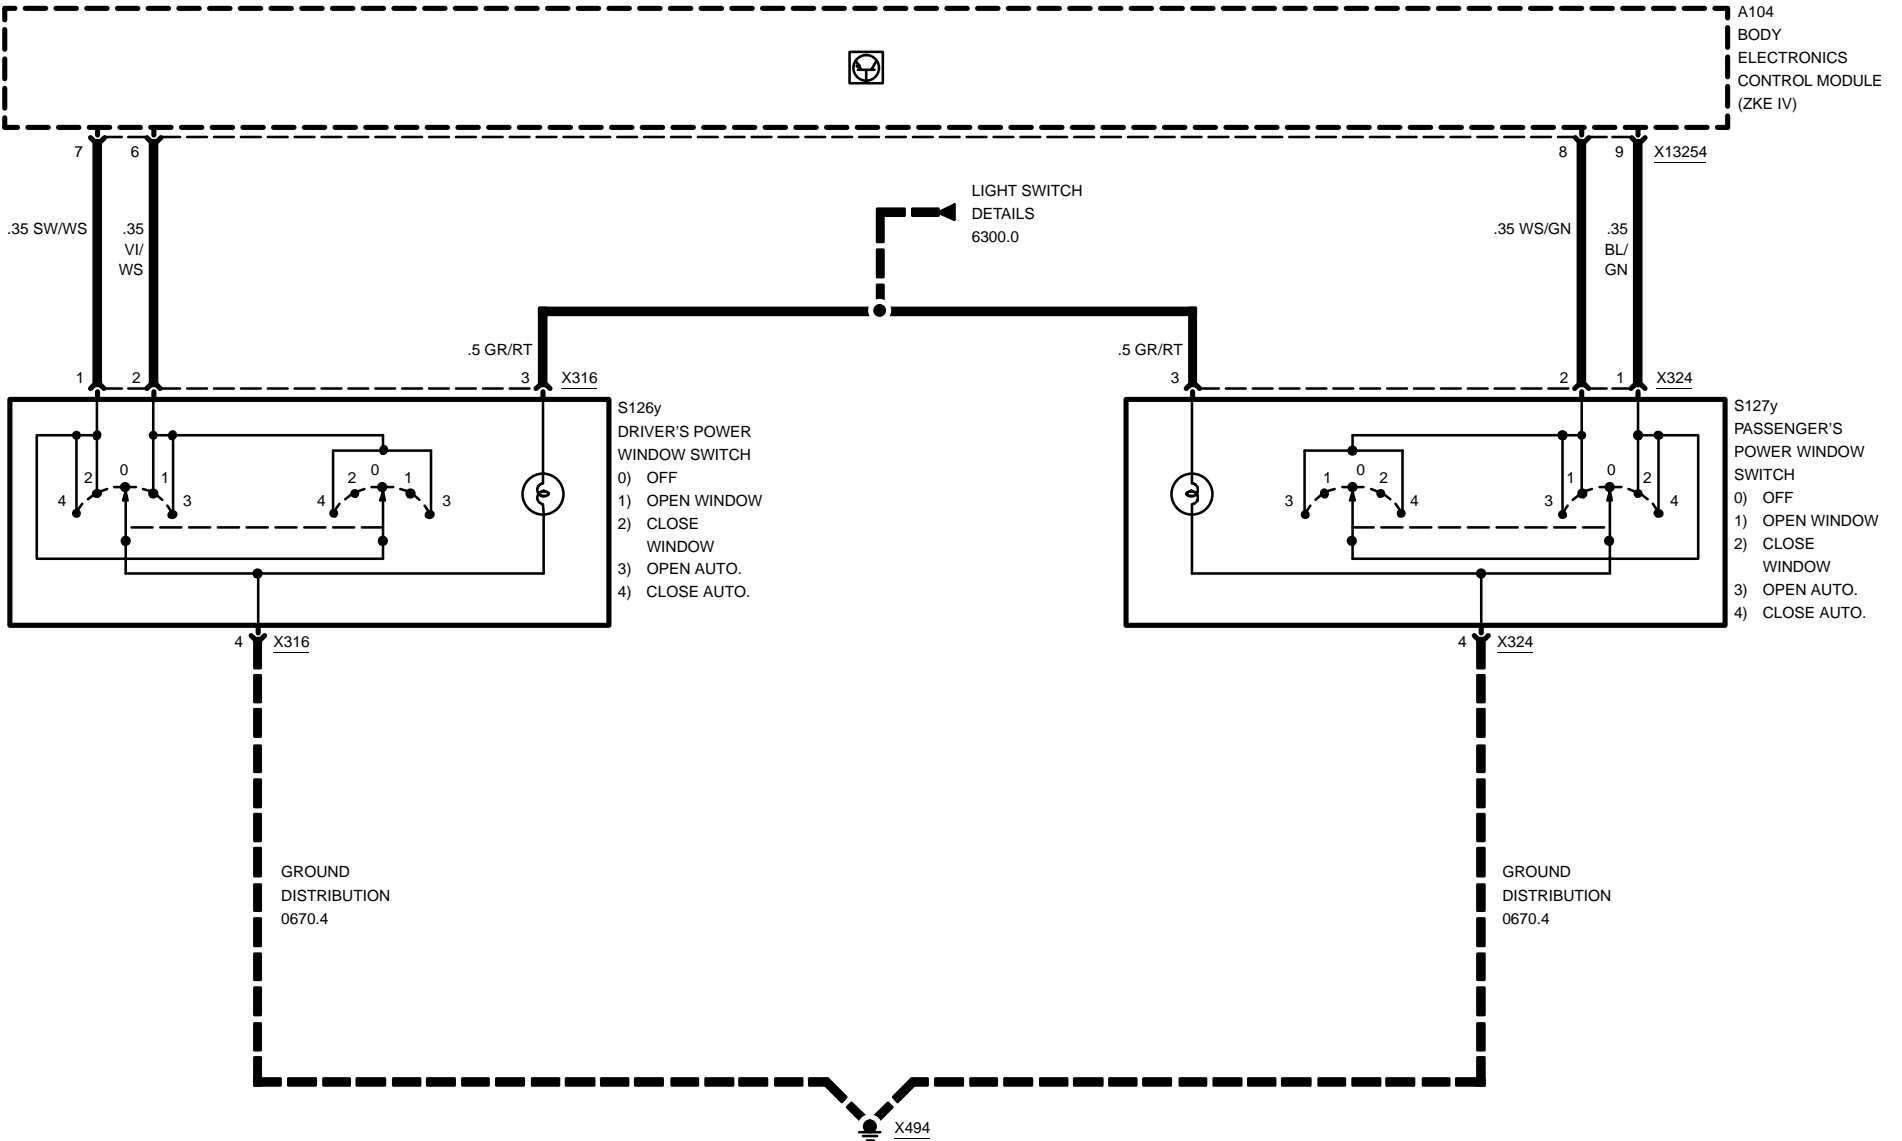




# ZKE POWER WINDOWS (FH)

## OUTPUT DETAILS

Z3

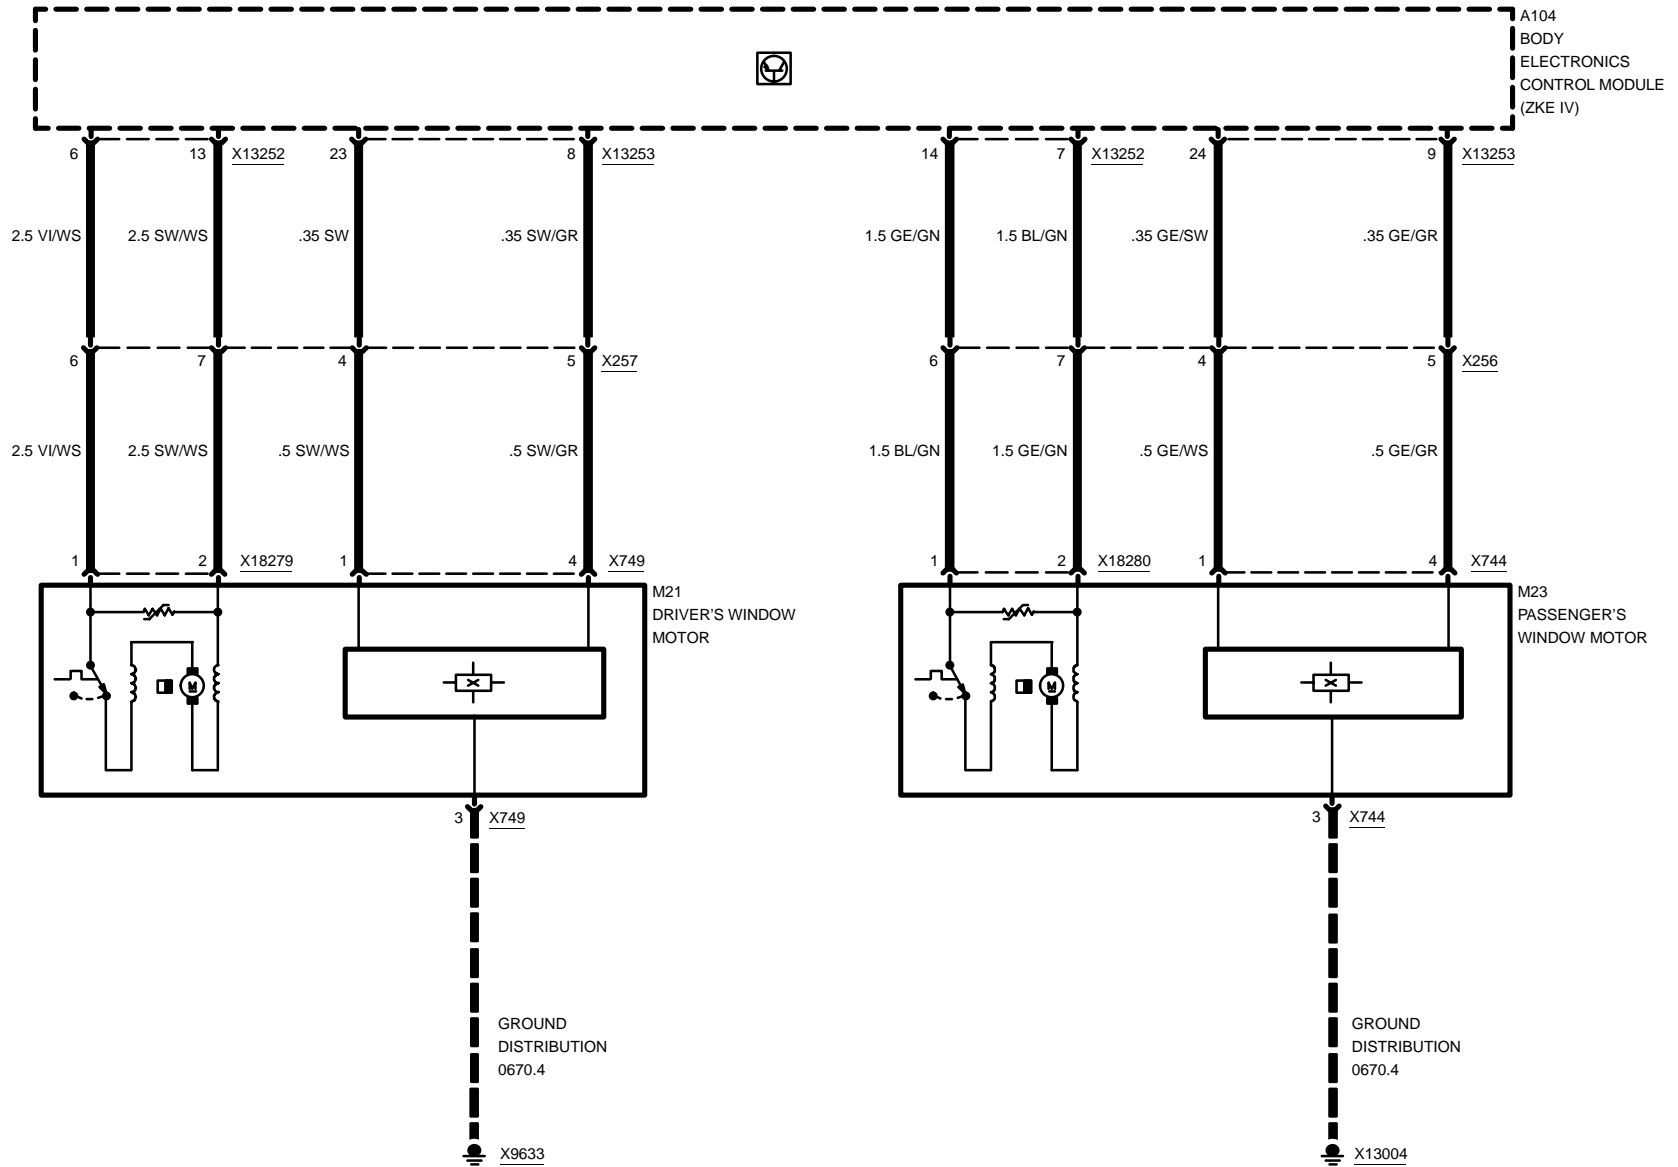




# 5200.0 POWER SEATS

## DRIVER'S SEAT

03/00

5200.0-00

1999

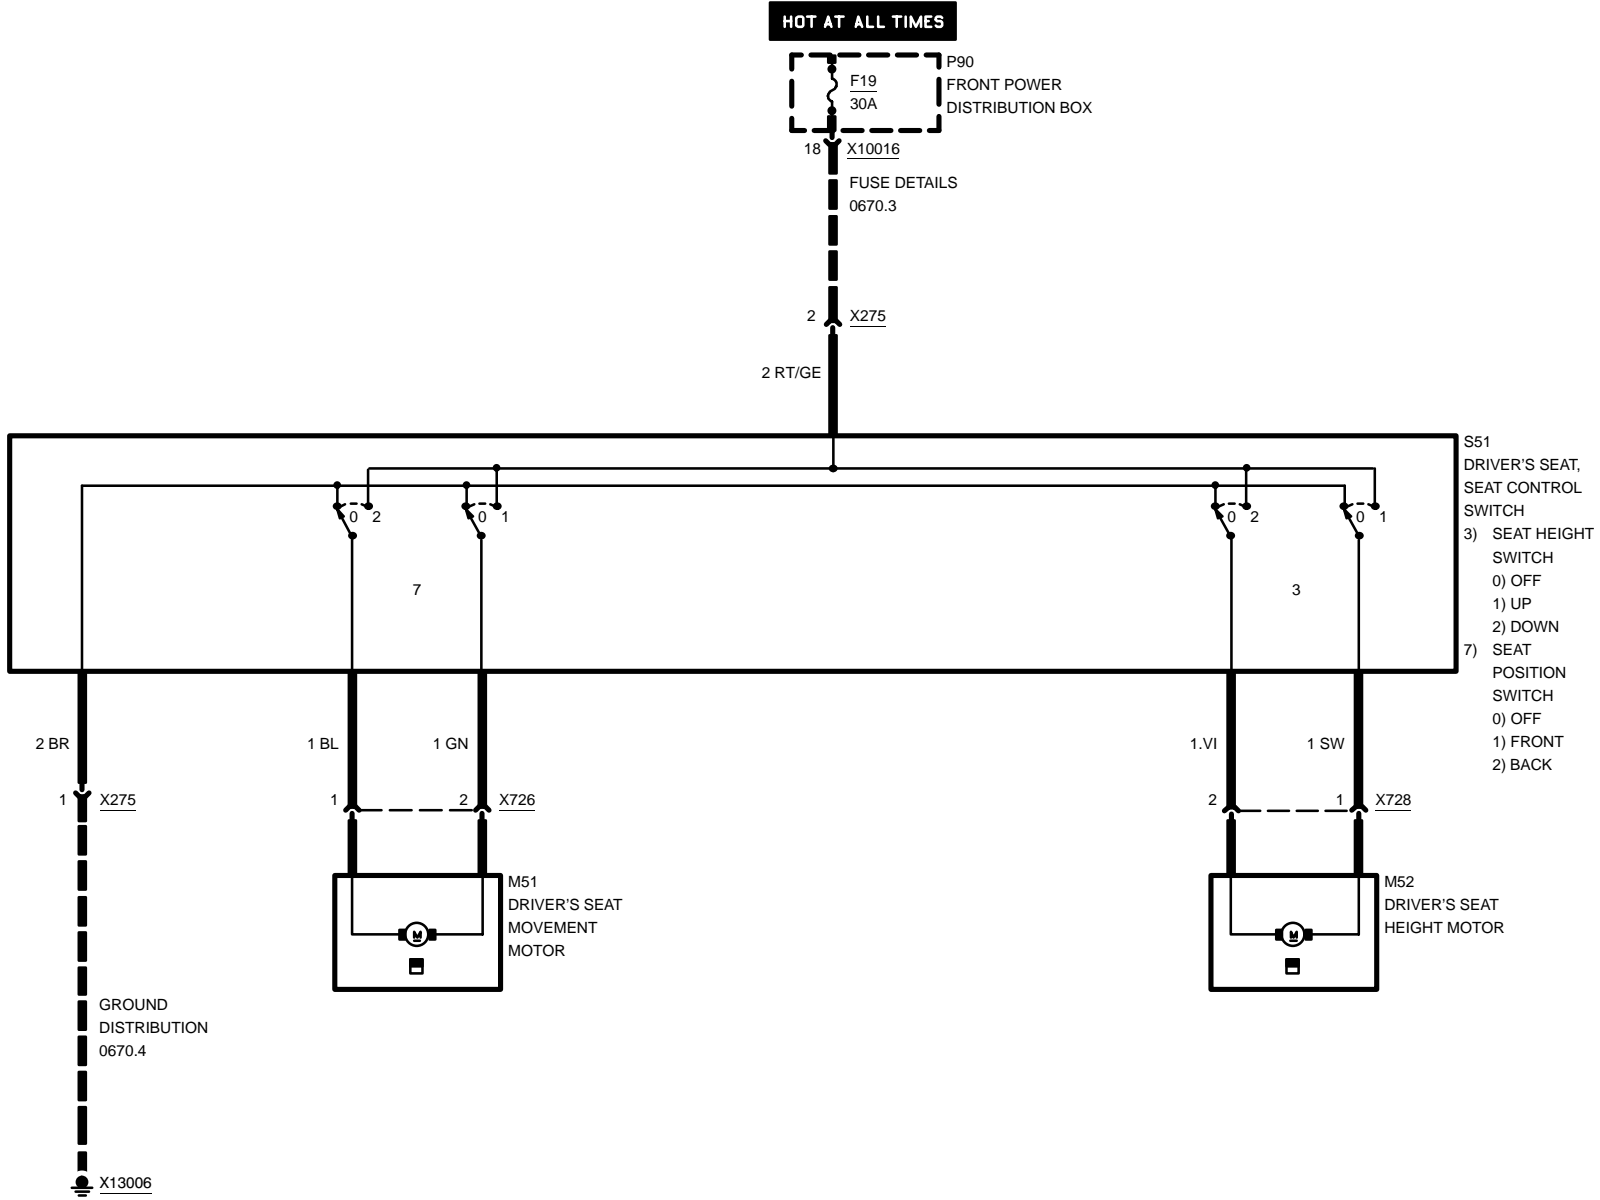






# POWER SEATS

## PASSENGER'S SEAT

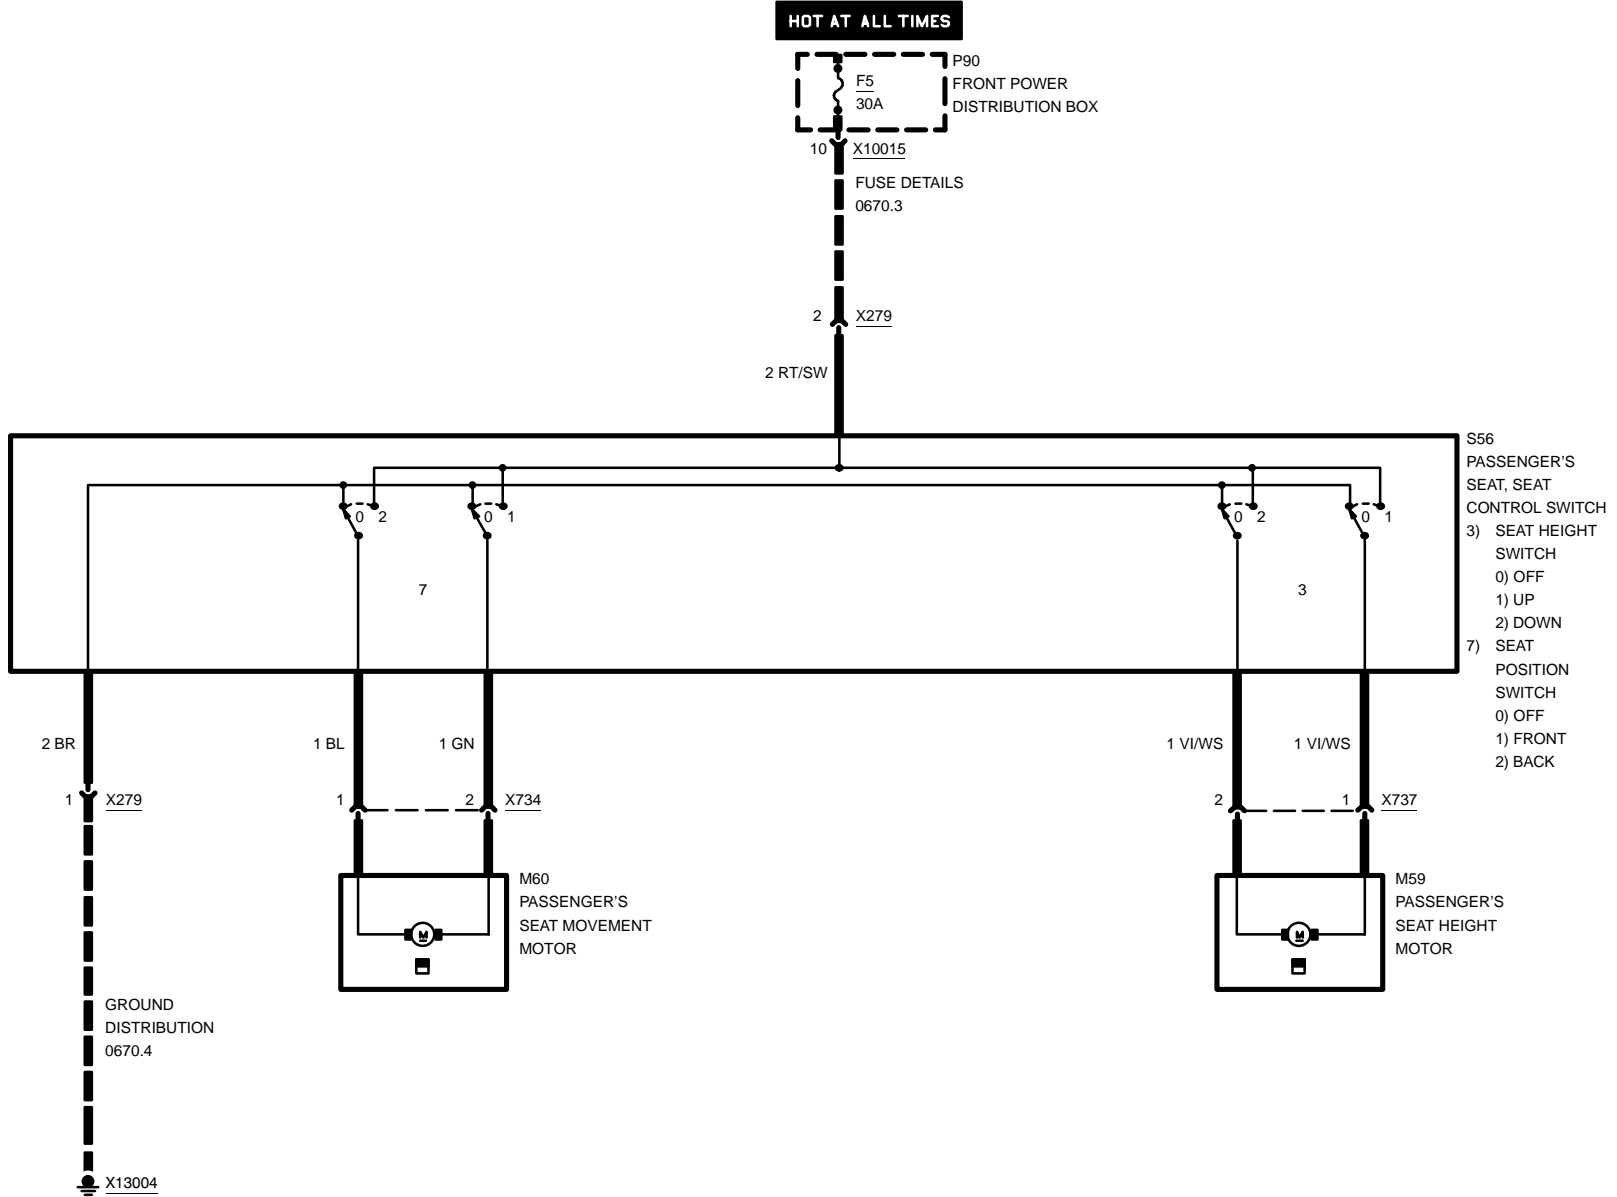






Z3

# POWER SEATS PASSENGER'S SEAT

# SPORT SEATS

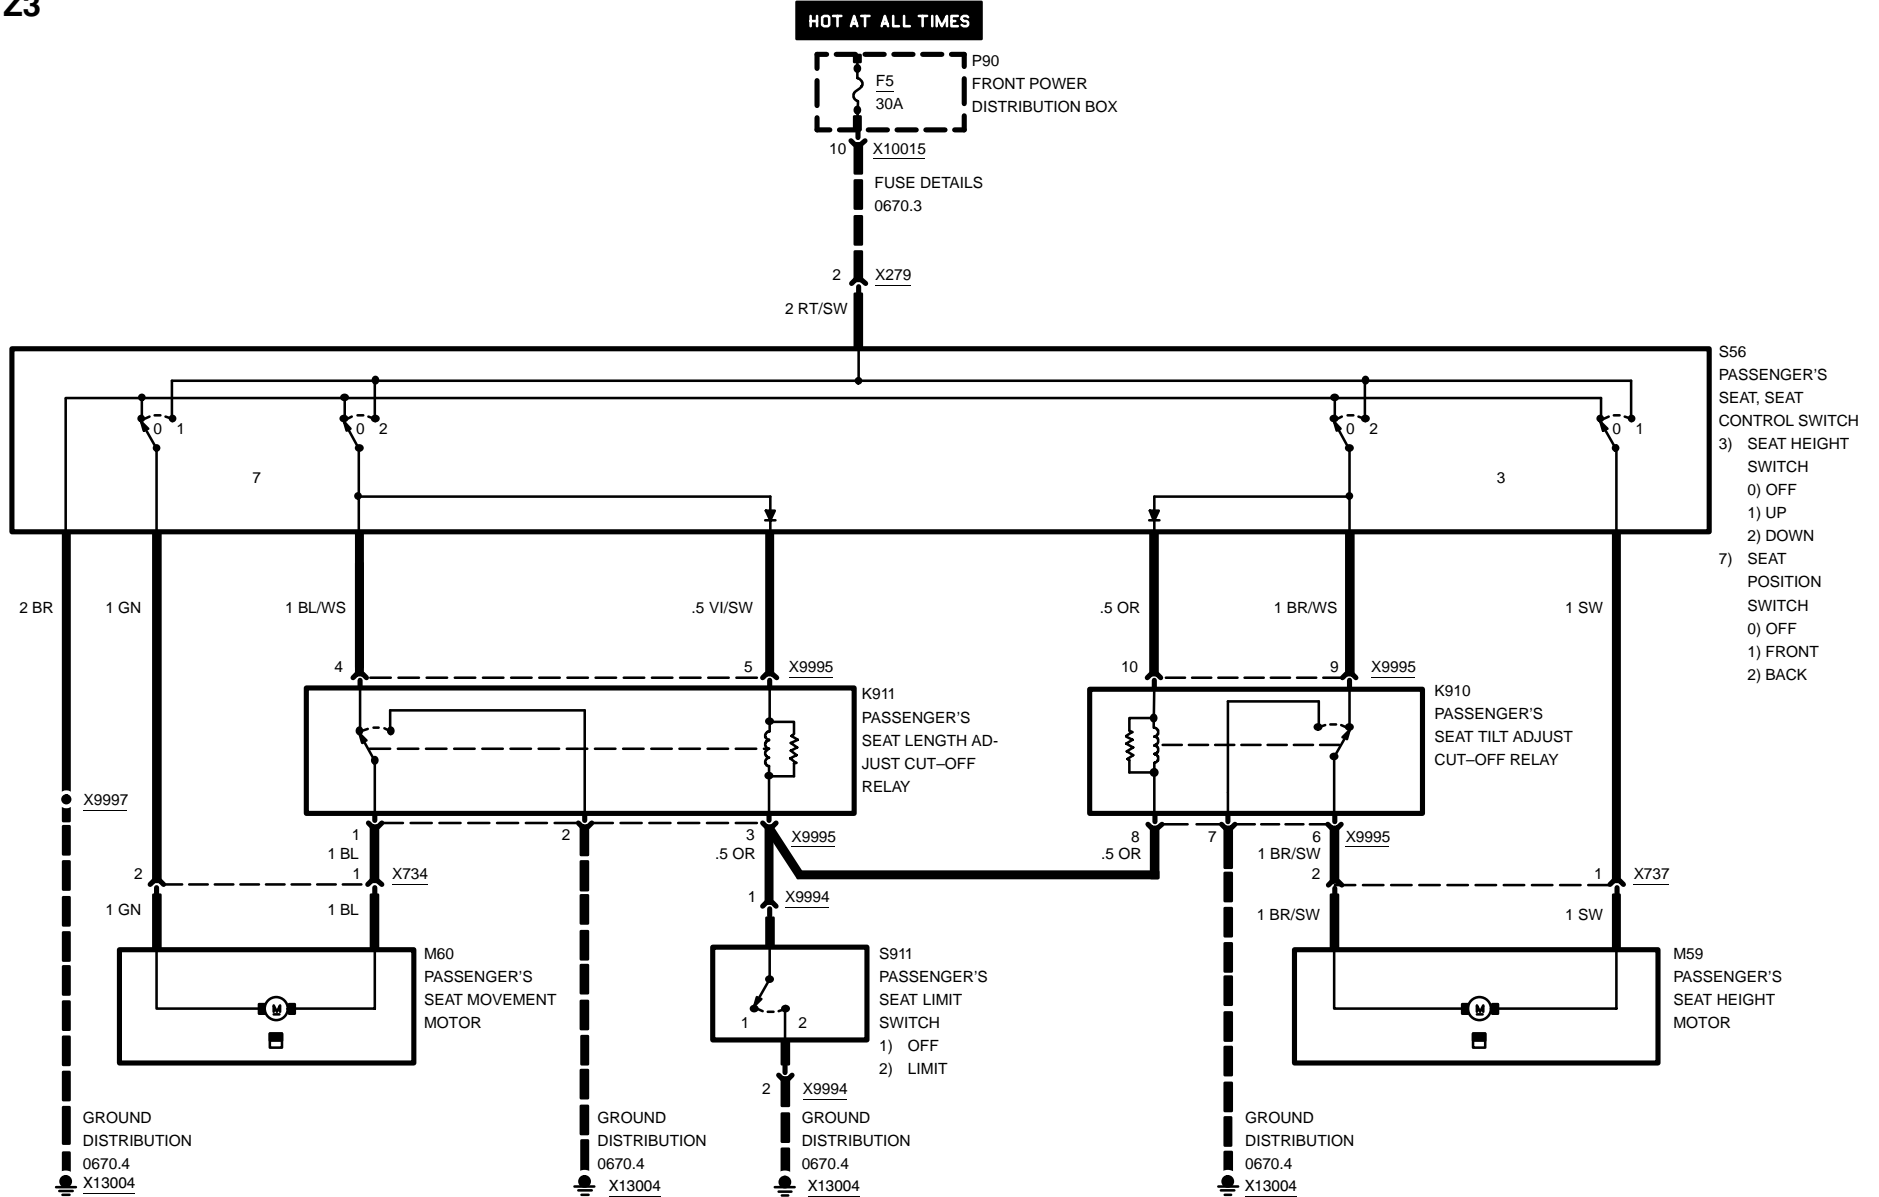

03/00


5200.0-03

1999




# 5203.0 HEATED SEATS

Z3

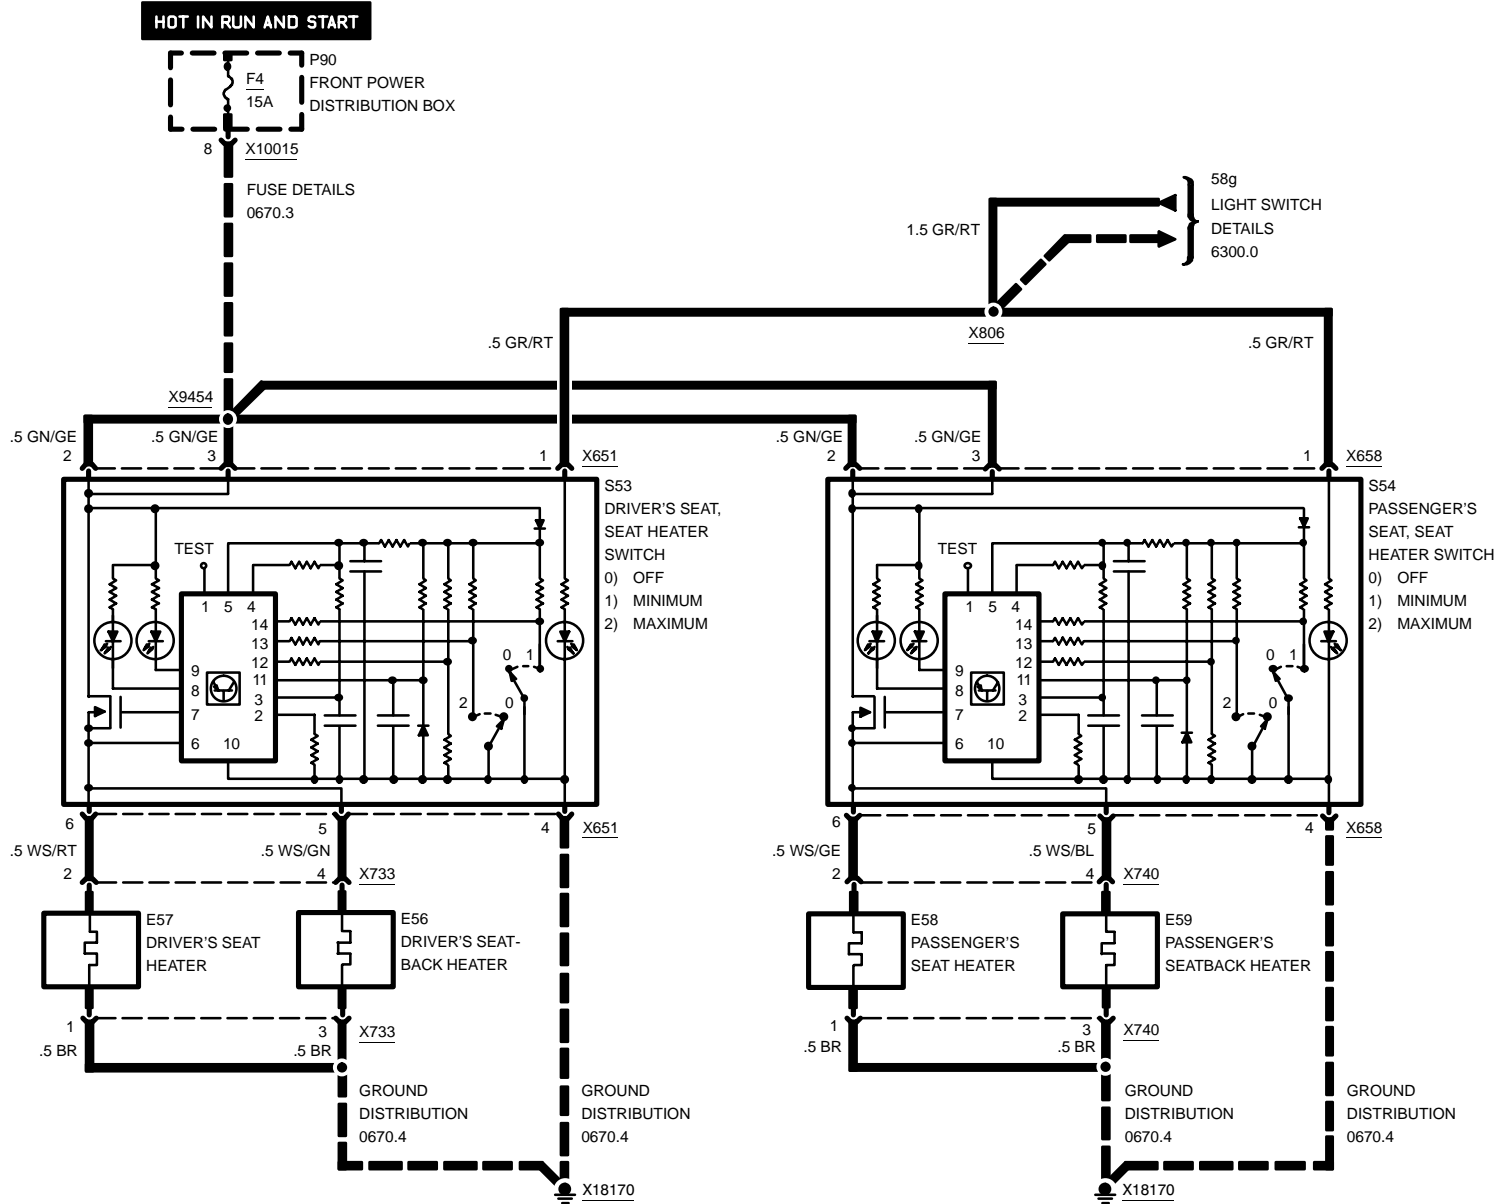





# 5410.5 POWER TILT SUNROOF

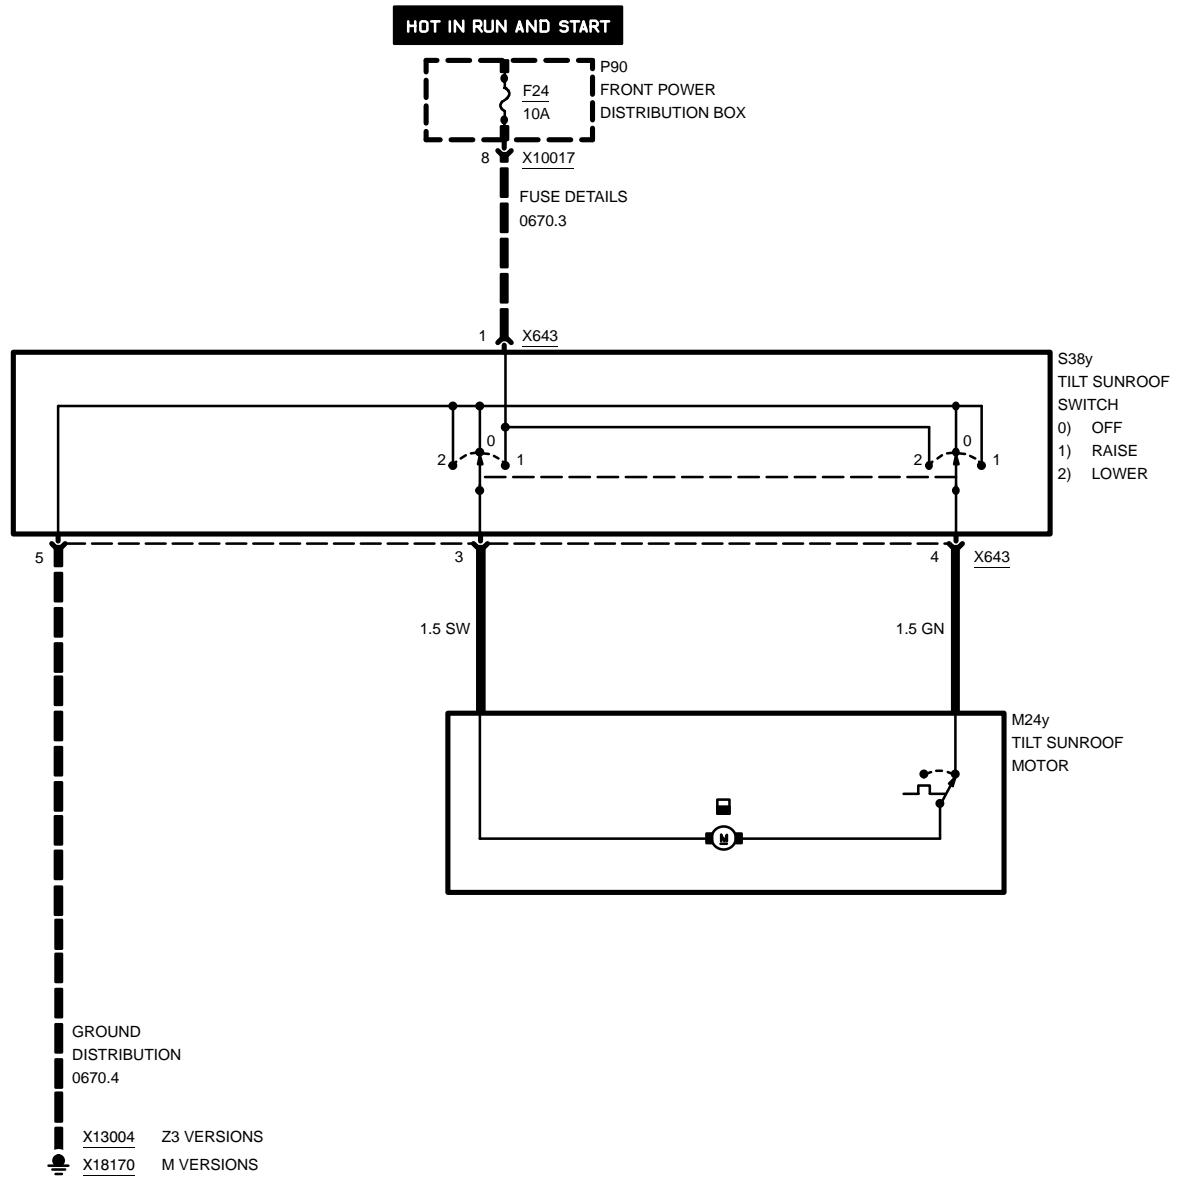




# 5430.2 ELECTRO-HYDRAULIC CONVERTIBLE TOP

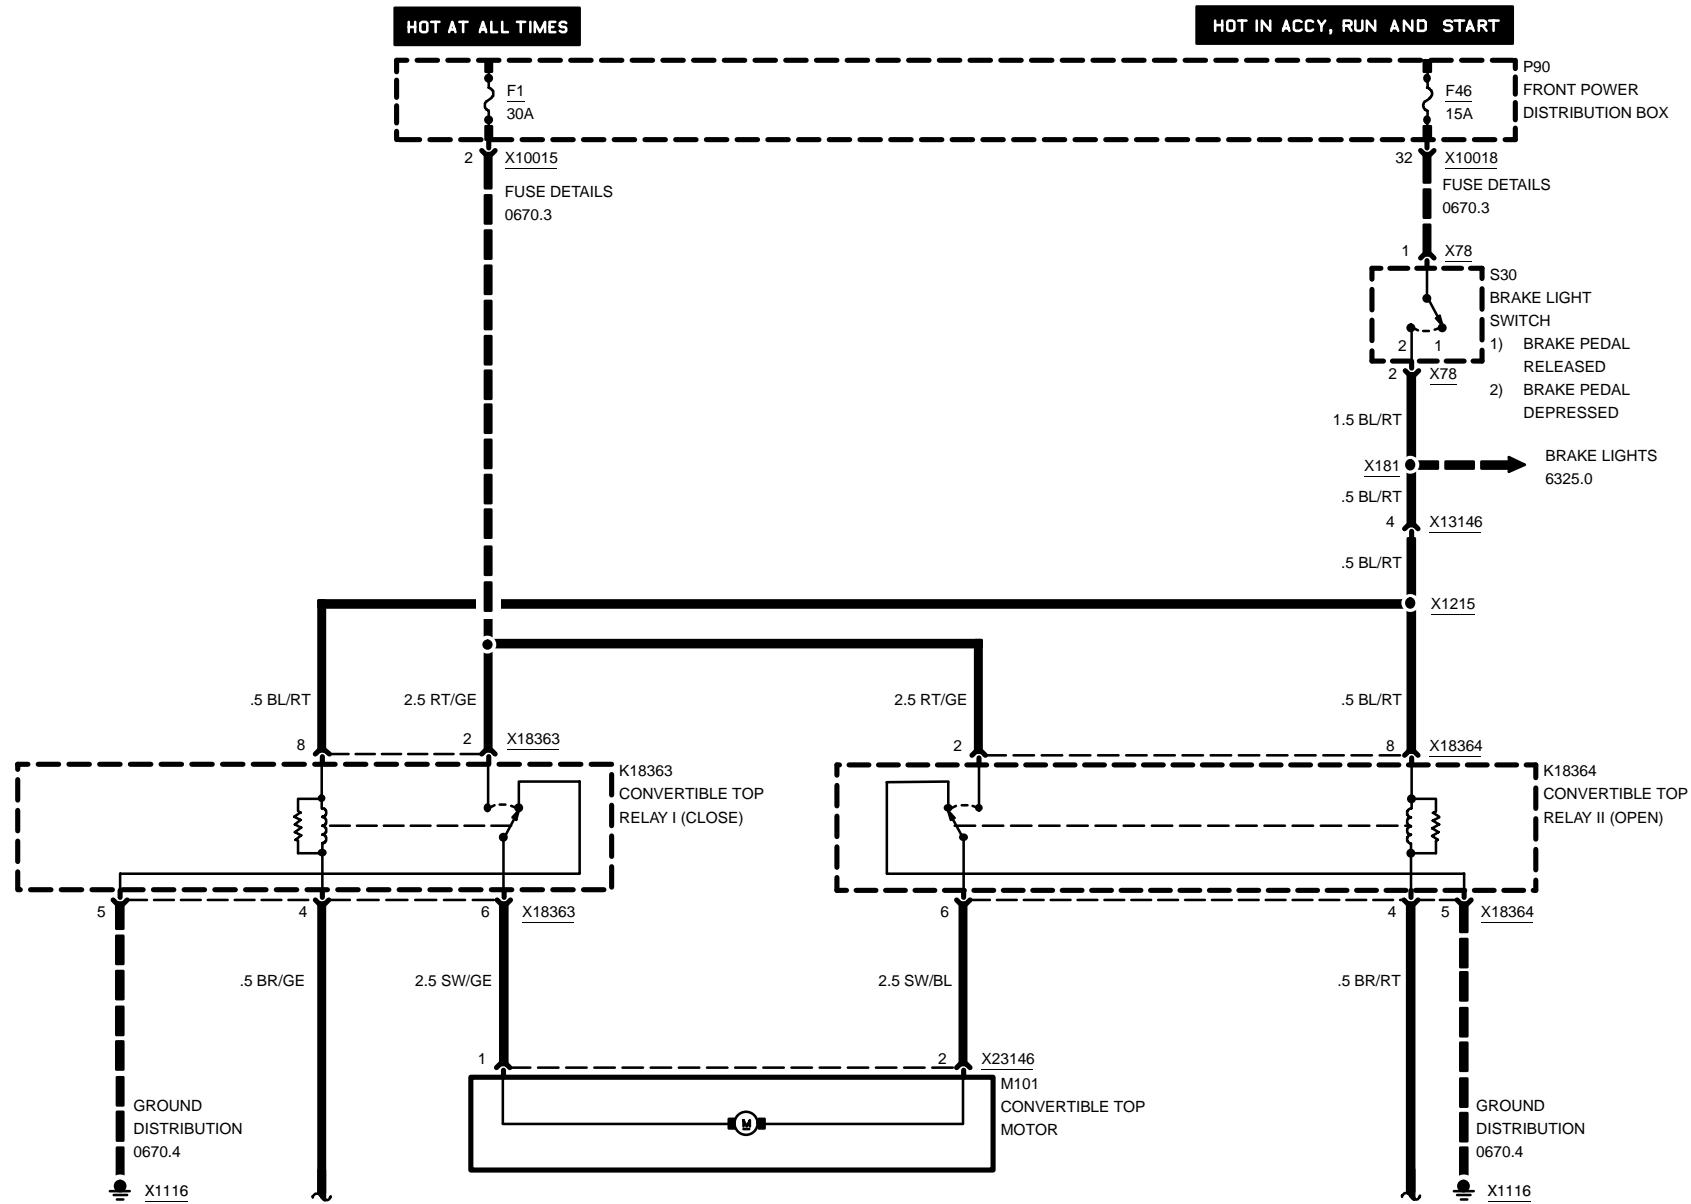

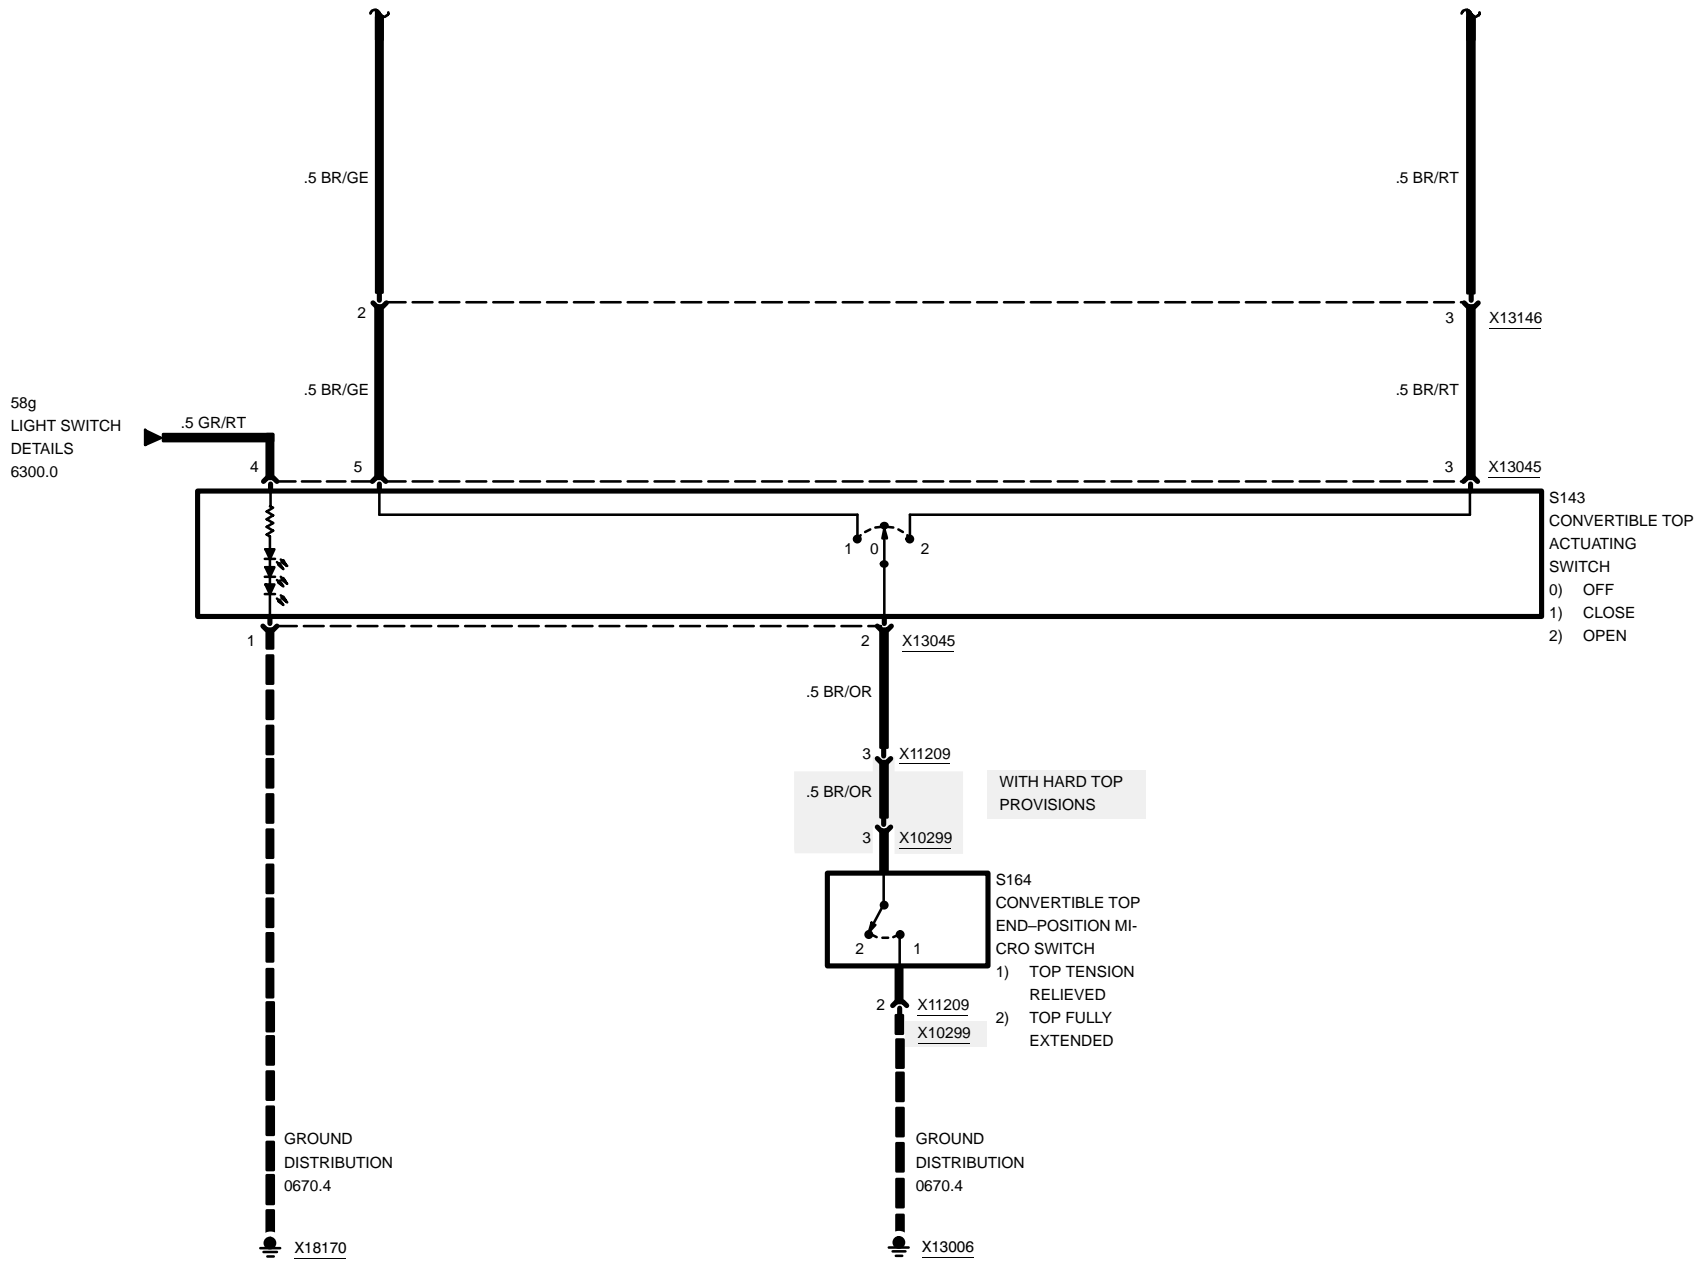


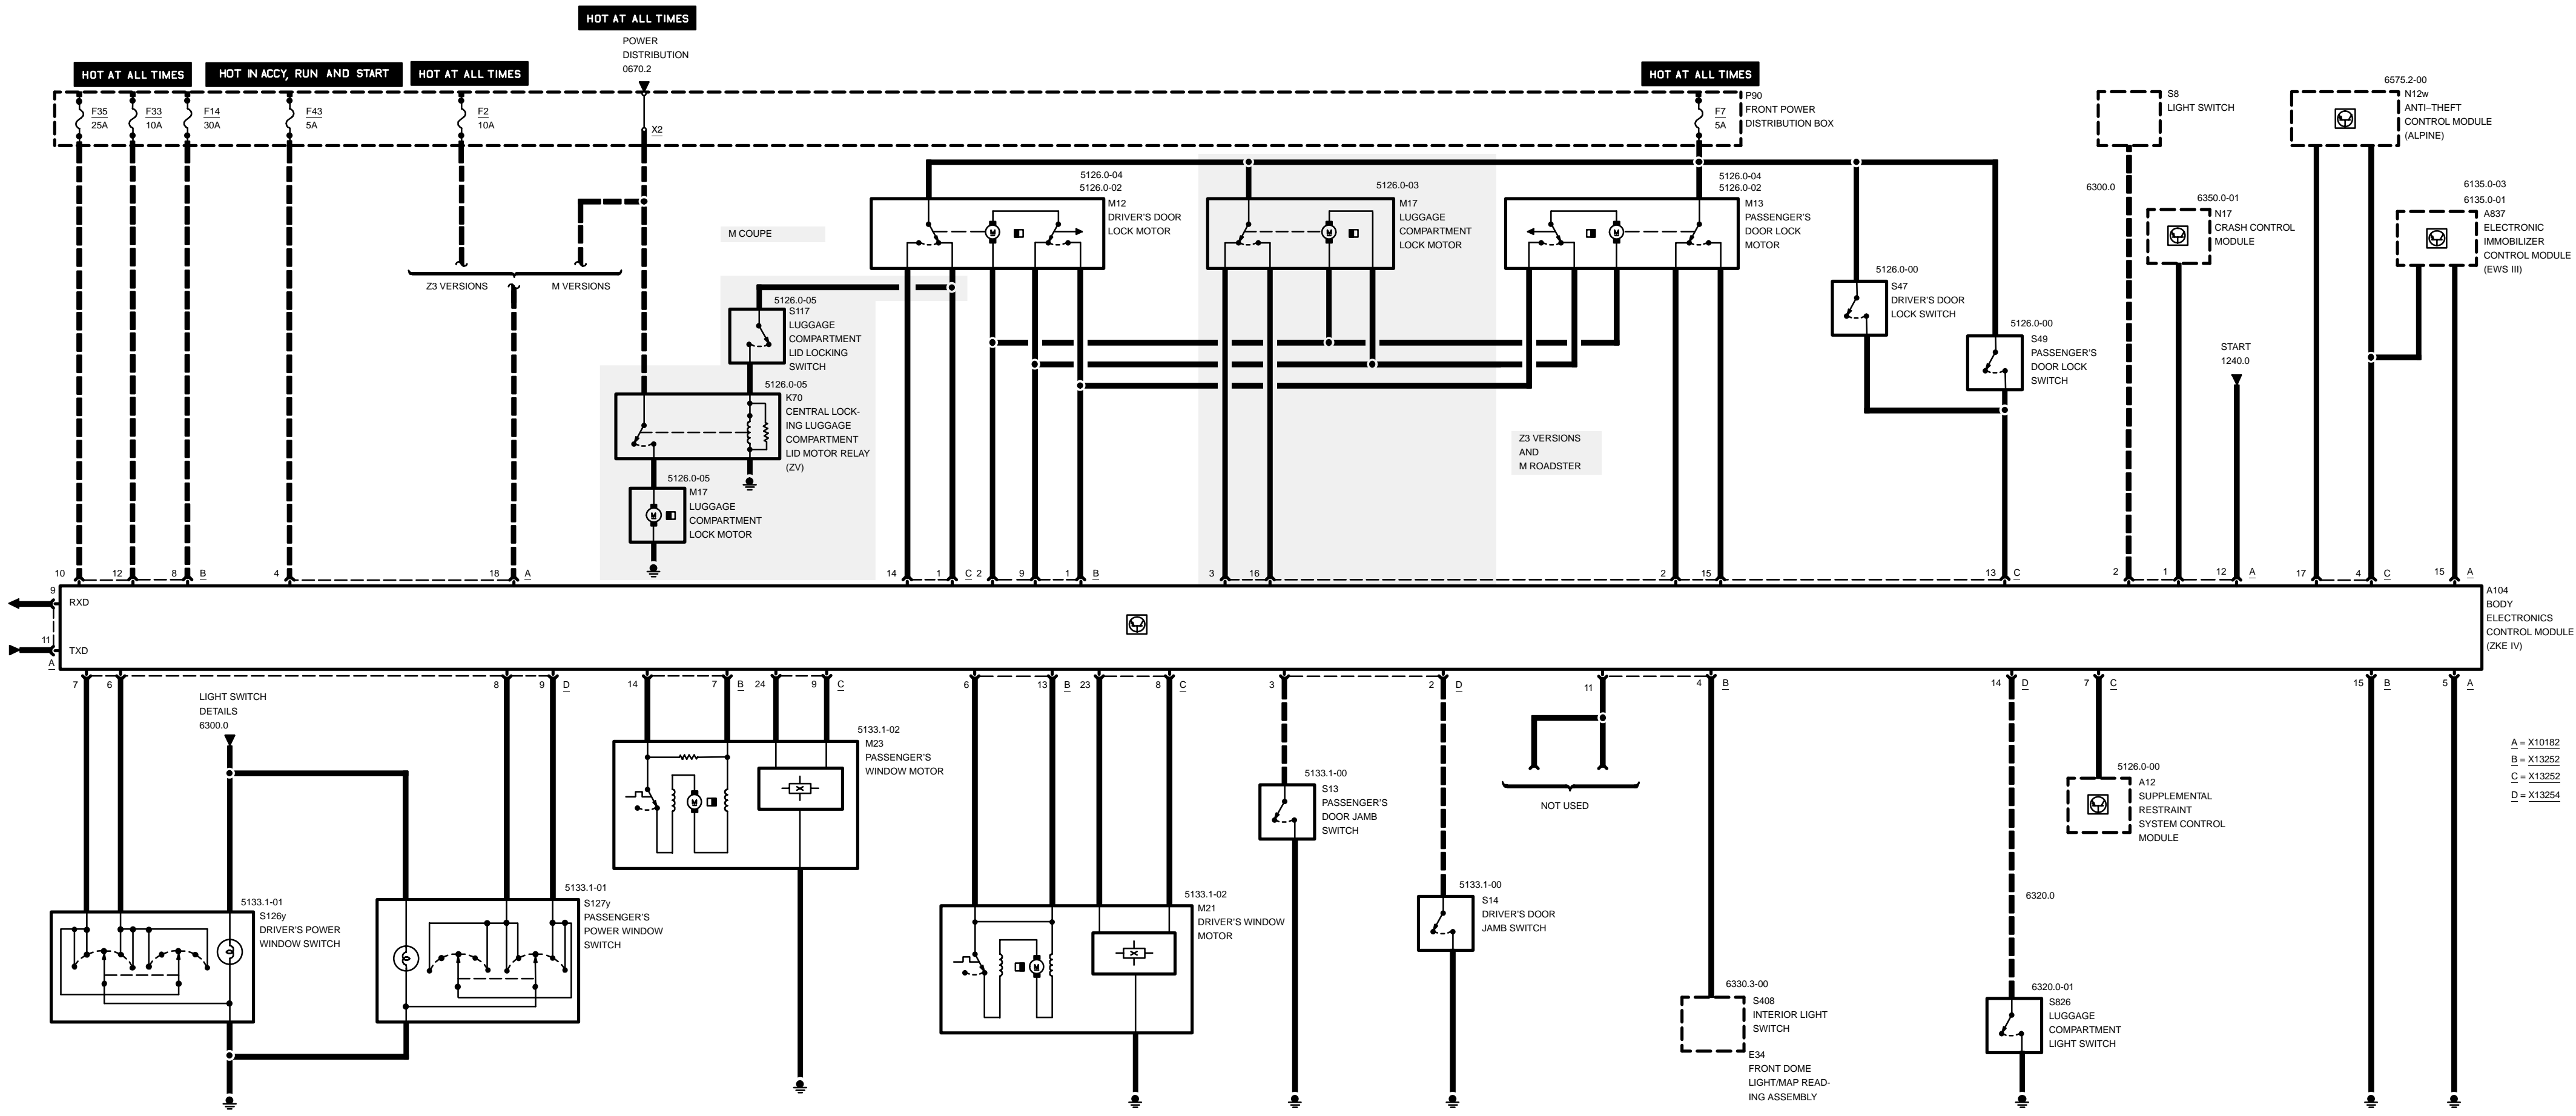





Z3

 

## Pin Assignments

F = X10182	18 Pins, black
G = X13252	15 Pins, black
H = X13253	26 Pins, yellow
I = X13254	26 Pins, green

 
### X10182

Pin	Type	Description/Function	Connection
1	E	Crash signal	Crash control module
2	E	Light signal	Light switch
3		Not used	
4	E	Power supply	Front power distribution box, fuse 43
5	M	Ground	Ground point
6		Not used	
7		Not used	
8		Not used	
9	A	Diagnosis RxD signal	Data link connector
10		Not used	
11	E/A	Diagnosis TxD signal	Data link connector
12	E	Start signal	Starter
13		Not used	
14		Not used	
15	A	Drive away protection	Electronic immobilizer control module (EWS III)
16		Not used	
17		Not used	
18	E	Power supply	Front power distribution box

E = Input, A = Output, M = Ground



Z3

**Pin Assignments****X13252**

Pin	Type	Description/Function	Connection
1	A	Central arrest signal	Lock motors
2	A	Unlock signal	Lock motors
3		Not used	
4	A	Automatic interior light signal	Interior light
5		Not used	
6	A	Voltage supply	Power window motor driver's door
7	A	Voltage supply	Power window motor passenger's door
8	E	Power supply	Front power distribution box, fuse 14
9	A	Lock signal	Lock motors
10	E	Power supply	Front power distribution box, fuse 35
11	A	Consumer cut-off signal	Not used
12	E	Power supply	Front power distribution box, fuse 33
13	E	Motor signal	Power window motor driver's door
14	E	Motor signal	Power window motor passenger's door
15	M	Ground	Ground point


**X13253**

 Pin	Type	Description/Function	Connection
1	E	Unlock signal	Door lock motor driver's door
2	E	Unlock signal	Door lock motor passenger's door
3	E	Unlock signal	Luggage compartment lock motor (Z3 Versions and M Roadster)
4	E	Data signal	Anti-theft system control module (Alpine)
5		Not used	
6		Not used	
7	E	Crash signal	Supplemental restraint system control module
8	E	Revolution signal	Power window motor driver's door
9	E	Revolution signal	Power window motor passenger's door

E = Input, A = Output, M = Ground



Z3

**Pin Assignments**

Pin	Type	Description/Function	Connection
10		Not used	
11		Not used	
12		Not used	
13	E	Central arrest signal	Door lock switches
14	E	Lock signal driver's door	Door lock motor driver's door
15	E	Lock signal passenger's door	Door lock motor passenger's door
16	E	Lock signal luggage compartment lid	Luggage compartment lock motor (Z3 Versions and M Roadster)
17	E	Data signal	Anti-theft system control module (Alpine)
18		Not used	
19		Not used	
20		Not used	
21		Not used	
22		Not used	
23	A	Plus supply (revolution)	Power window's motor driver's side
24	A	Voltage supply (revolution)	Power window's motor passenger's side
25		Not used	
26		Not used	

**X13254**

Pin	Type	Description/Function	Connection
1		Not used	
2	E	Door signal	Door jamb switch driver's door
3	E	Door signal	Door jamb switch passenger's door
4		Not used	
5		Not used	
6	E	OPEN signal	Power window switch driver's door
7	E	CLOSE signal	Power window switch driver's door
8	E	OPEN signal	Power window switch passenger's door
9	E	CLOSE signal	Power window switch passenger's door
10		Not used	

E = Input, A = Output, M = Ground

 


03/00

6100.0-d

1999

Z3



## Pin Assignments


Pin	Type	Description/Function	Connection
11		Not used	
12		Not used	
13		Not used	
14	E	Luggage compartment signal	Luggage compartment light switch
15		Not used	
16		Not used	
17		Not used	
18		Not used	
19		Not used	
20		Not used	
21		Not used	
22		Not used	
23		Not used	
24		Not used	
25		Not used	
26		Not used	

E = Input, A = Output, M = Ground



Z3

# CENTRAL BODY ELECTRONICS (ZKE IV)

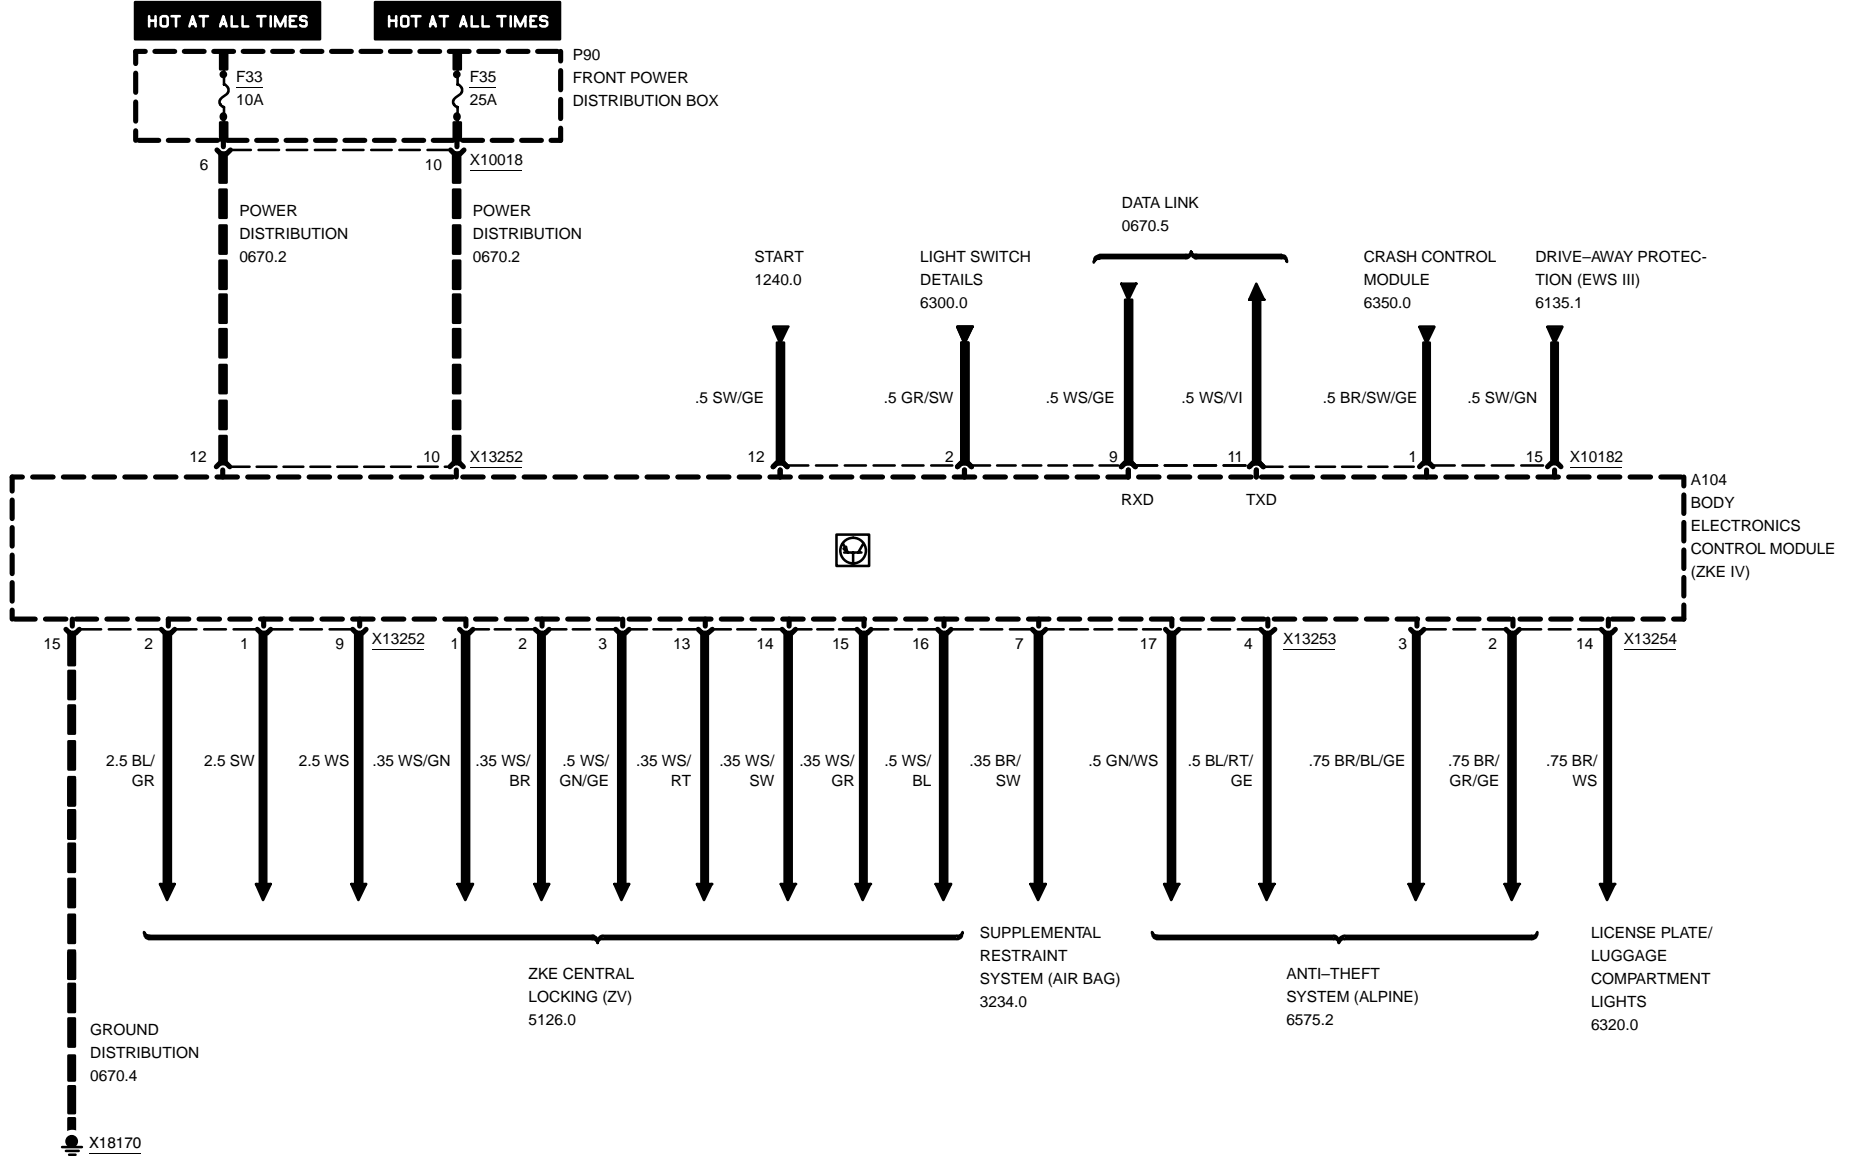



Z3

# CENTRAL BODY ELECTRONICS (ZKE IV)

**HOT AT ALL TIMES**

POWER  
DISTRIBUTION  
0670.2


**HOT AT ALL TIMES**

**HOT IN ACCY, RUN AND START**


**HOT AT ALL TIMES**

P90  
FRONT POWER  
DISTRIBUTION BOX

NOT USED

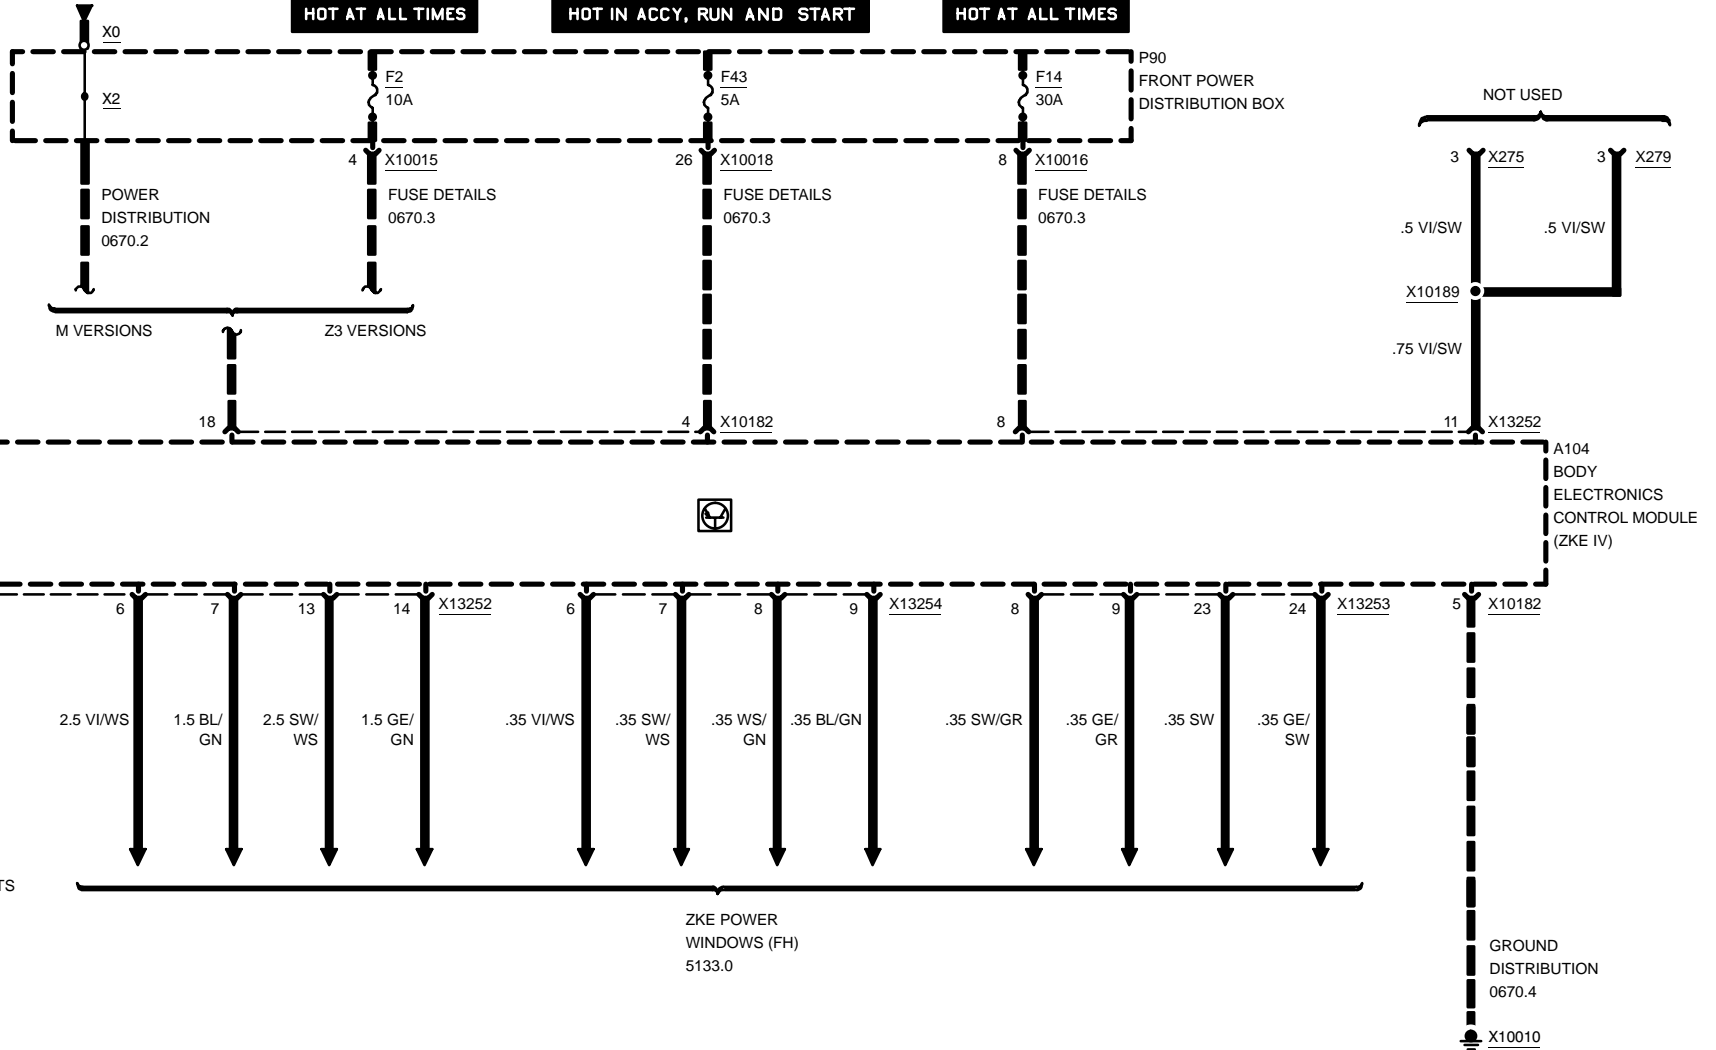

# 6133.0 HORN

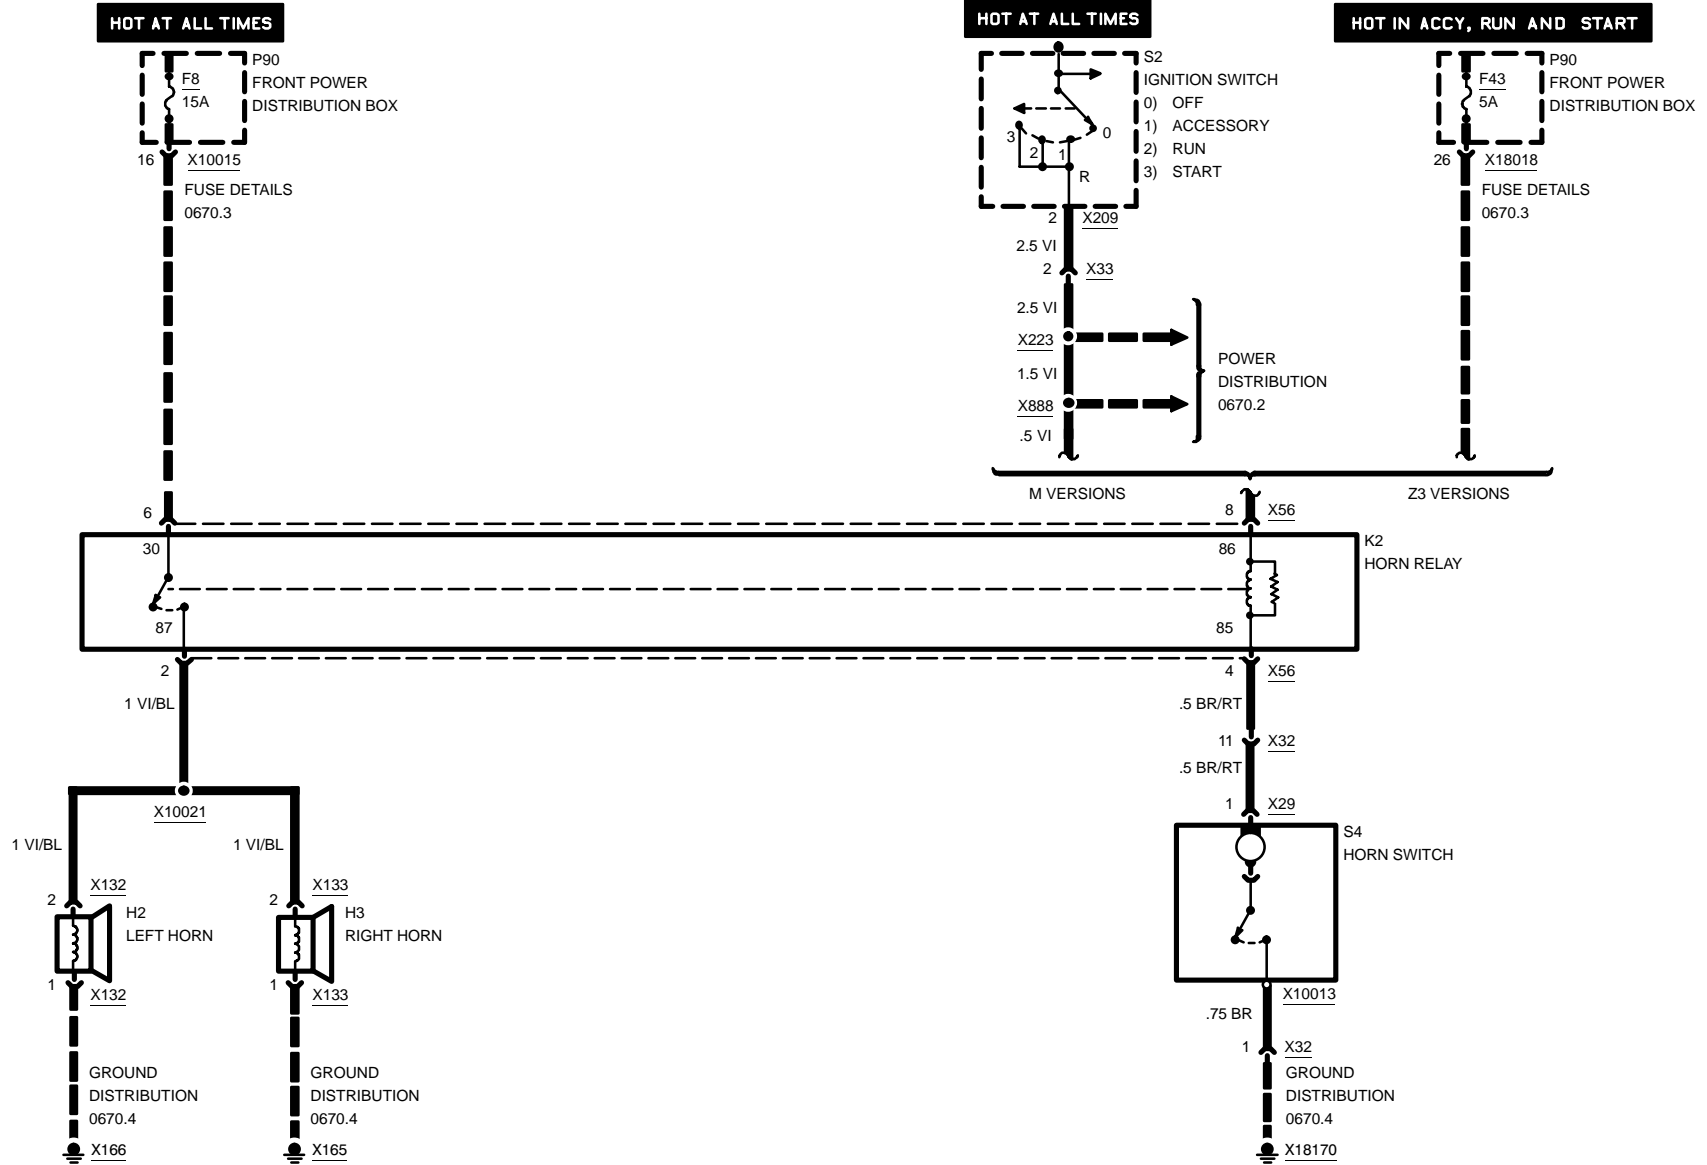





# 6135.1 DRIVE-AWAY PROTECTION (EWS III)

## M VERSIONS

Z3

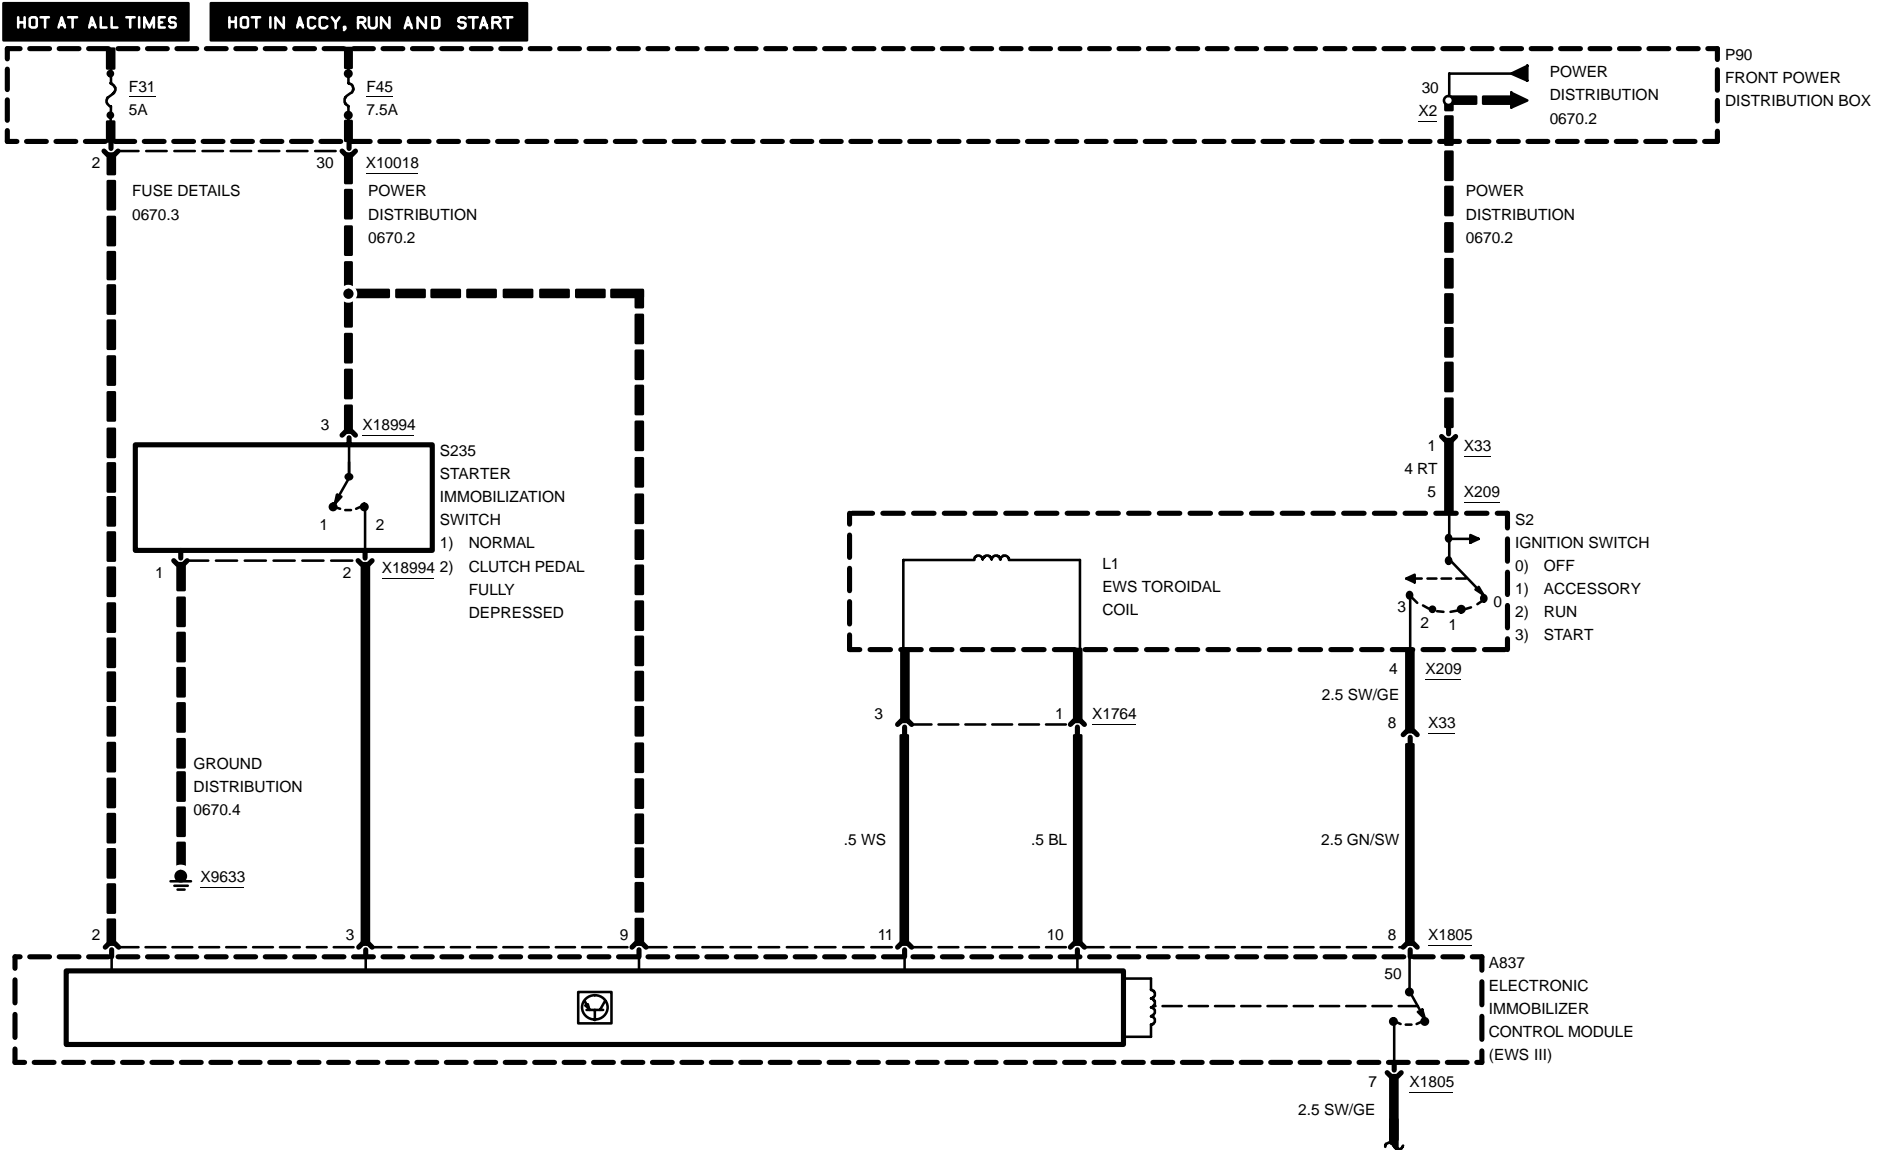



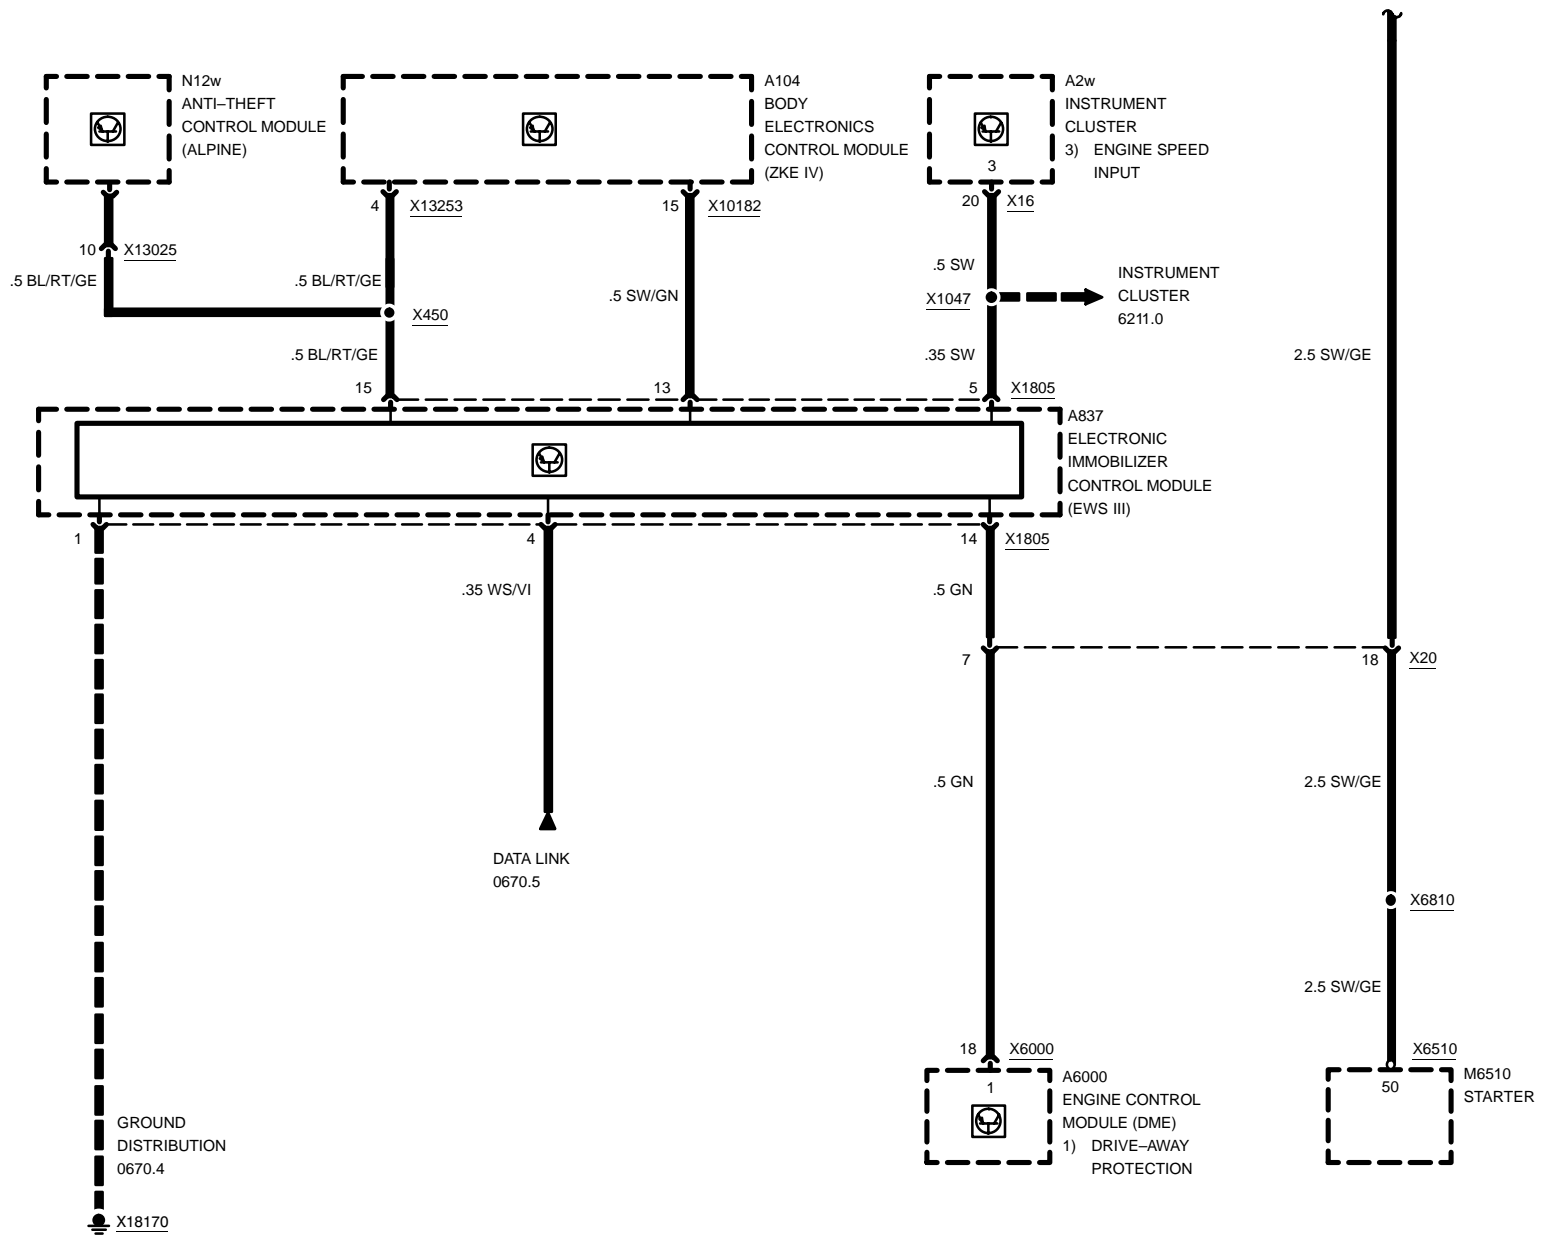




# DRIVE-AWAY PROTECTION (EWS III)

## Z3 VERSIONS


Z3

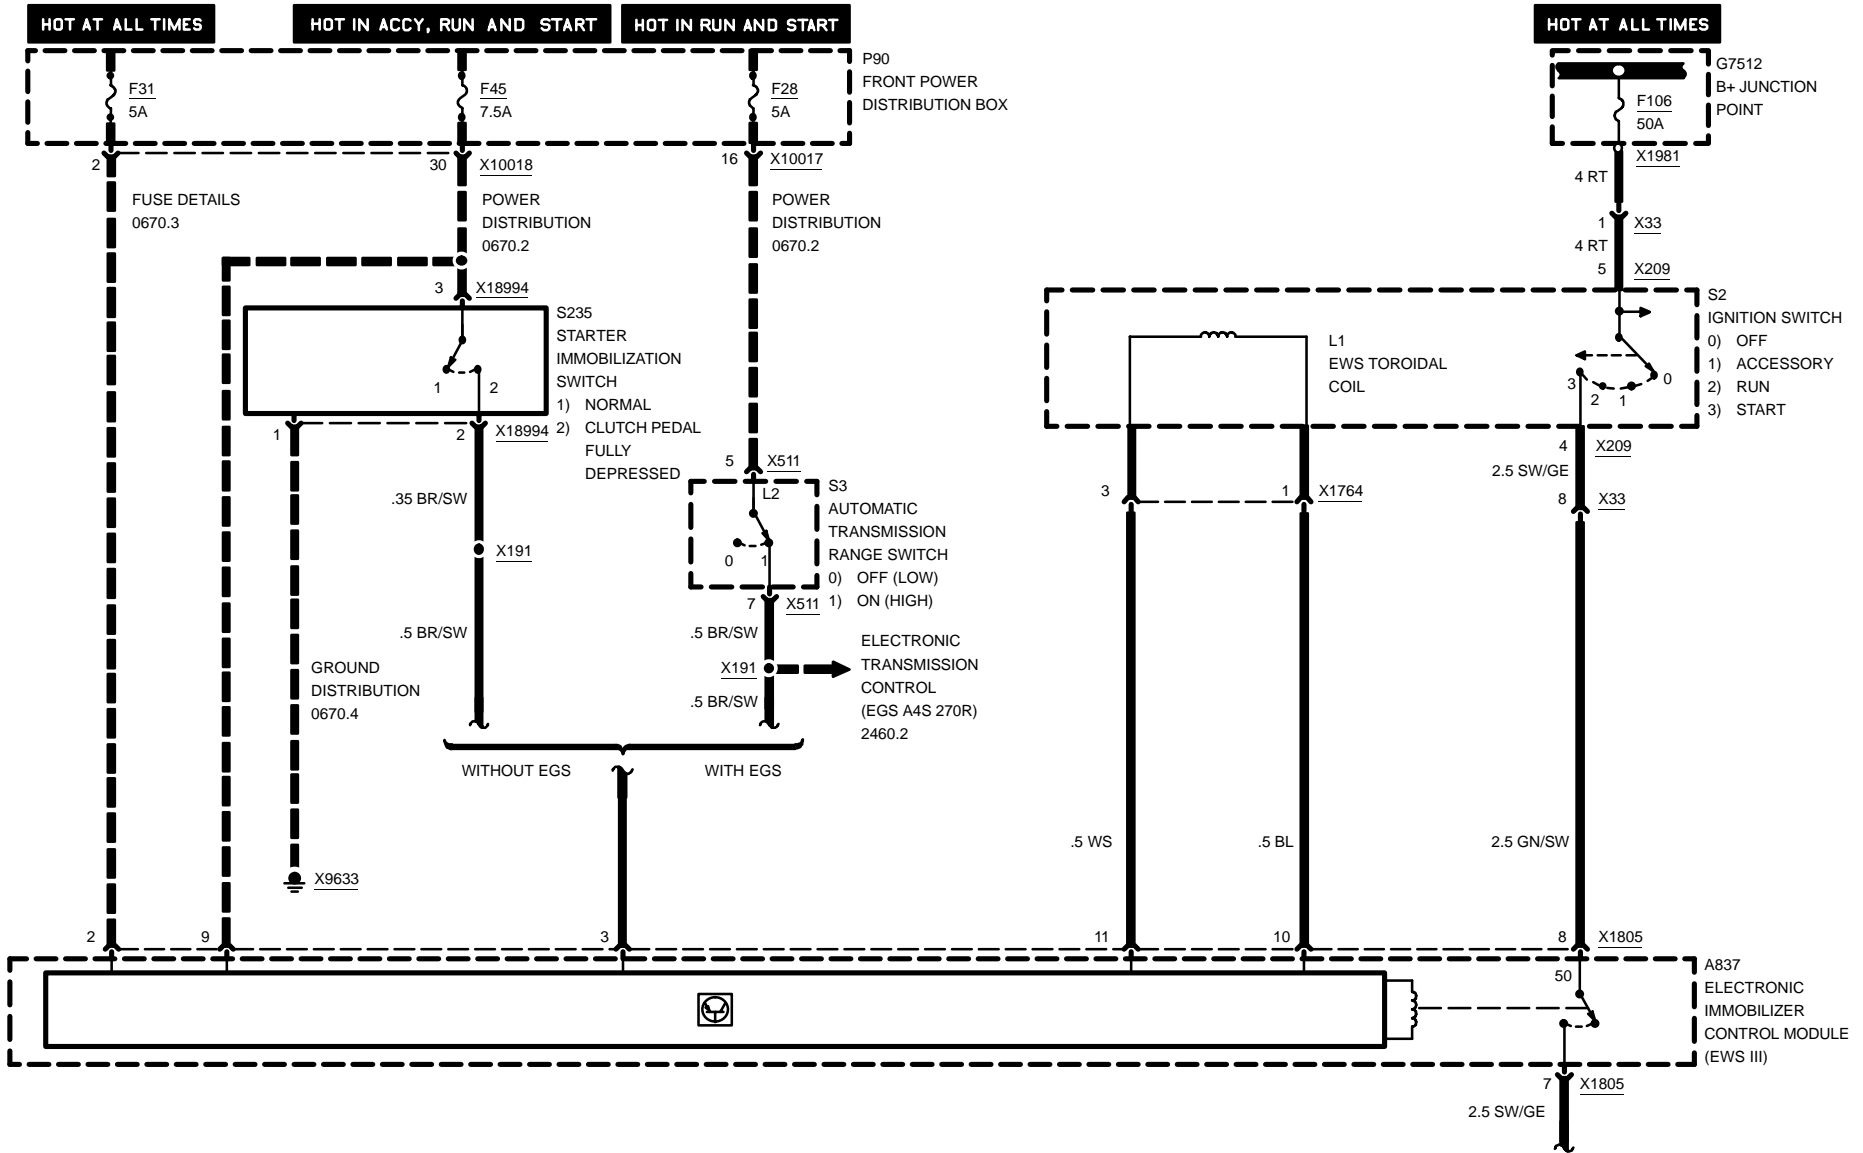

03/00


6135.1-02

1999

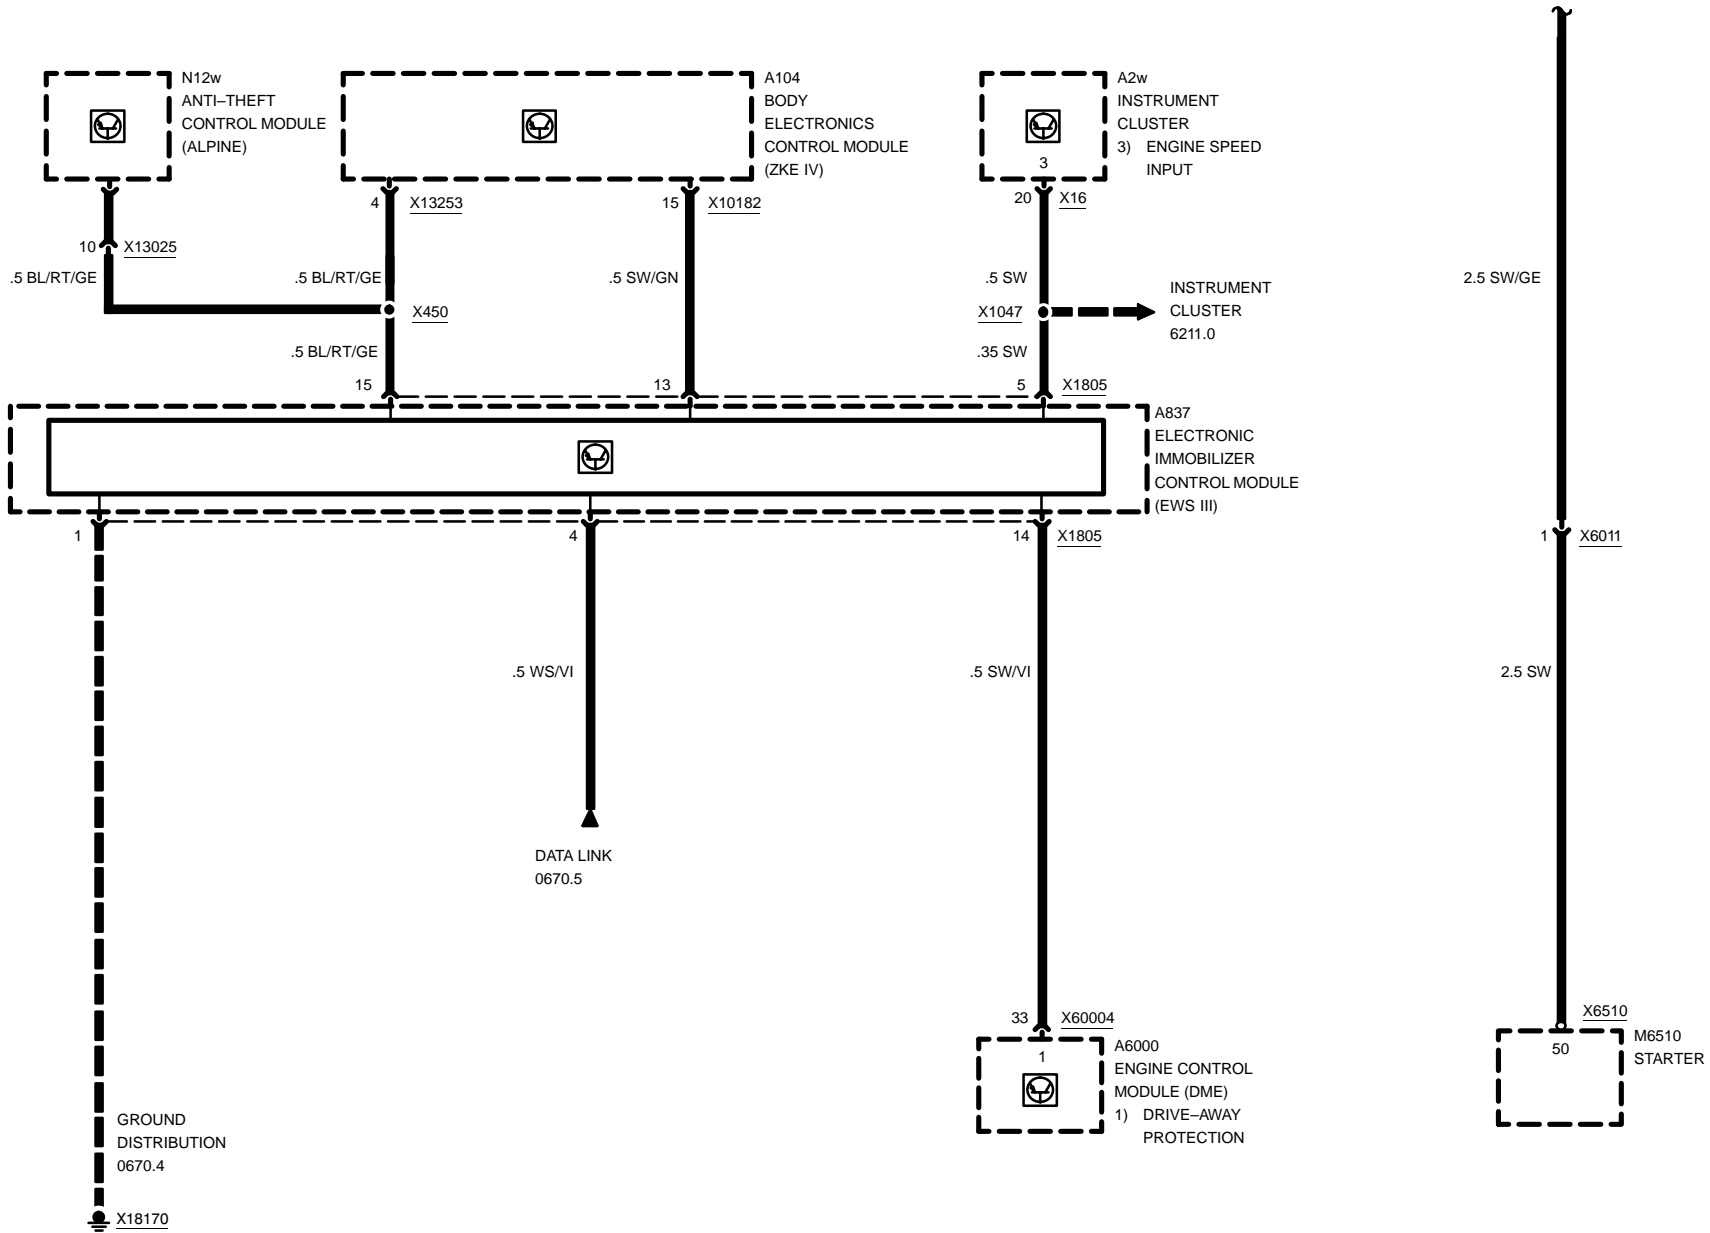

# 6160.1 WIPER/WASHER MODULE (WWM)

**HIGH**

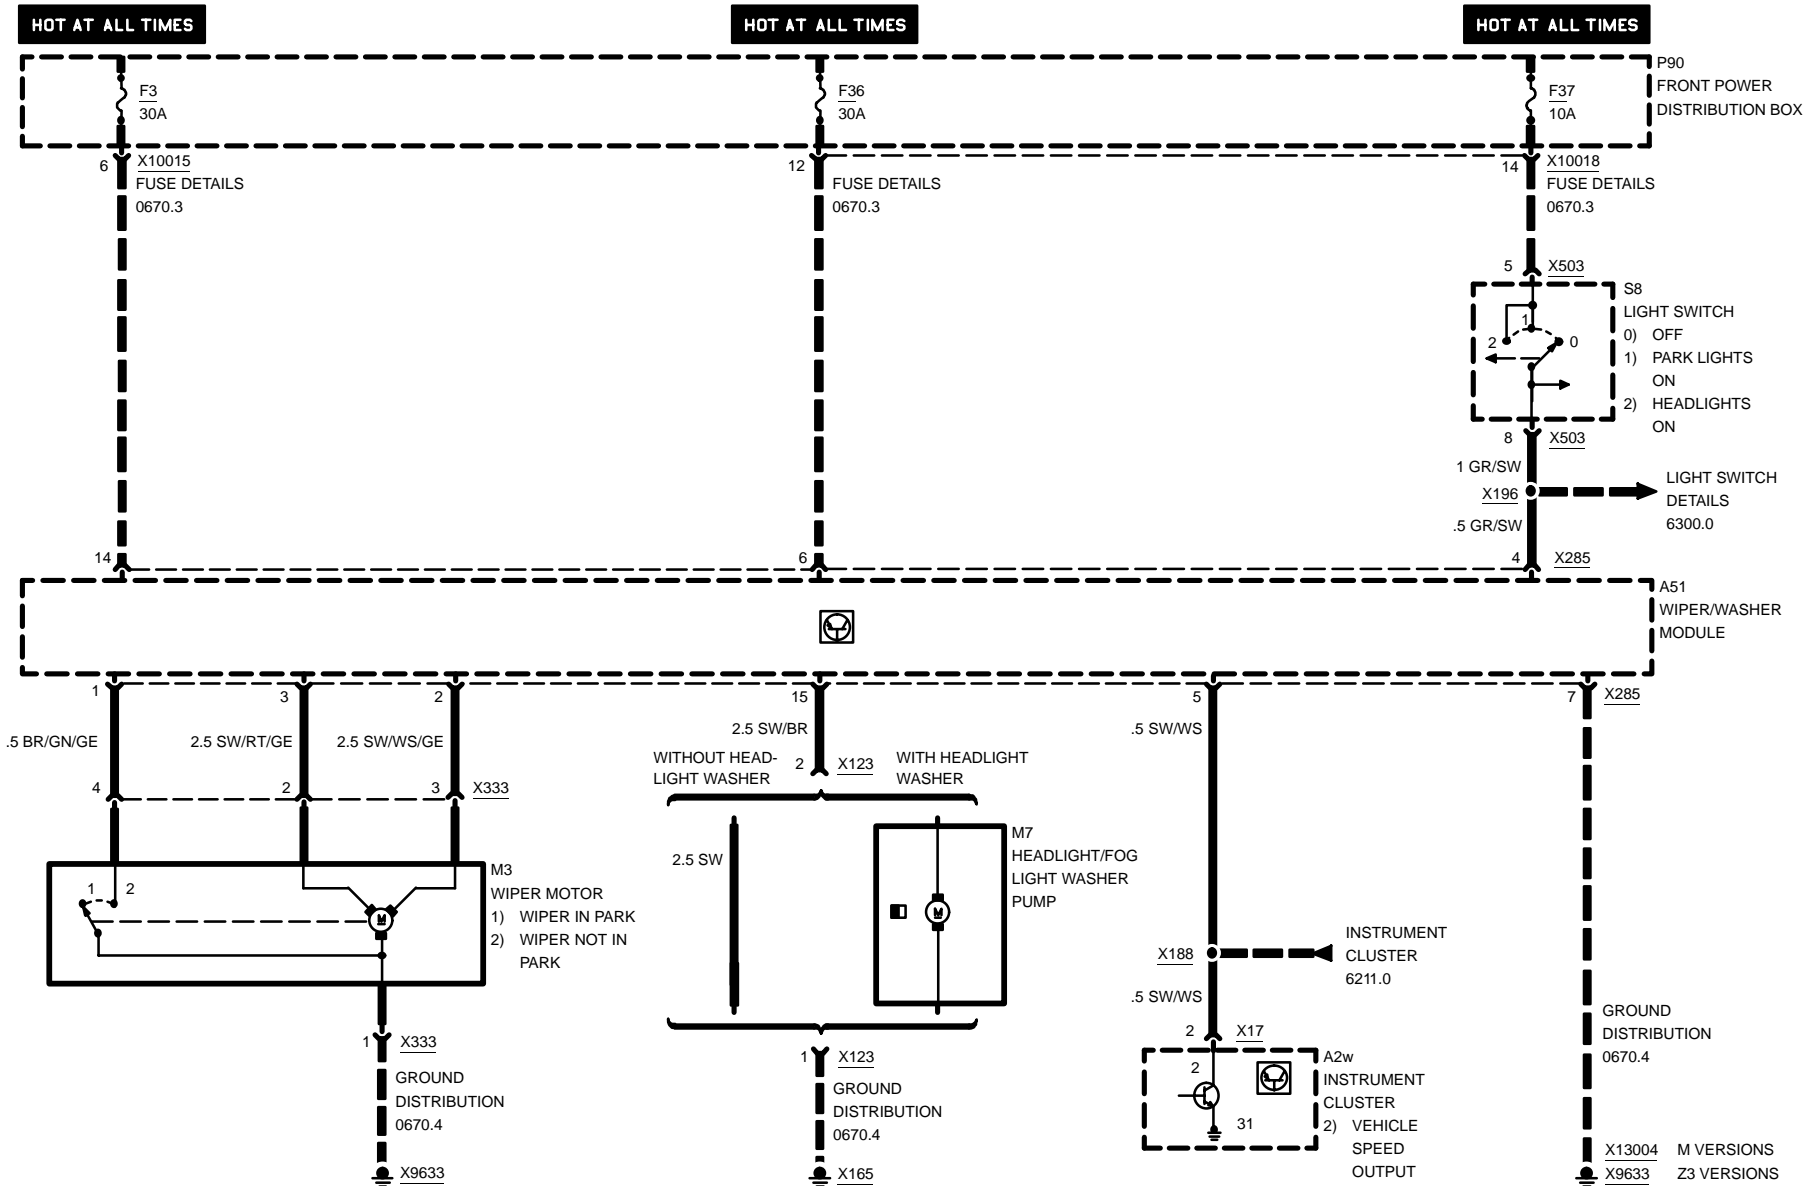




# WIPER/WASHER MODULE (WWM)

## HIGH

## ROADSTER

HOT IN ACCY, RUN AND START

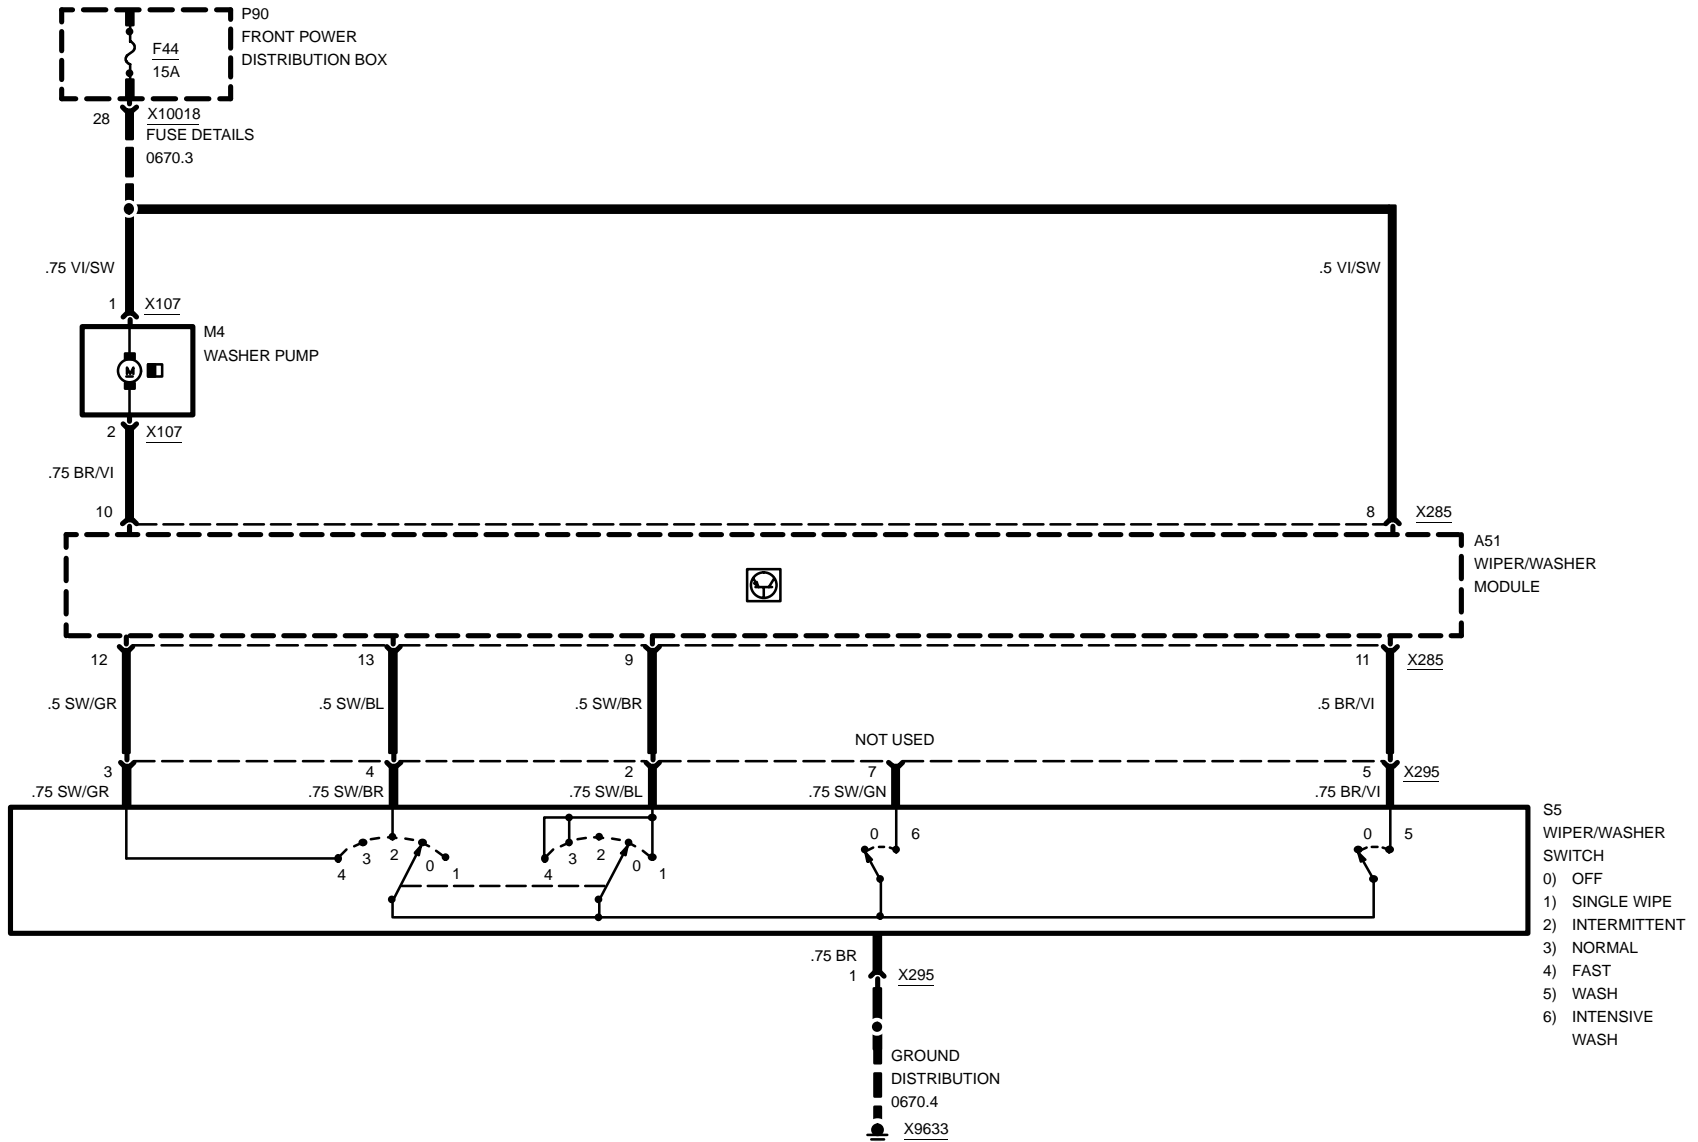

03/00

6160.1-01

1999




# WIPER/WASHER MODULE (WWM)

## WIPER/WASHER (HIGH)

Z3

COUPE

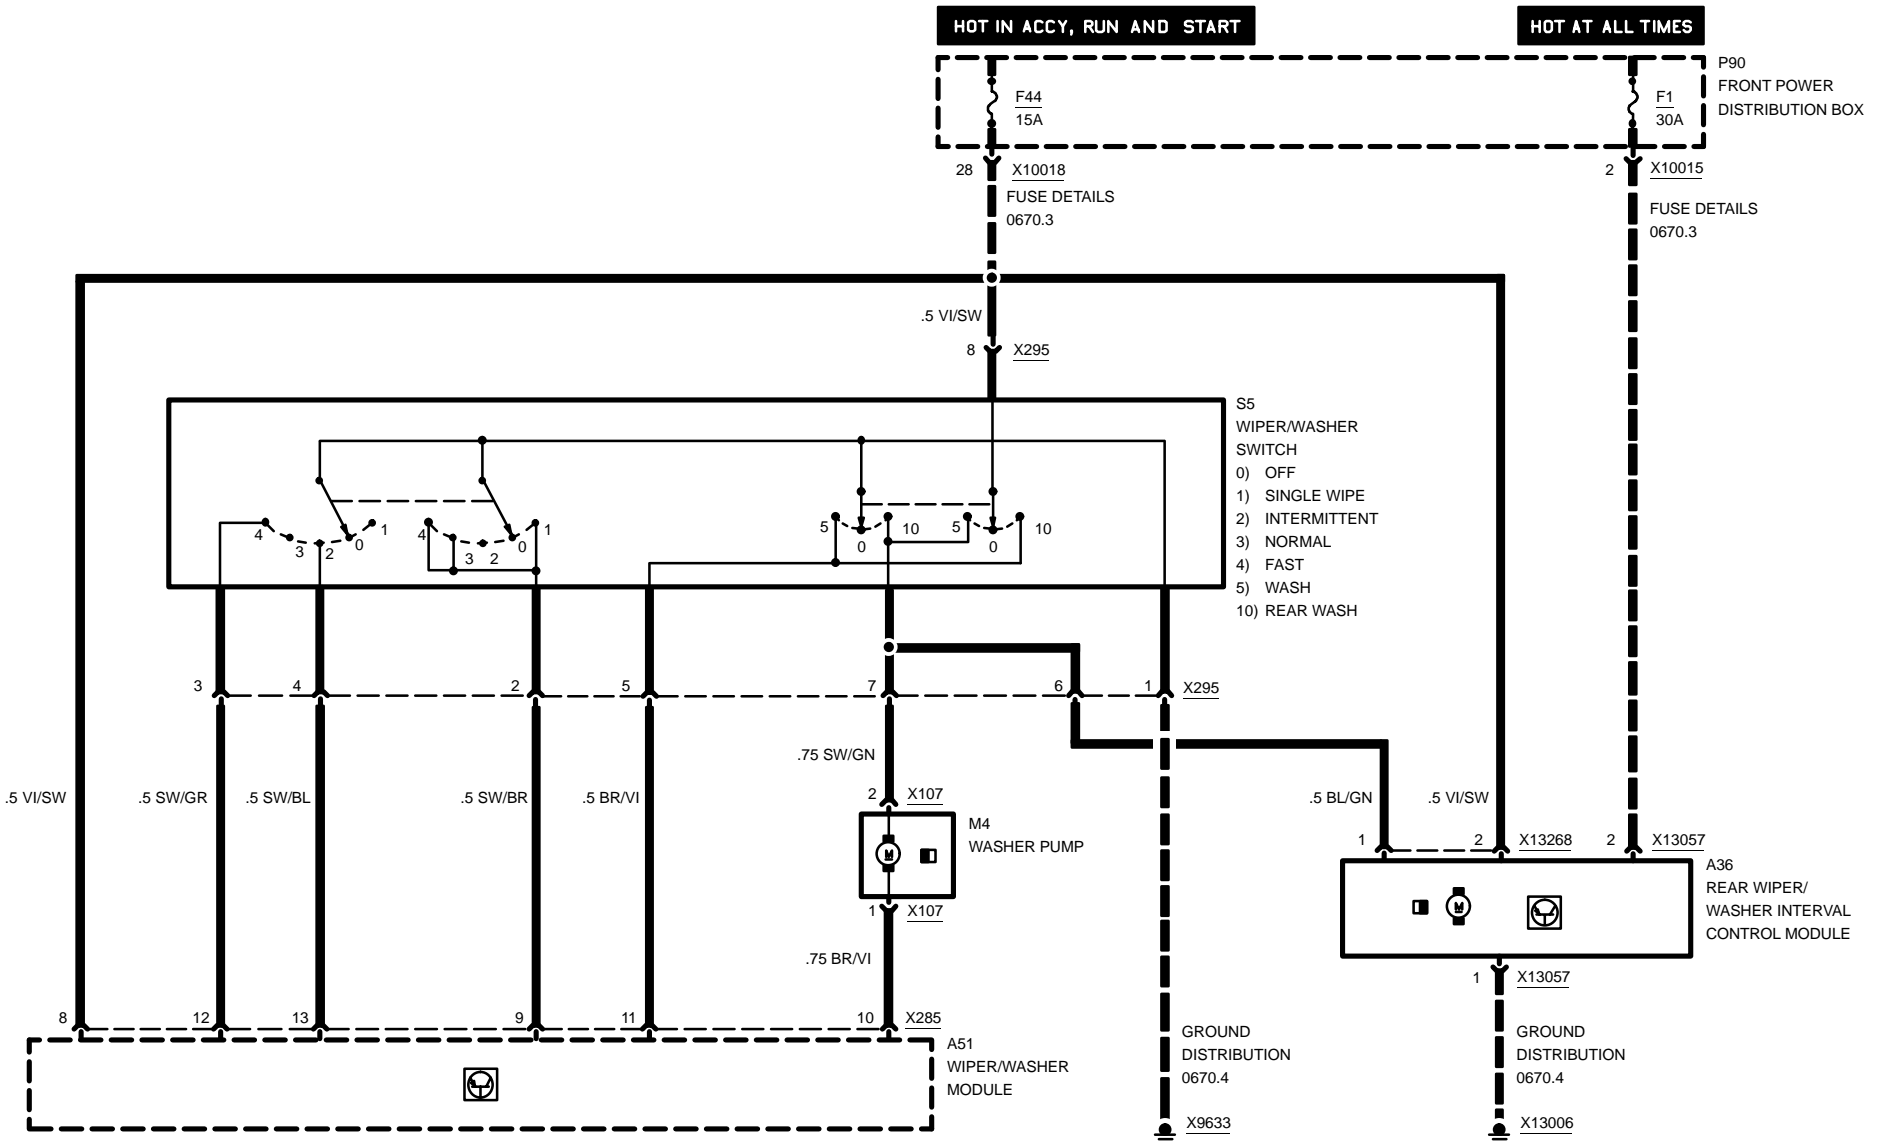


03/00

6160.1-02

1999


# 6167.1 HEADLIGHT WASHER (SRA)

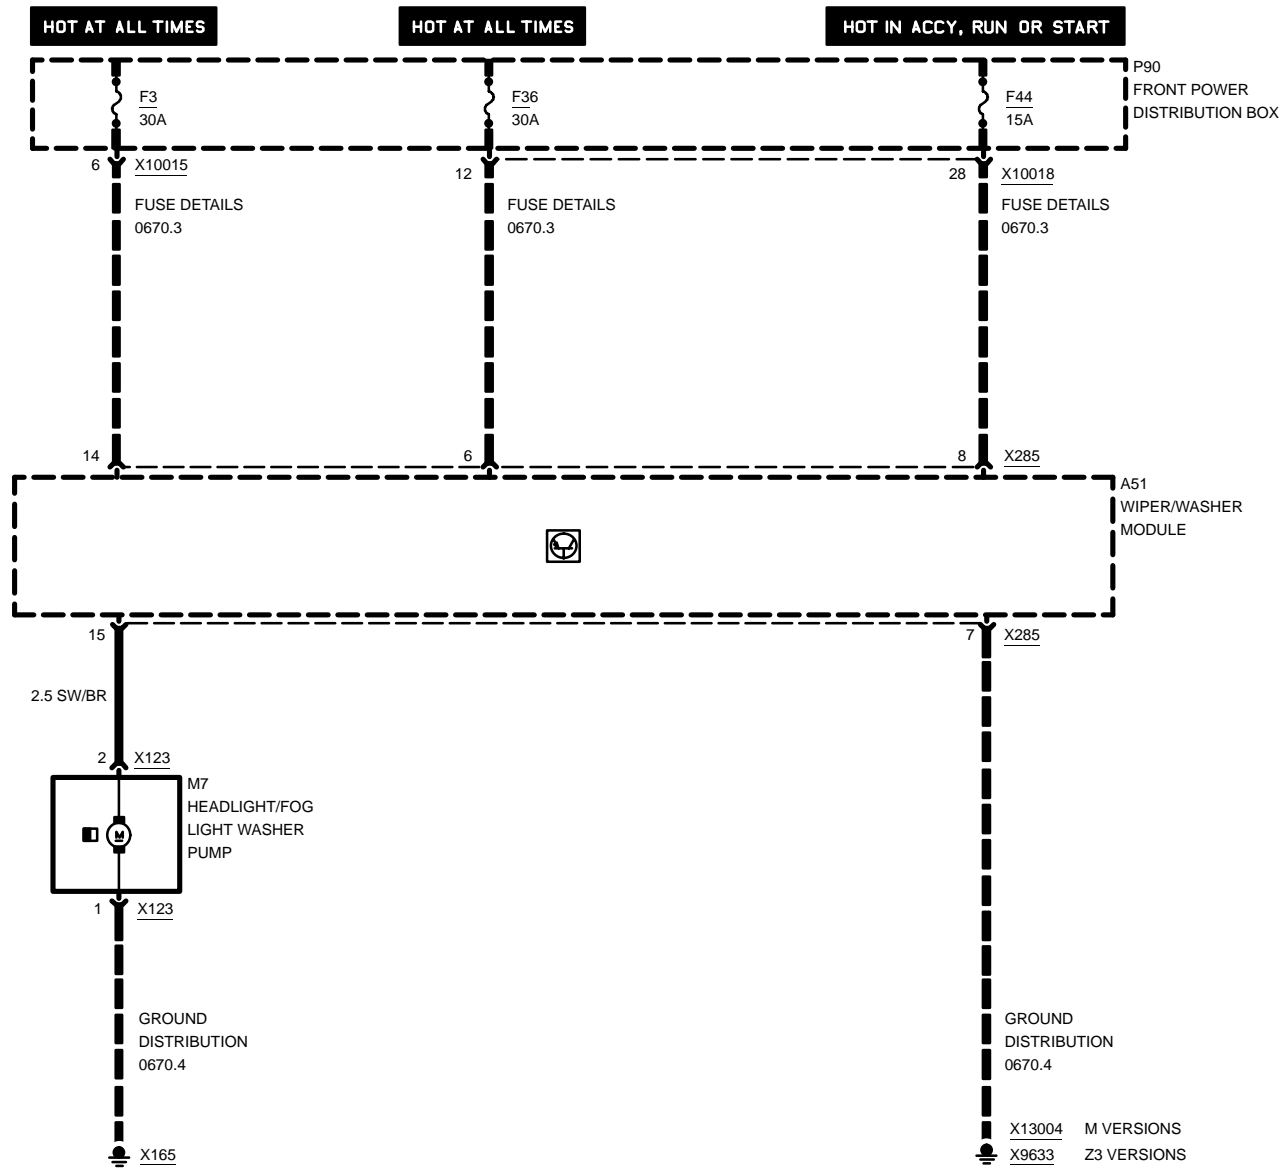




Z3

# 6169.0 WINDSHIELD WASHER JET HEATERS

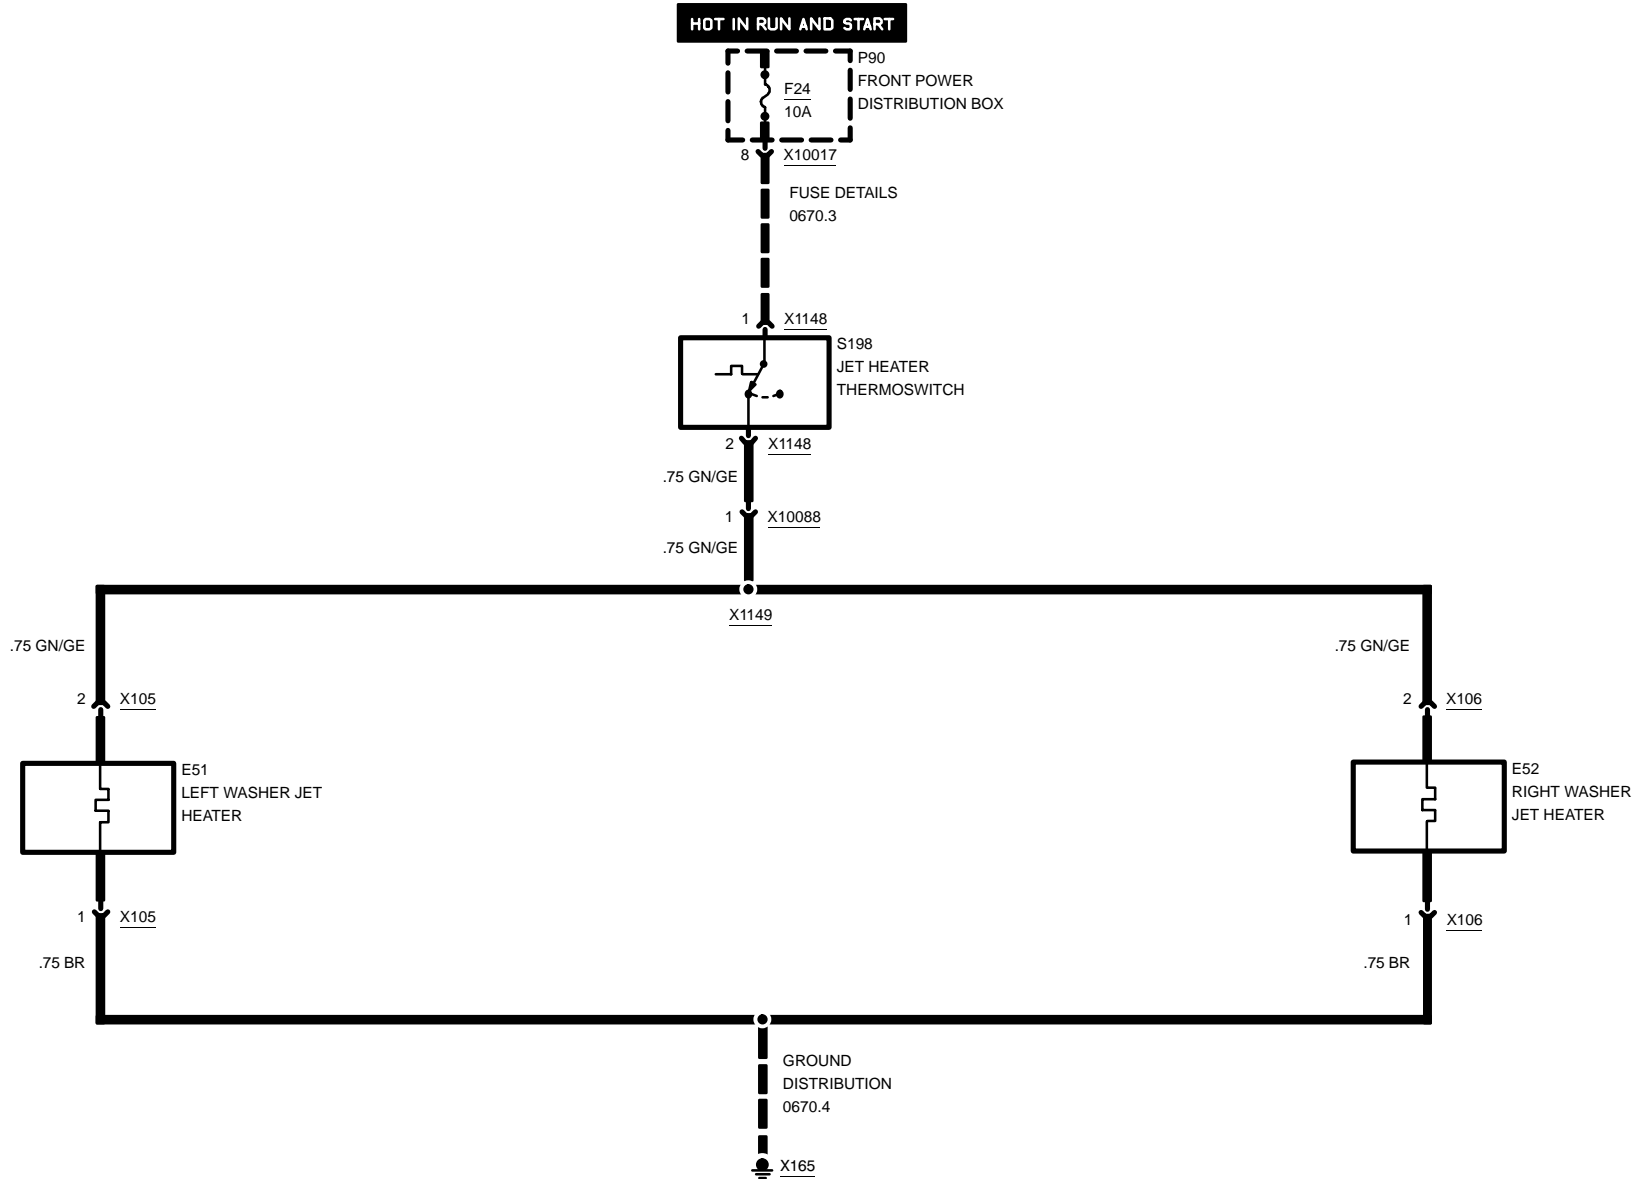




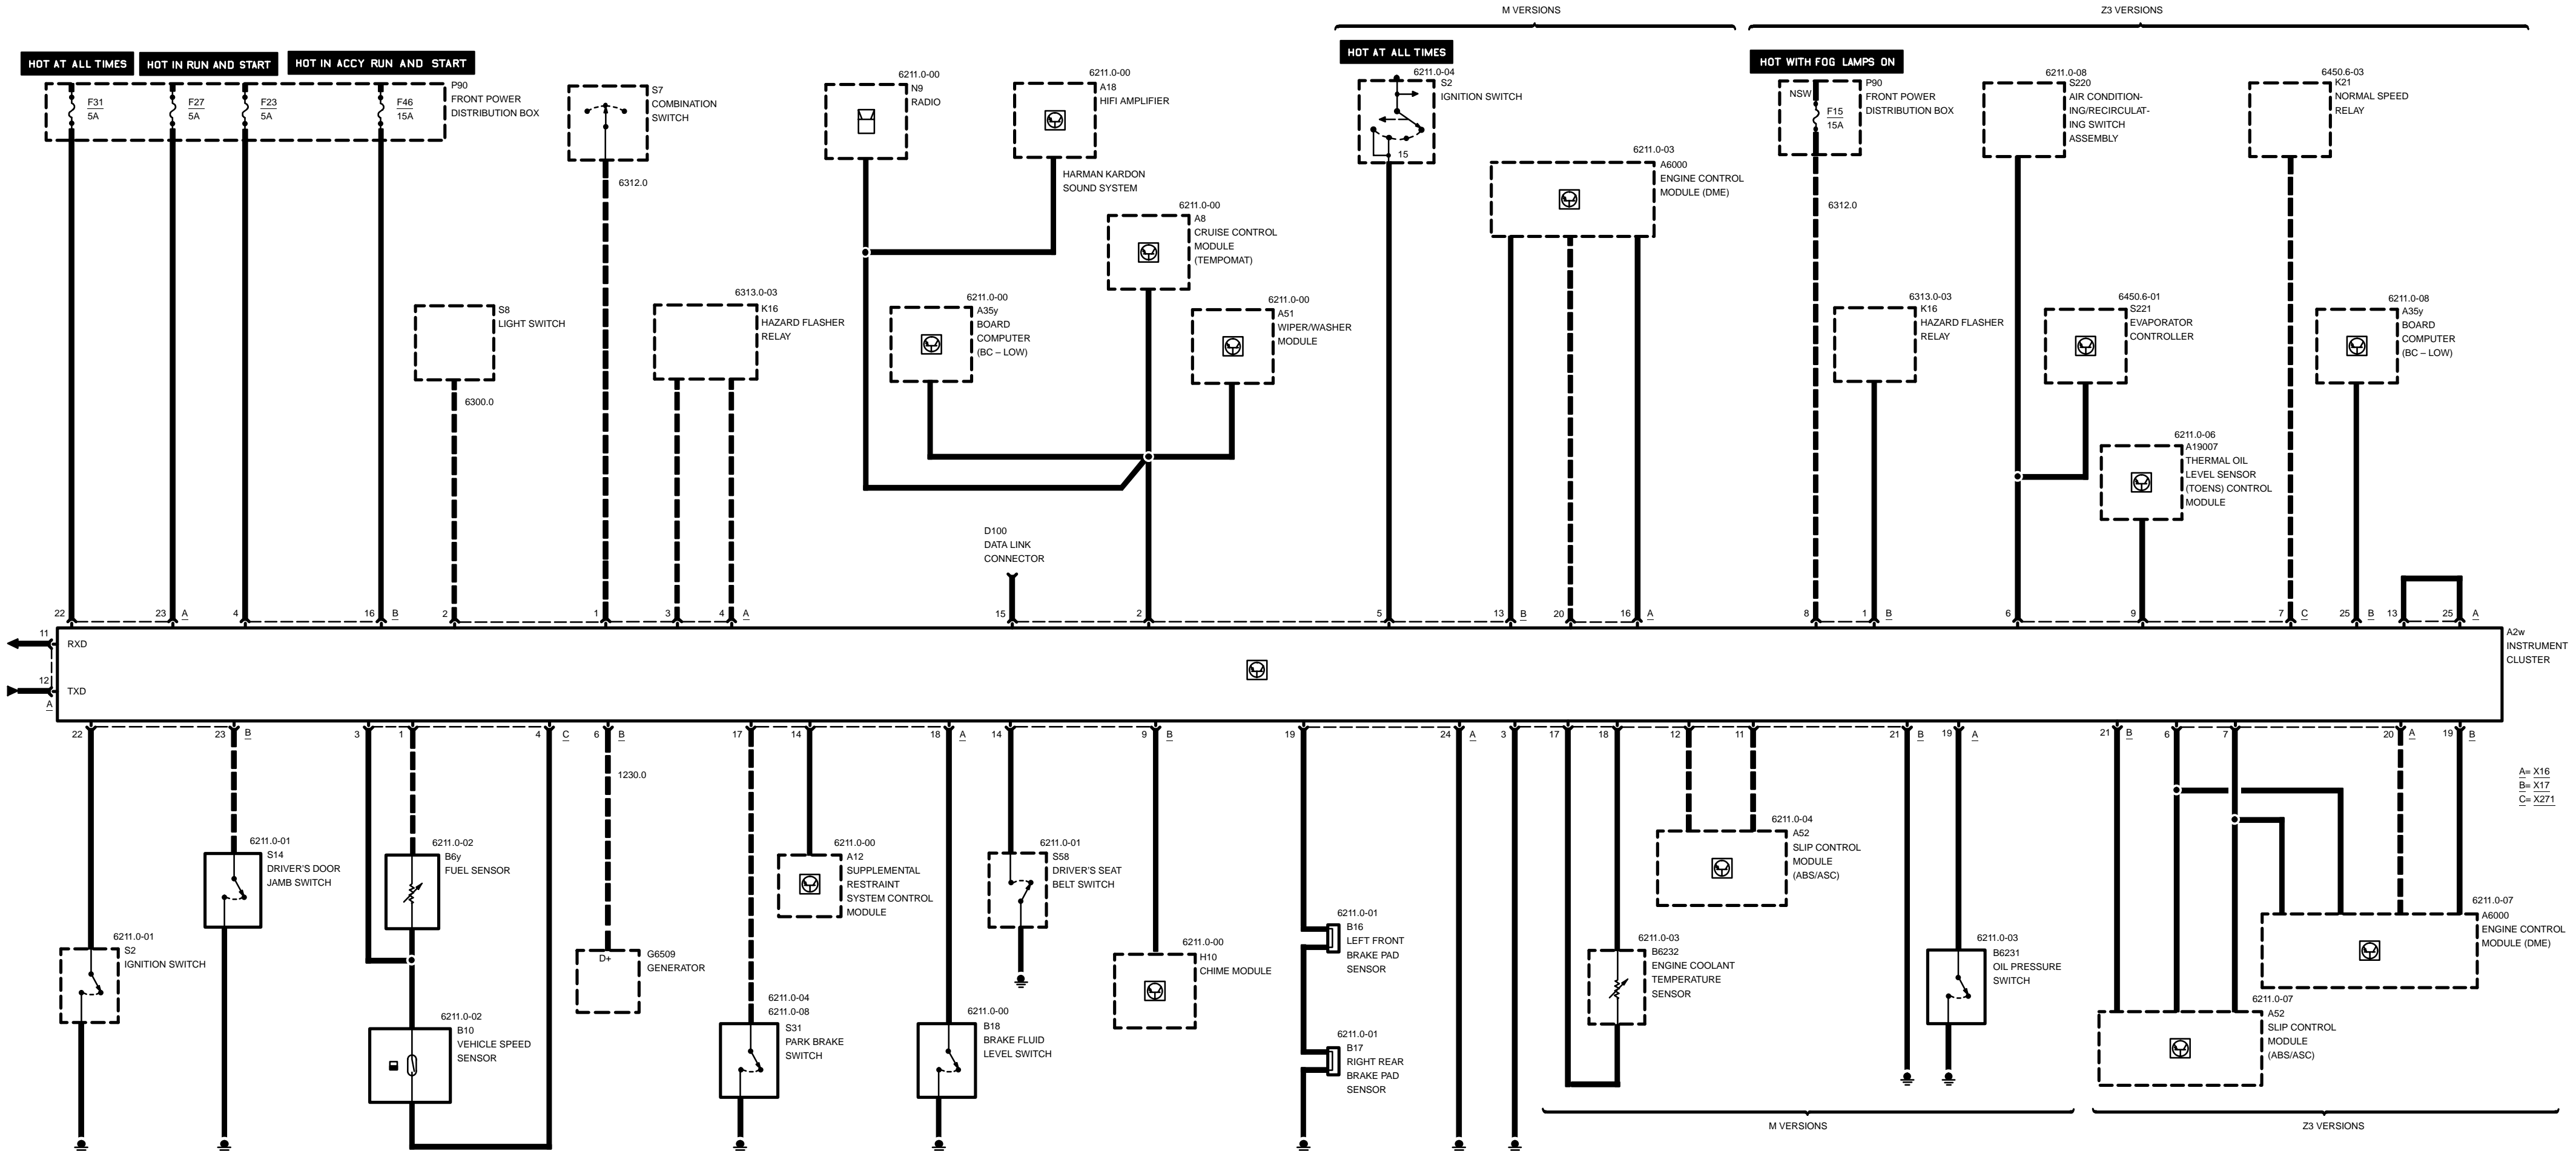



Z3

 

## Pin Assignments

 
### X16

Pin	Type	Description/Function	Connection
1	E	High beam indicator control	Combination switch
2	E	Terminal 58g, instrument illumination power	Light switch (dimmer)
3	E	Right turn signal indicator control	Hazard flasher relay
4	E	Left turn signal indicator control	Hazard flasher relay
5		Not used	
6	E/A	CAN bus high	Engine/slip control module (Z3 Versions)
7	E/A	CAN bus low	Engine/slip control module (Z3 Versions)
8		Not used	
9		Not used	
10		Not used	
11	A	Diagnosis RXD signal	Data link connector (M Versions)
12	E/A	Diagnosis TXD signal	Data link connector
13	E/A	CAN jumper	Instrument cluster (Z3 Versions)
14	E	Airbag warning lamp (SRS) control	Supplemental restraint system control module
15		Not used	
16	E	"Check engine" indicator control	Engine control module (DME) (M Versions)
17	E	Park brake warning lamp control	Park brake switch
18	E	Brake fluid warning lamp control	Brake fluid level switch
19	E	Brake pad wear warning lamp control	Brake pad sensors
20	E	Crankshaft RPM speed signal TD	Engine control module (DME)
21		Not used	
22	E	Voltage supply, terminal 30	Front power distribution box, fuse 31
23	E	Voltage supply, terminal 15 for indicator and warning lamps	Front power distribution box, fuse 27
24	M	Ground supply, terminal 31 for instrument cluster electronics	Ground point
25	E/A	CAN jumper	Instrument cluster (Z3 Versions)
26		Not used	

E = Input, A = Output, M = Ground



Z3



## Pin Assignments

 
### X17

Pin	Type	Description/Function	Connection
1	E	Trailer turn signal indicator control	Hazard flasher relay (Z3 Versions)
2	A	Vehicle speed signal	Various control modules
3	M	Ground supply, terminal 31 for indicator and warning lamps	Ground point
4	E	Voltage supply, terminal 15 for instrument cluster electronics	Front power distribution box, fuse 23
5	E	Voltage supply, terminal 15 for battery charge indicator	Ignition switch, terminal 15 (M Versions)
6	E	Ground supply, terminal 61 for battery charge indicator	Generator
7		Not used	
8	E	Fog light indicator control	Front power distribution box, fuse 15 (Z3 Versions)
9	A	Sound tone signal	Chime module
10		not used	
11	E	Slip control system warning lamp (ABS) control	Slip control module (ABS/ASC) (M Versions)
12	E	ASC signal	ASC control module (M Versions)
13	A	TI-measurement signal (fuel consumption)	Engine control module (DME) (M Versions)
14	E	Seat belt warning lamp control	Driver's seat belt switch
15	E	SIA reset/service interval indicator reset	Data link connector
16	E	Voltage supply, terminal R	Front power distribution box, fuse 46
17	A	Coolant temperature sensor (-)	Coolant temperature sensor (M Versions)
18	E	Coolant temperature sensor (+)	Coolant temperature sensor (M Versions)
19	E	Oil pressure warning lamp control	Oil pressure switch (M Versions) Engine control module (Z3 Versions)
20		Not used	
21	M	Ground (ASC)	Ground point (M Versions)
21	E	ABS warning lamp (ABS)	Slip control module (ABS/ASC) (Z3 Versions)
22	E	Ignition key warning/audible ignition key warning	Ignition switch

E = Input, A = Output, M = Ground



Z3

**Pin Assignments**

Pin	Type	Description/Function	Connection
23	E	Driver's door open	Driver's door jamb switch
24		Not used	
25	E	Fuel consumption signal	Board computer (Z3 Versions)
26		Not used	

**X271**

Pin	Type	Description/Function	Connection
1	A	Fuel level sensor	Fuel tank sensors
2		Not used	
3	A	Ground supply for fuel tank sensor and vehicle speed sensor	Fuel tank sensor and vehicle speed sensor
4	E	Position signal TW	Vehicle speed sensor
5		Not used	
6	E	A/C-ON-signal	Air condition switch (Z3 Versions)
7	E	Activate A/C	Pressure switch, normal speed relay (Z3 Versions)
8		Not used	
9	E	Oil level signal	Thermal oil level sensor (TOENS) control module (Z3 Versions)
10		Not used	
11		Not used	
12		Not used	








# INSTRUMENT CLUSTER

## INDICATORS

Z3

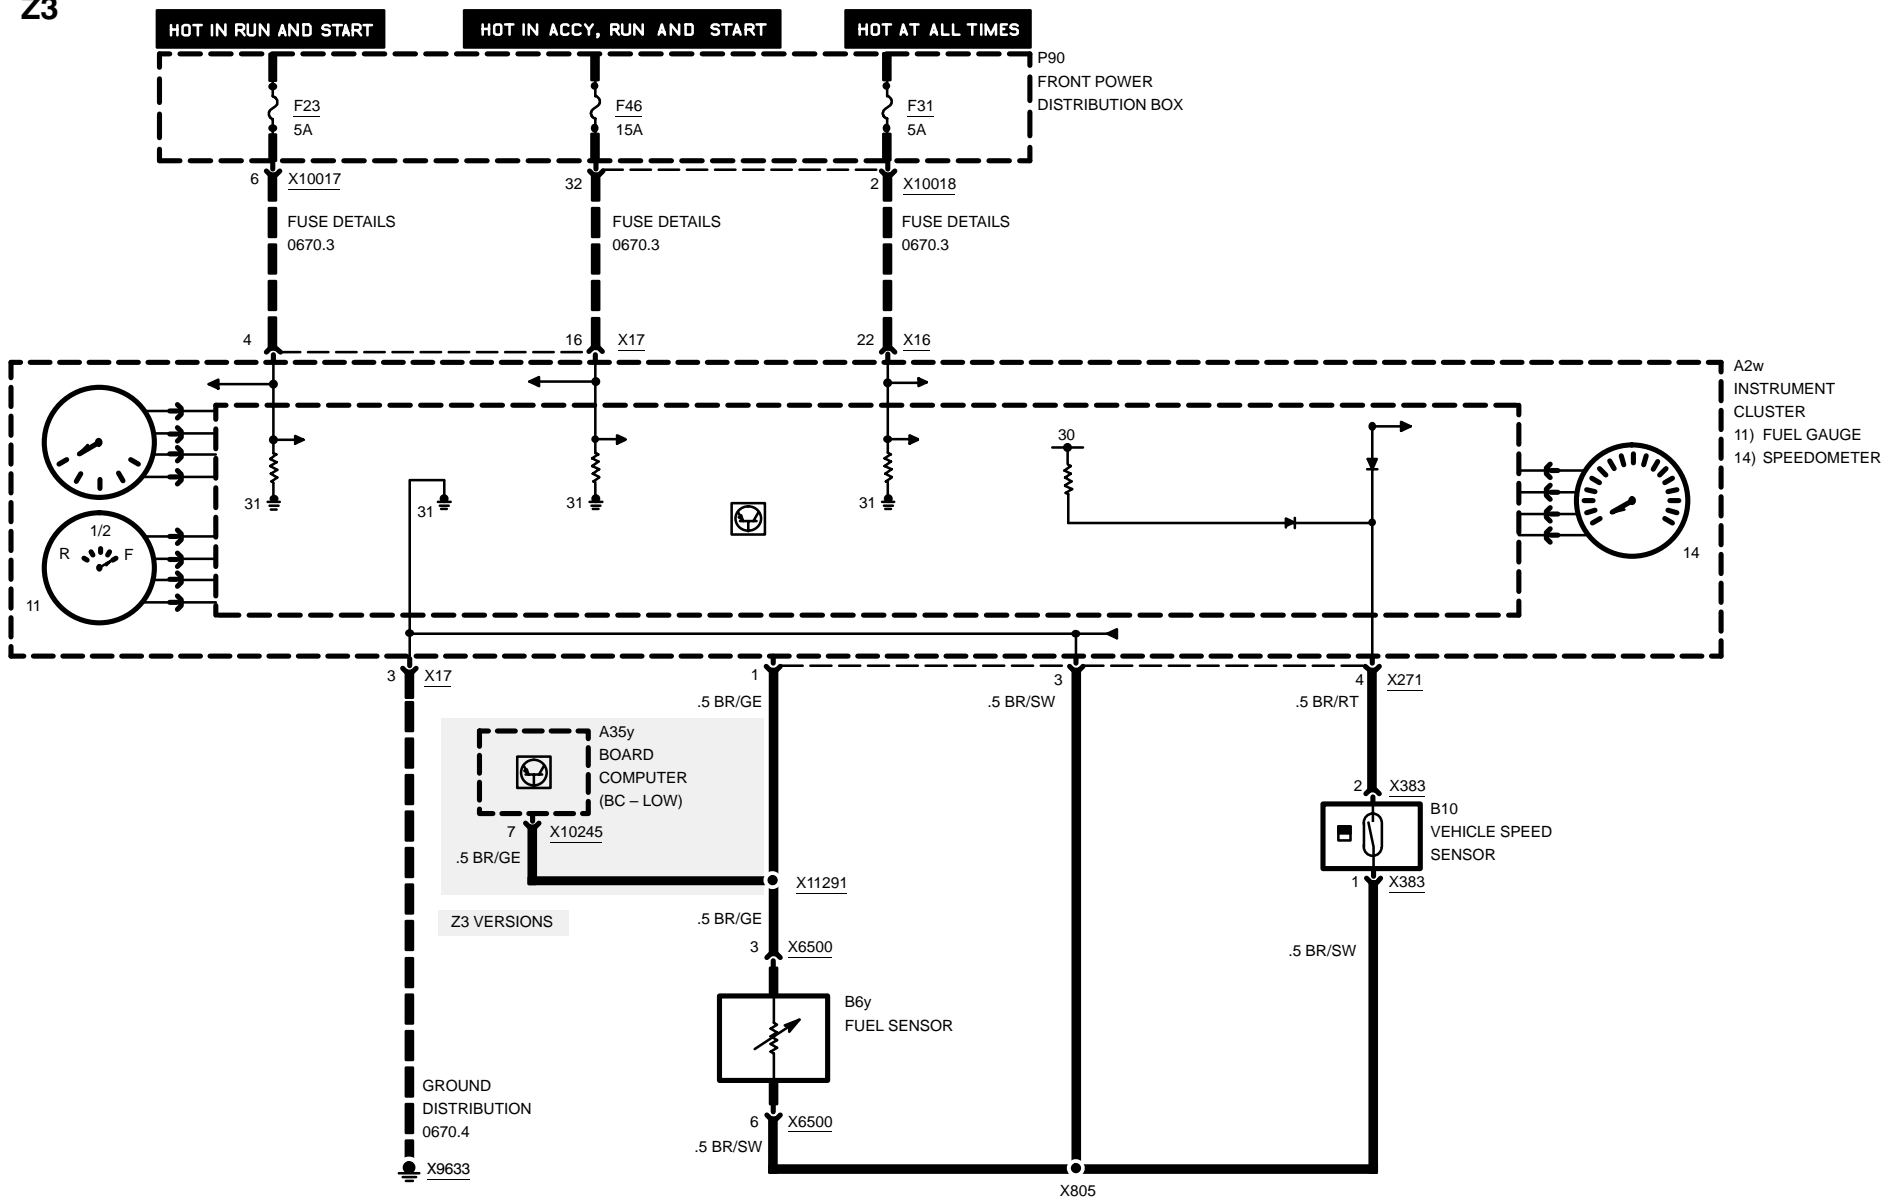

03/00

6211.0-02


1999



# INSTRUMENT CLUSTER INDICATORS

## M VERSIONS

Z3

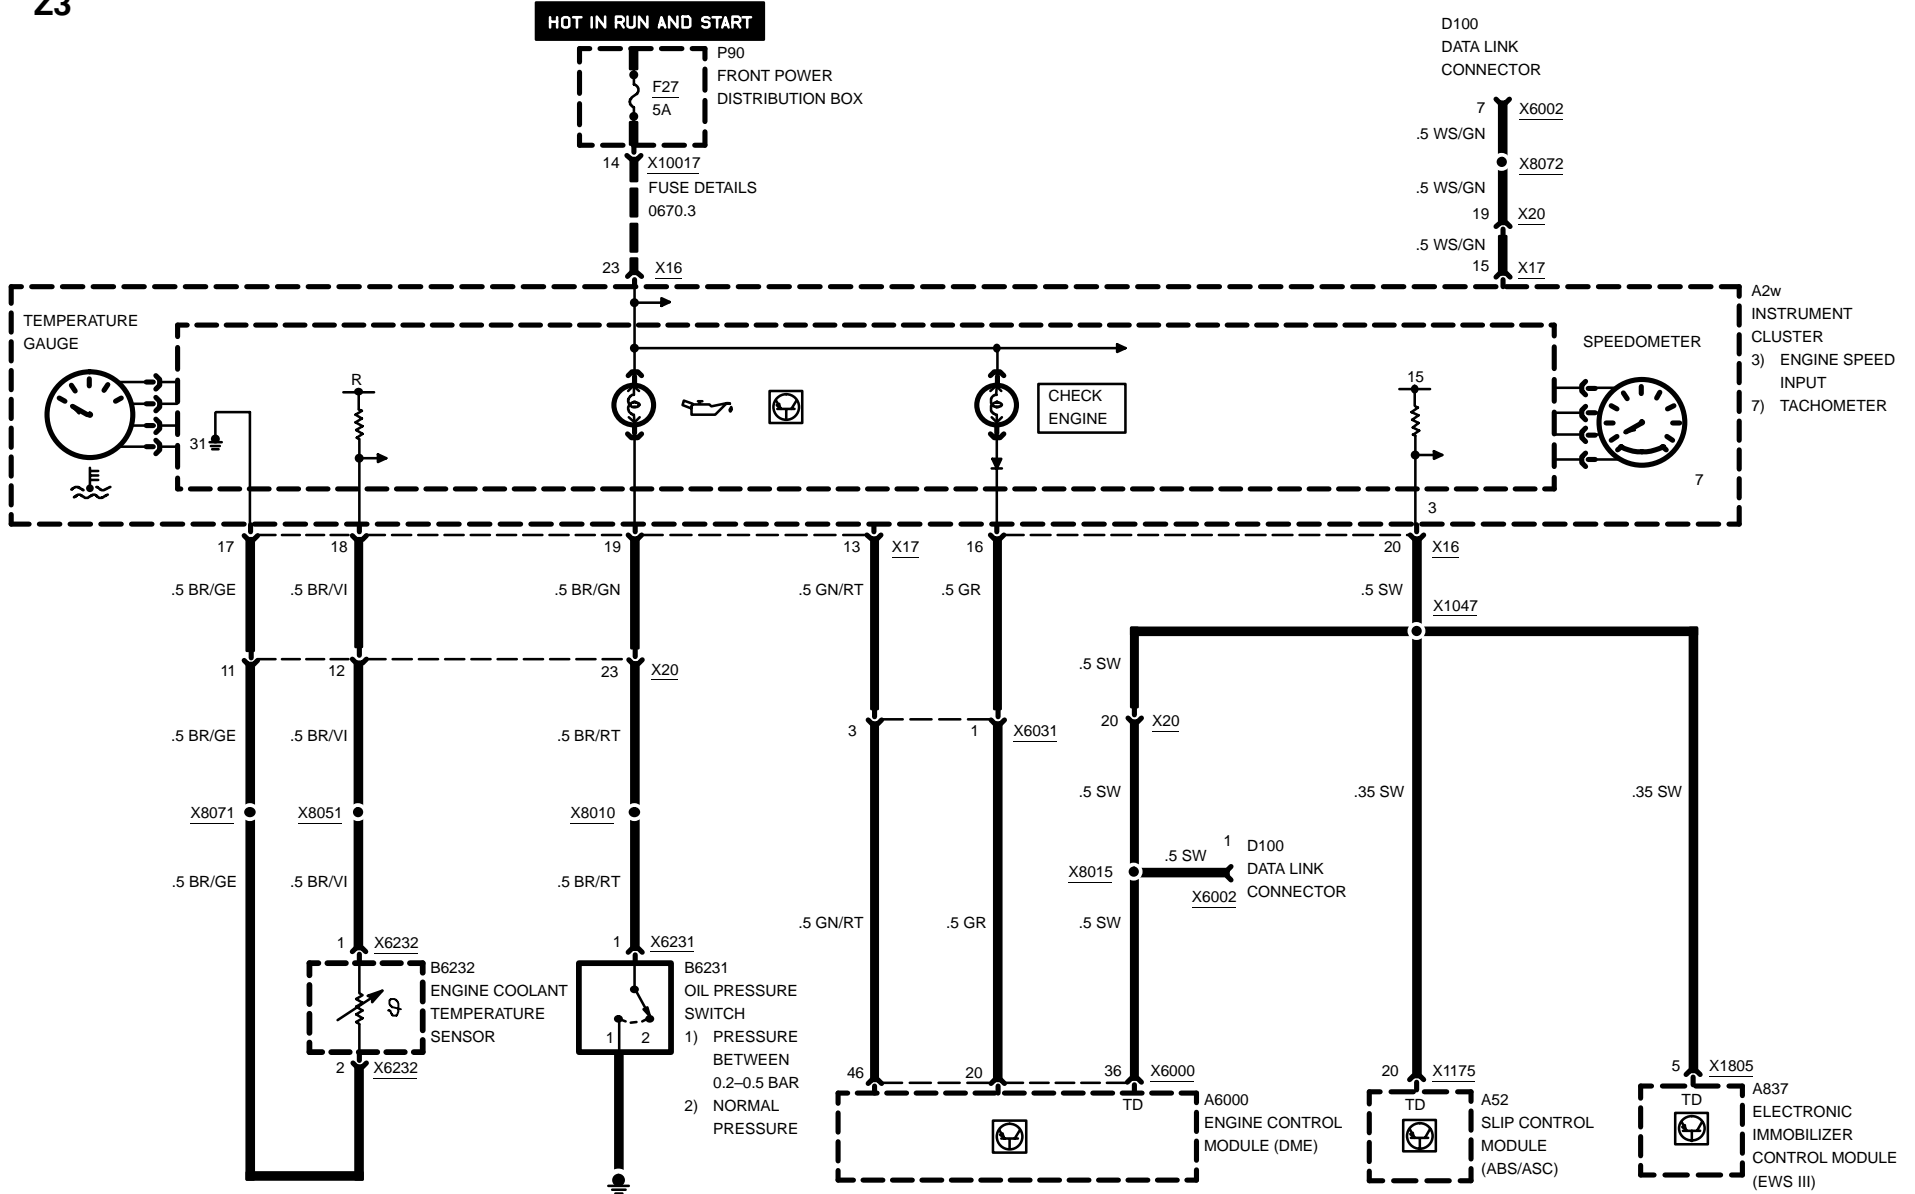






# INSTRUMENT CLUSTER INDICATORS

M VERSIONS

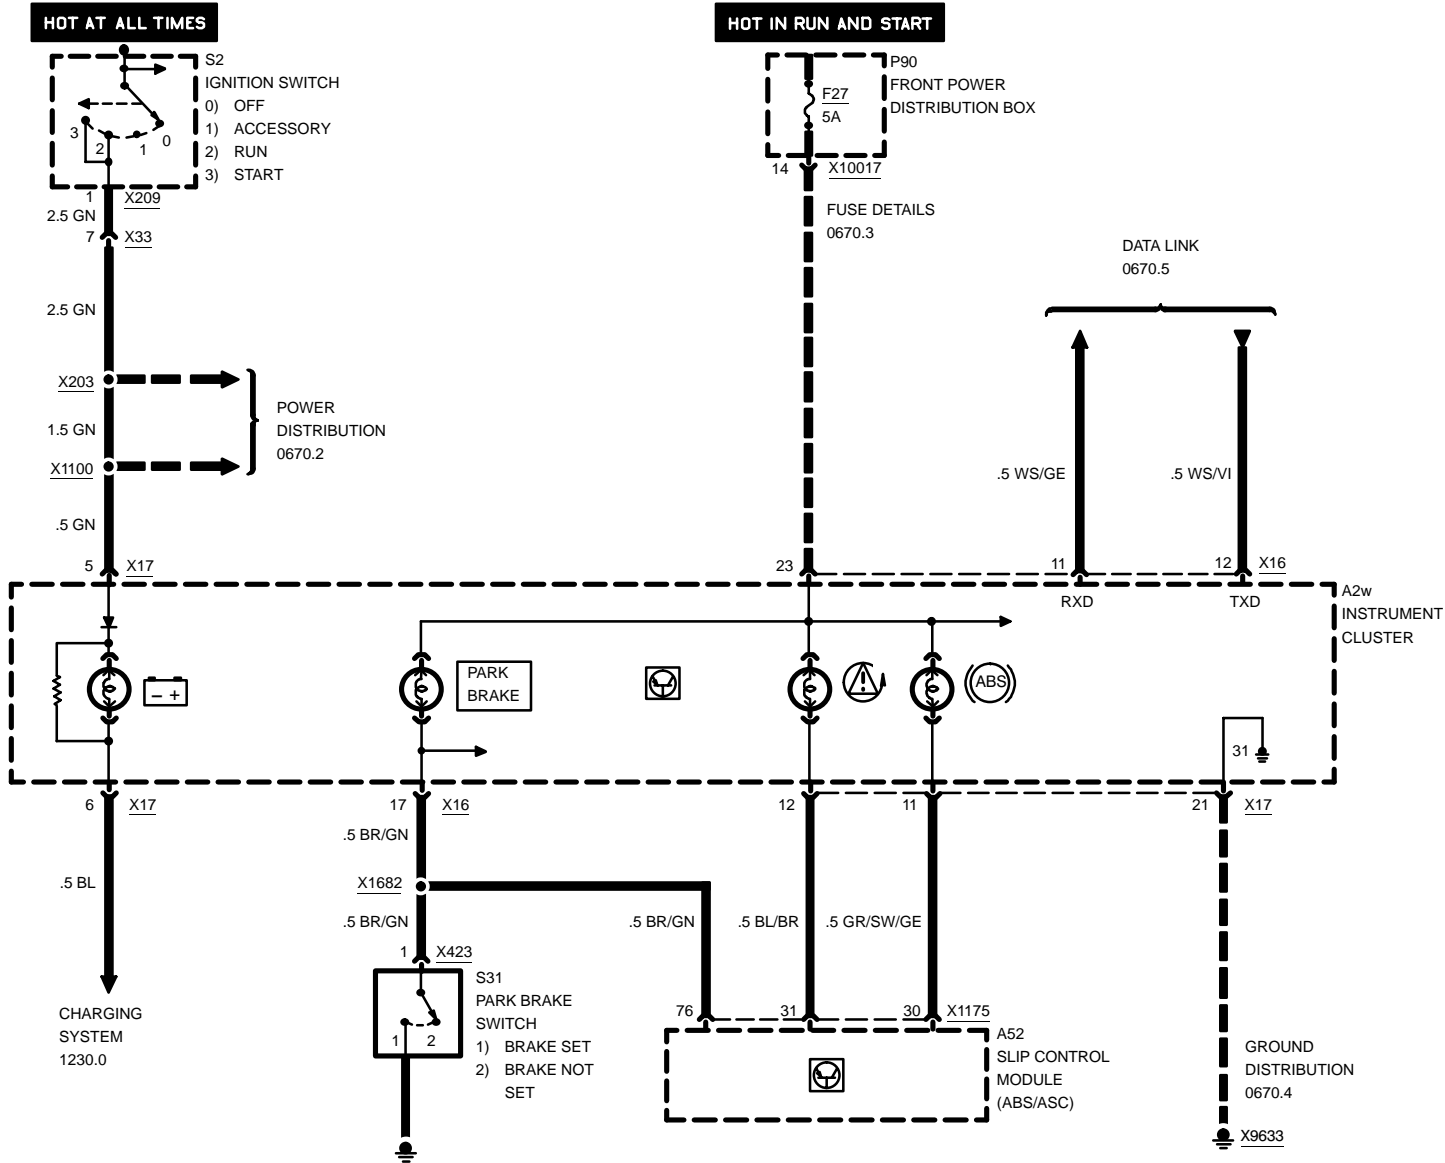








# INSTRUMENT CLUSTER INDICATORS

## Z3 VERSIONS

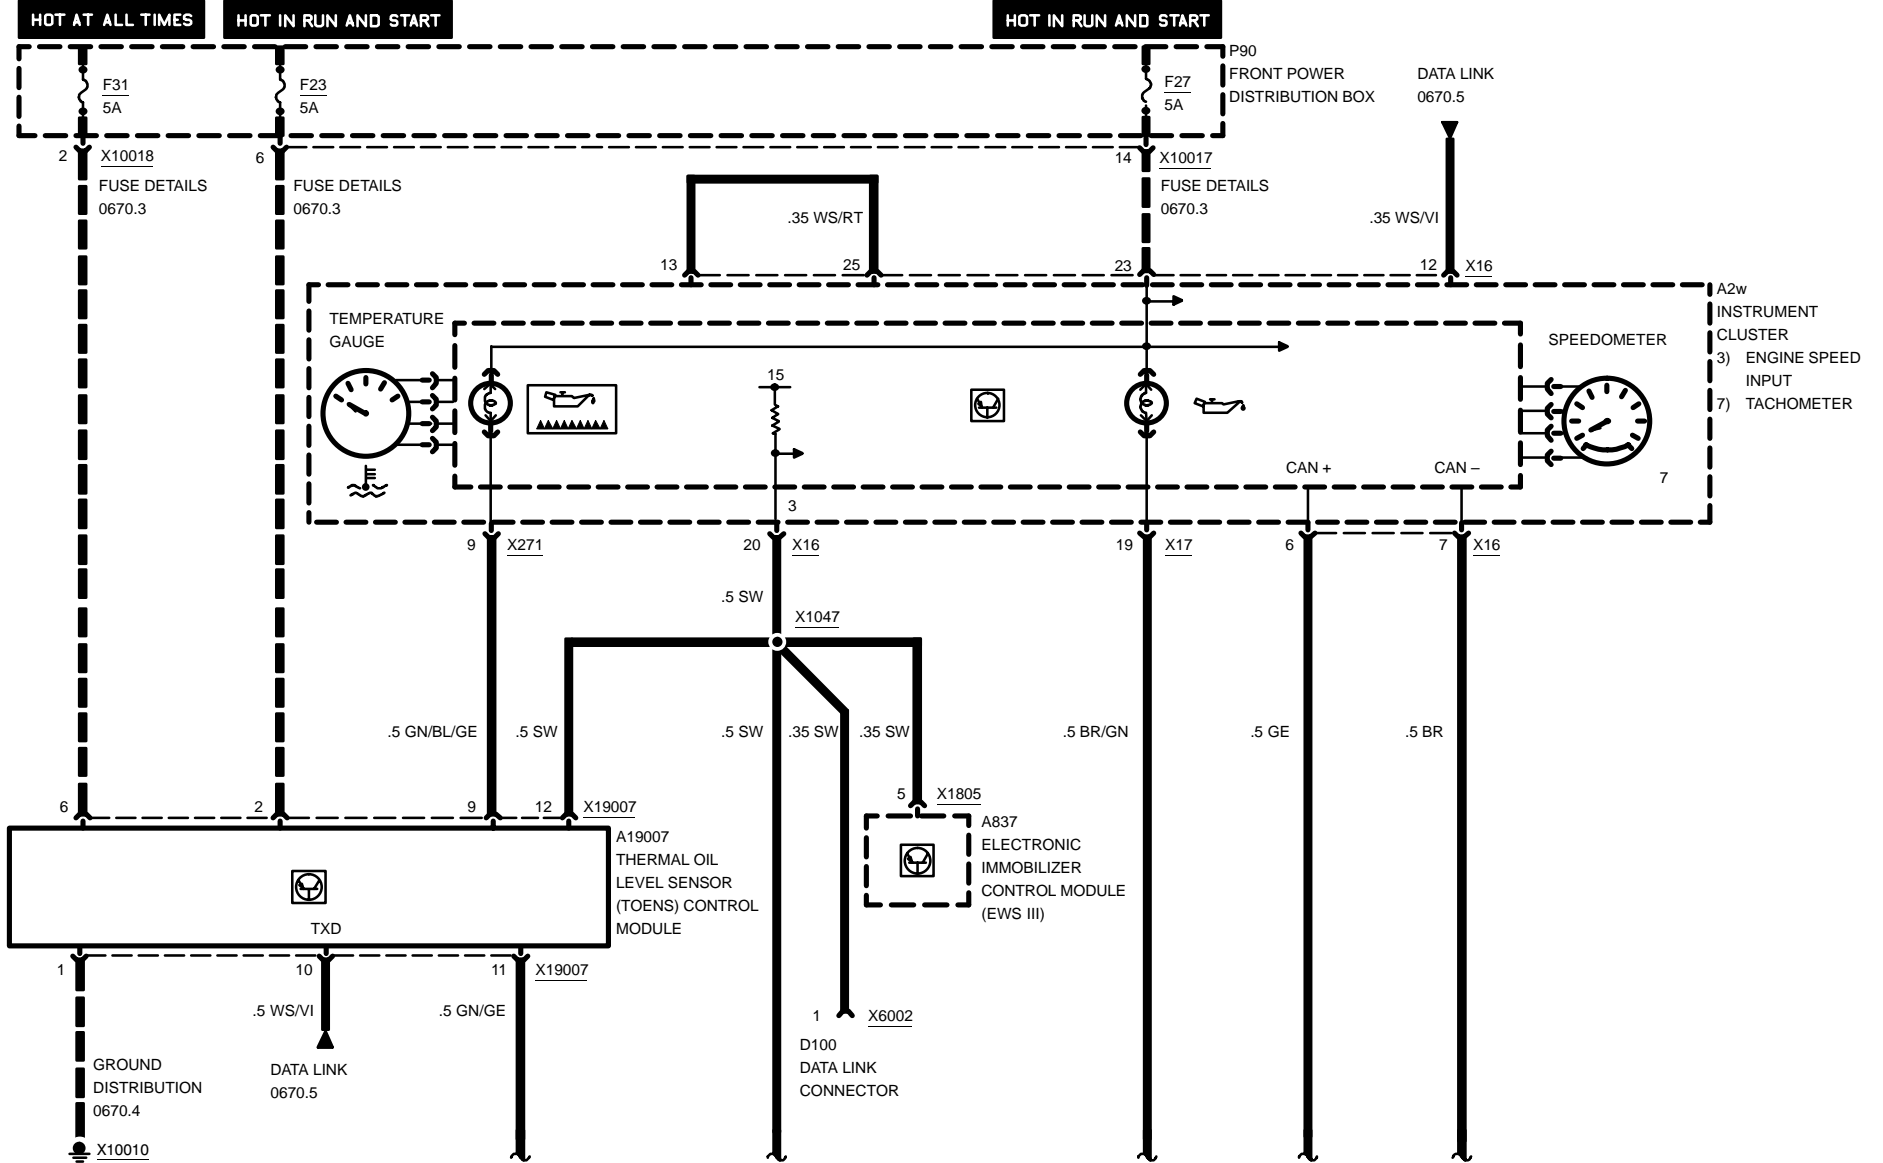

**HOT IN RUN AND START**

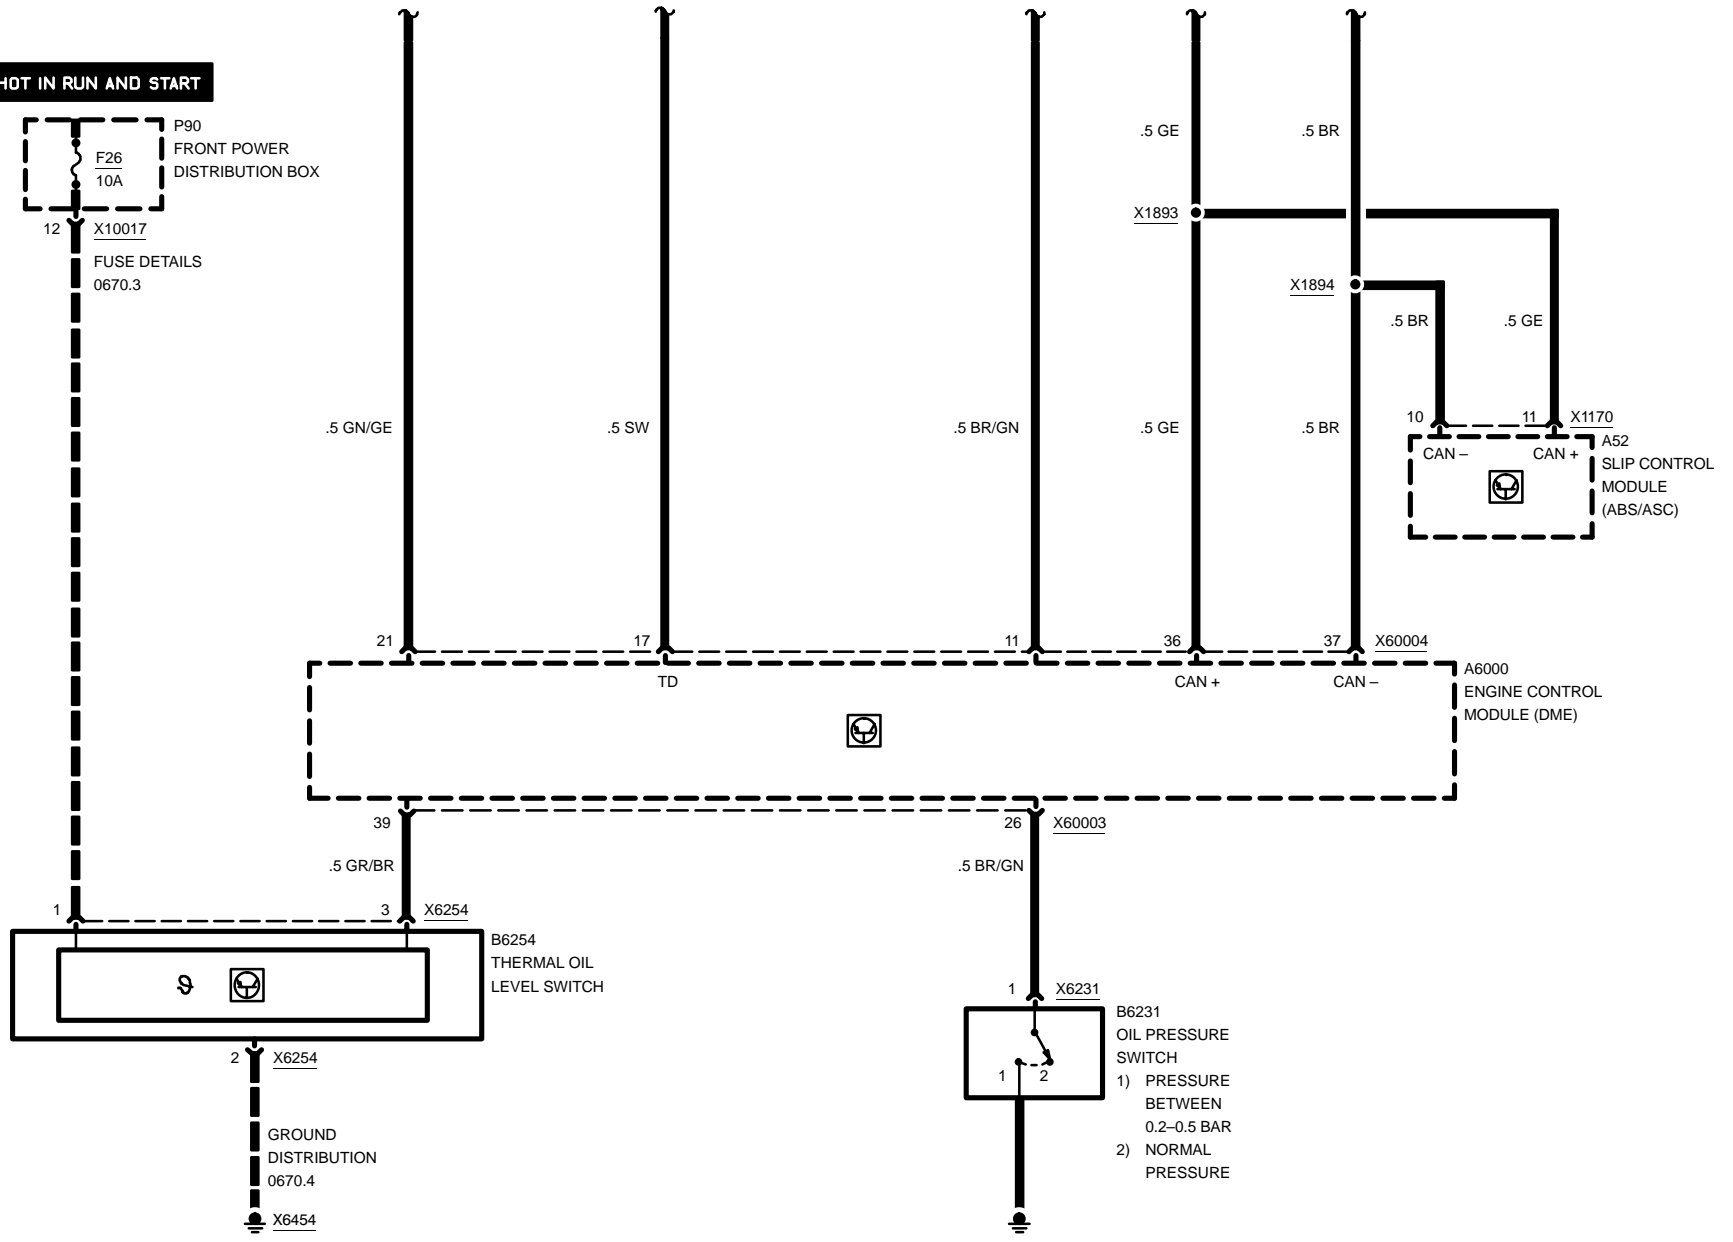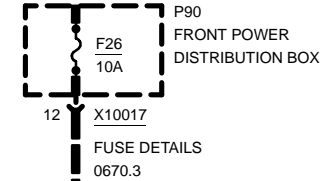




# INSTRUMENT CLUSTER INDICATORS

## Z3 VERSIONS

**HOT IN RUN AND START**

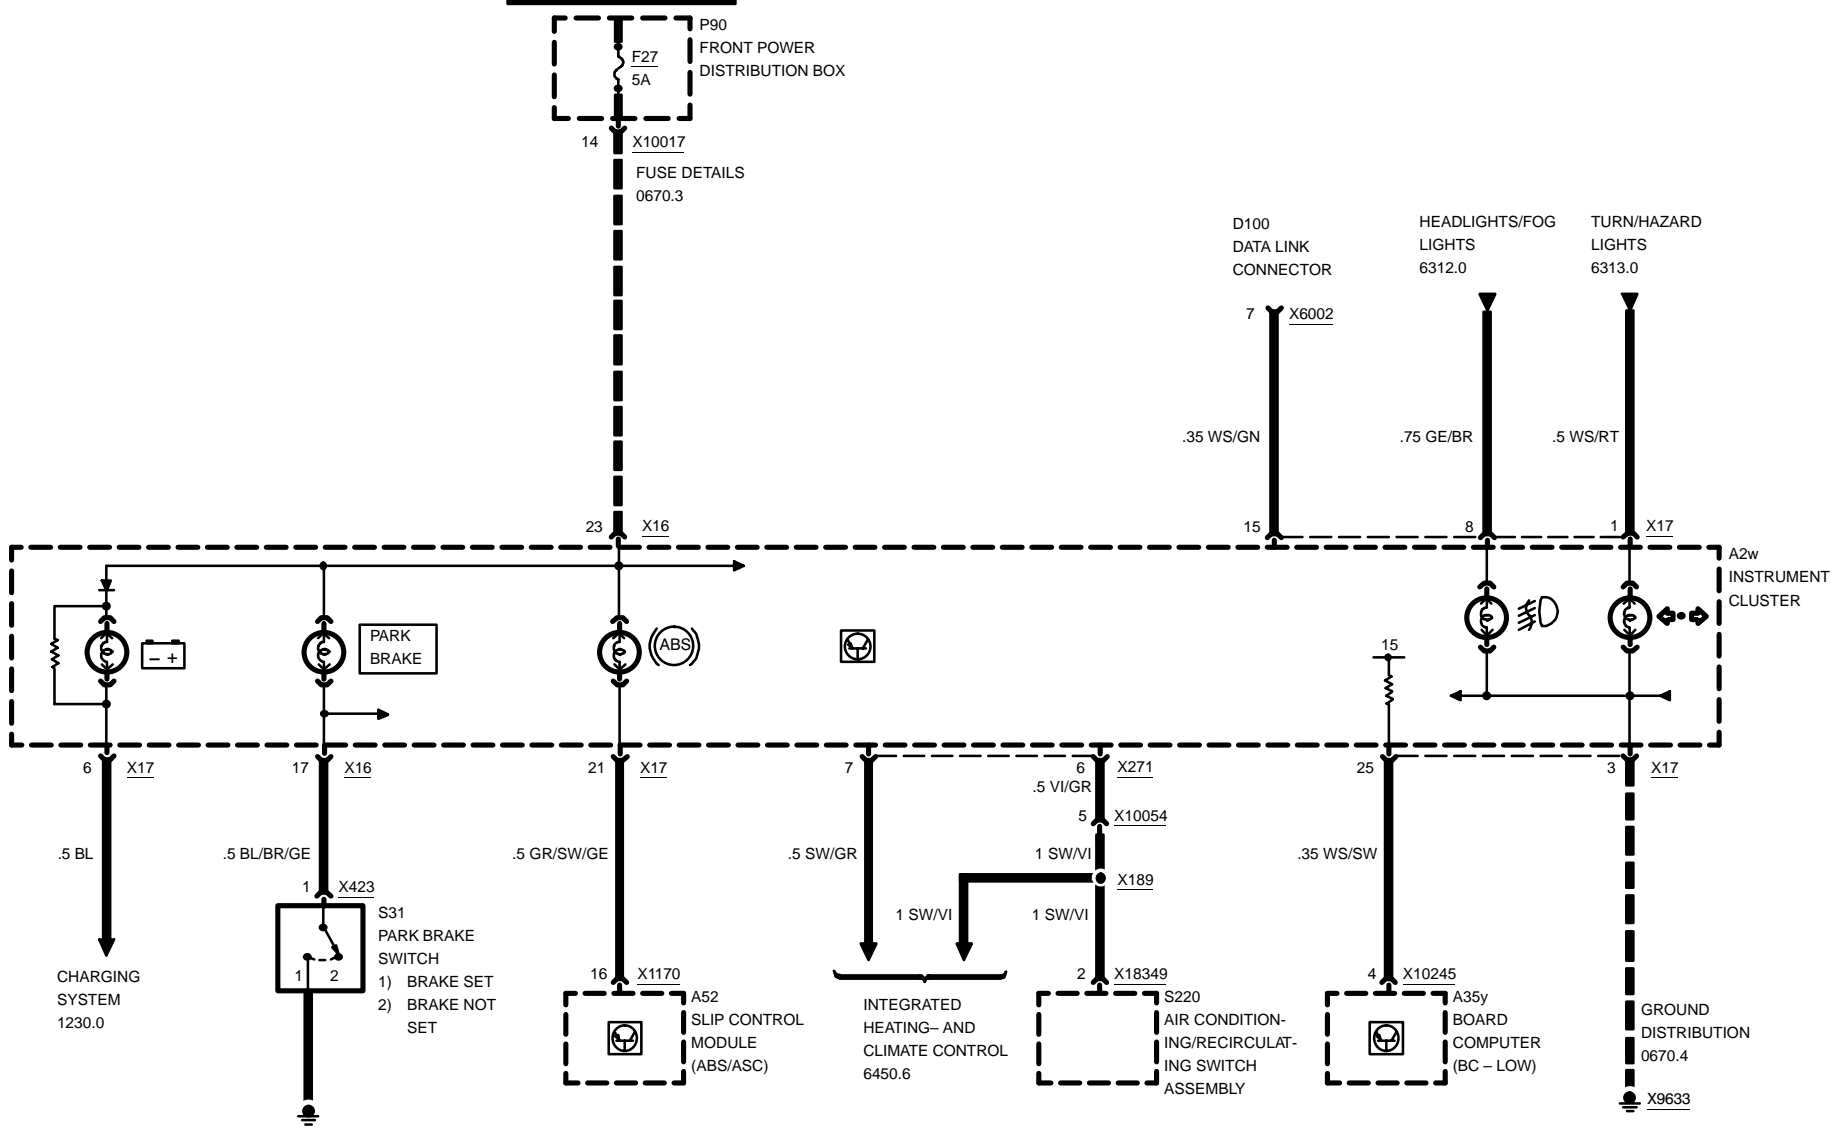

03/00


6211.0-08

1999



# 6213.3 DIGITAL CLOCK


Z3 VERSIONS

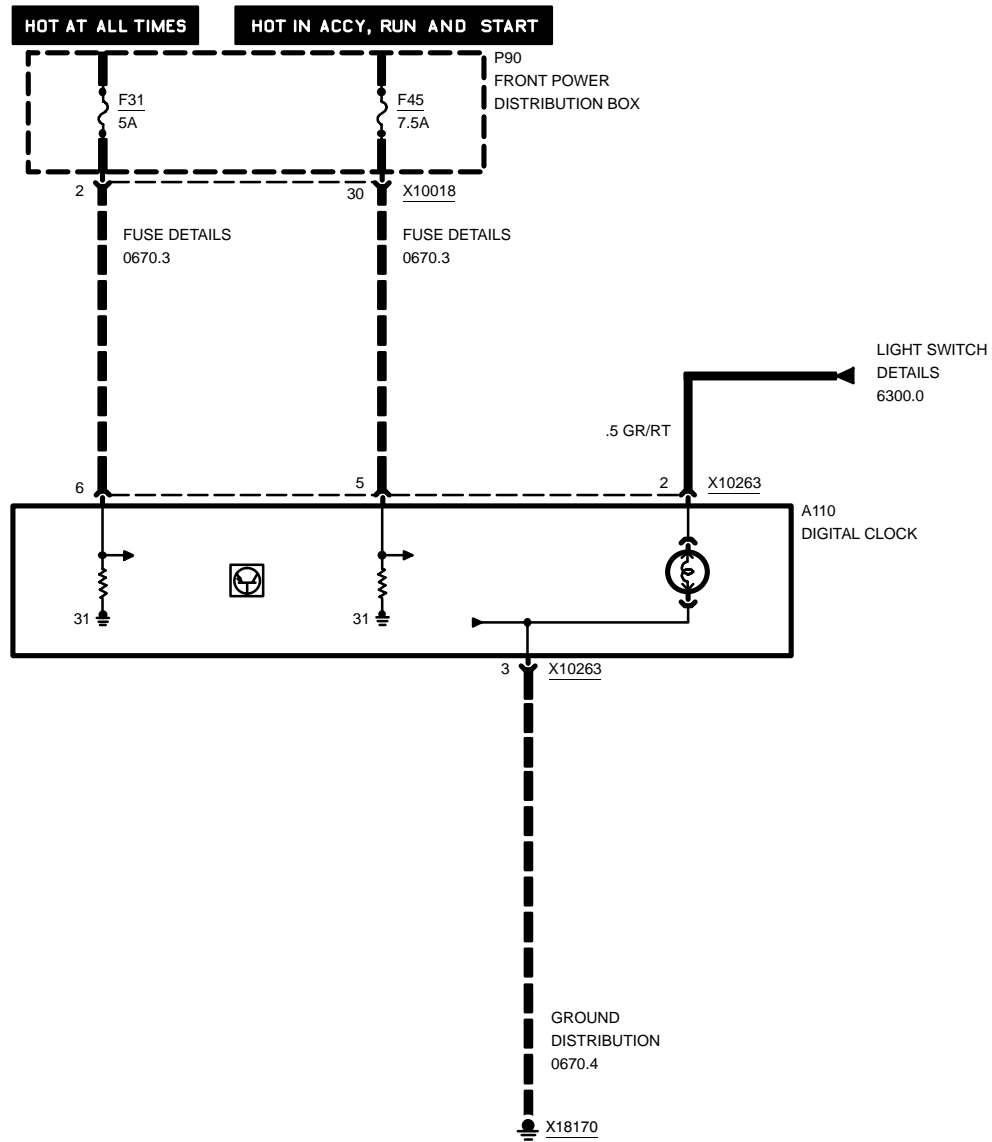




# 6300.0 LIGHT SWITCH DETAILS

Z3

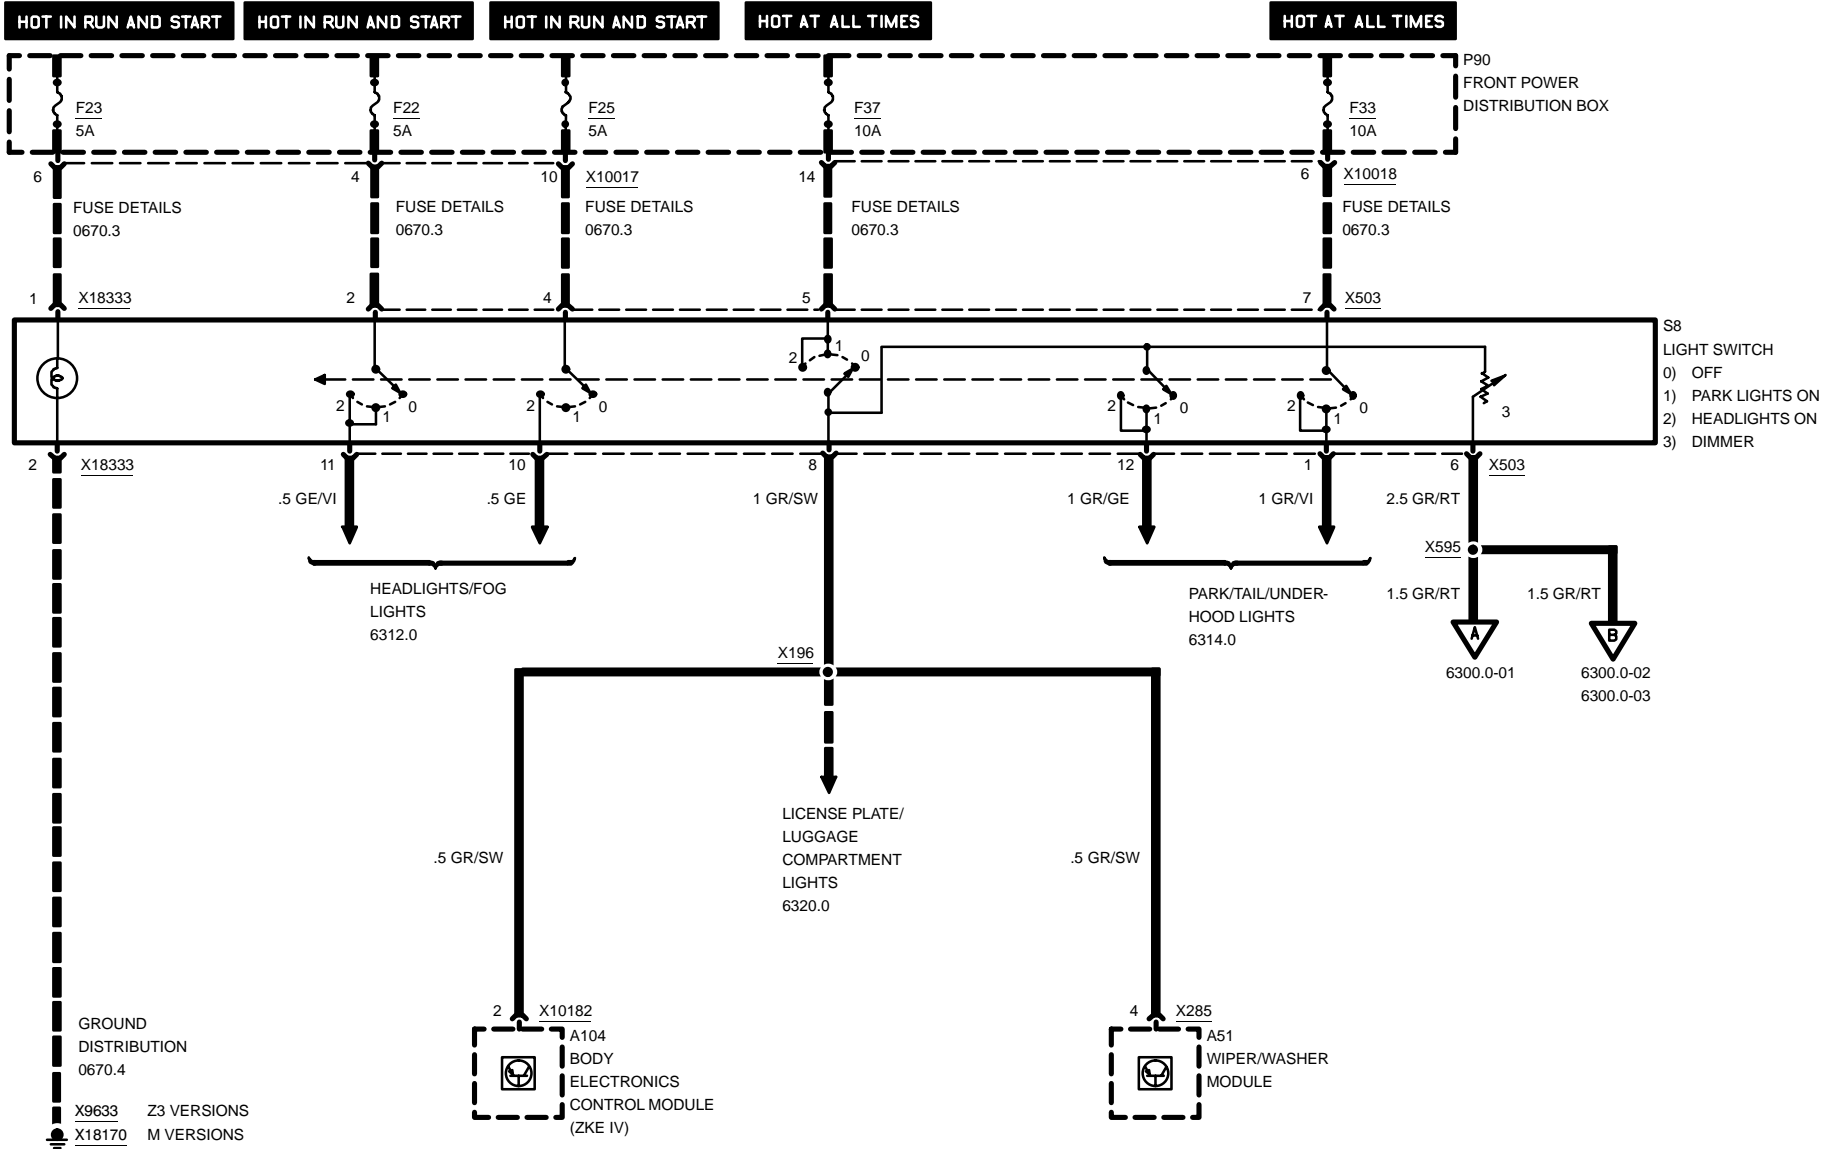



# LIGHT SWITCH DETAILS

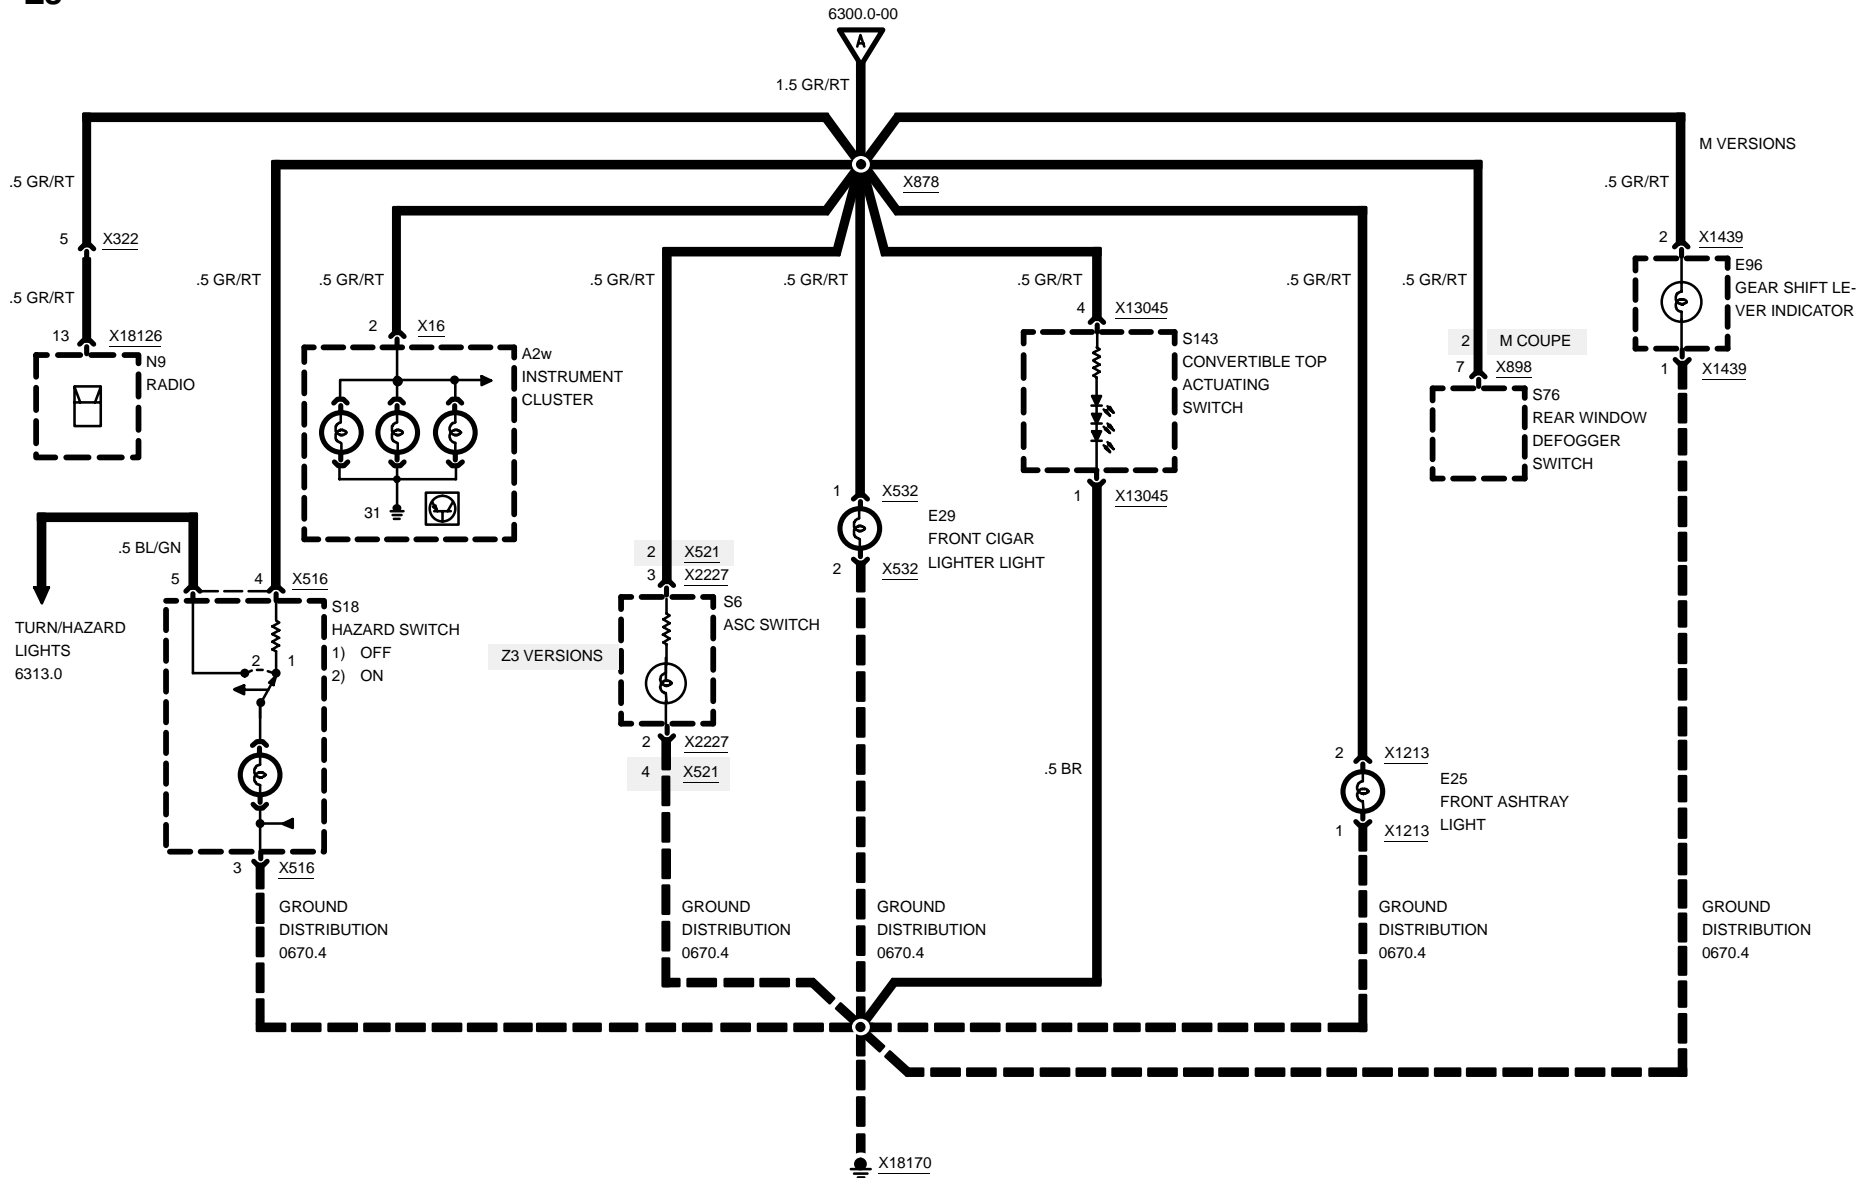








# LIGHT SWITCH DETAILS

## M VERSIONS

Z3

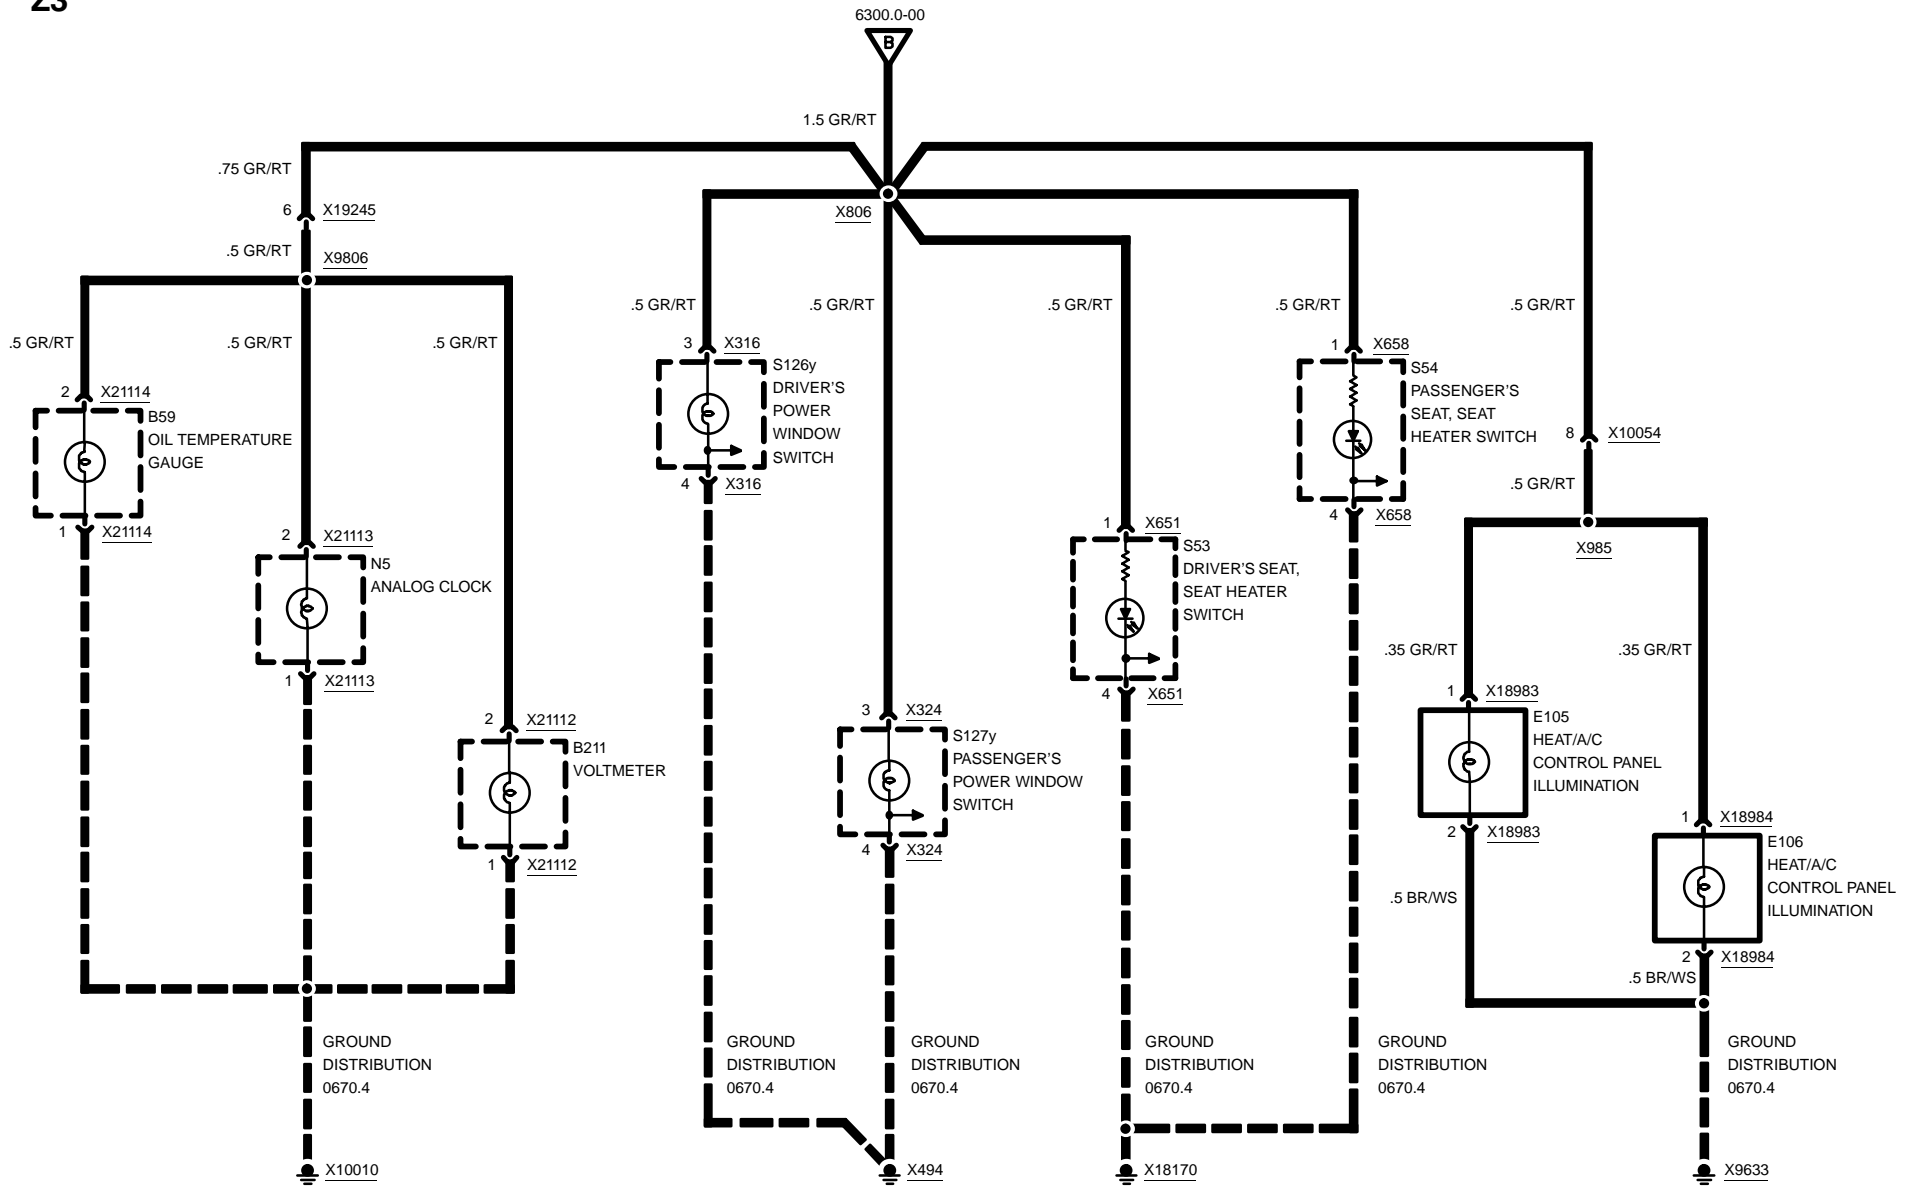


03/00


6300.0-03

1999


# 6312.0 HEADLIGHTS/FOG LIGHTS


Z3

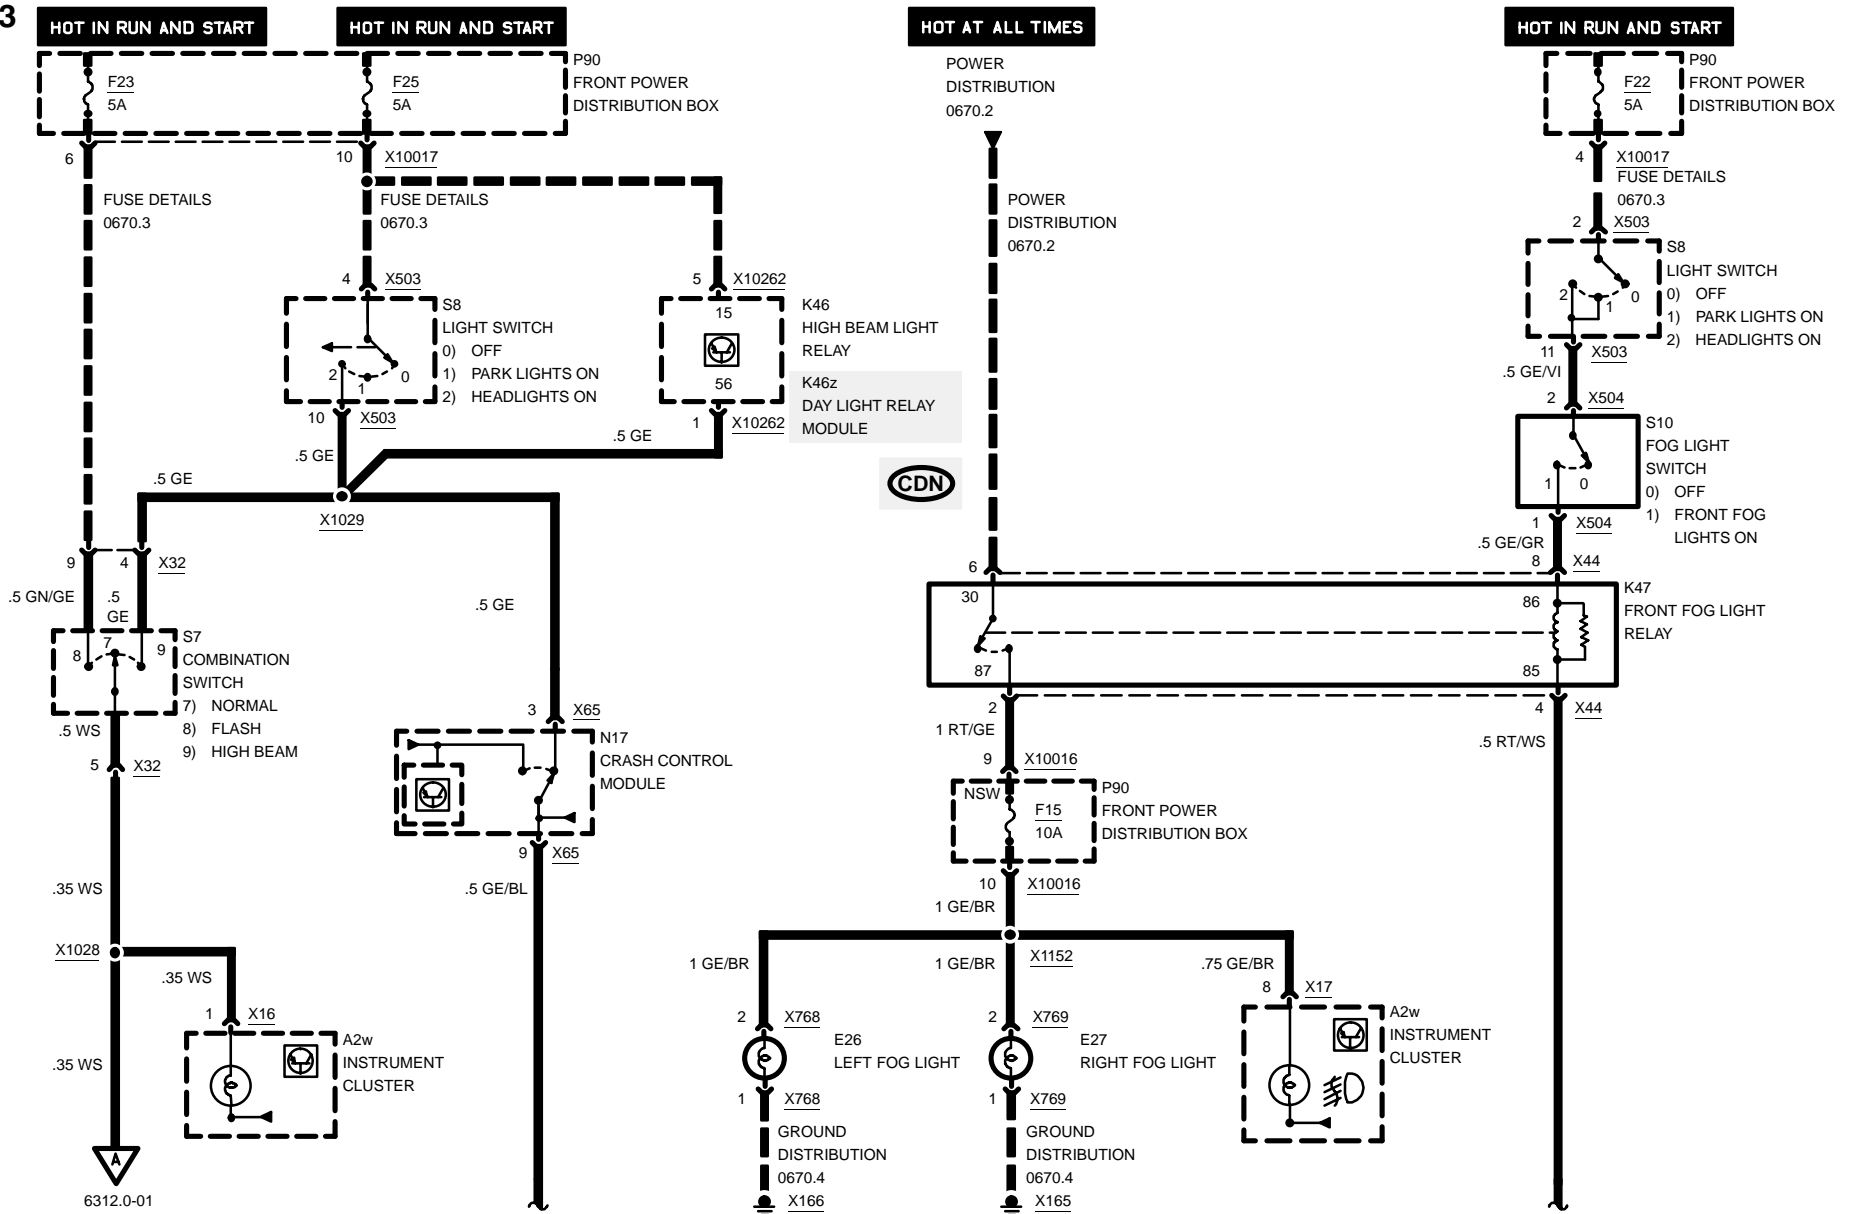

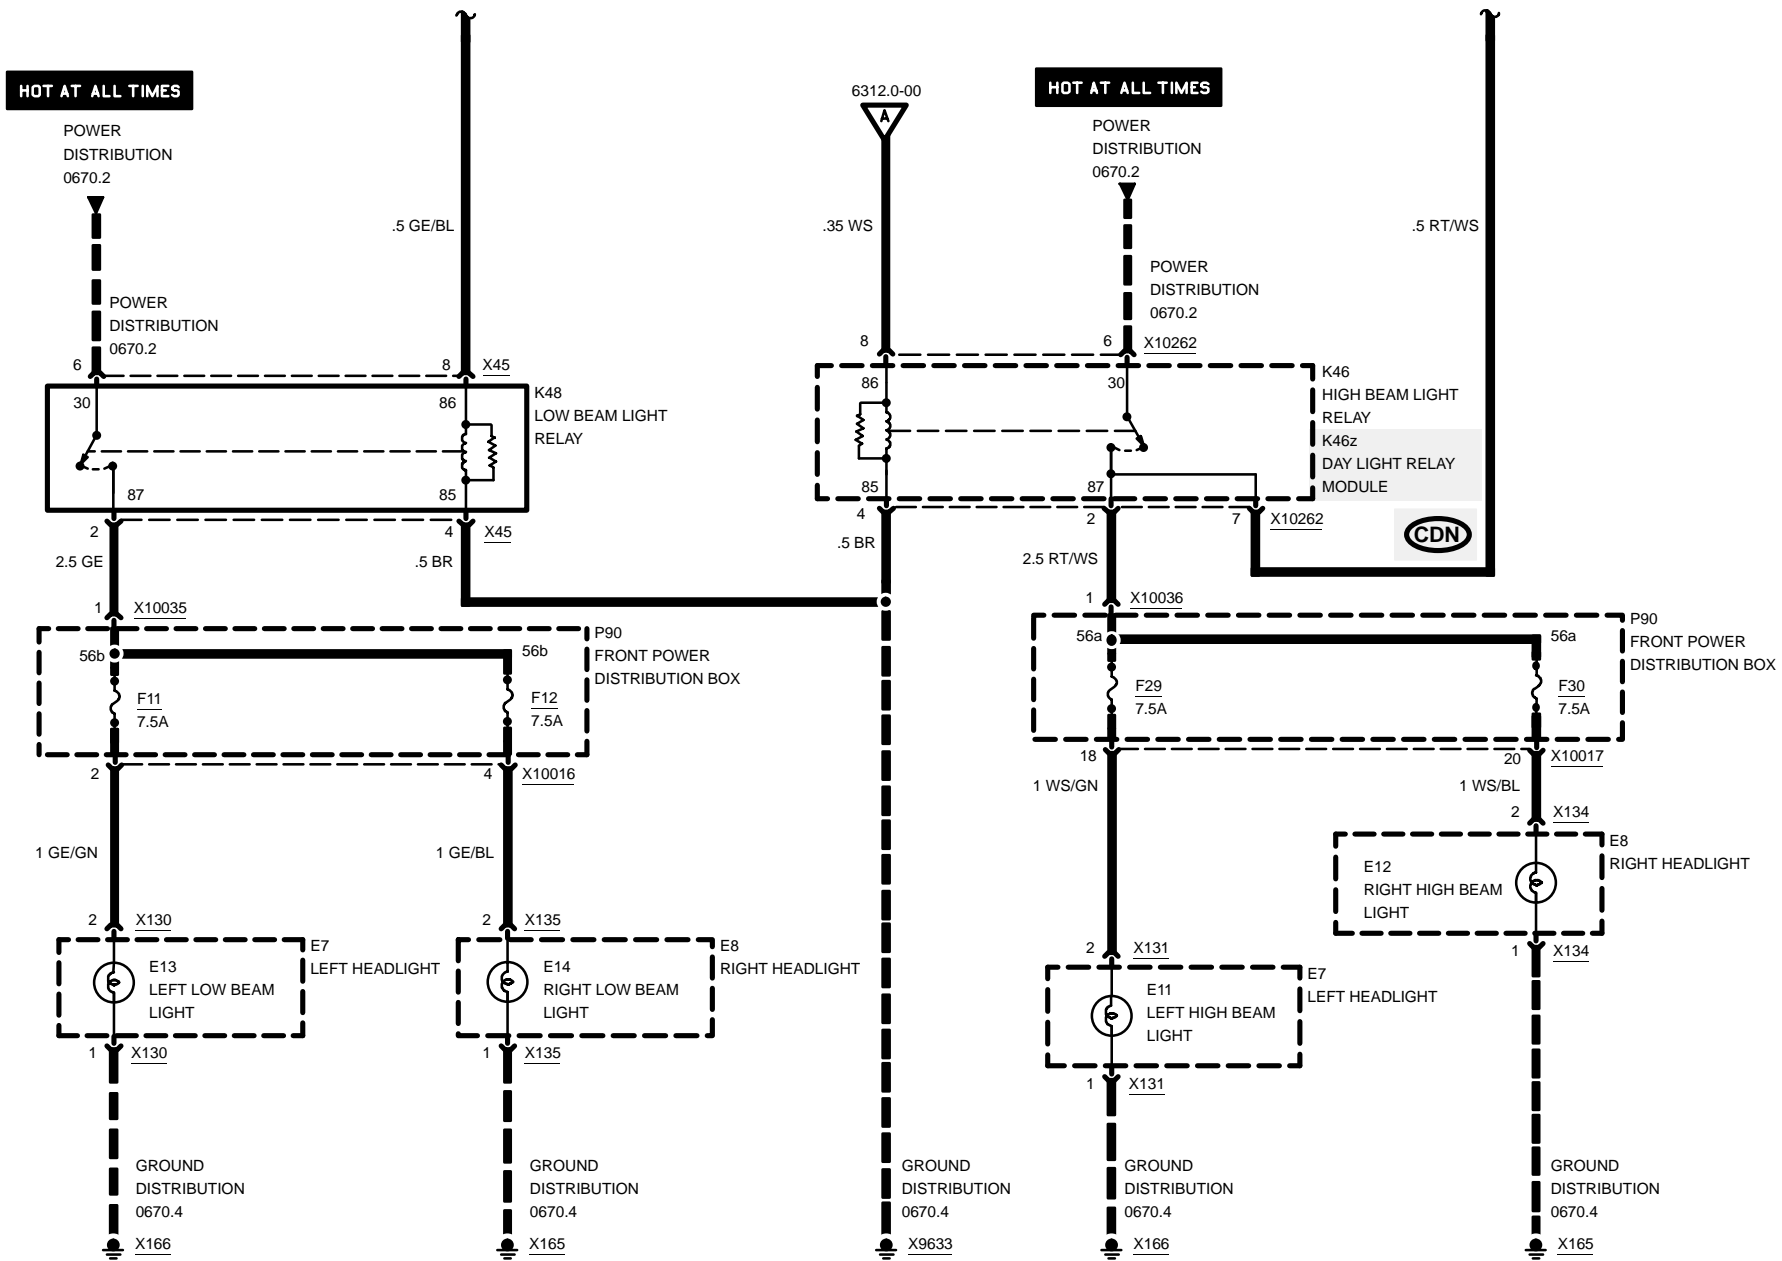


# 6313.0 TURN/HAZARD LIGHTS

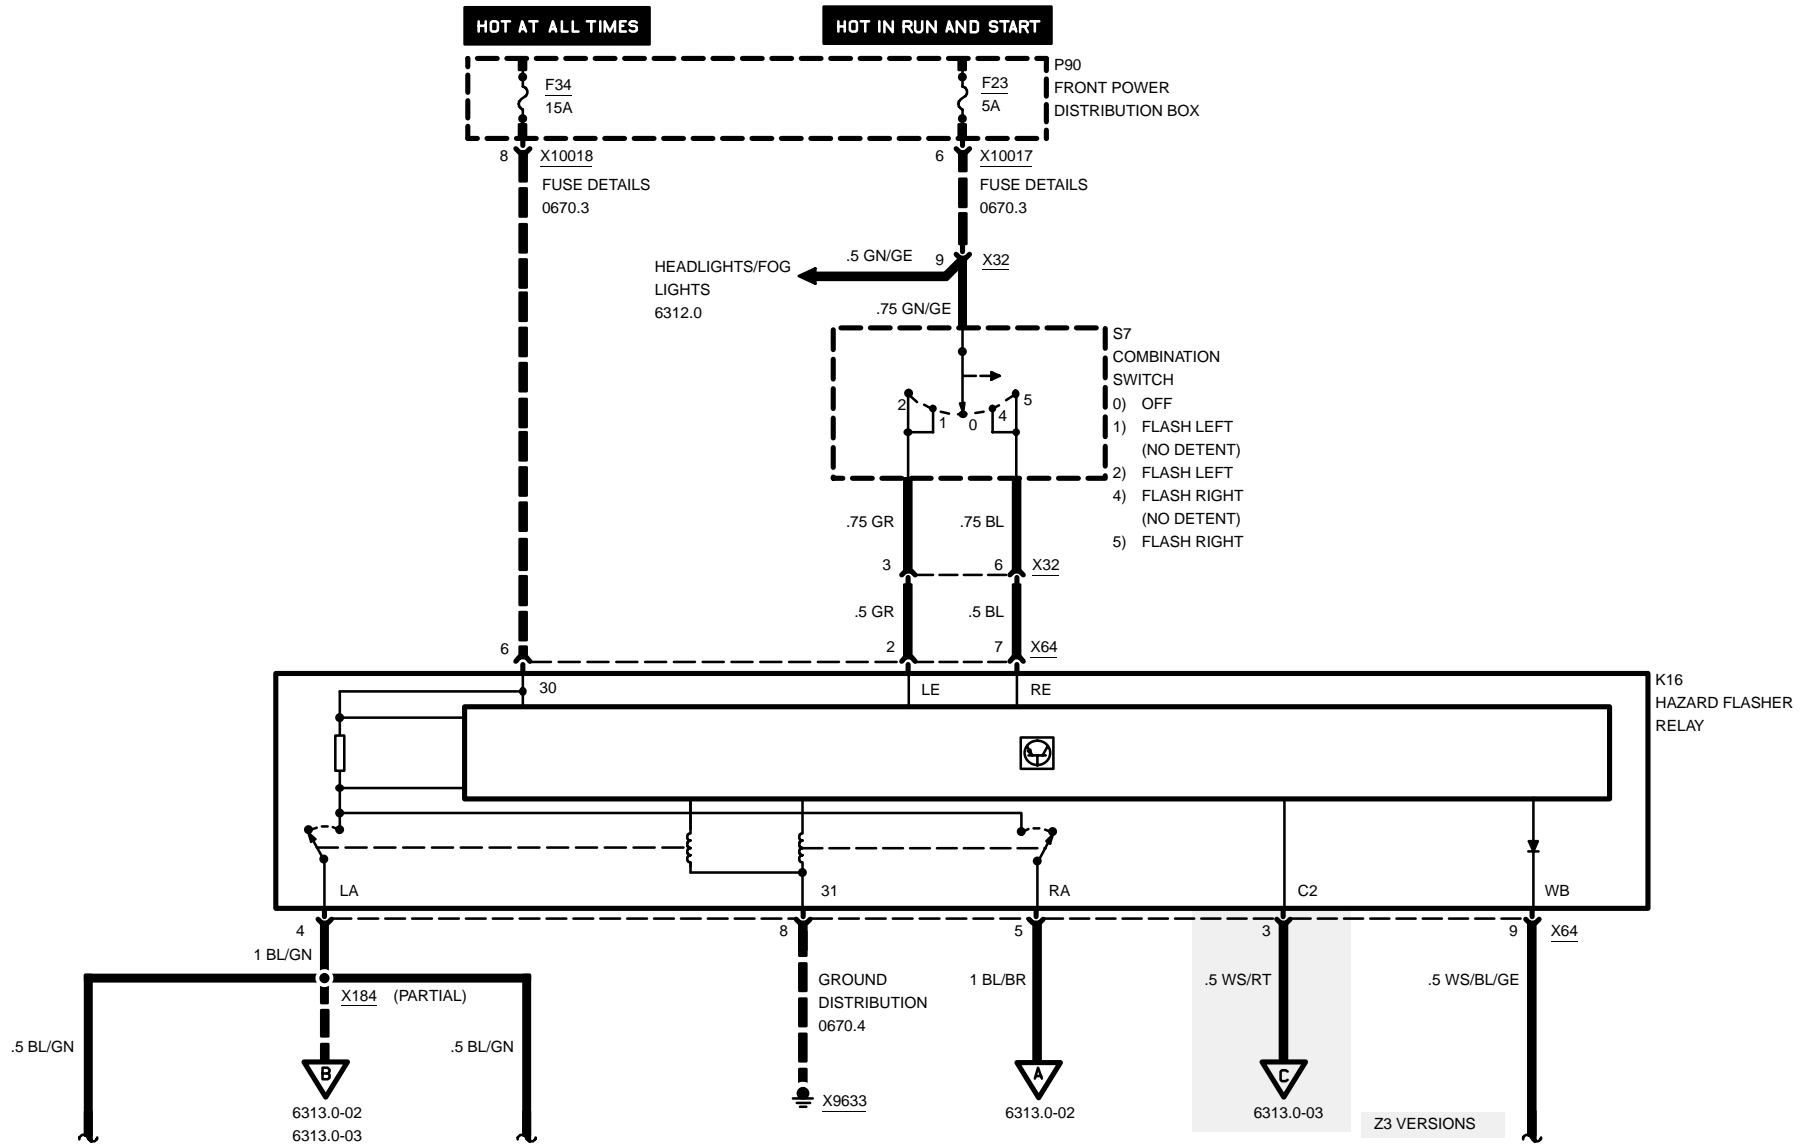

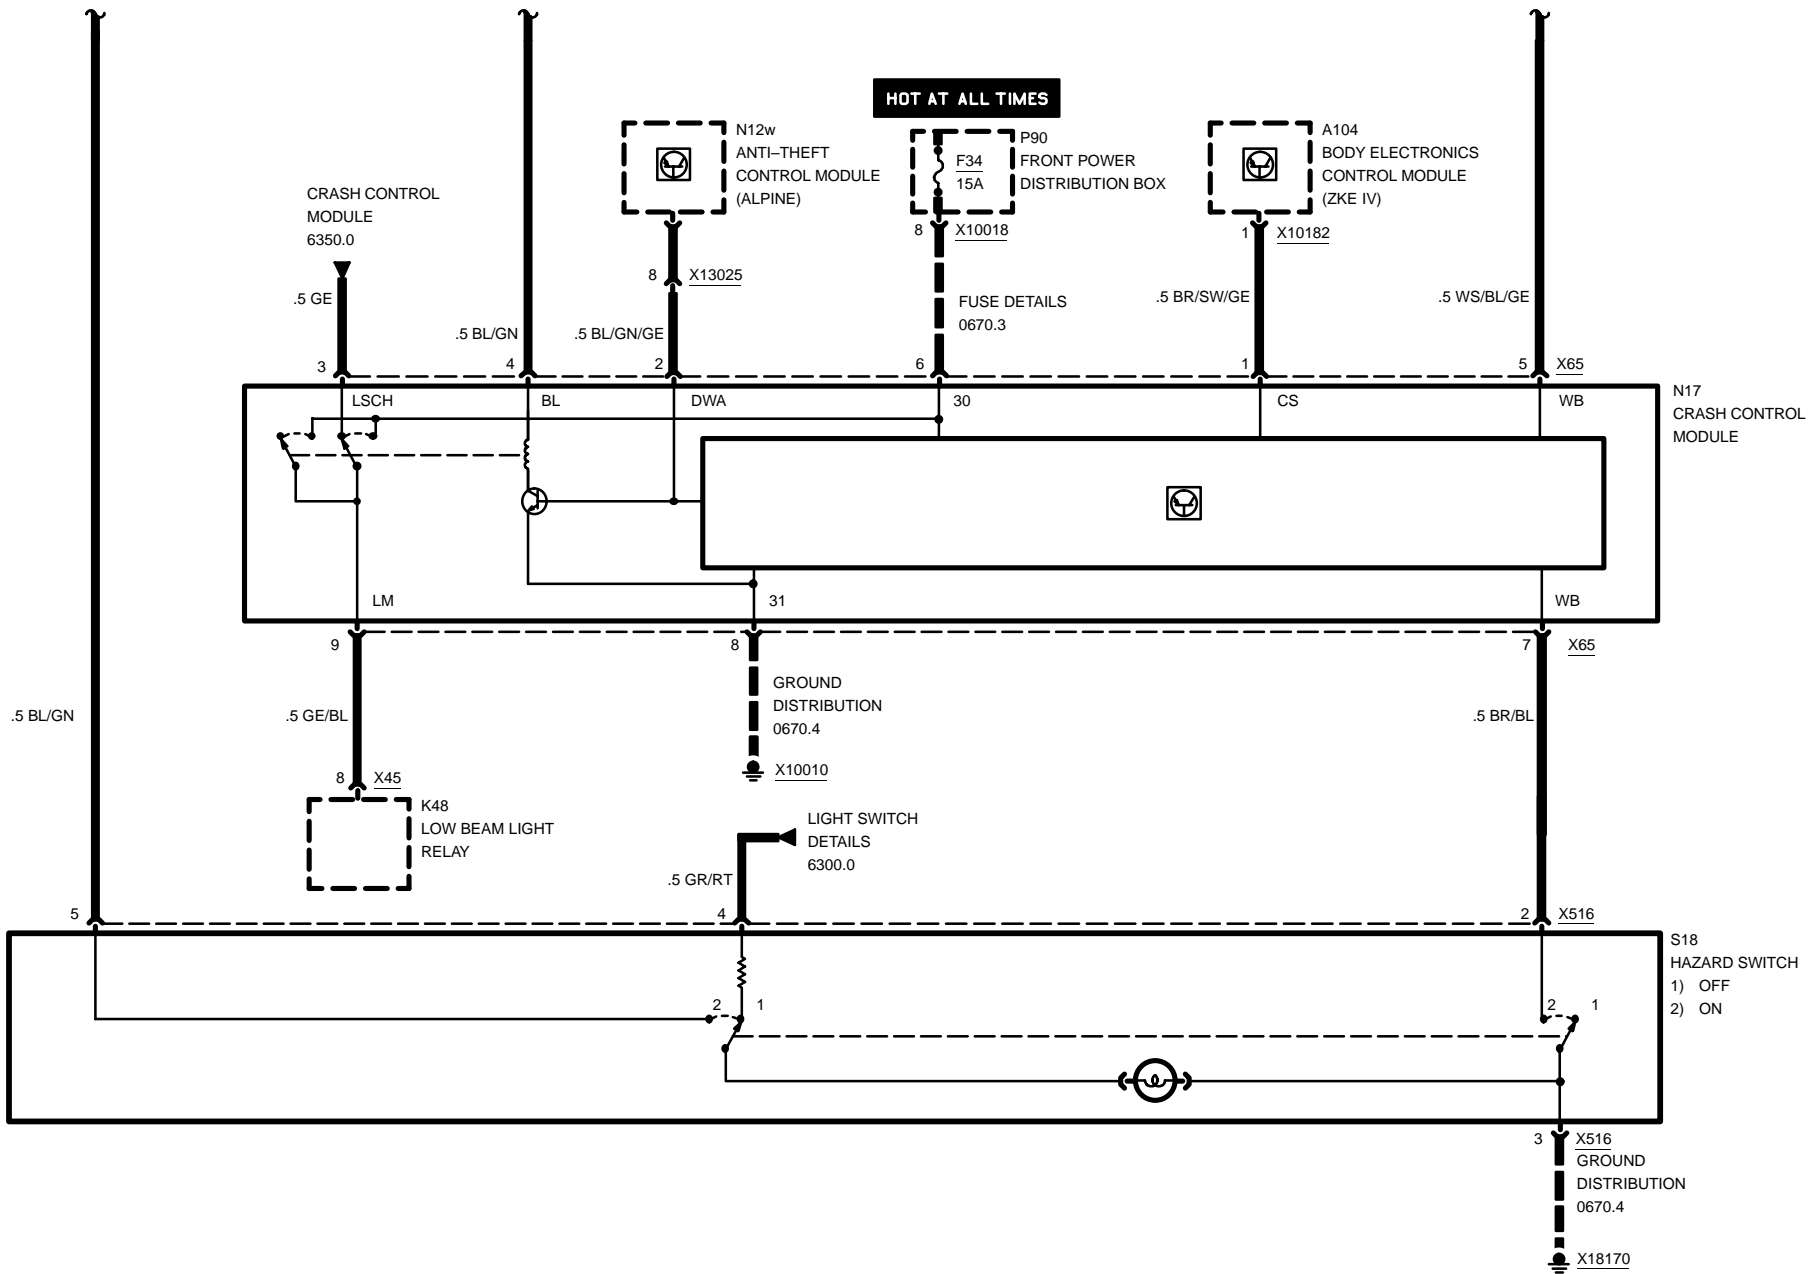




# TURN/HAZARD LIGHTS

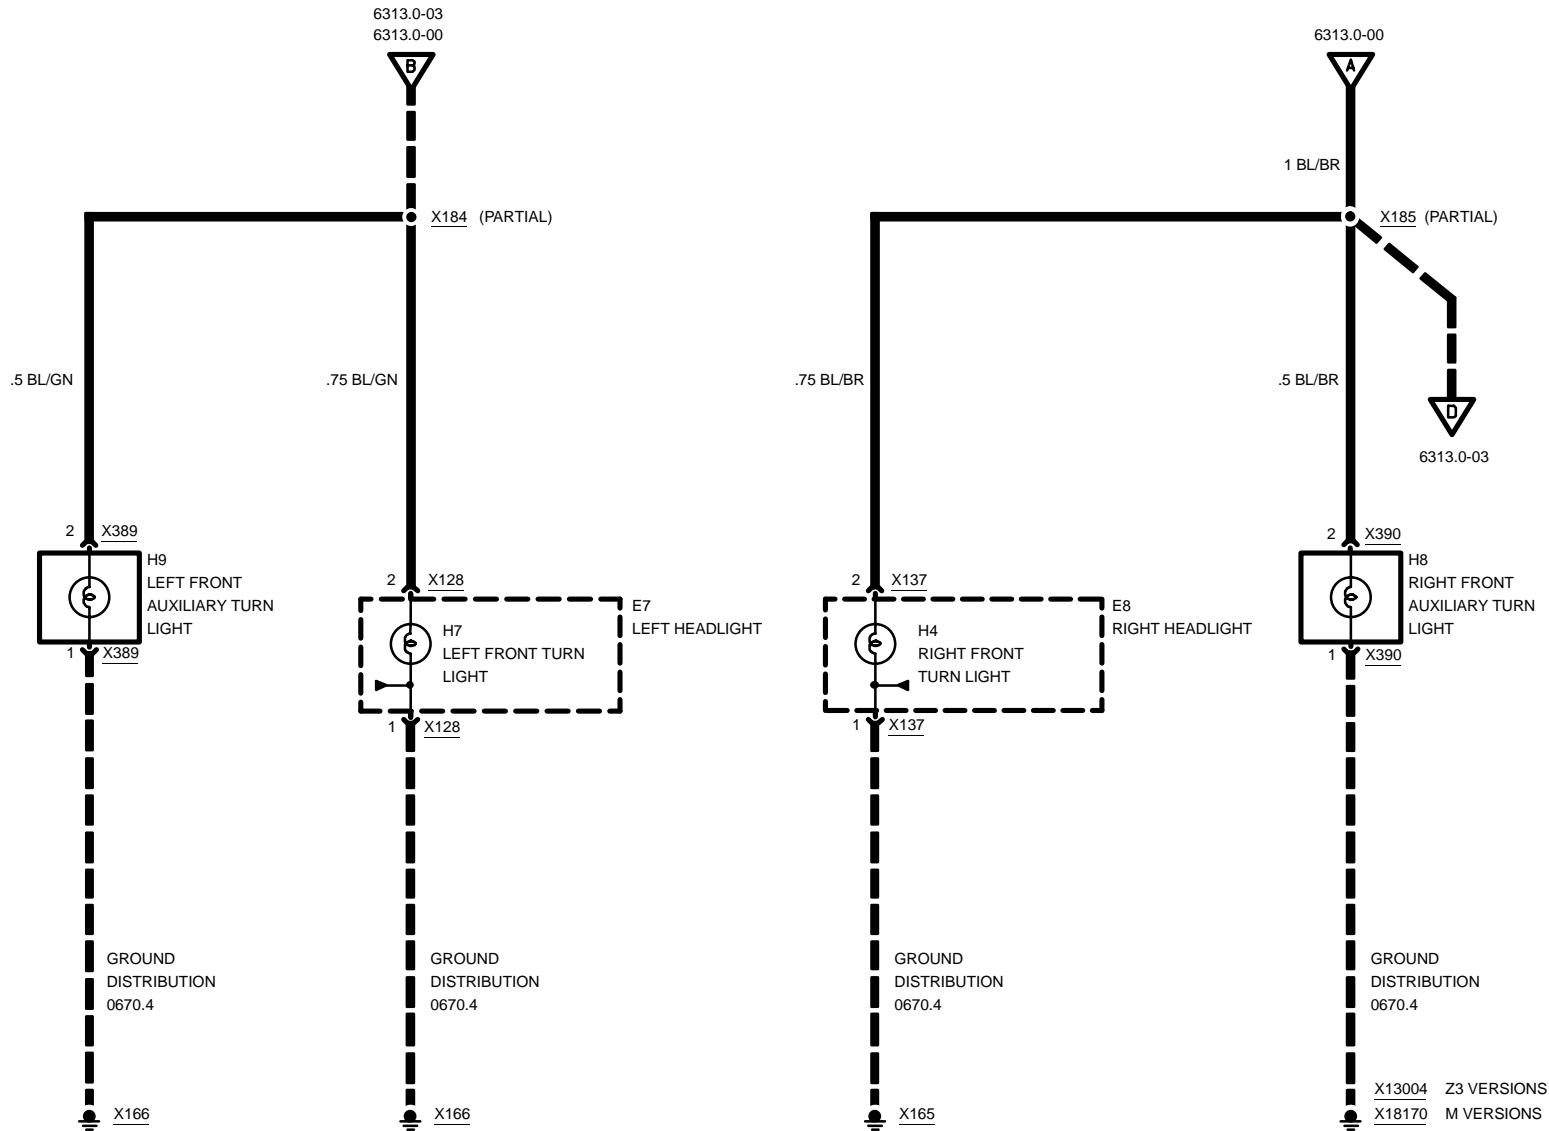



# TURN/HAZARD LIGHTS

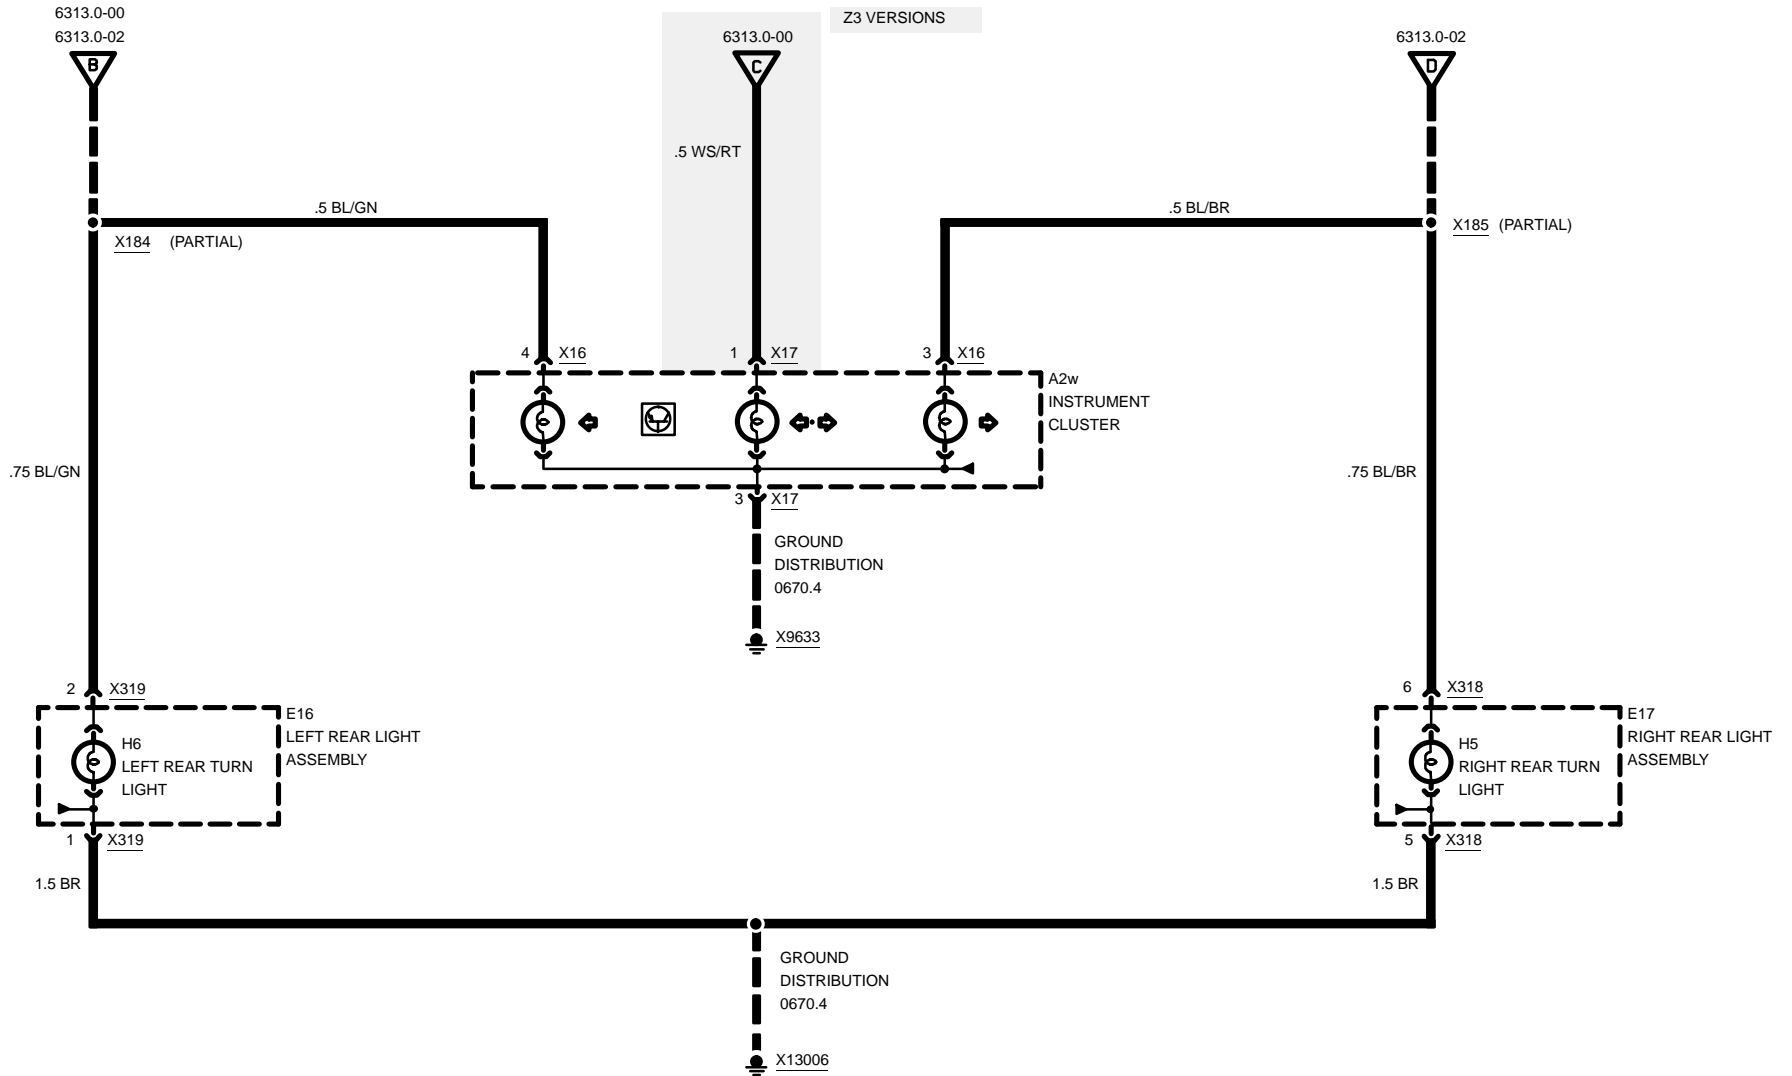








Z3

# 6314.0 PARK/TAIL/UNDERHOOD LIGHTS

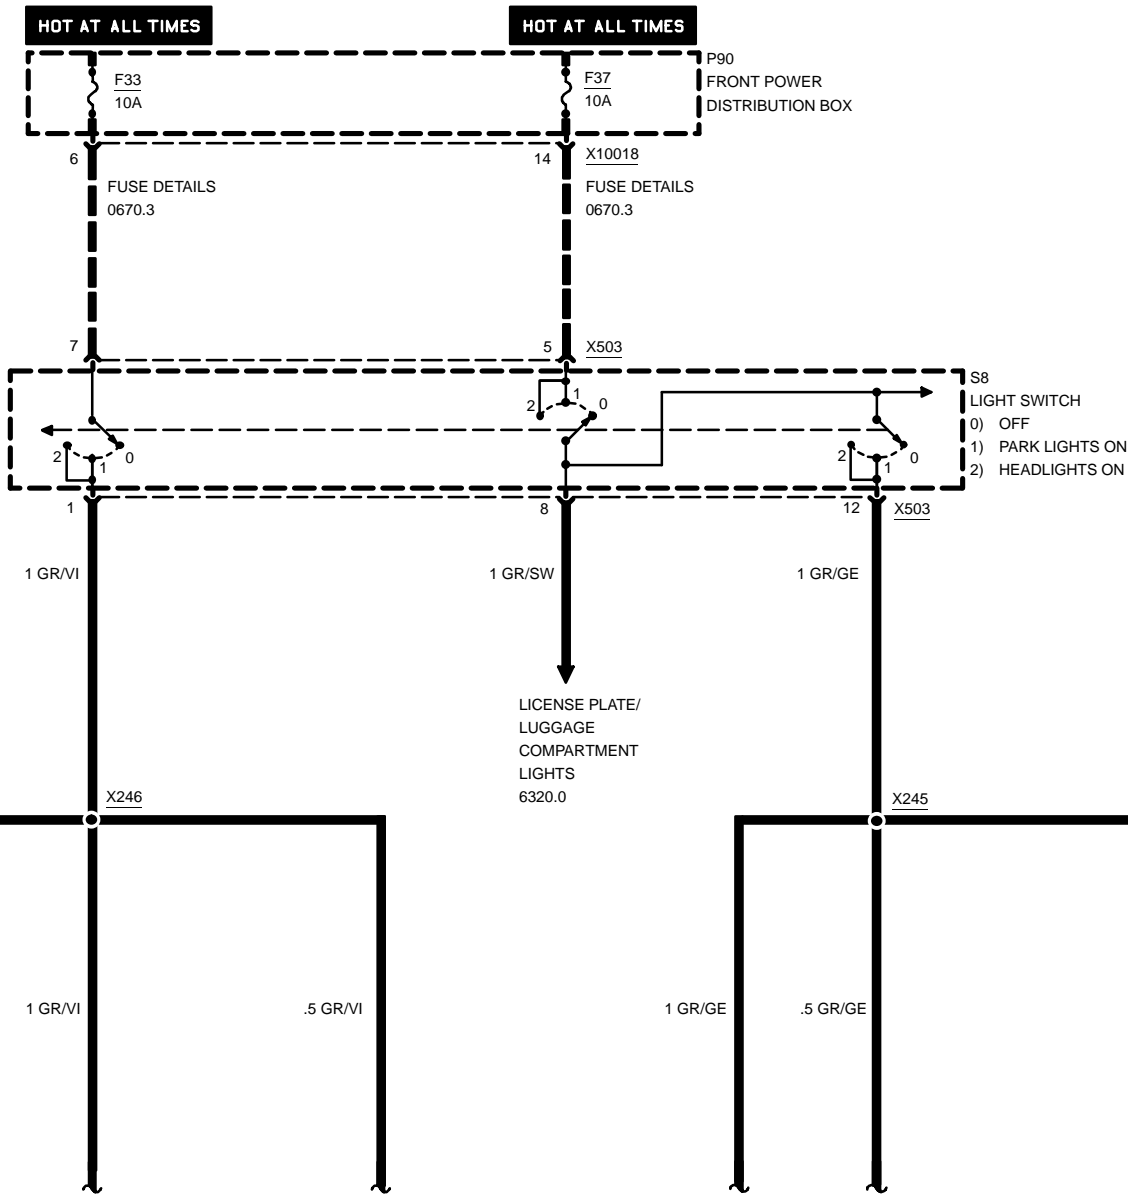

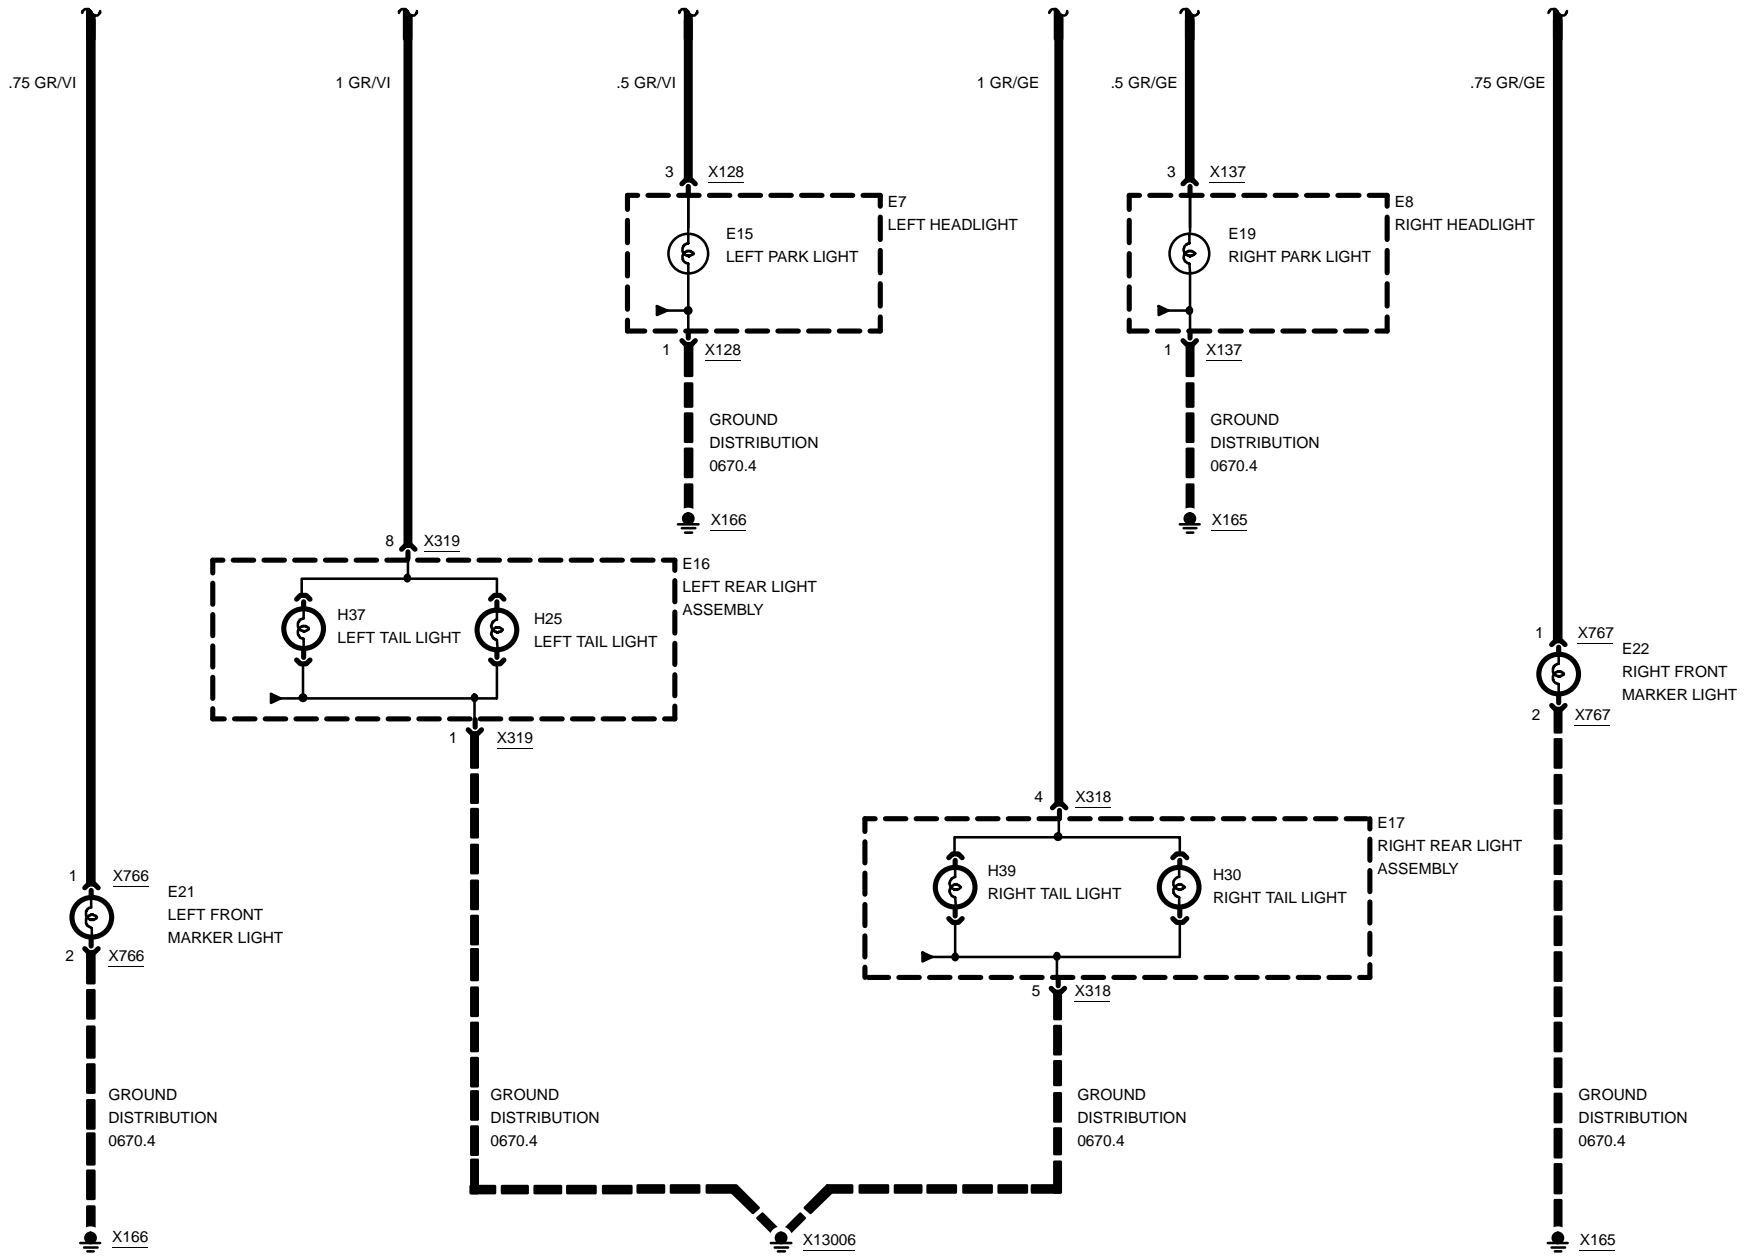


# 6320.0 LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS

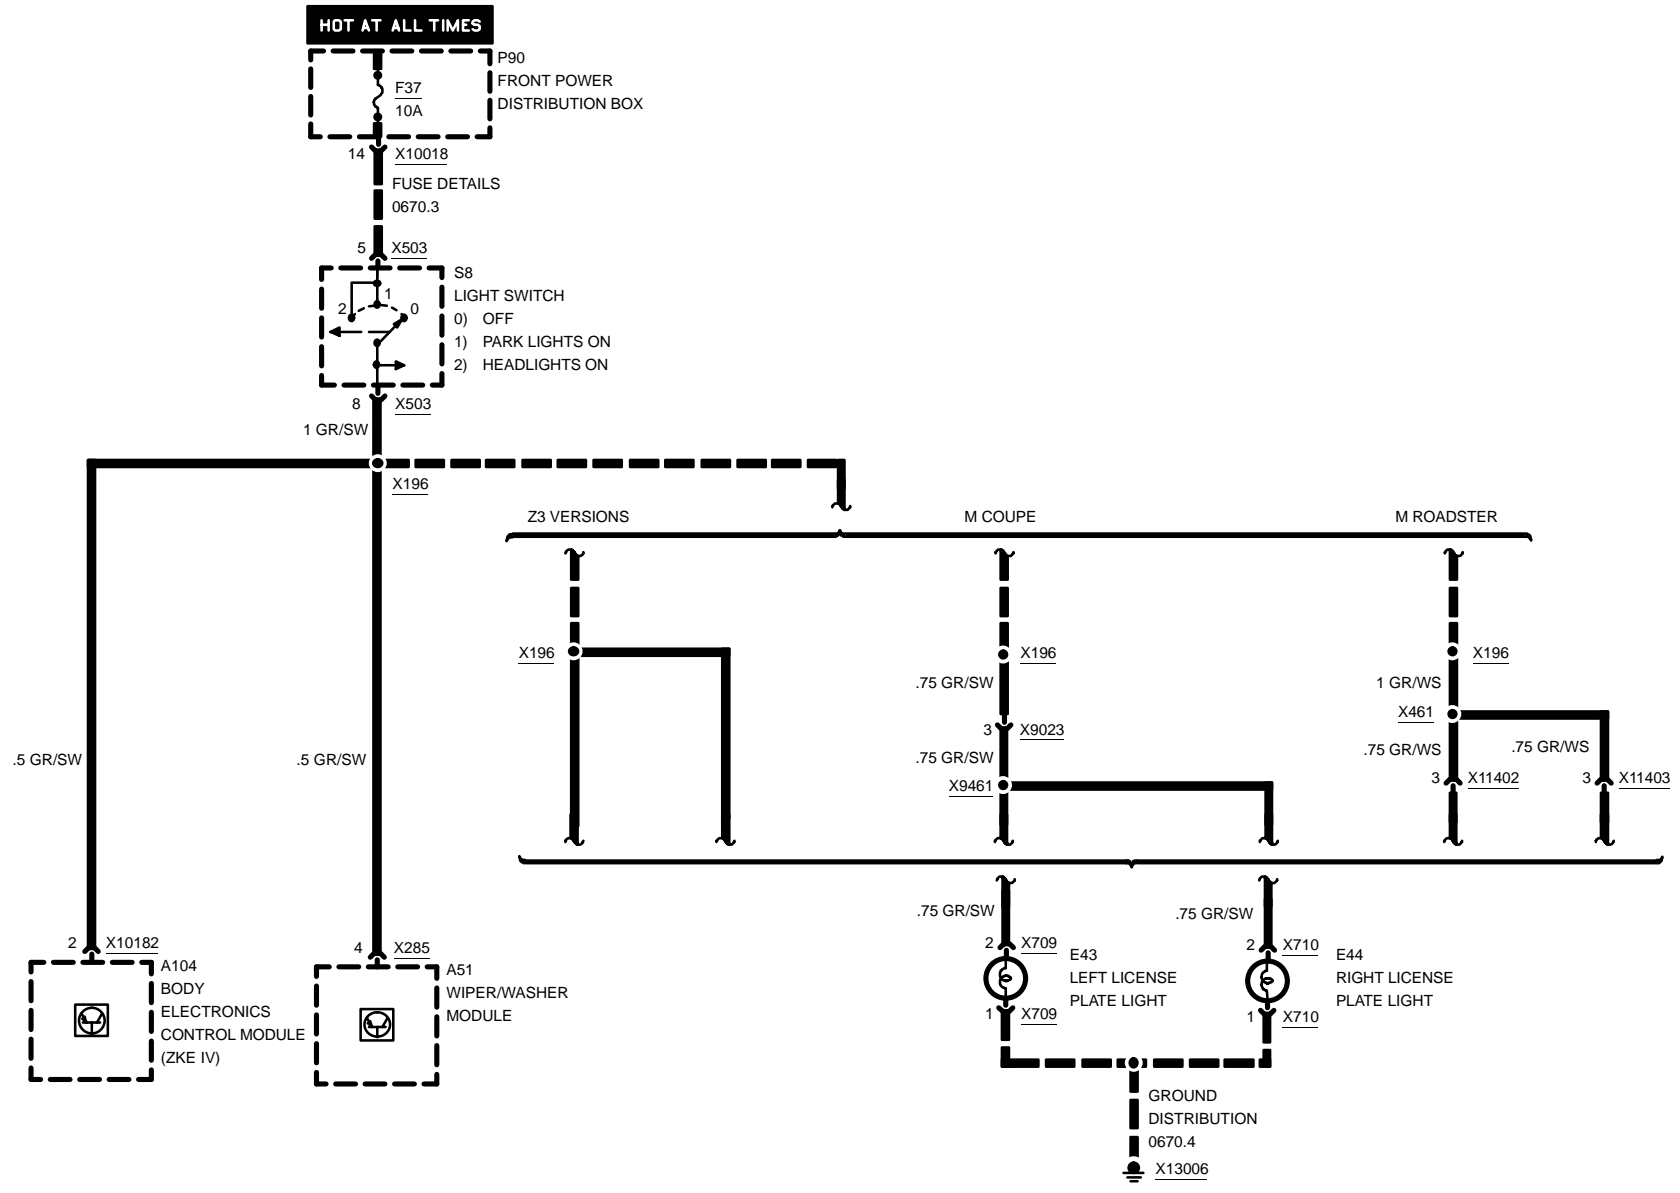



Z3

# LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS

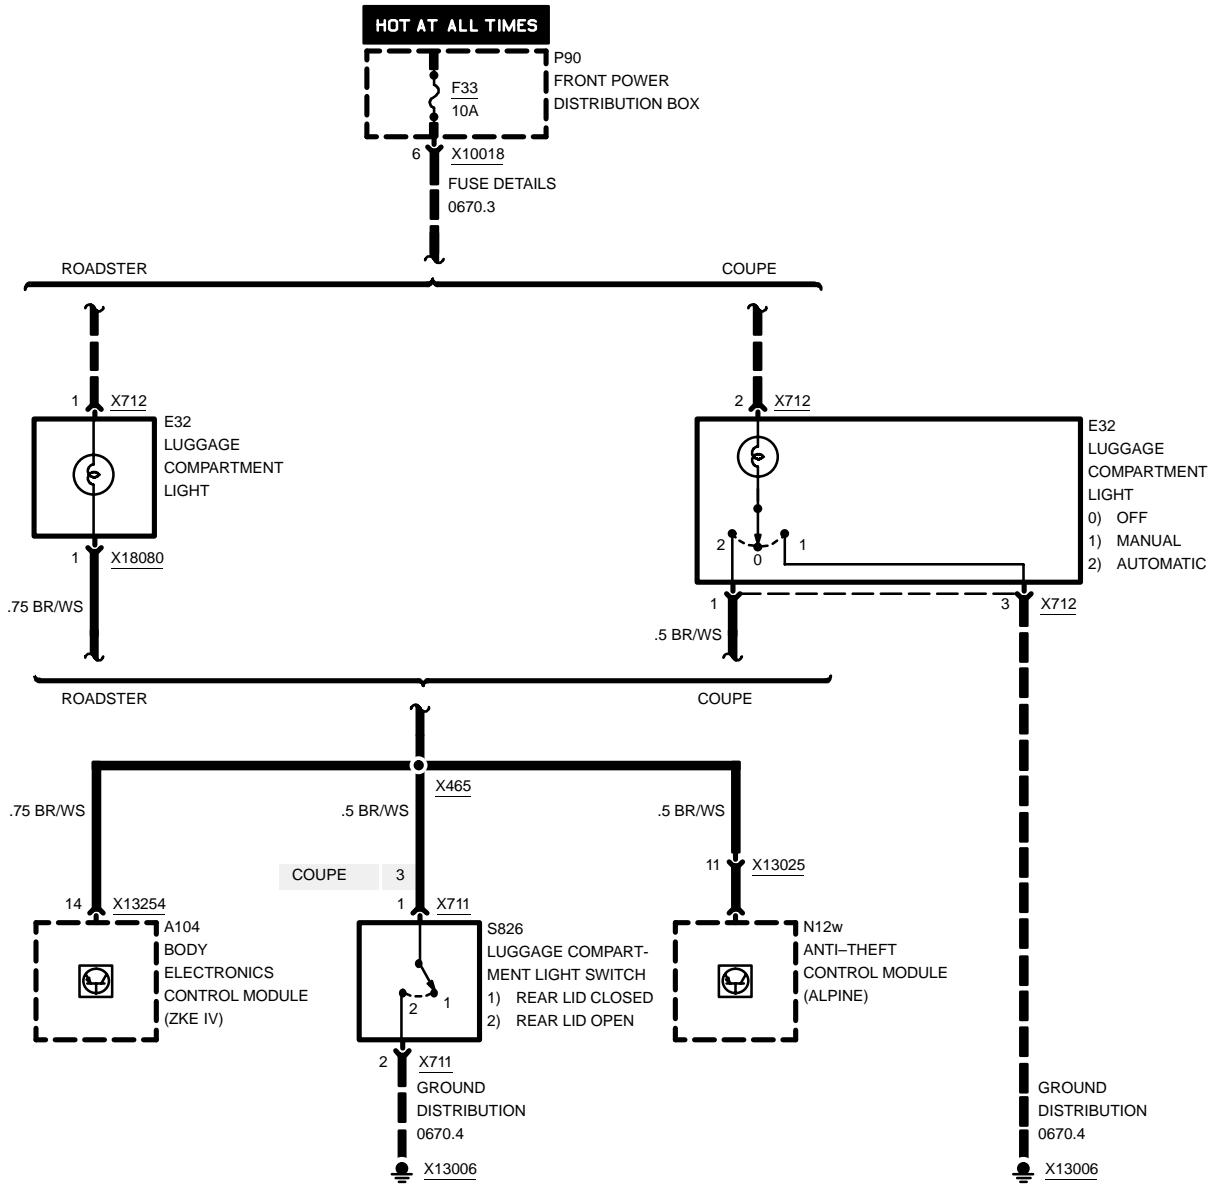






# 6325.0 BRAKE LIGHTS

# Z3 VERSIONS


Z3

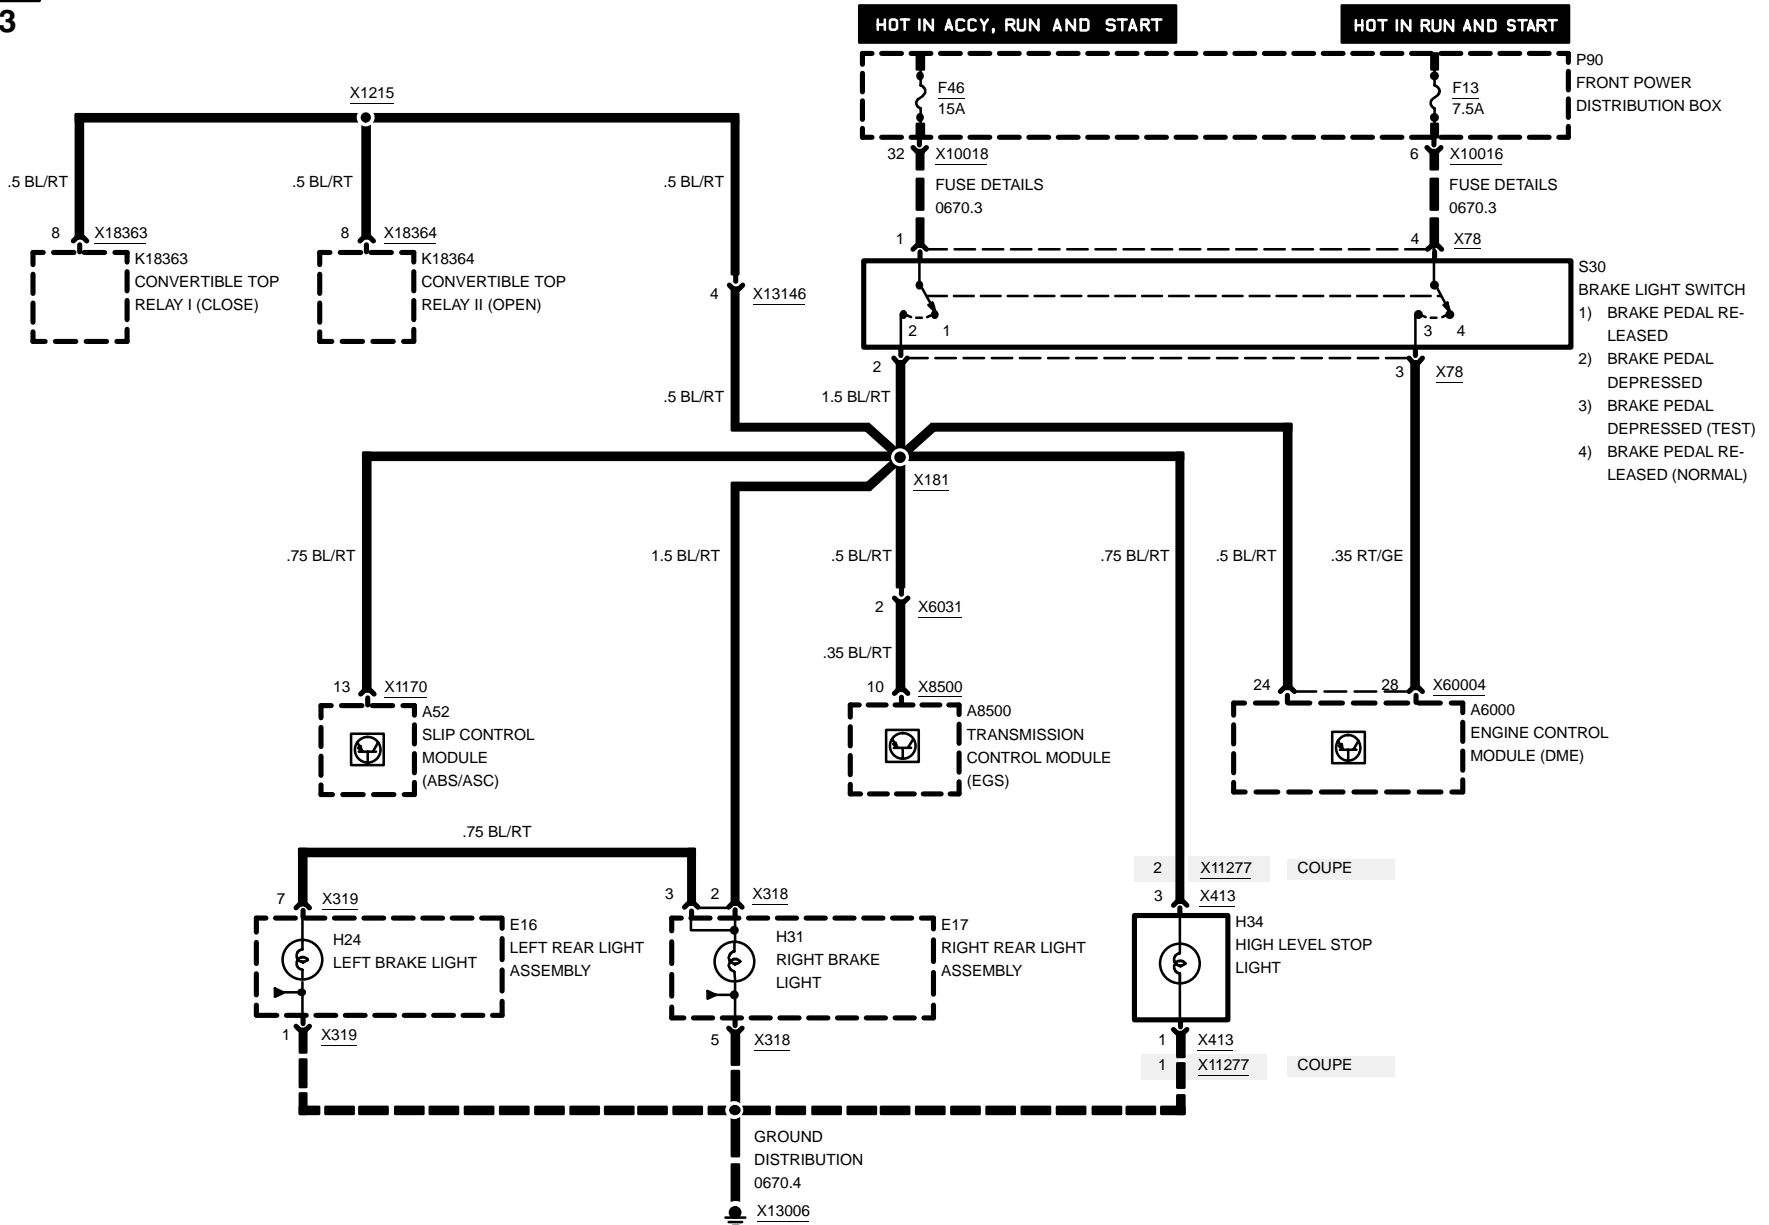




# BRAKE LIGHTS

# M VERSIONS

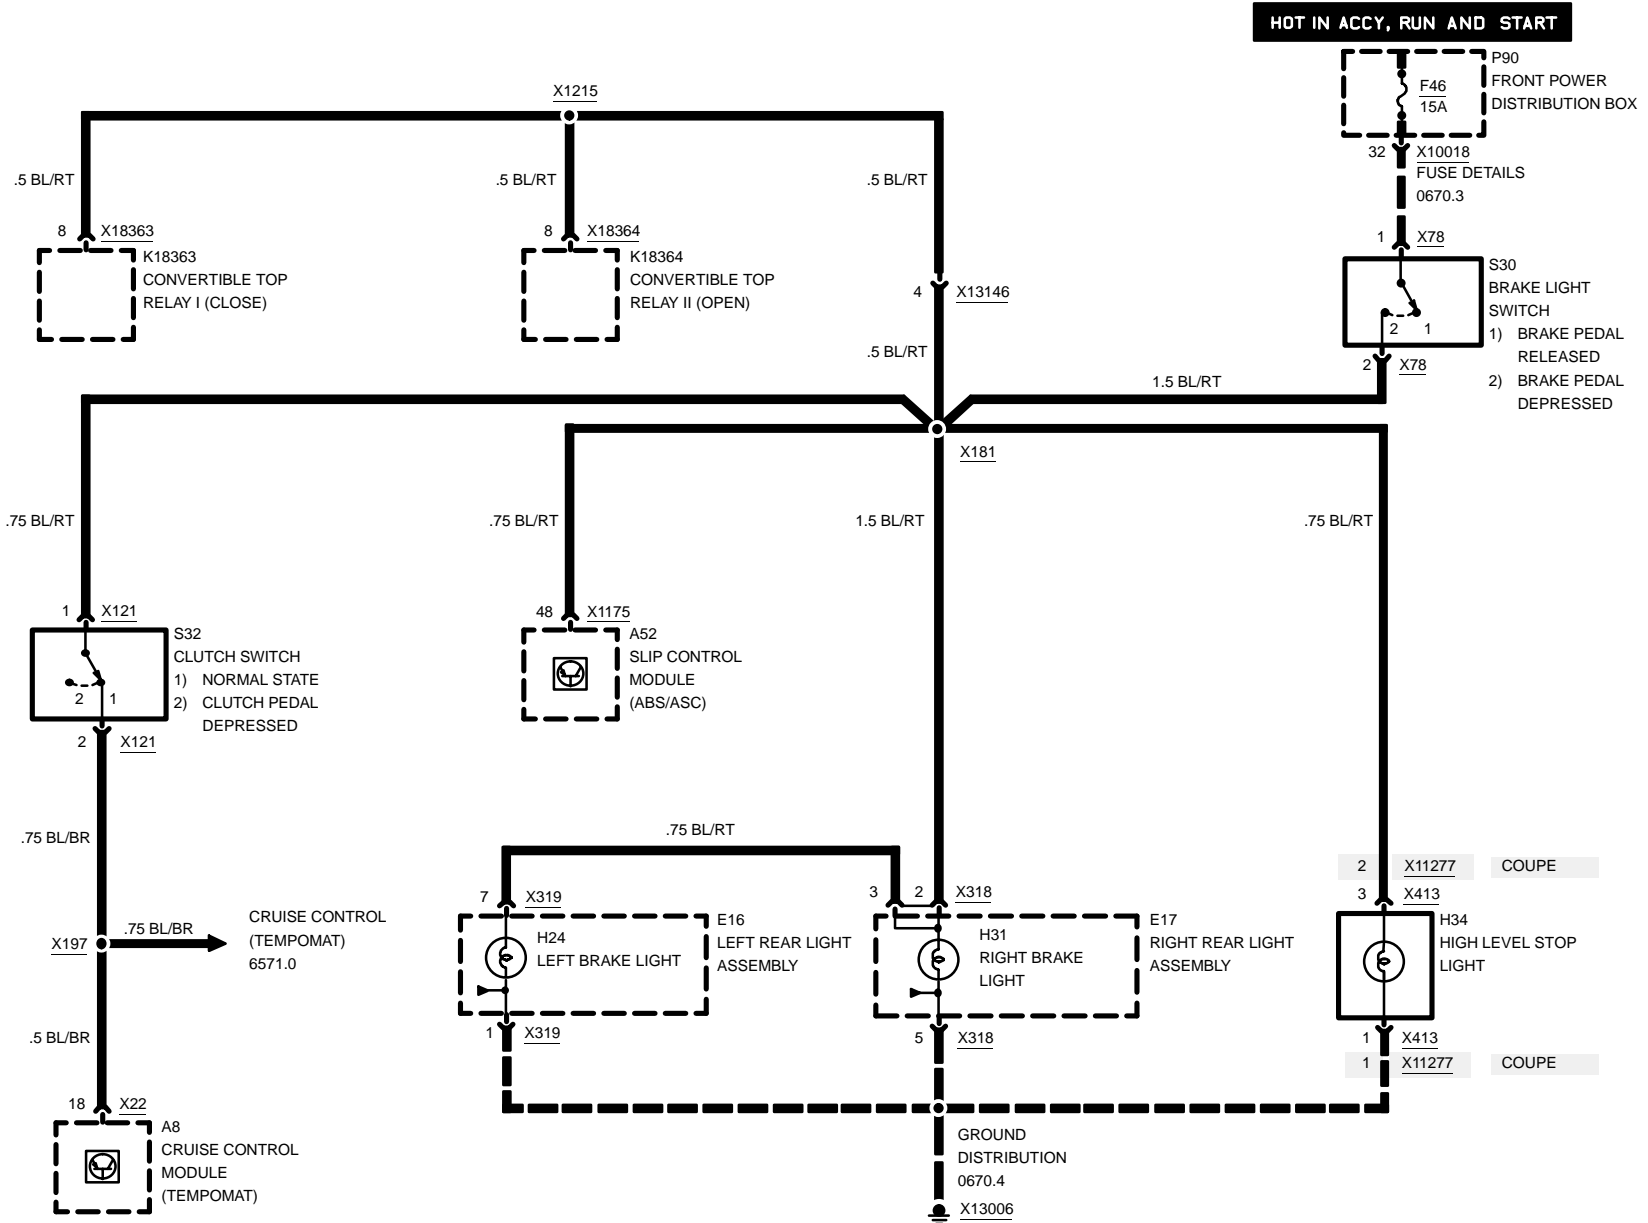


# 6330.0 INTERIOR LIGHTS

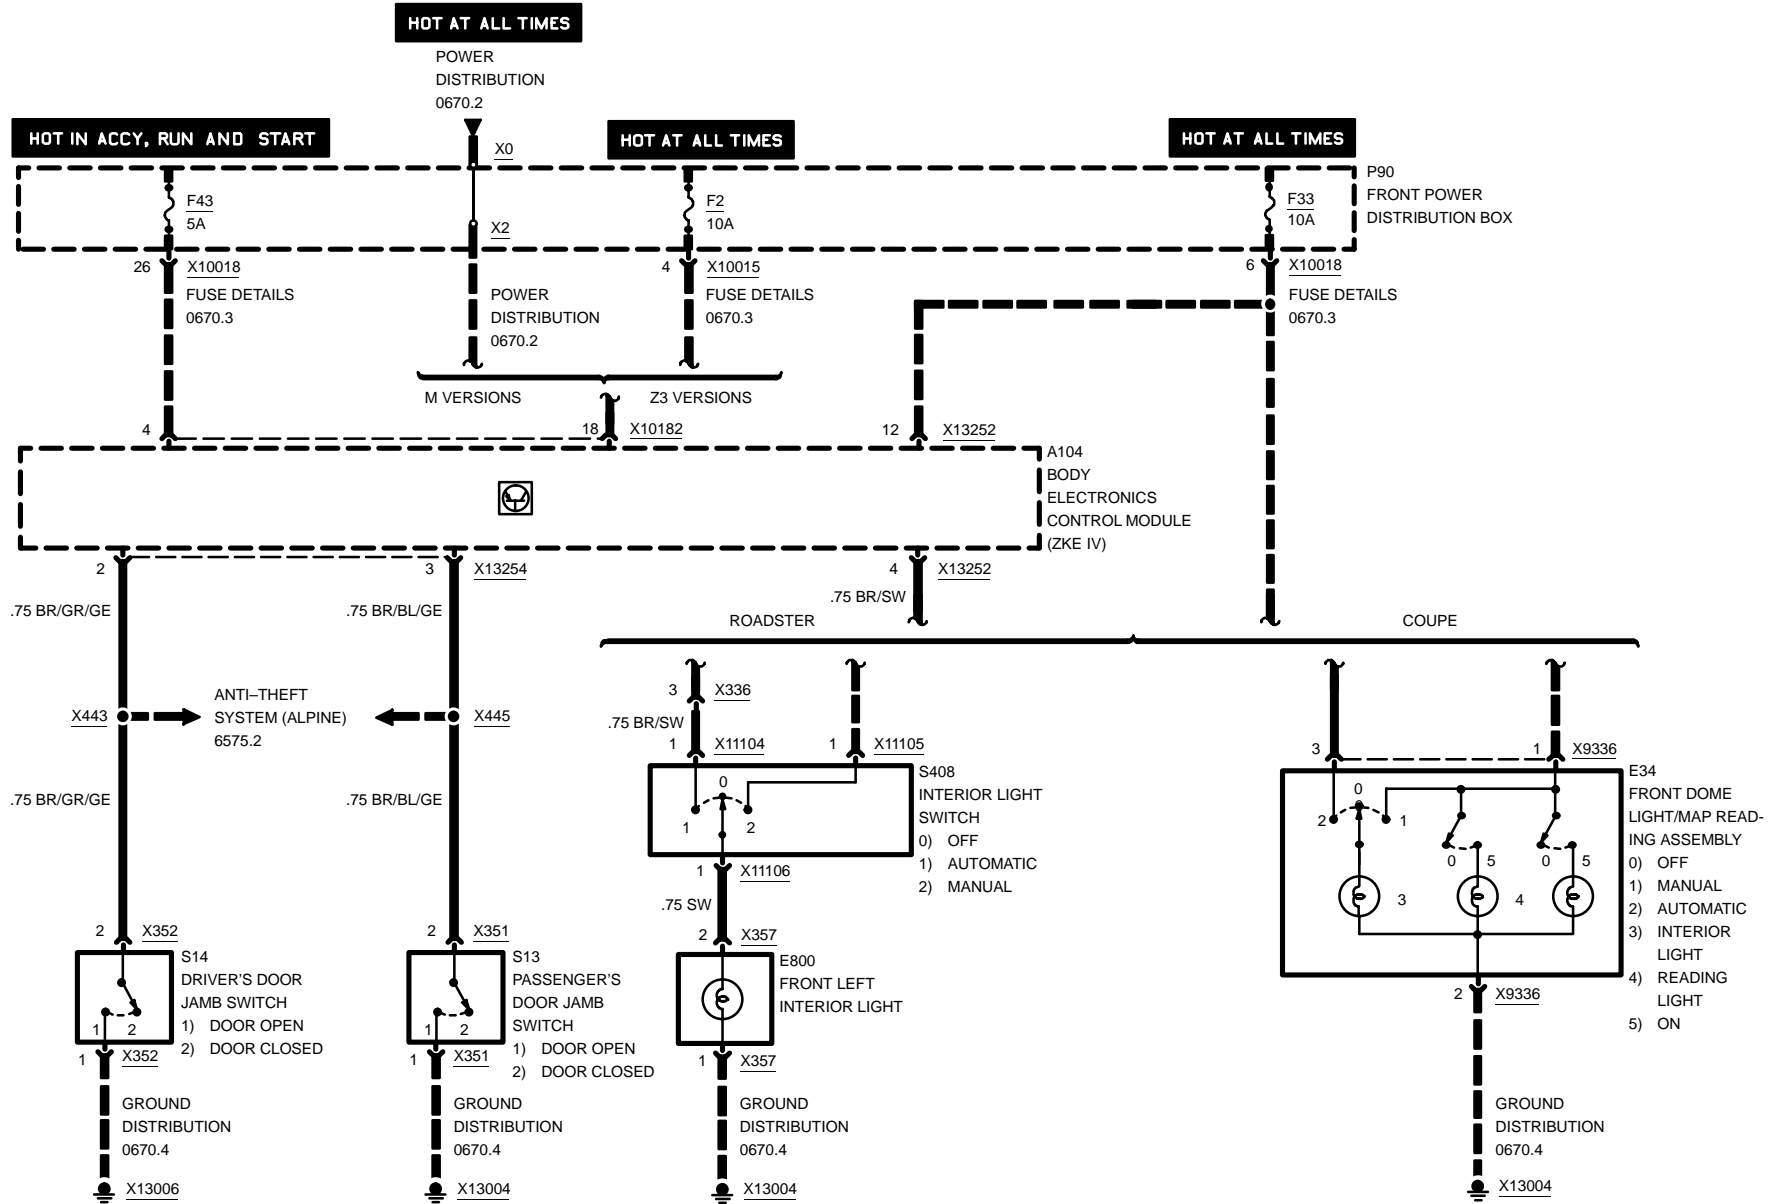




# 6332.0 INTERIOR ACCESSORIES

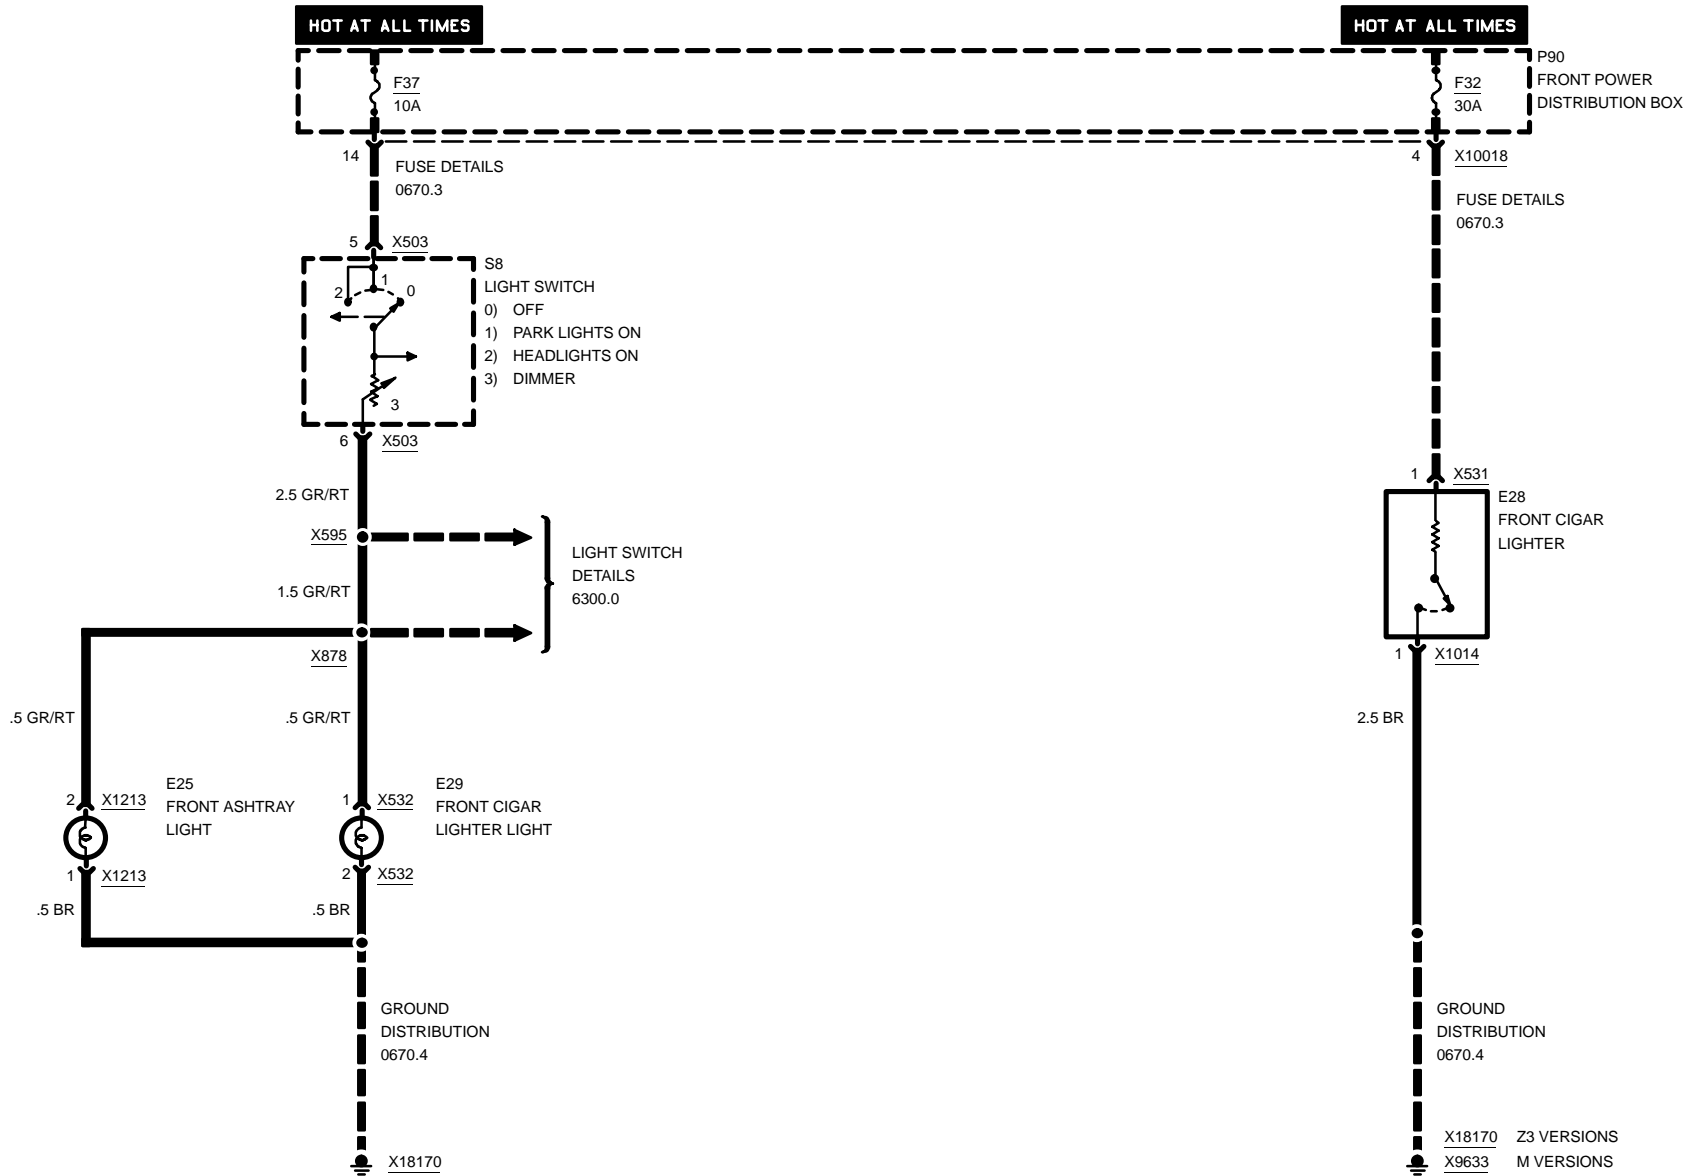



Z3


# 6350.0 CRASH CONTROL MODULE

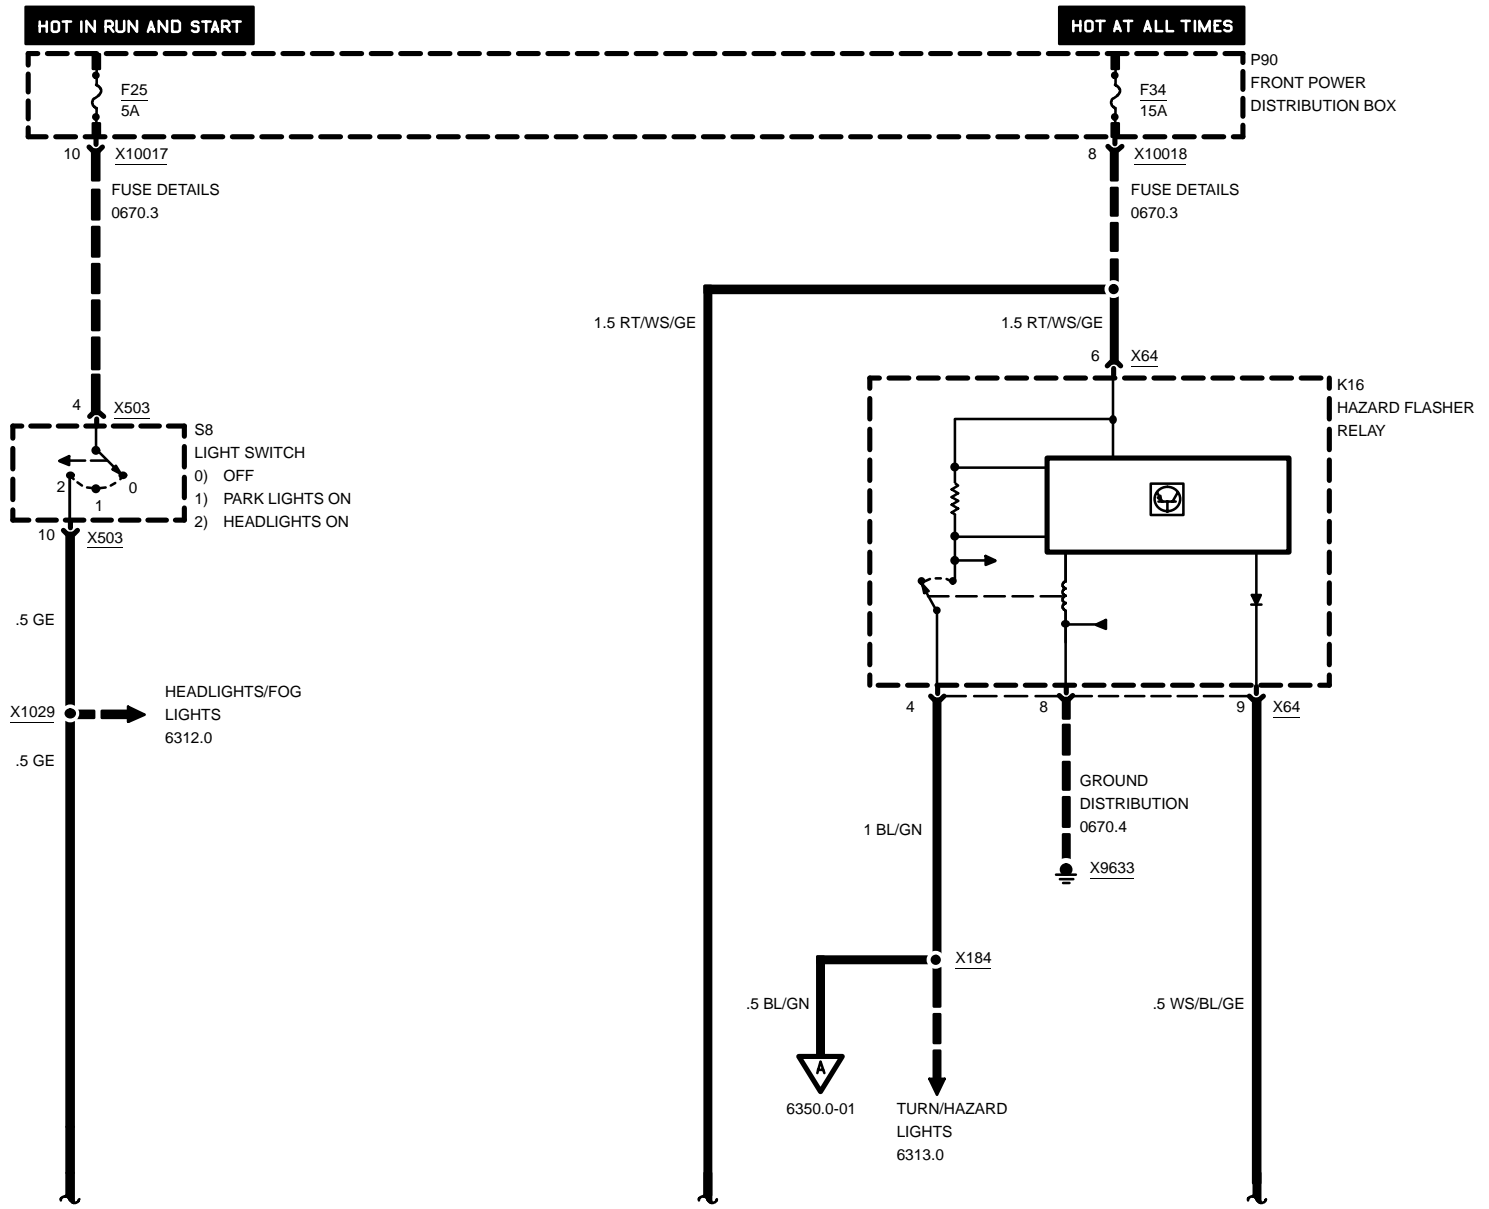

03/00

6350.0-00


1999

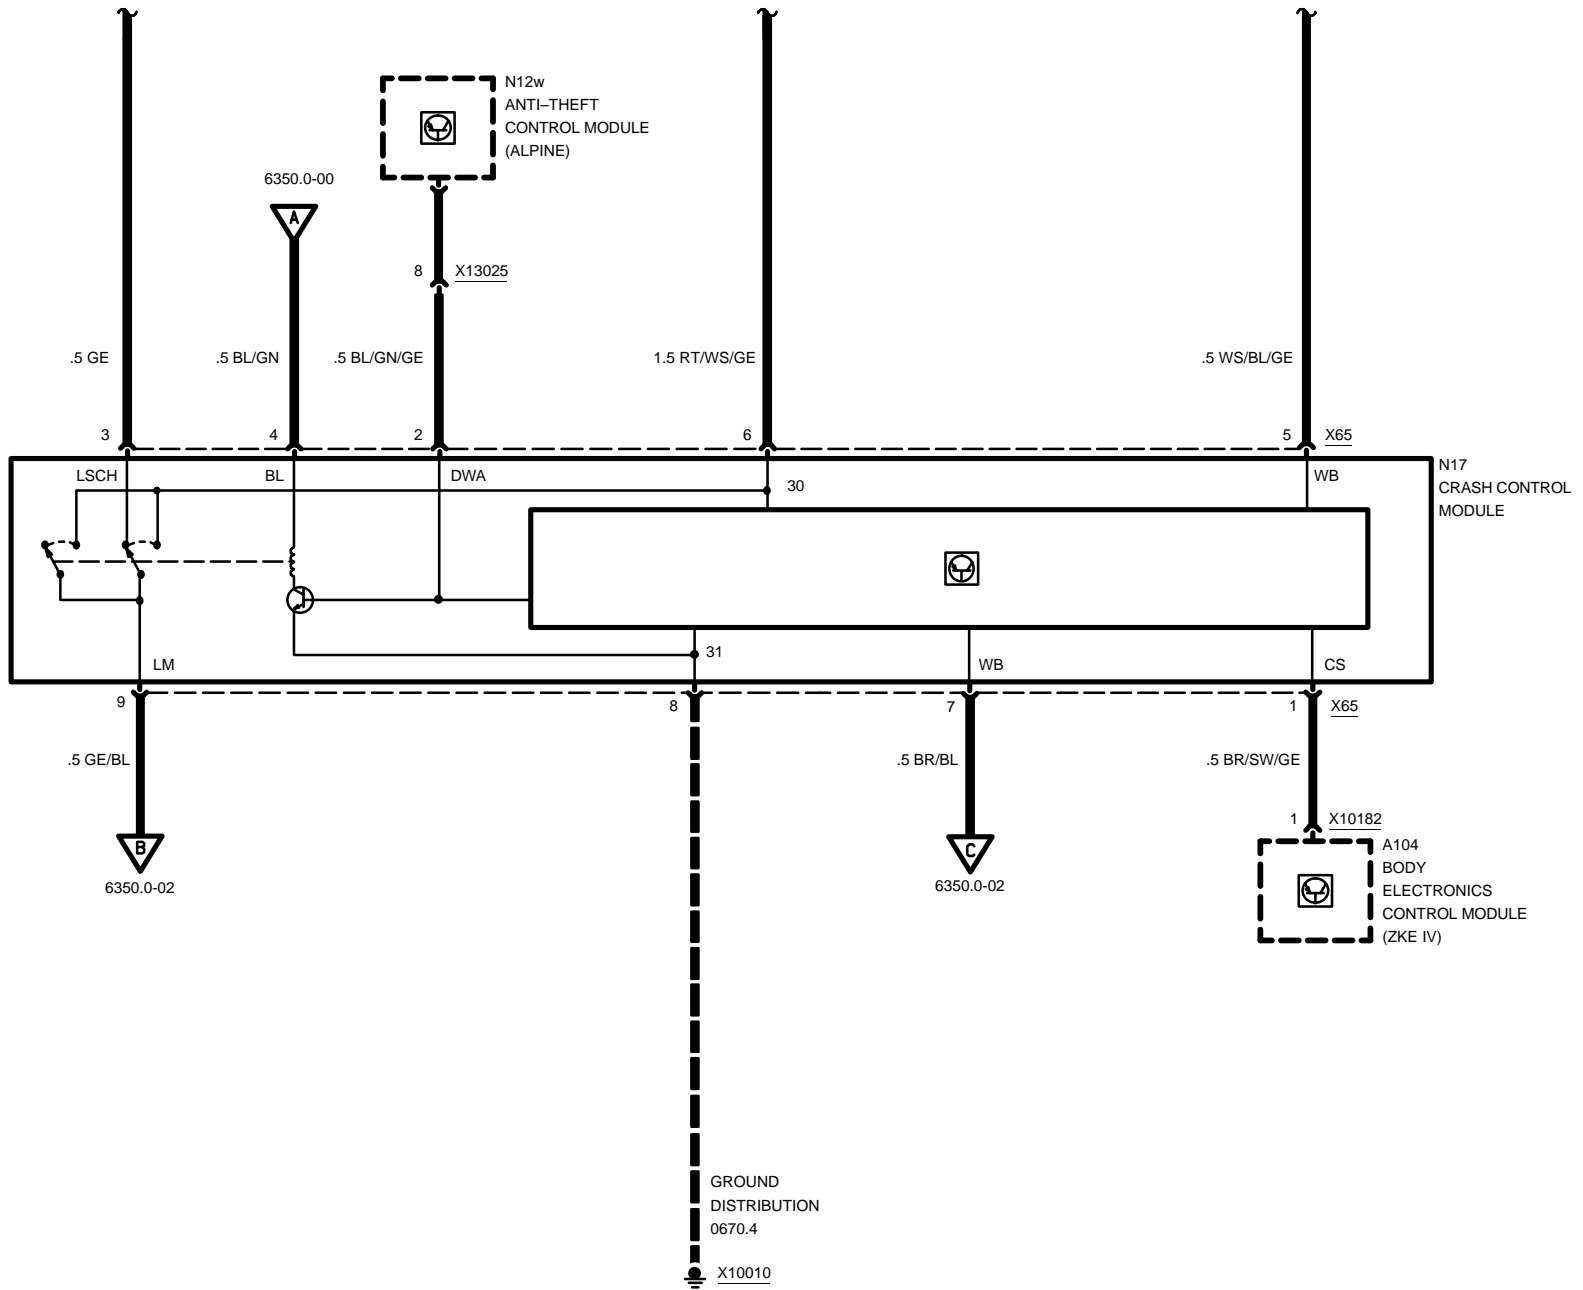



Z3

# CRASH CONTROL MODULE

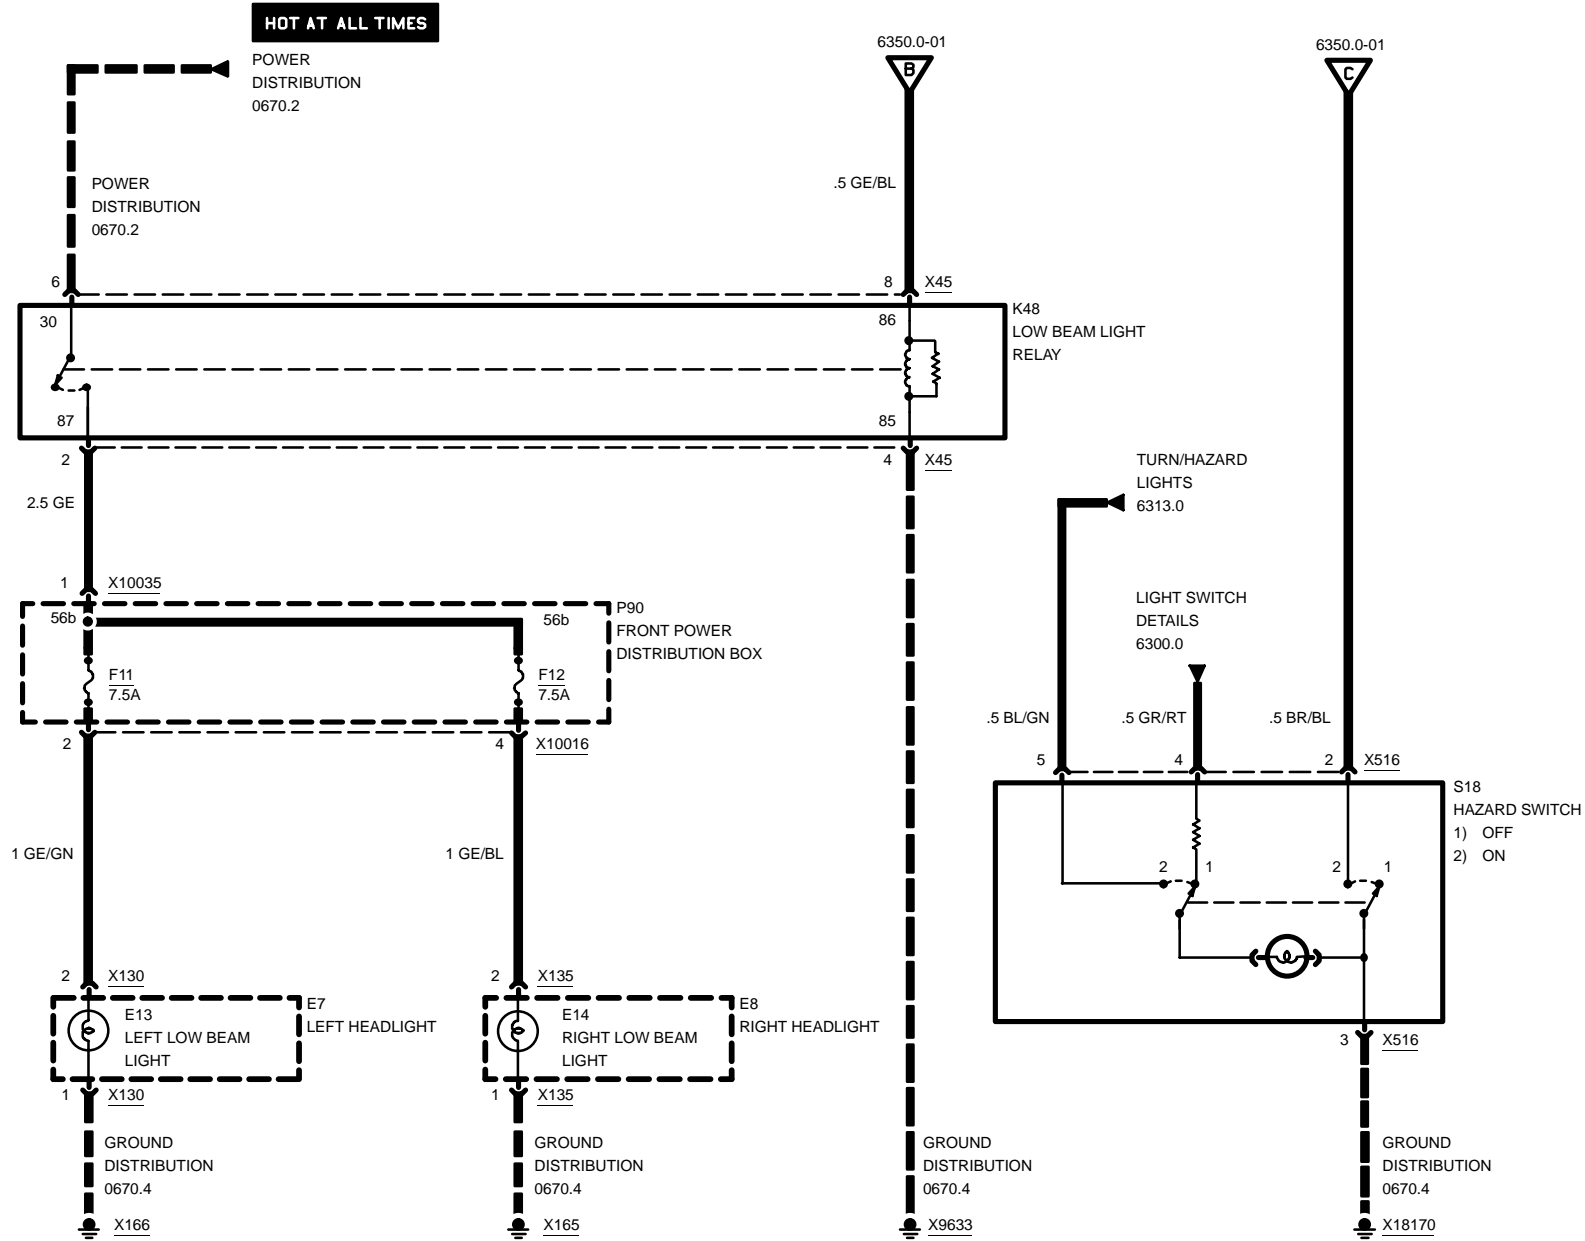

03/00

6350.0-02


1999



# 6424.0 REAR WINDOW DEFOGGER

## M COUPE

Z3

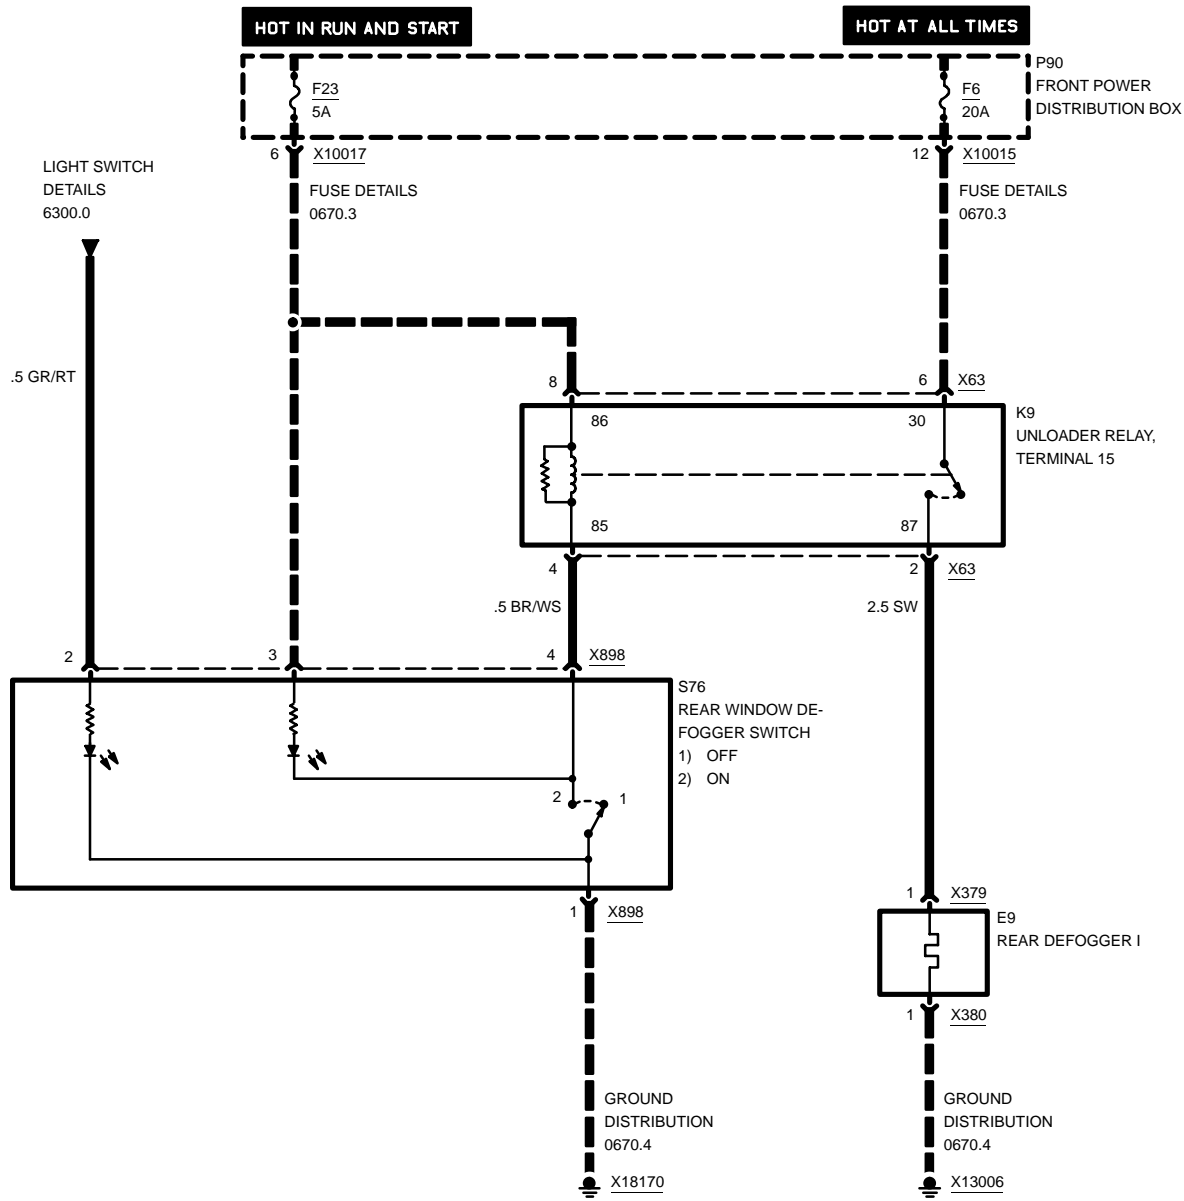

03/00

6424.0-00


1999



# REAR WINDOW DEFOGGER

# ROADSTER AND Z3 COUPE

Z3

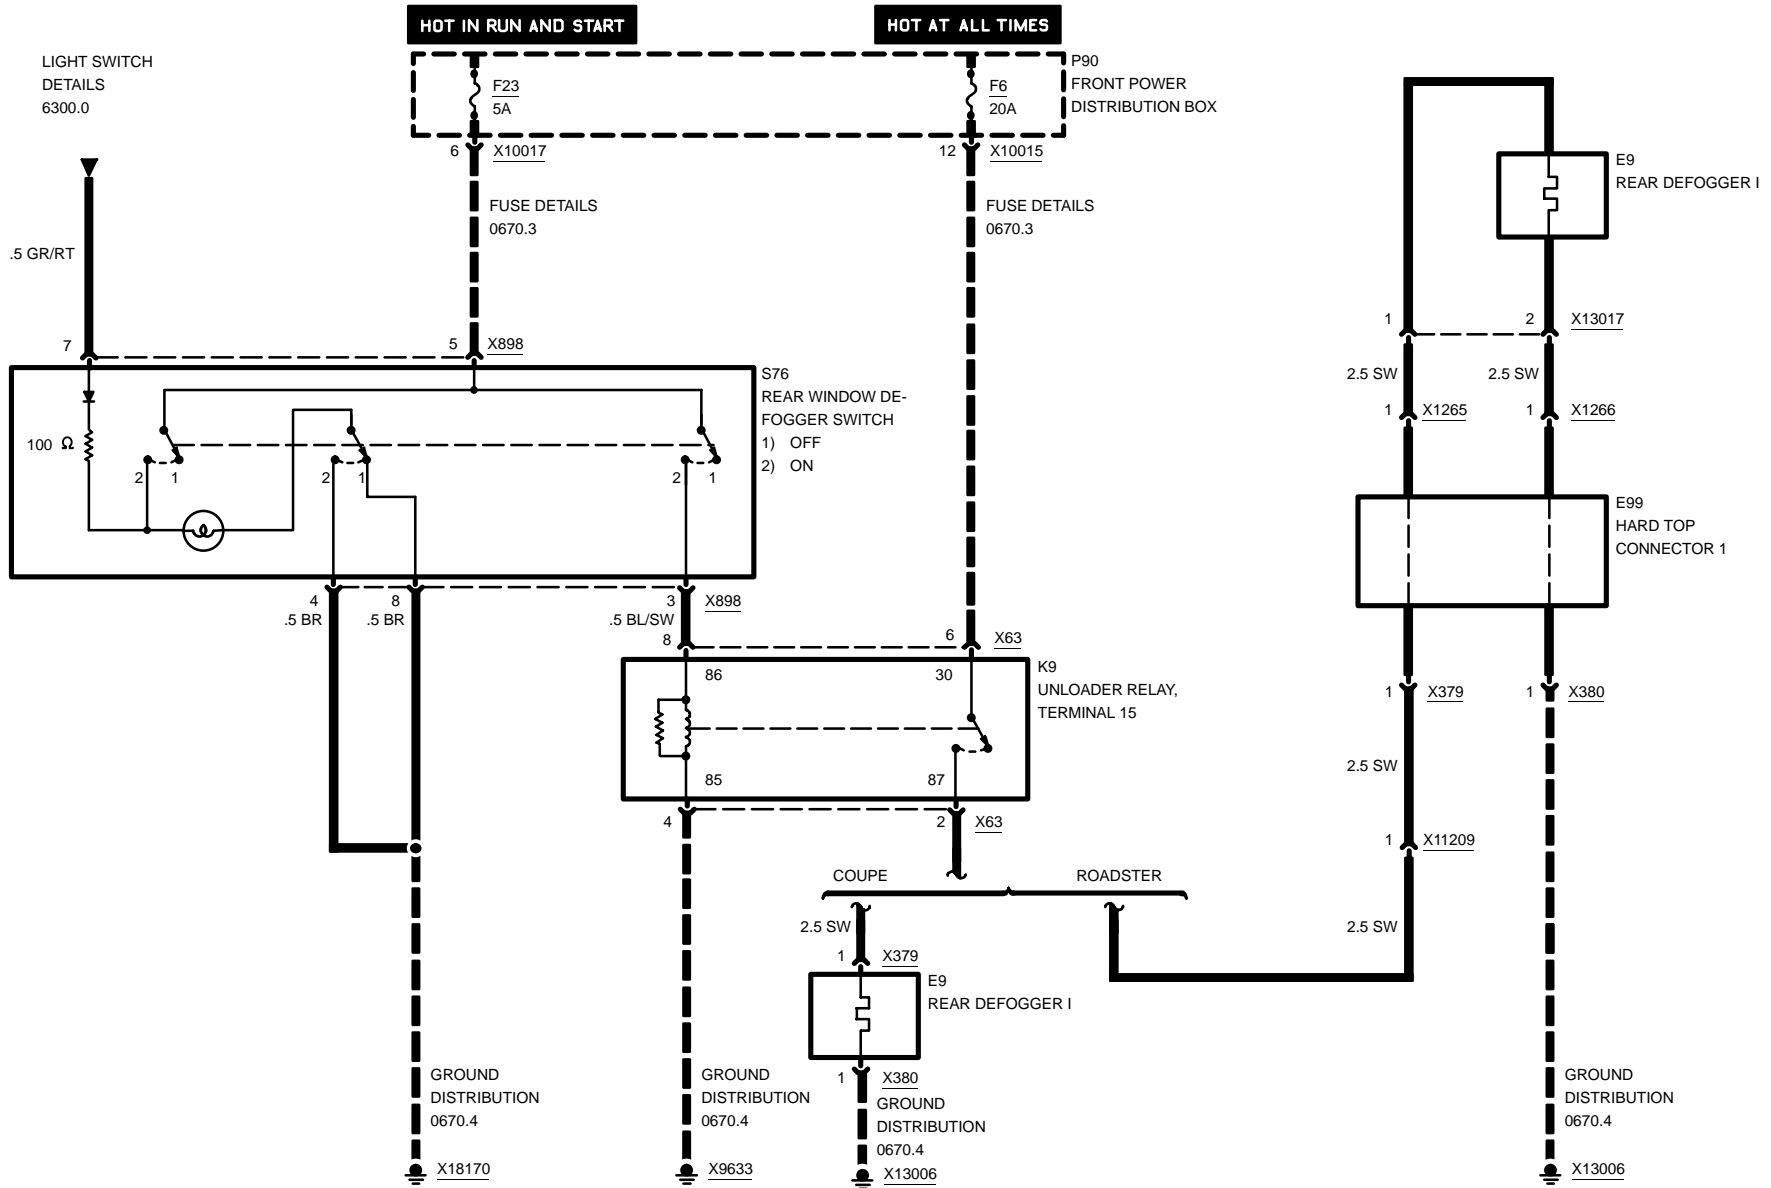


03/00


6424.0-01

1999


Z3 VERSIONS

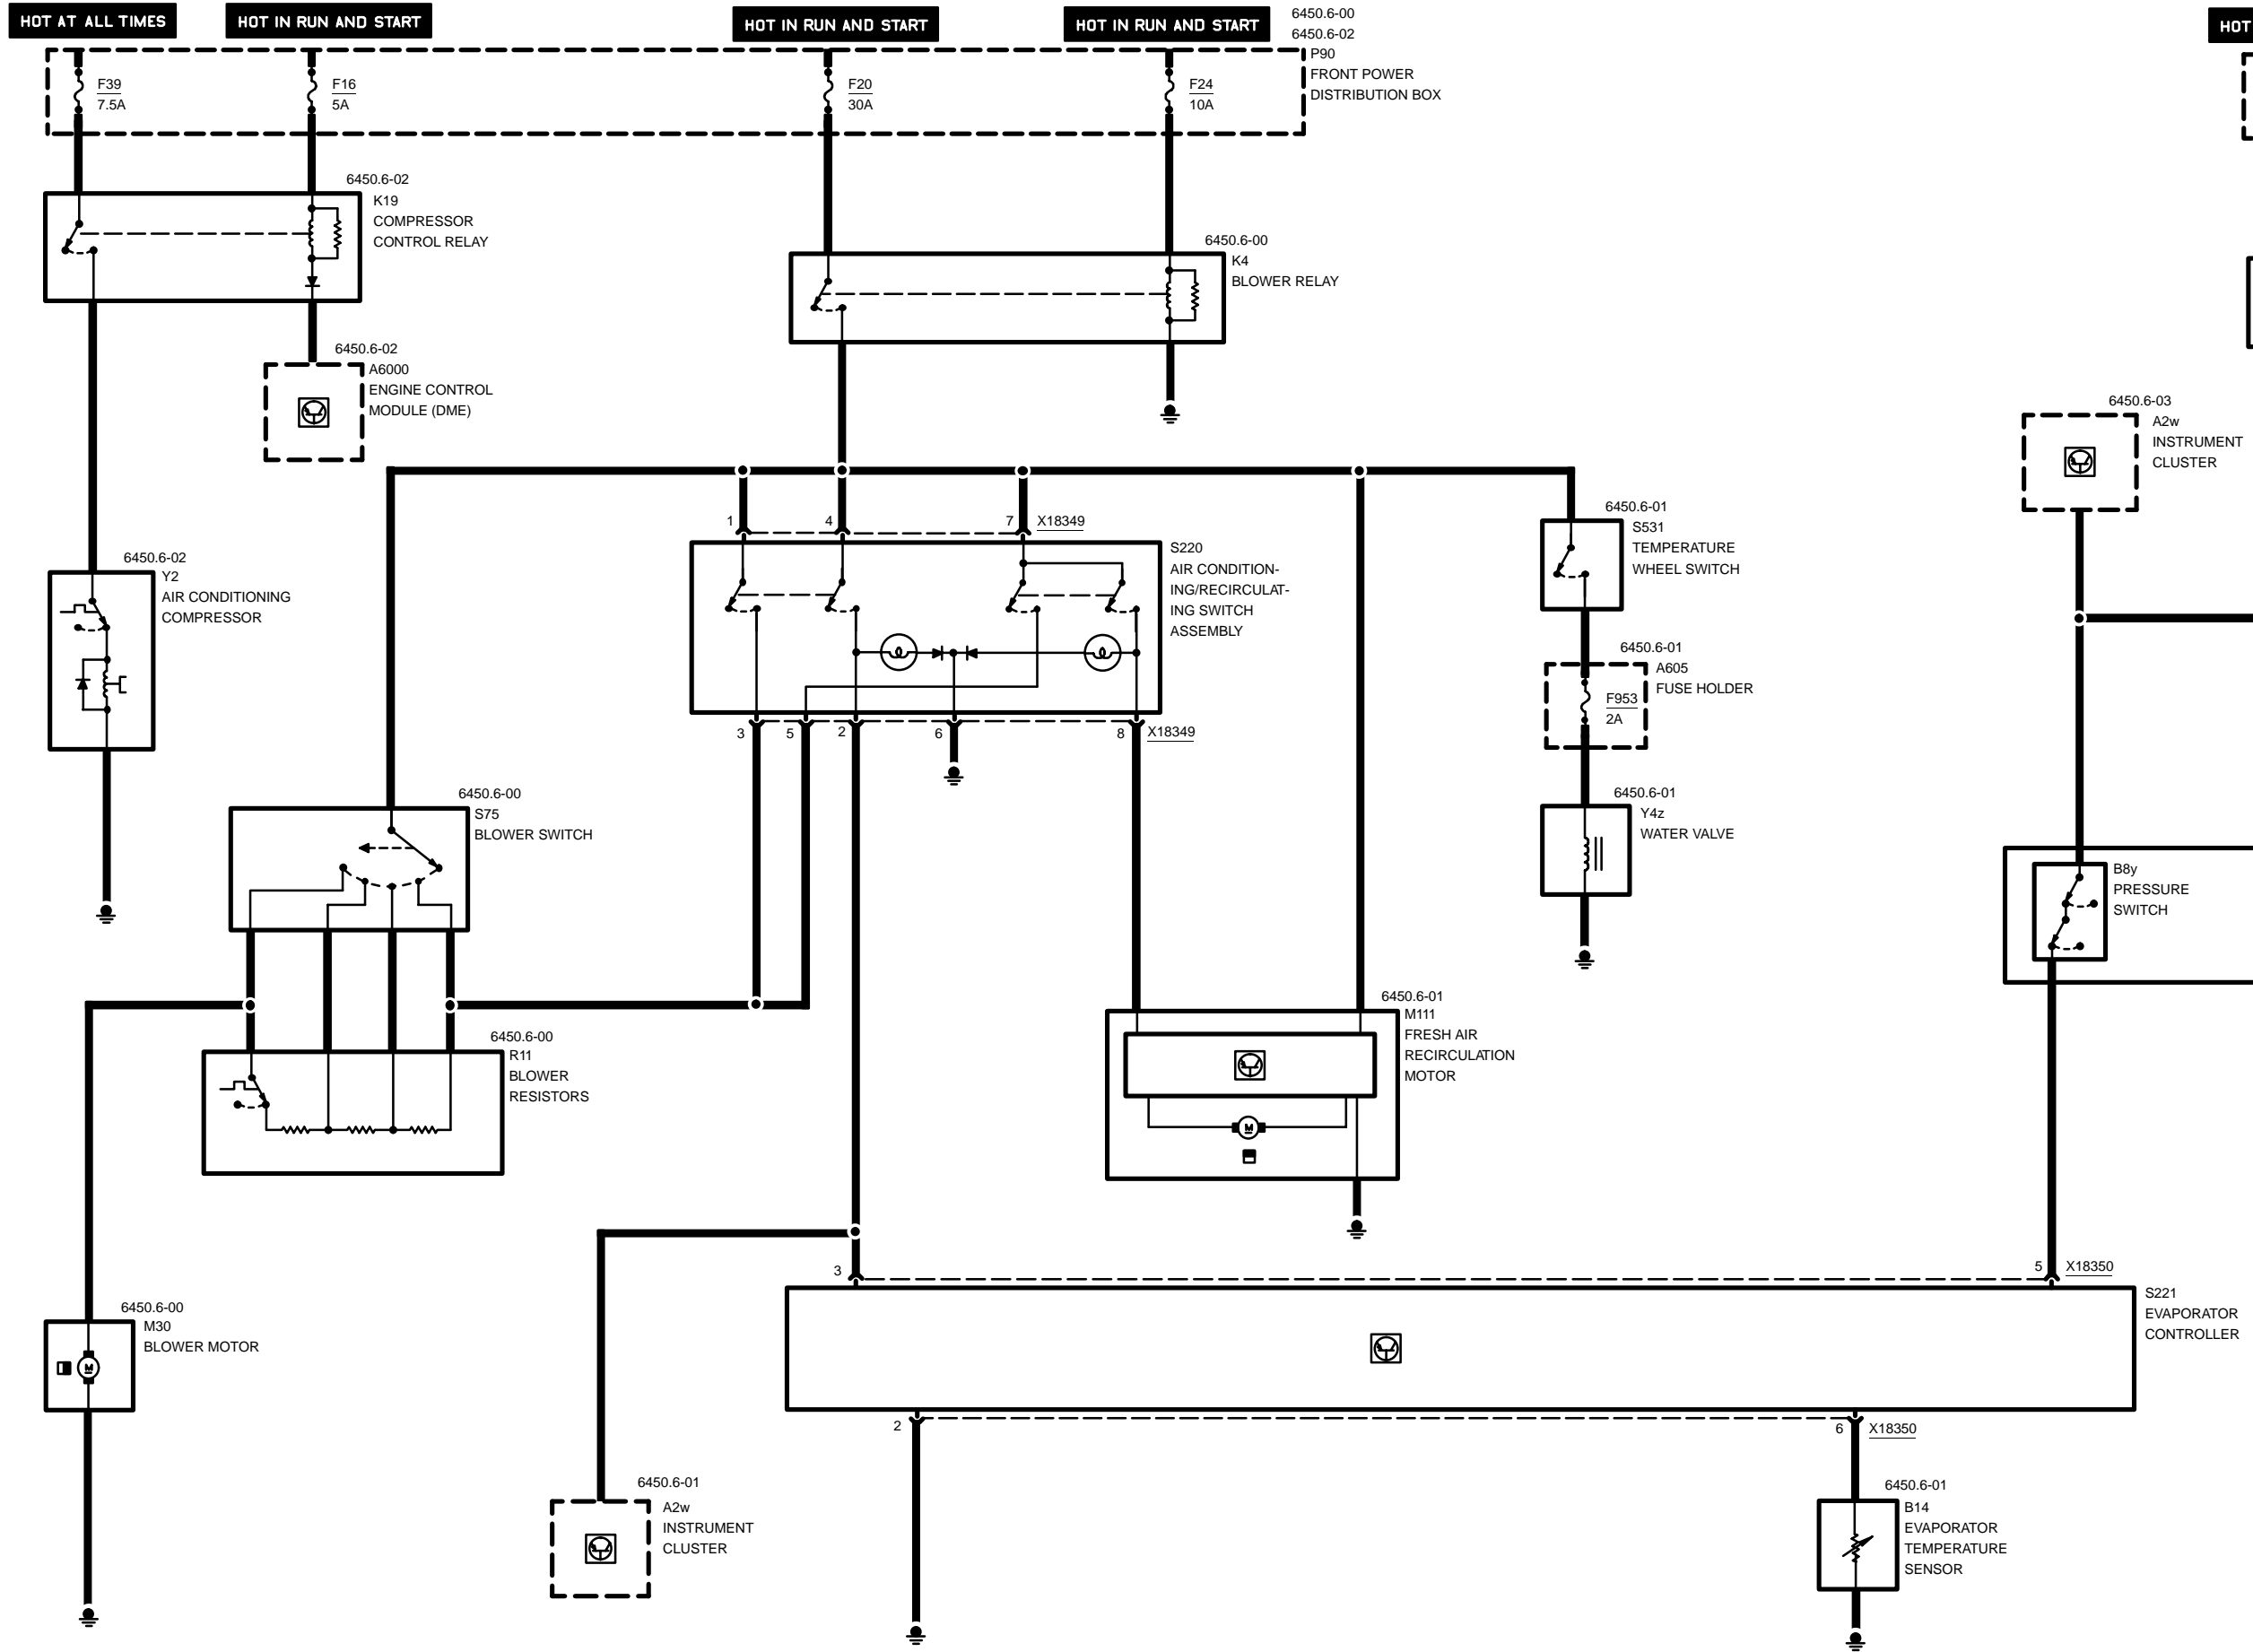

AUXILIARY FAN

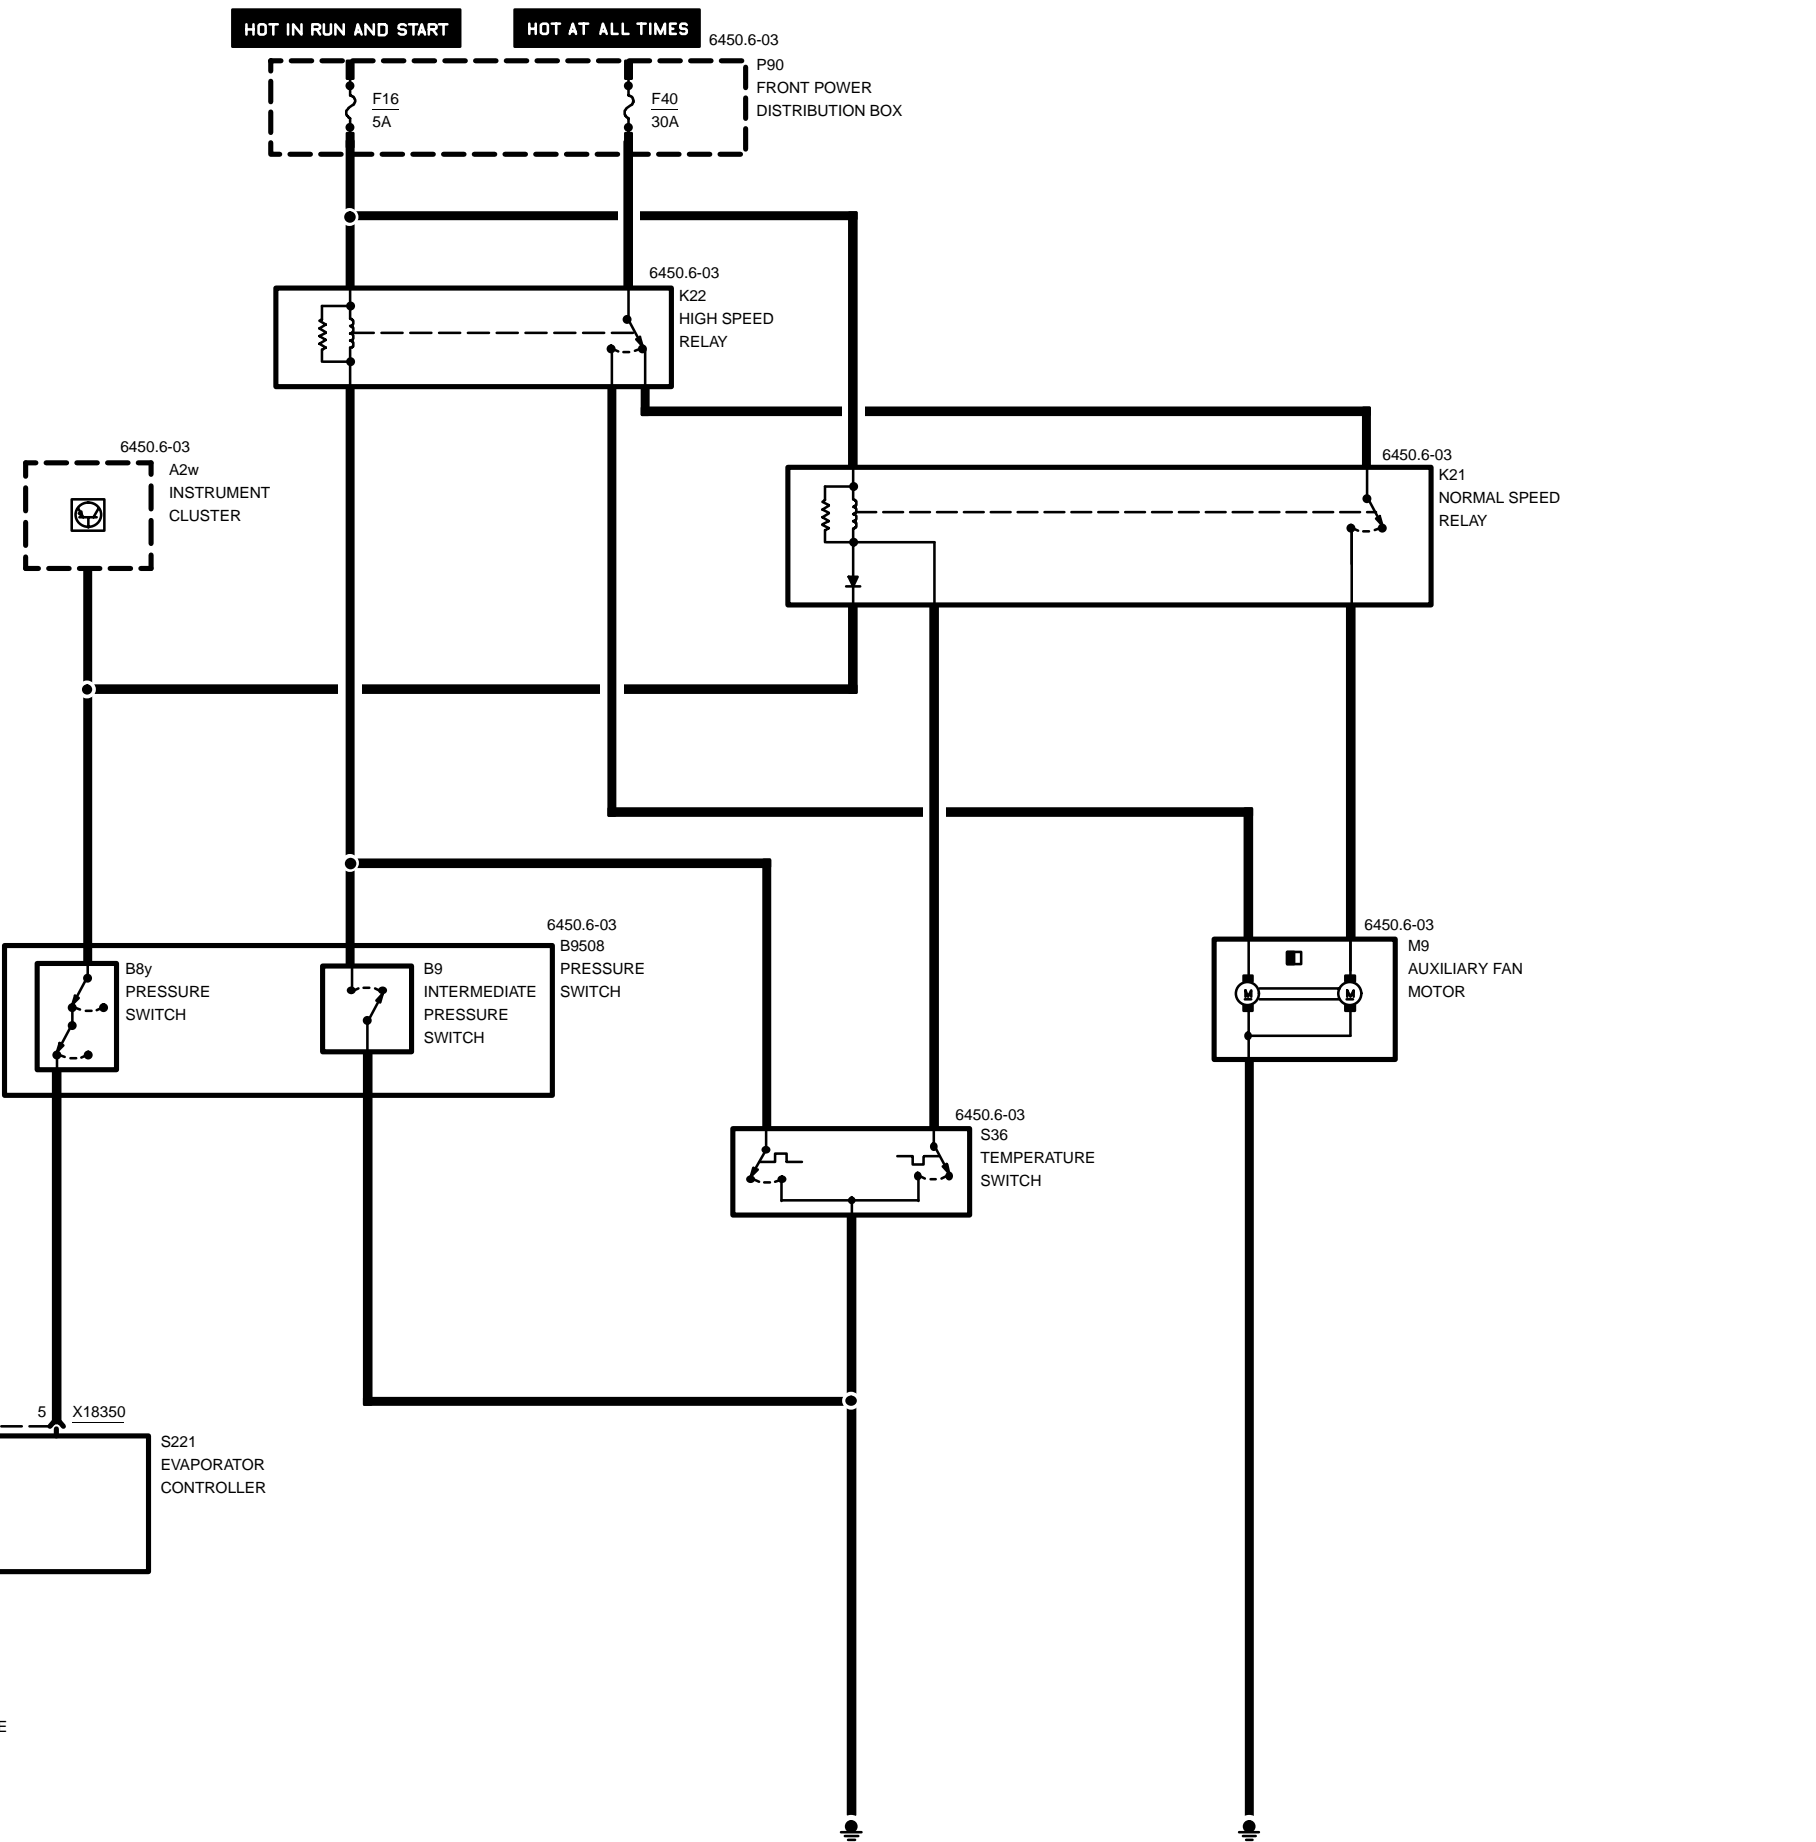


M VERSIONS

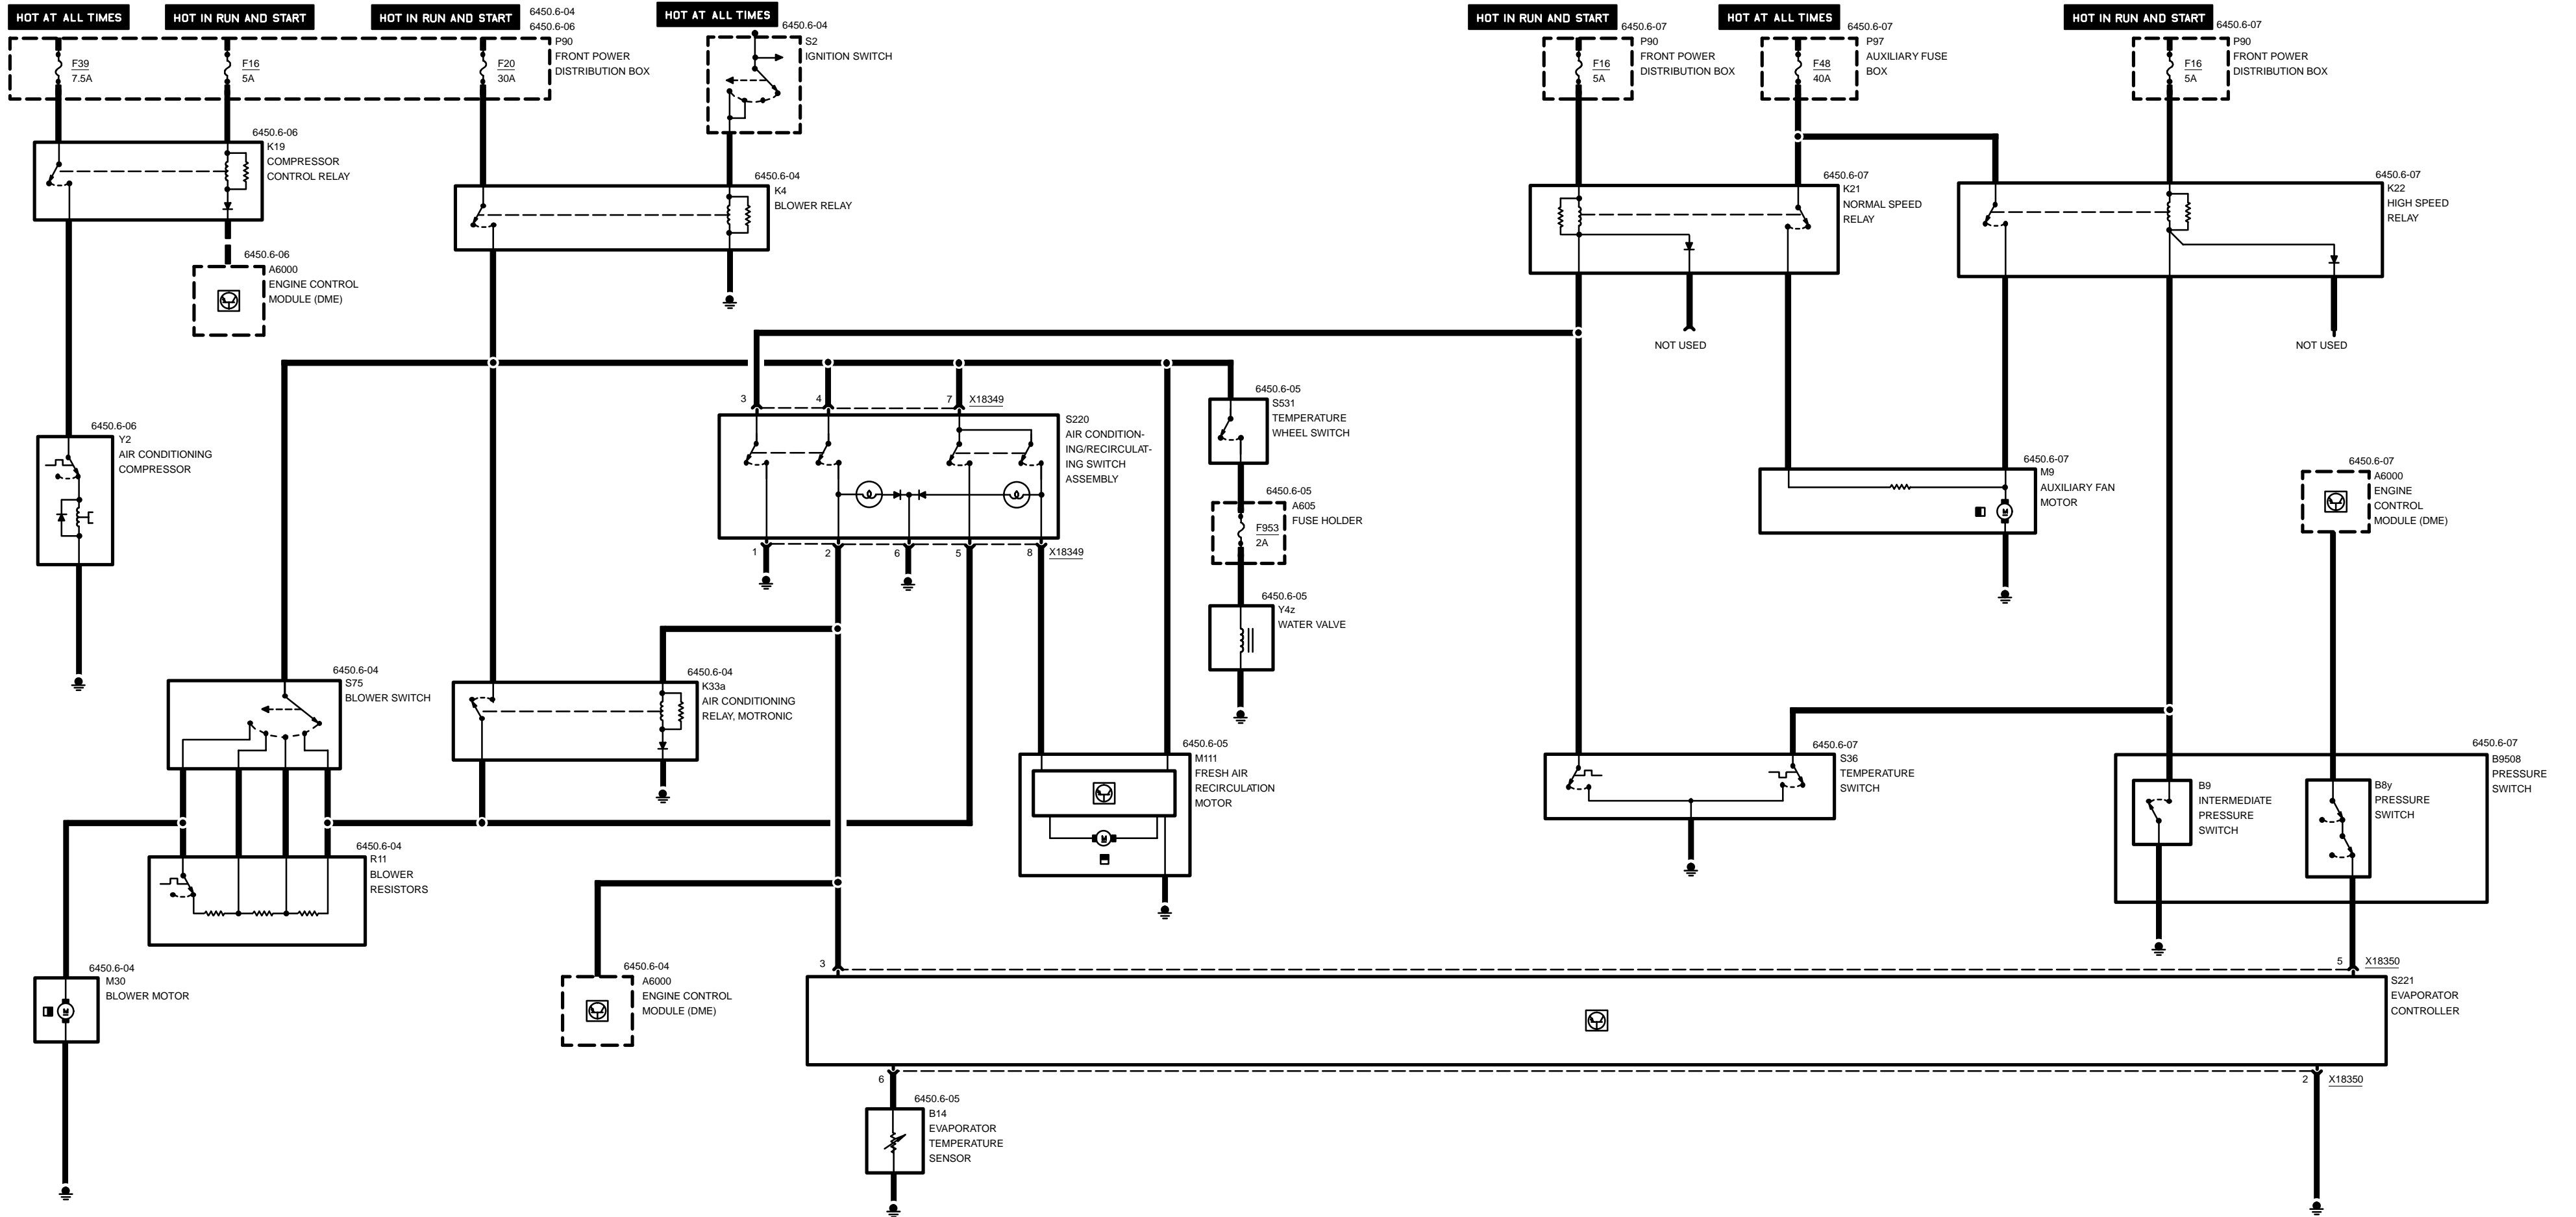





Z3

 **Pin Assignments (Z3 Versions)**

X18349	8 Pins, black
X18350	6 Pins, black

**X18349**

Pin	Type	Description/Function	Connection
1	E	Terminal 15	Heating blower relay
2	A	Activate compressor clutch	Instrument cluster
3	A	Blower level 1 (air conditioning)	Blower resistor
4	E	Terminal 15	Heating blower relay
5	A	Blower level 1 (air-recirculation)	Blower resistor
6	M	Ground for function lights	Ground point
7	E	Terminal 15	Heating blower relay
8	A	Activate fresh air-recirculation	Fresh air-recirculation motor

 
**X18350**

Pin	Type	Description/Function	Connection
1		Not used	
2	M	Ground	Ground point
3	E	Climate-ON-signal	Air conditioning/recirculated air operating unit
4		Not used	
5	A	Activate A/C compressor	Pressure switch
6	E	Evaporator temperature	Evaporator temperature sensor

E = Input, A = Output, M = Ground



Z3

**Pin Assignments (M Versions)**

X18349	8 Pins, black
X18350	6 Pins, black

**X18349**

Pin	Type	Description/Function	Connection
1	M	Ground	Ground point
2	A	A/C-ON-signal	Evaporator controller
3	A	A/C-ON-signal	Normal speed relay
4	E	Terminal 15	Heating blower relay
5	A	Blower level 1 (air-recirculation)	Blower resistor
6	M	Ground for function lights	Ground point
7	E	Terminal 15	Heating blower relay
8	A	Activate fresh air-recirculation	Fresh air-recirculation motor

**X18350**

Pin	Type	Description/Function	Connection
1		Not used	
2	M	Ground	Ground point
3	E	Climate-ON-signal	Air conditioning/recirculated air operating unit
4		Not used	
5	A	Activate A/C compressor	Pressure switch
6	E	Evaporator temperature	Evaporator temperature sensor

E = Input, A = Output, M = Ground



# INTEGRATED HEATING- AND CLIMATE CONTROL


## Z3 VERSIONS

### POWER, AIR FLOW CONTROL

Z3

HOT IN RUN AND START

HOT AT ALL TIMES

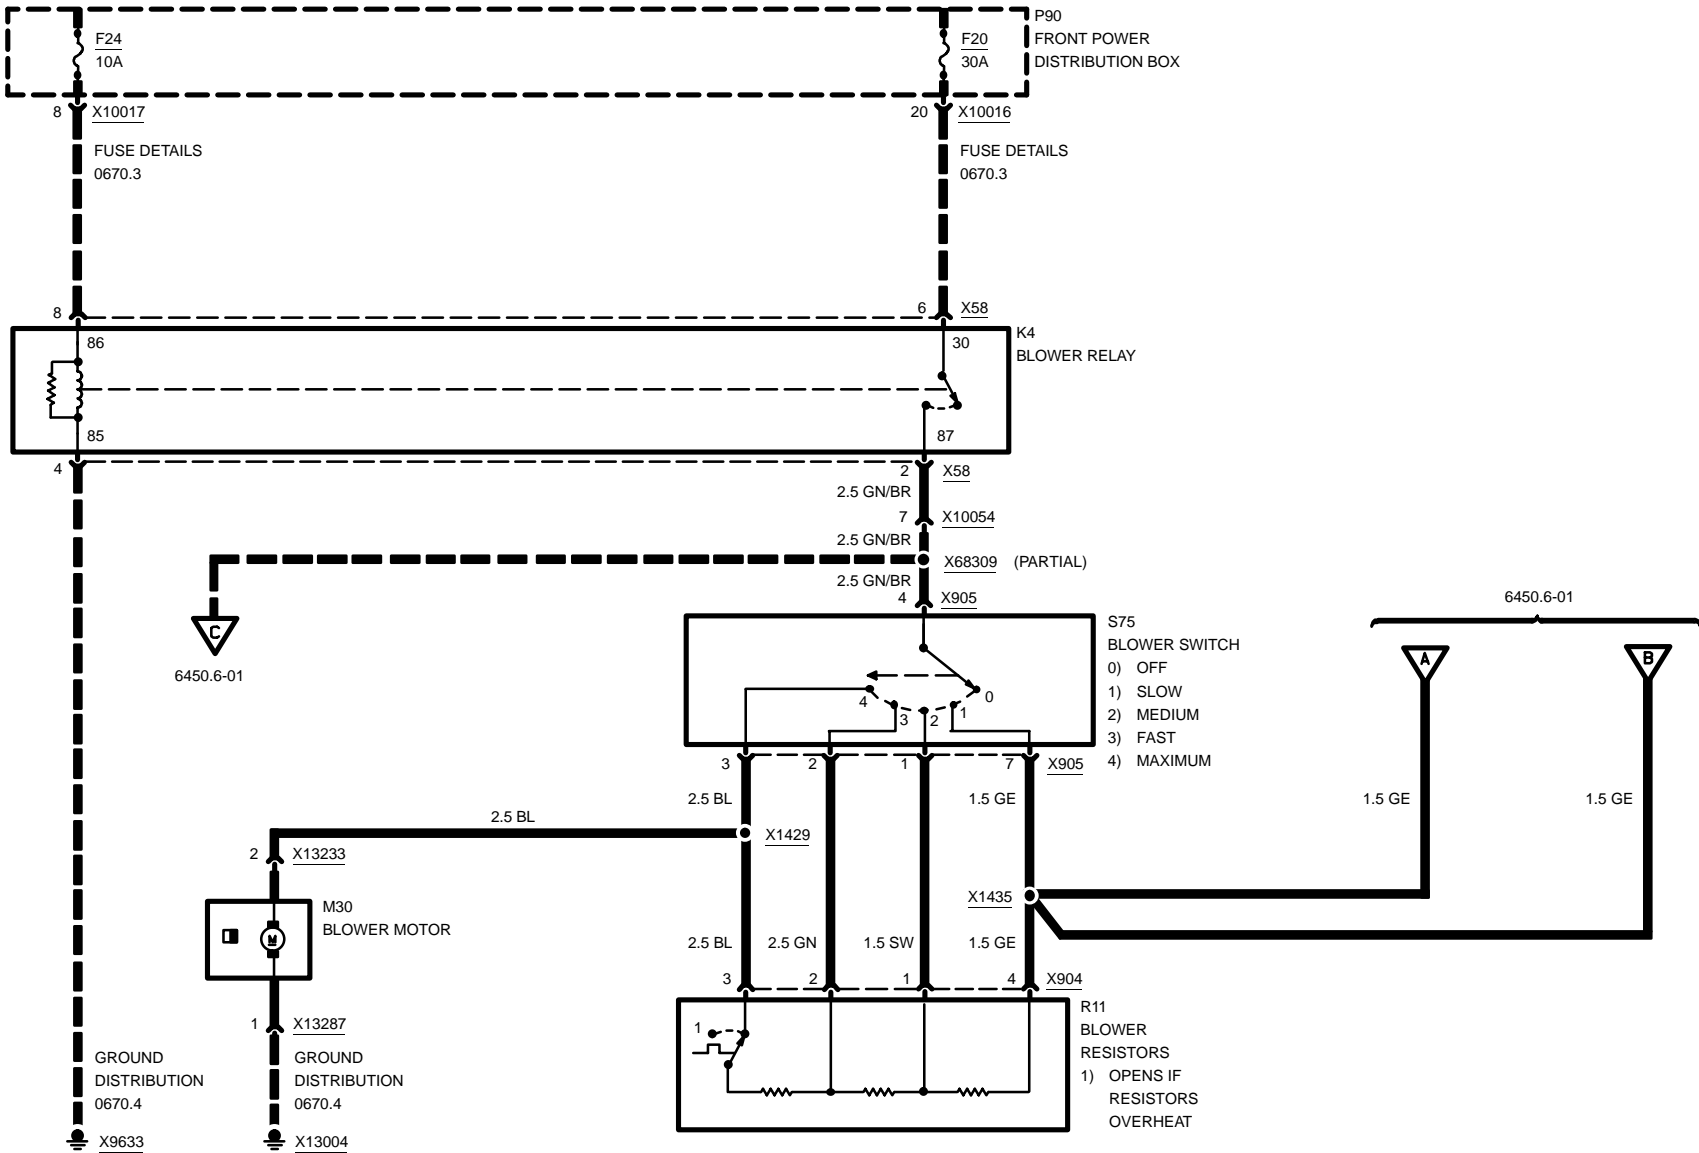




Z3

# INTEGRATED HEATING- AND CLIMATE CONTROL

Z3 VERSIONS

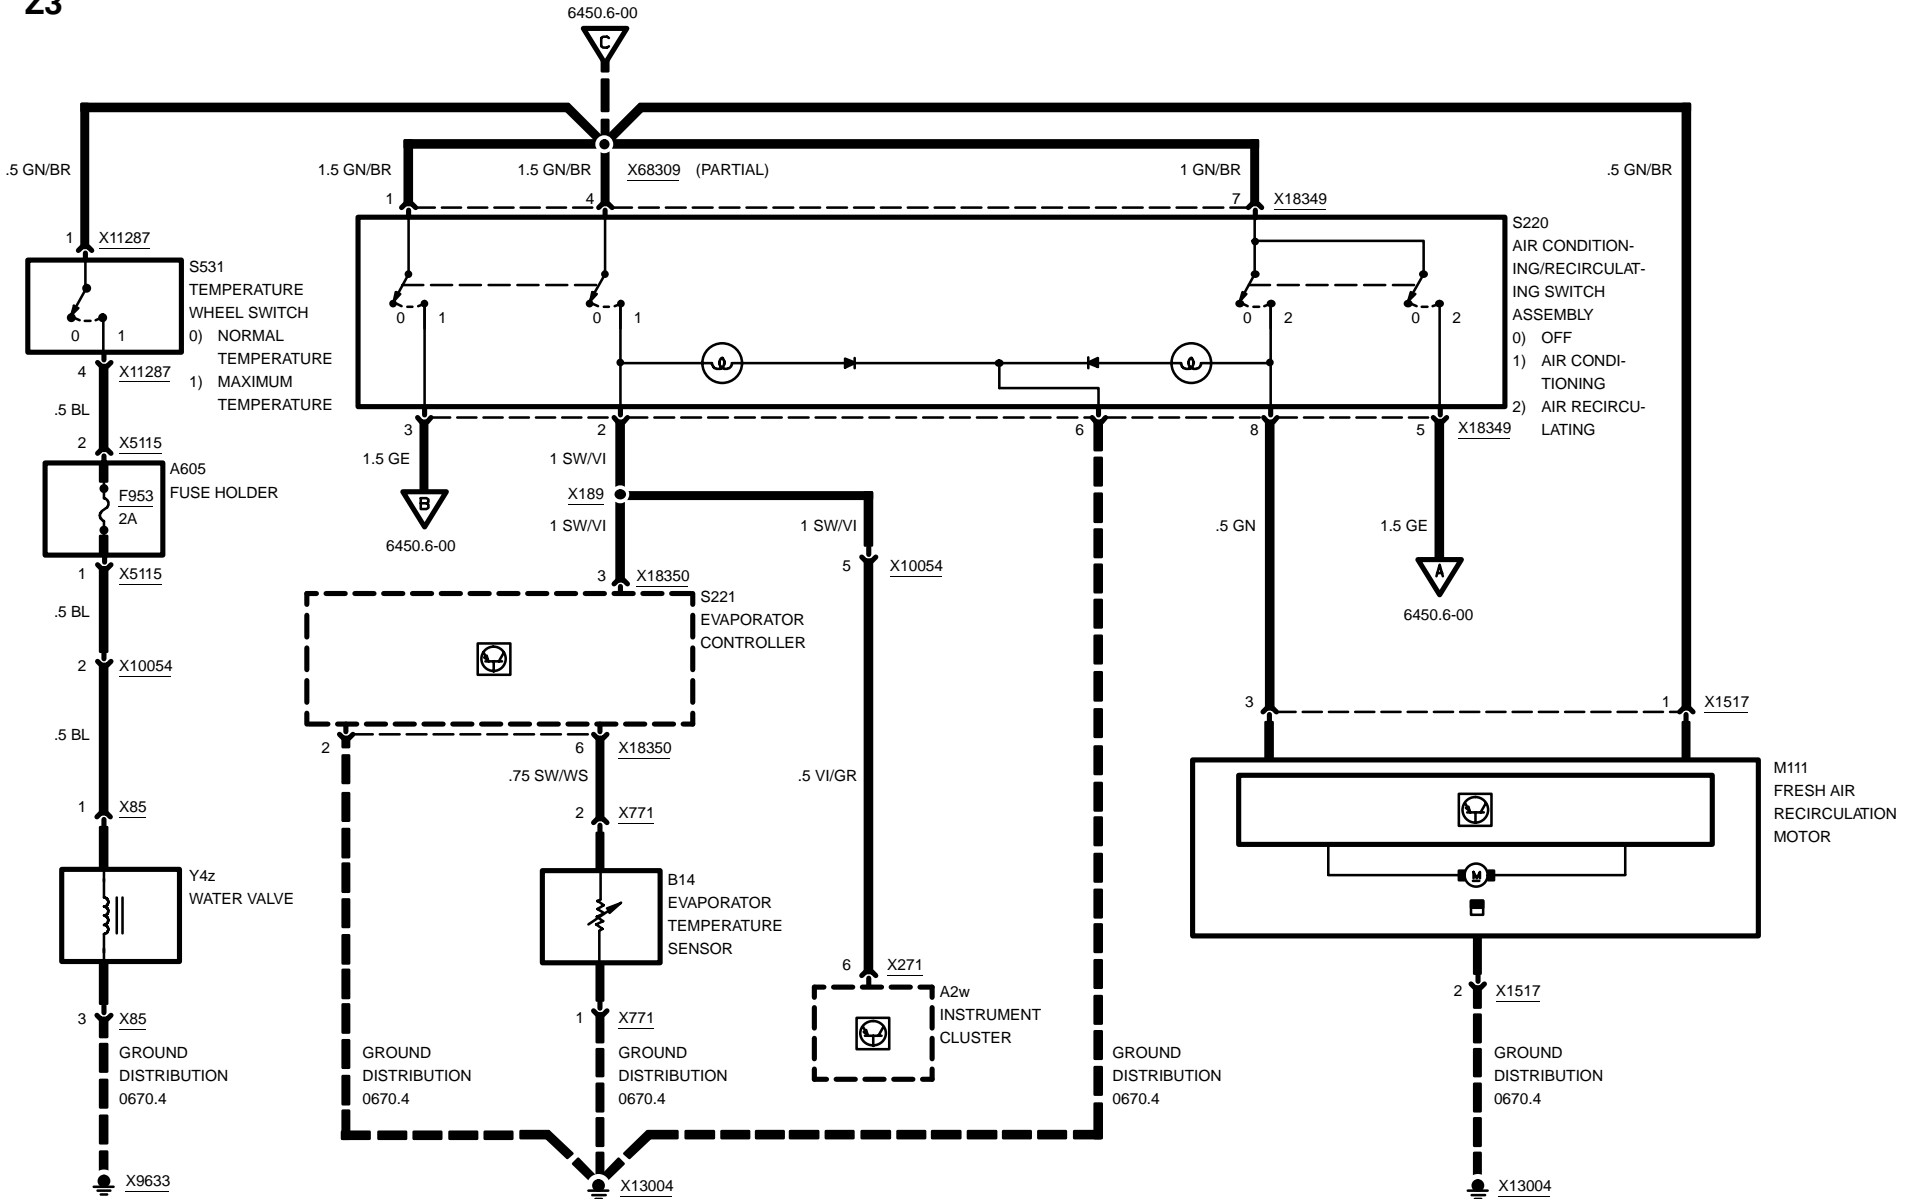

03/00

6450.6-01


1999



# INTEGRATED HEATING- AND CLIMATE CONTROL

## COMPRESSOR CONTROLS

Z3 VERSIONS

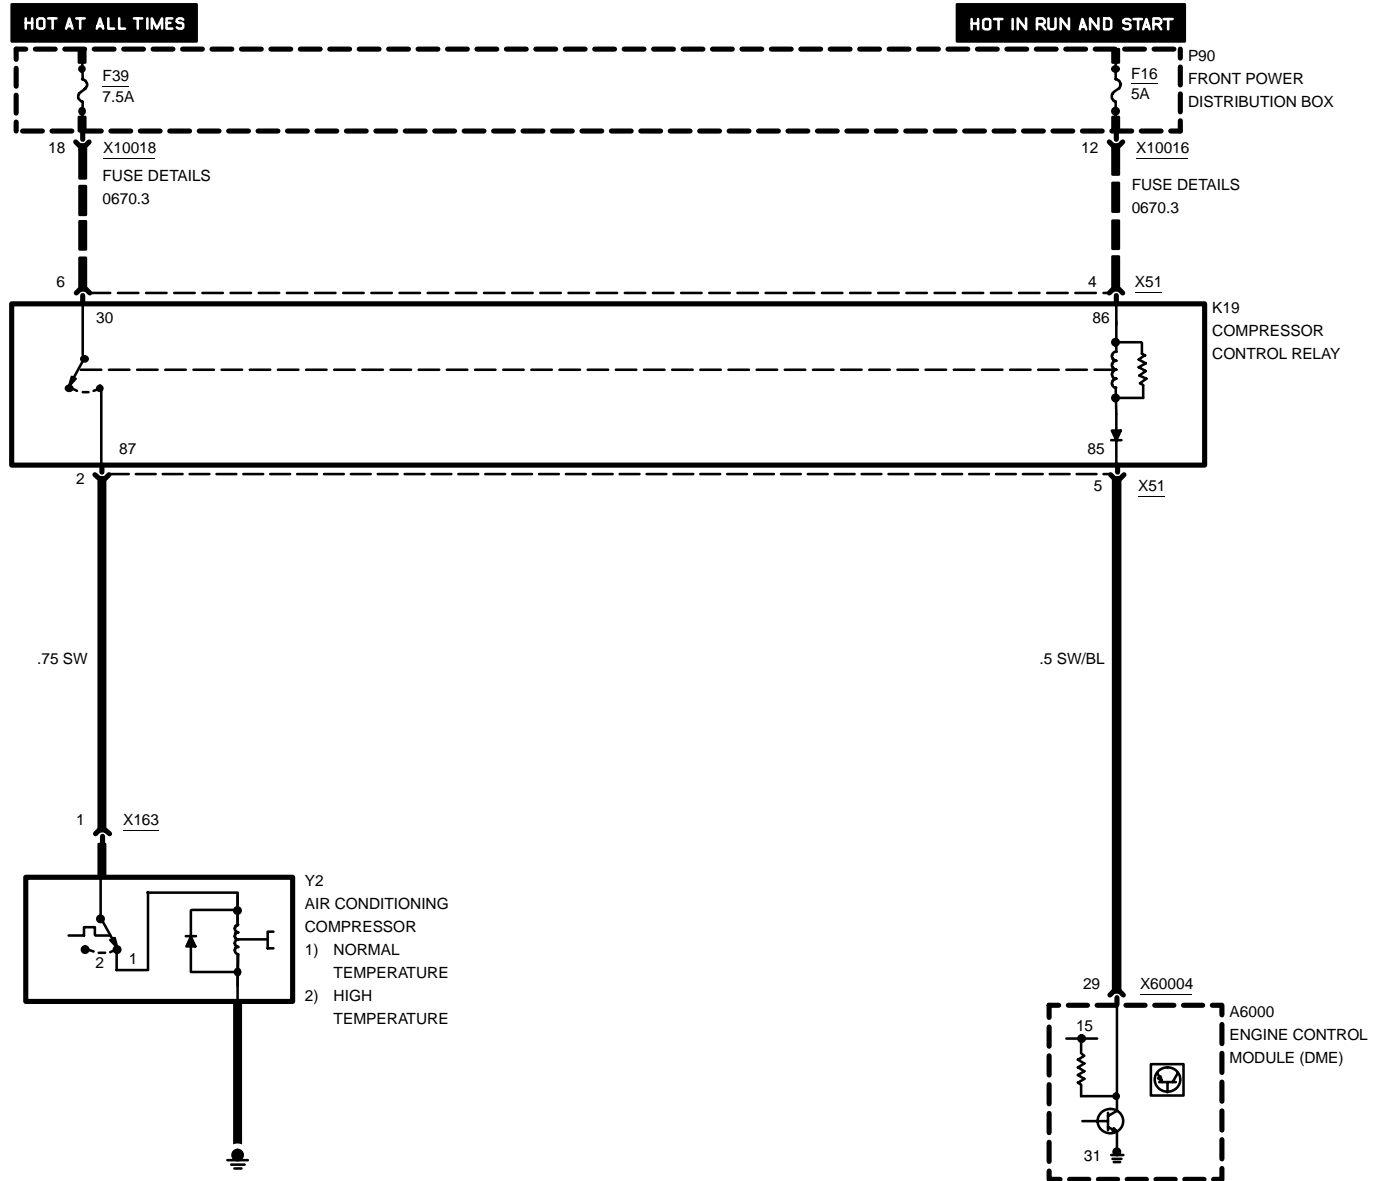




# INTEGRATED HEATING- AND CLIMATE CONTROL

## Z3 VERSIONS

### AUXILIARY FAN

Z3

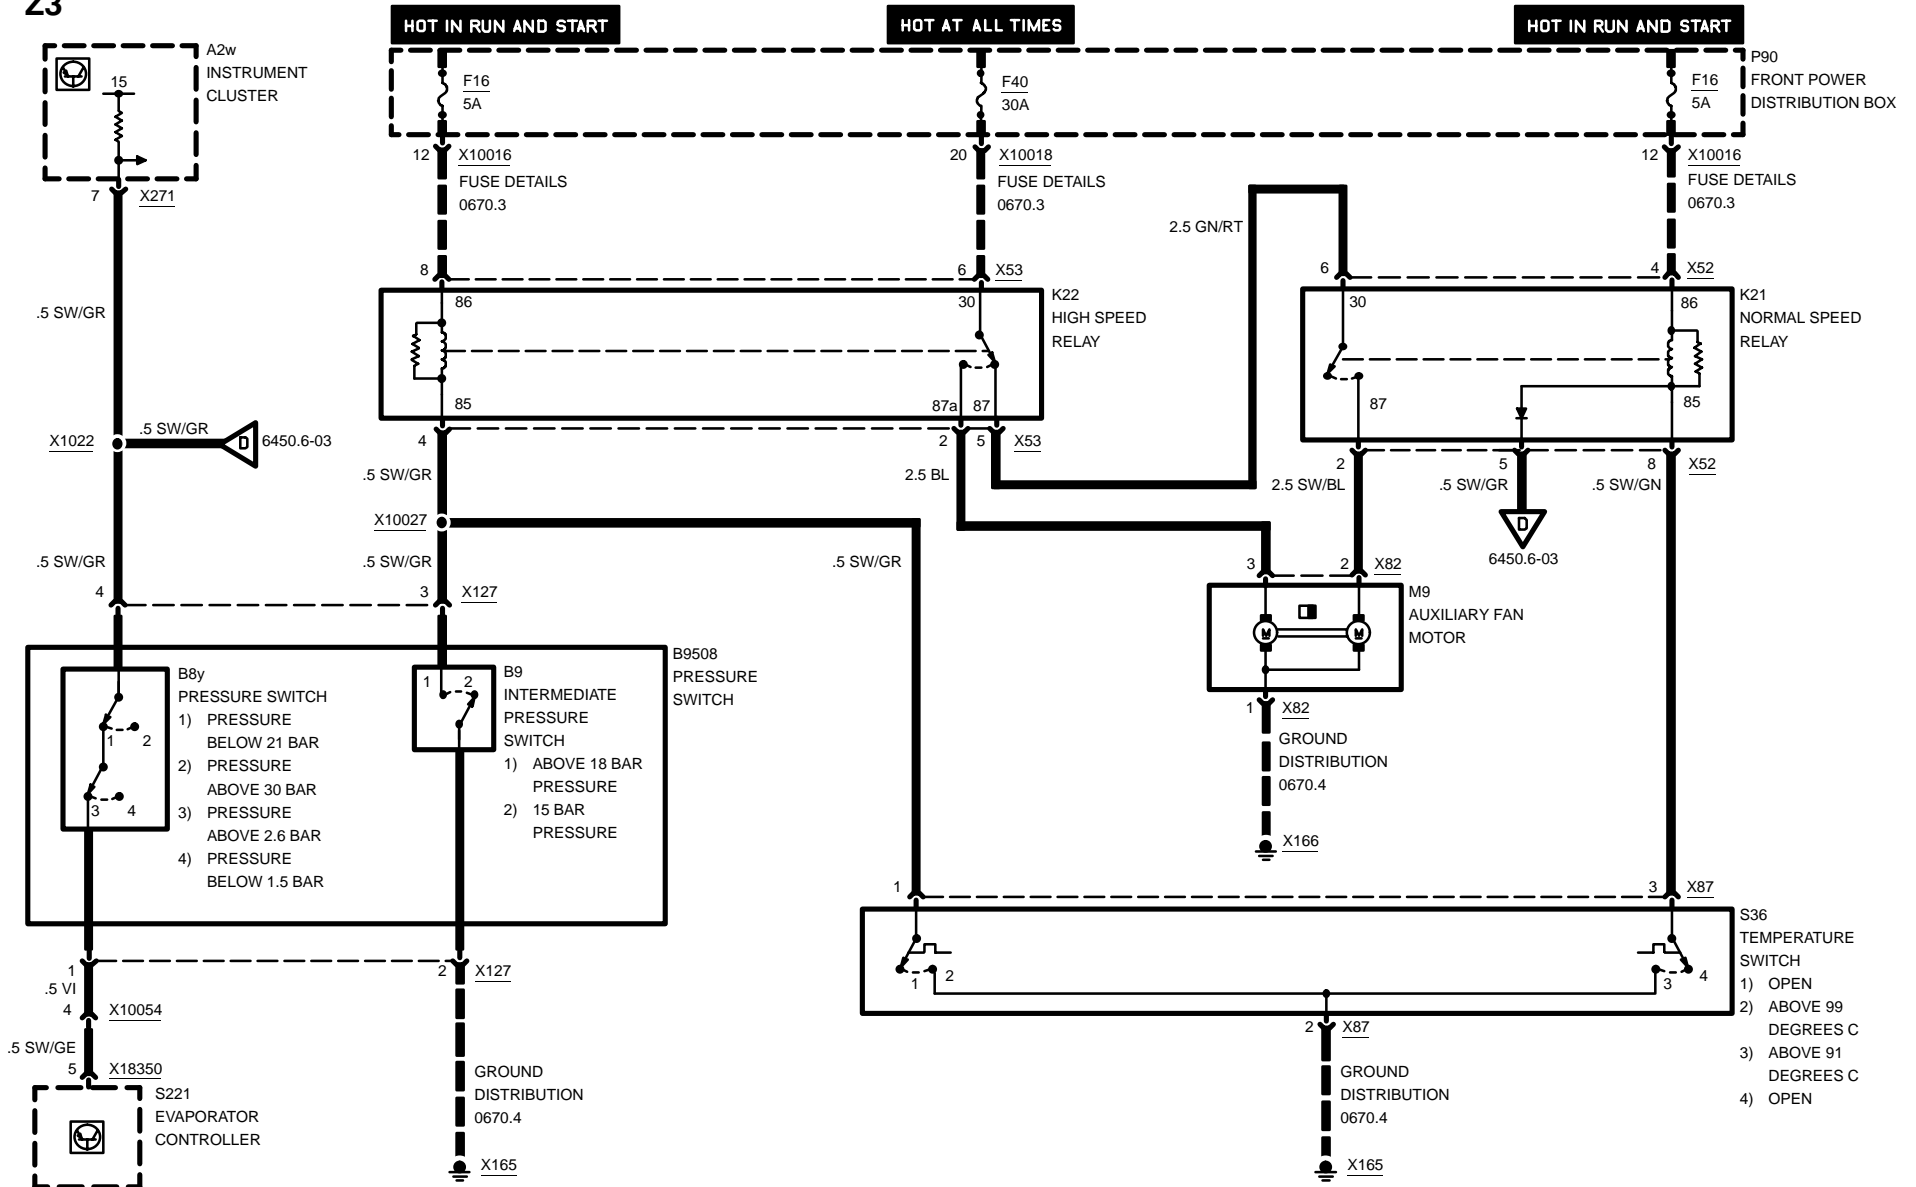

03/00

6450.6-03

1999




# INTEGRATED HEATING- AND CLIMATE CONTROL

## M VERSIONS

### POWER, AIR FLOW CONTROL

Z3

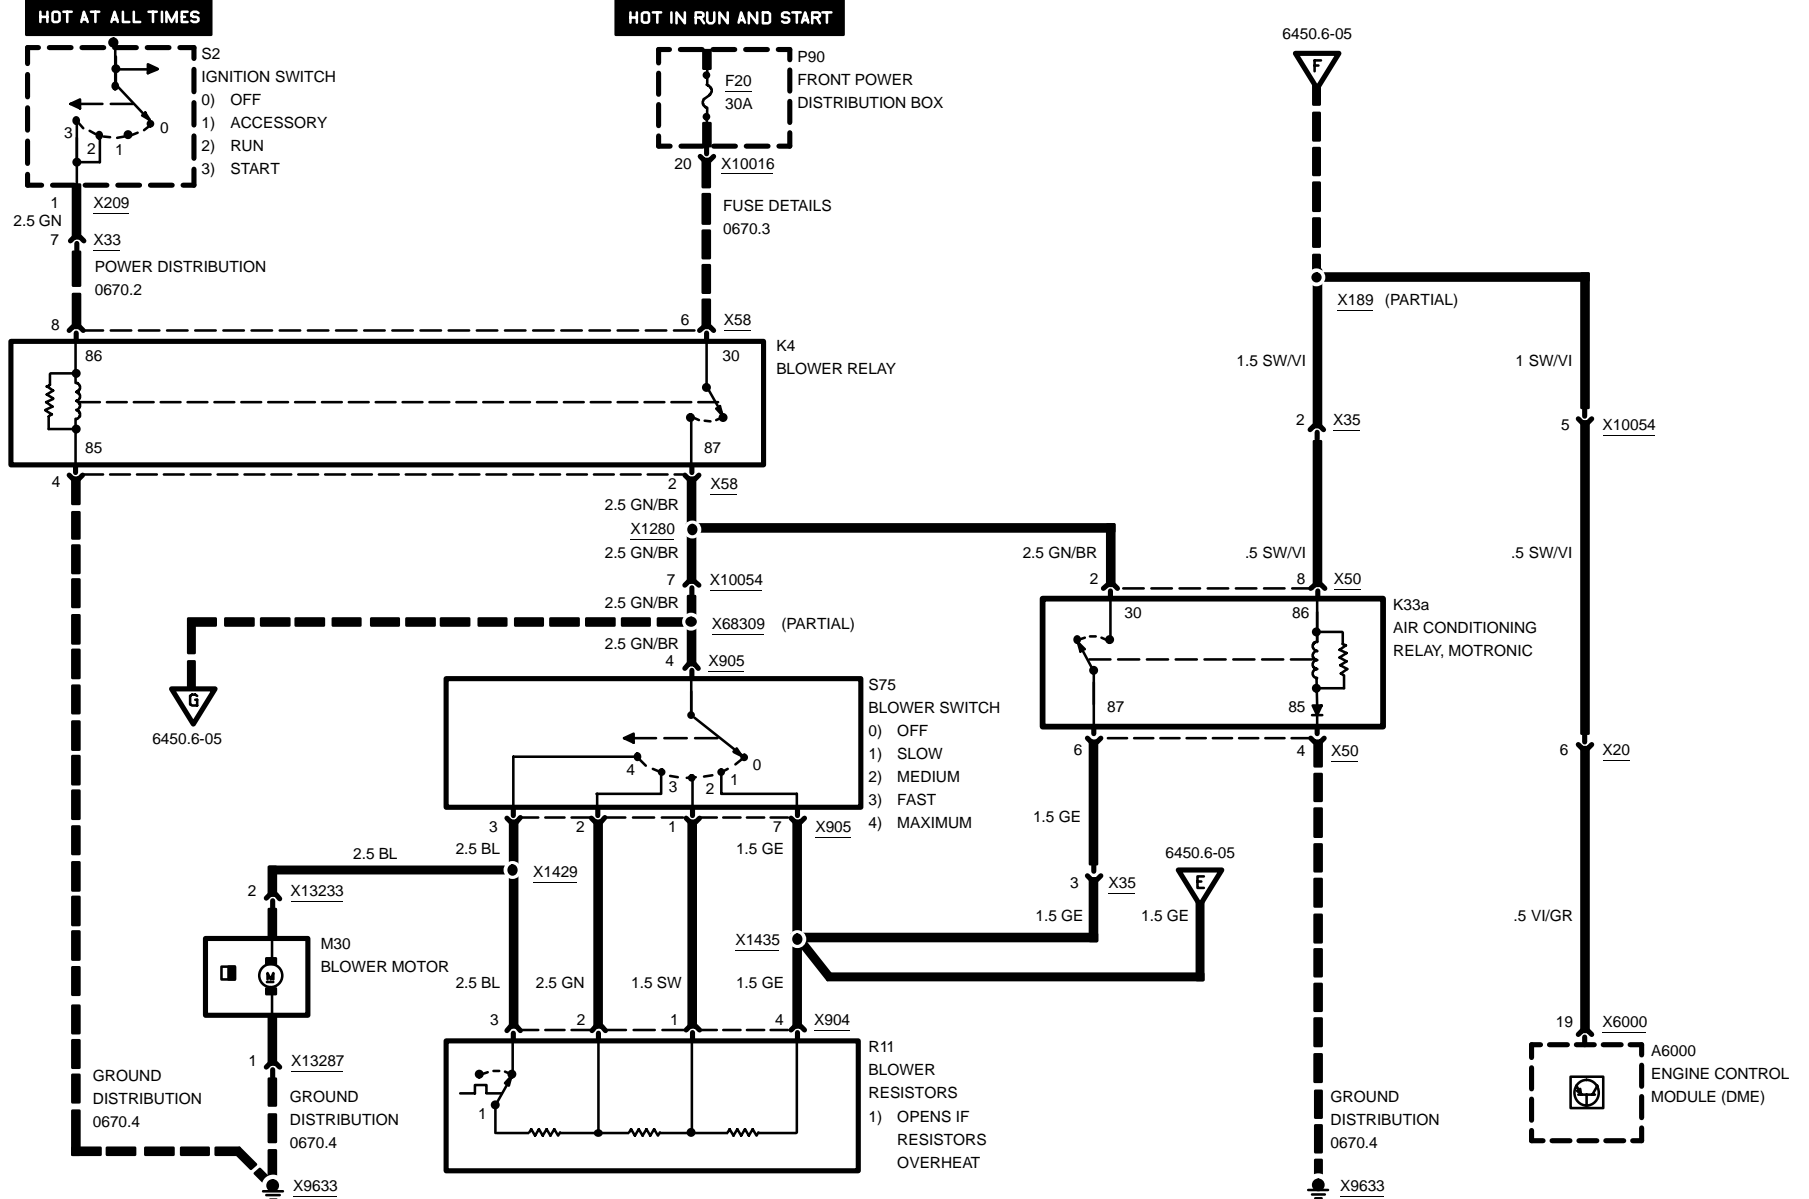








# INTEGRATED HEATING- AND CLIMATE CONTROL

M VERSIONS

## COMPRESSOR CONTROL AND WATER SUPPLY

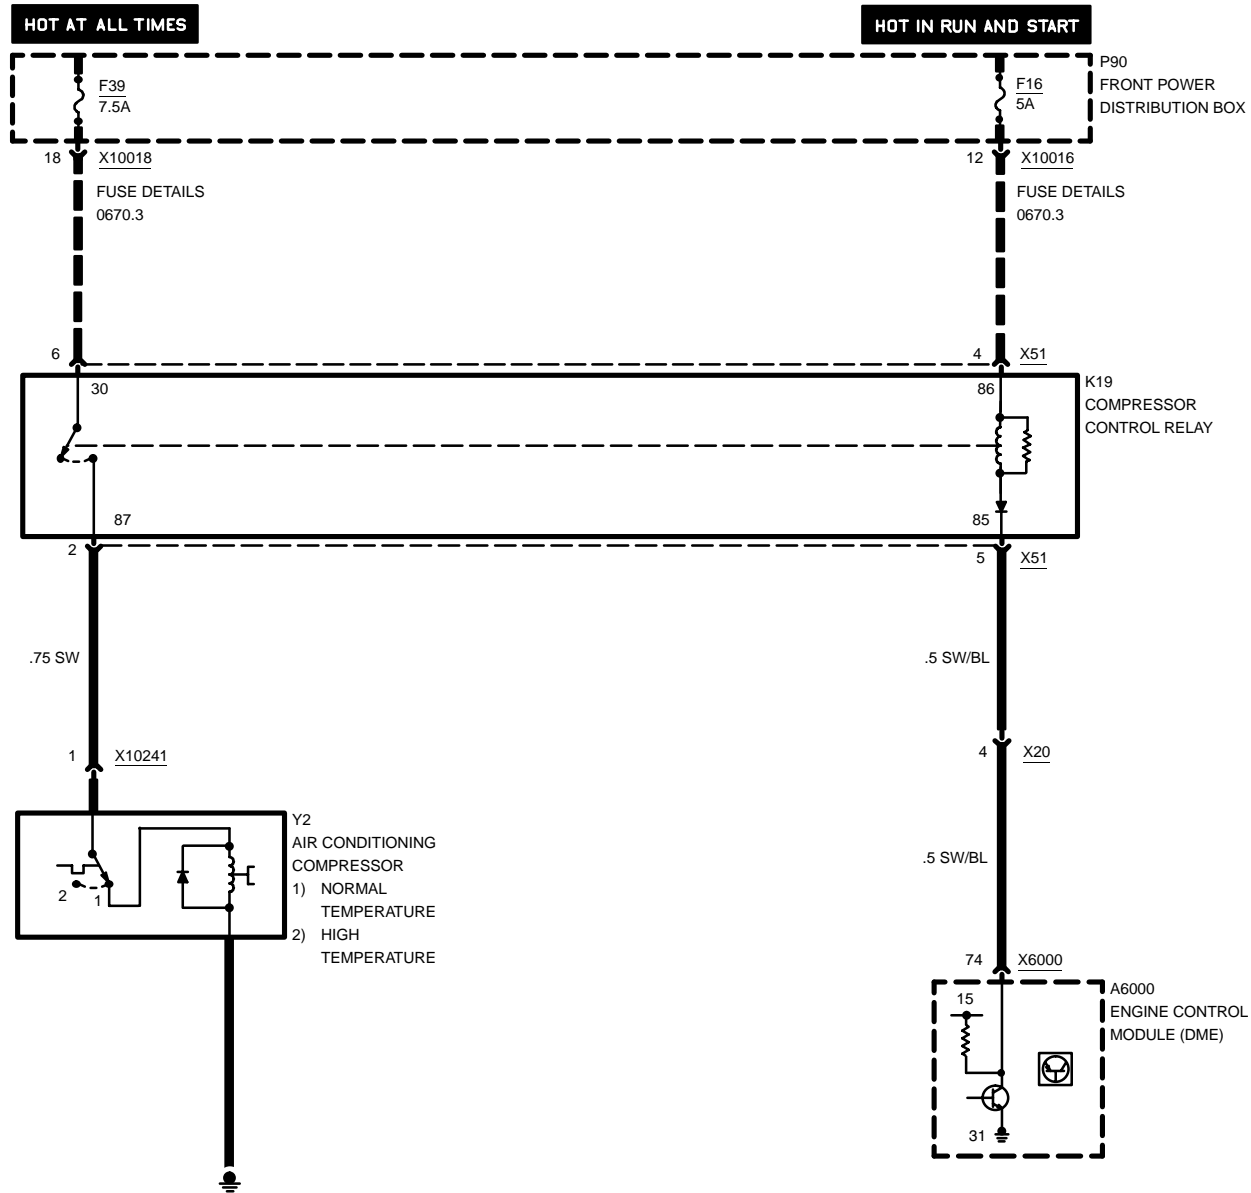




# INTEGRATED HEATING- AND CLIMATE CONTROL

## M VERSIONS

### AUXILIARY FAN

Z3

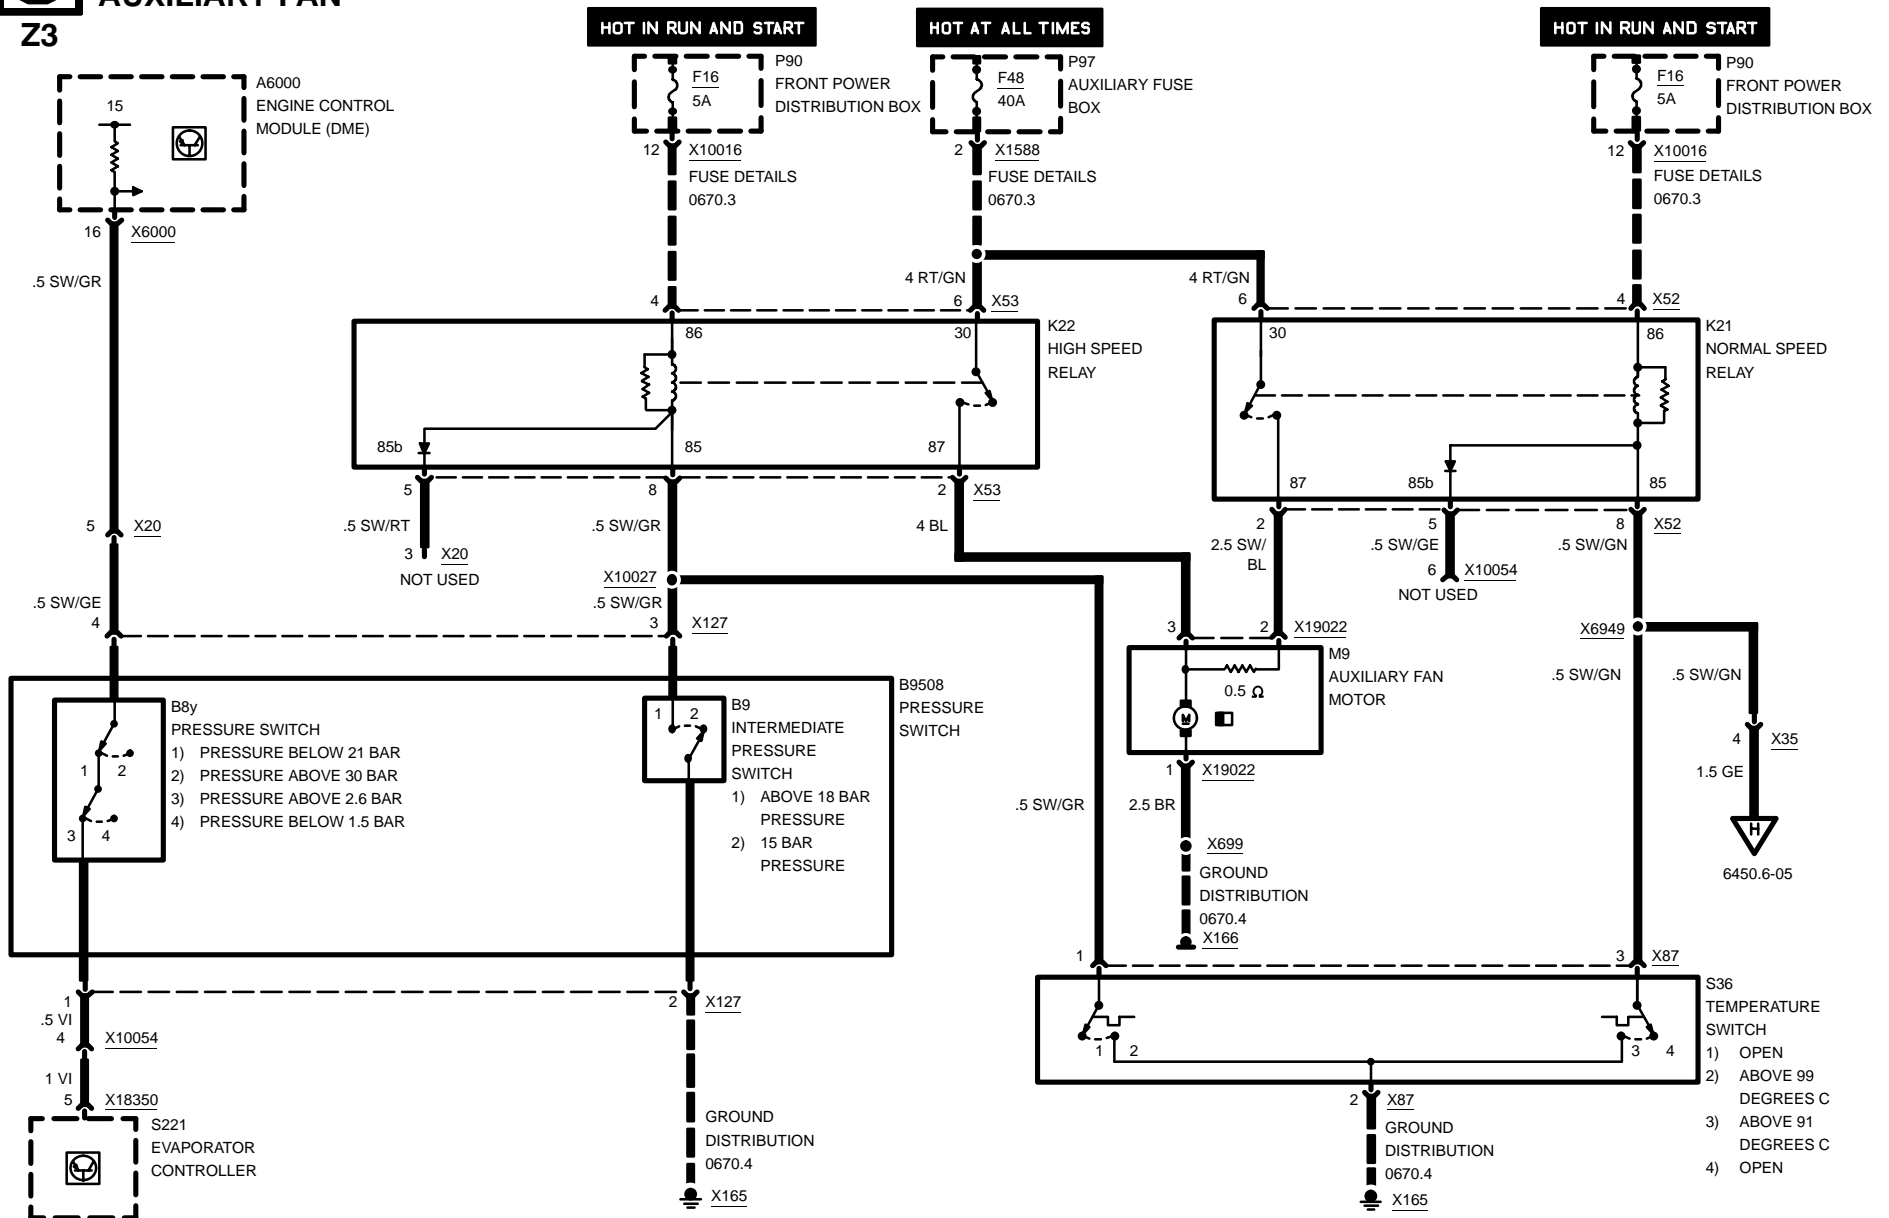

03/00

6450.6-07


1999






# RADIO/HIFI

Z3

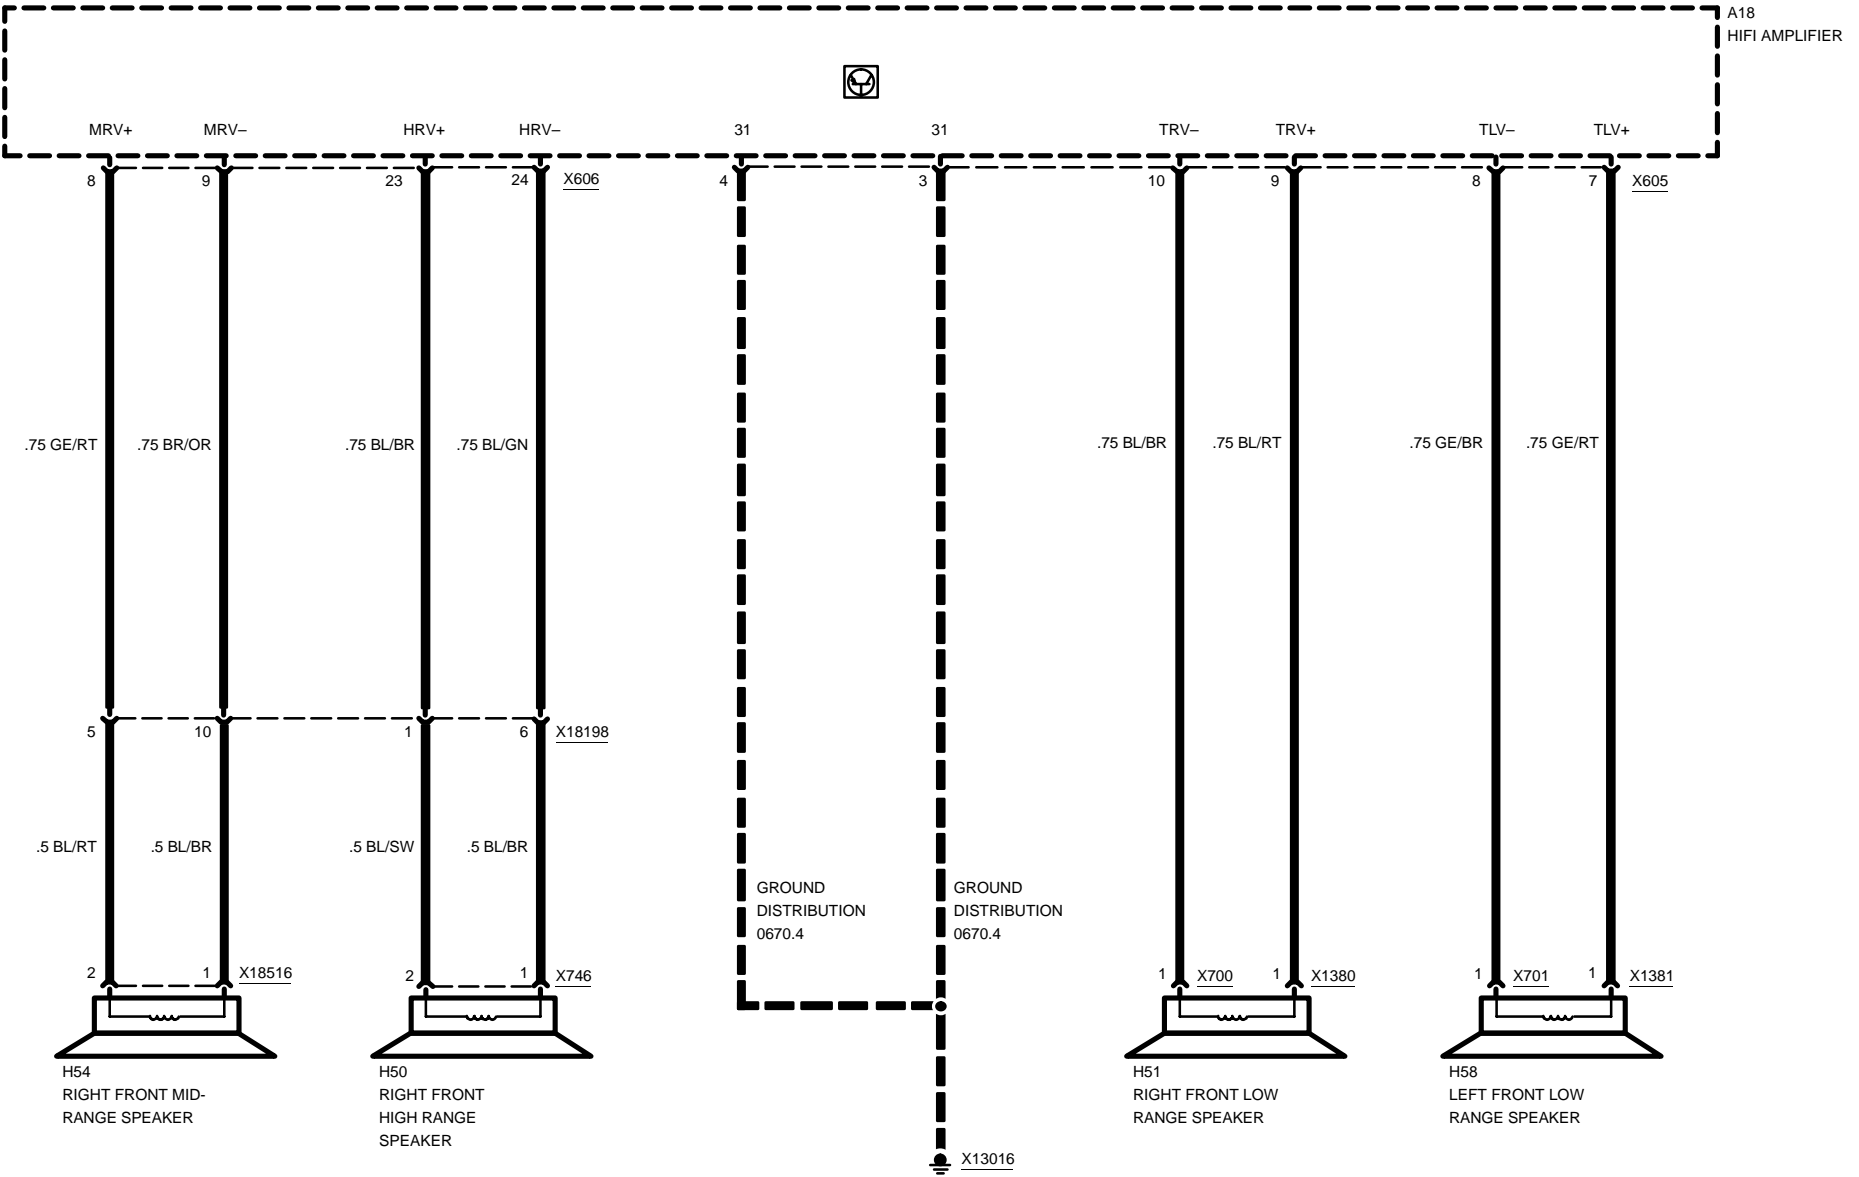



Z3

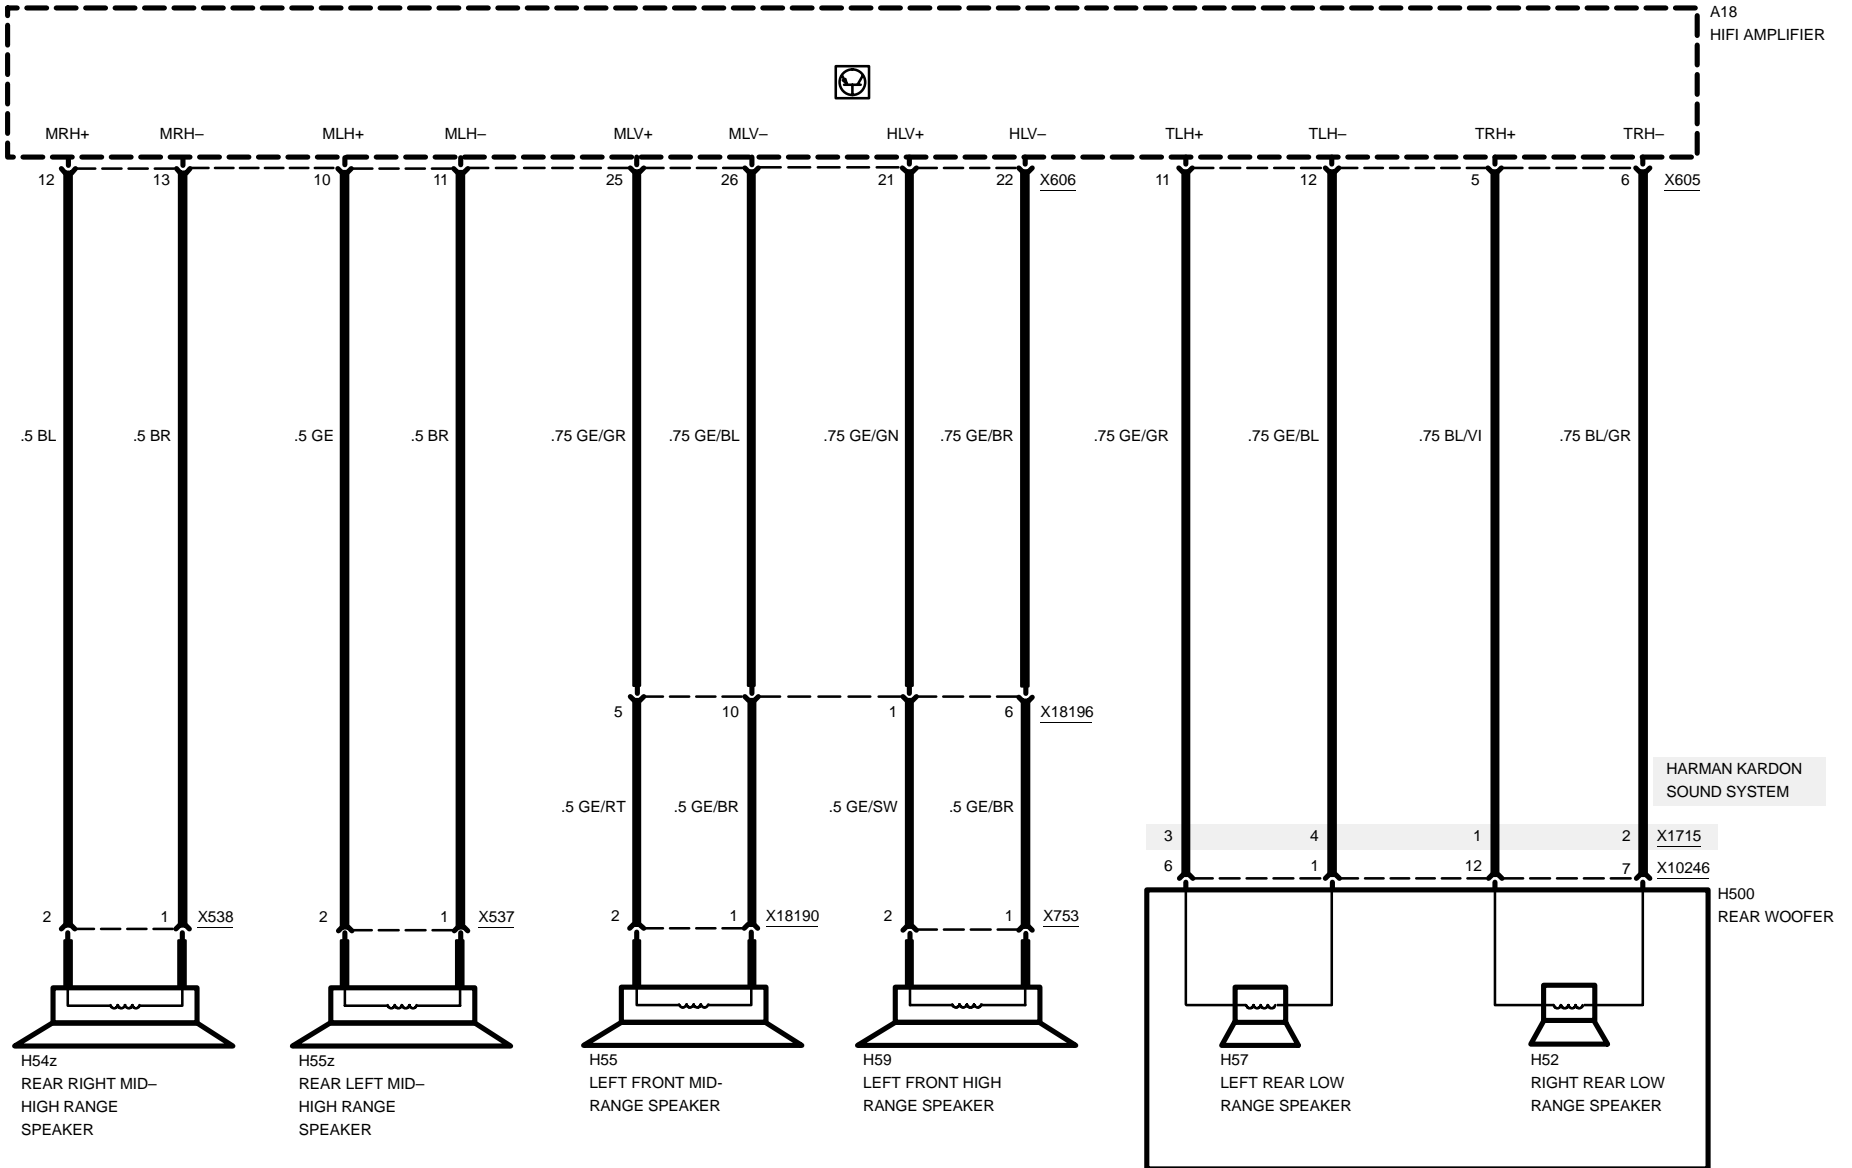




# RADIO/HIFI

# COUPE WITH HIFI


Z3

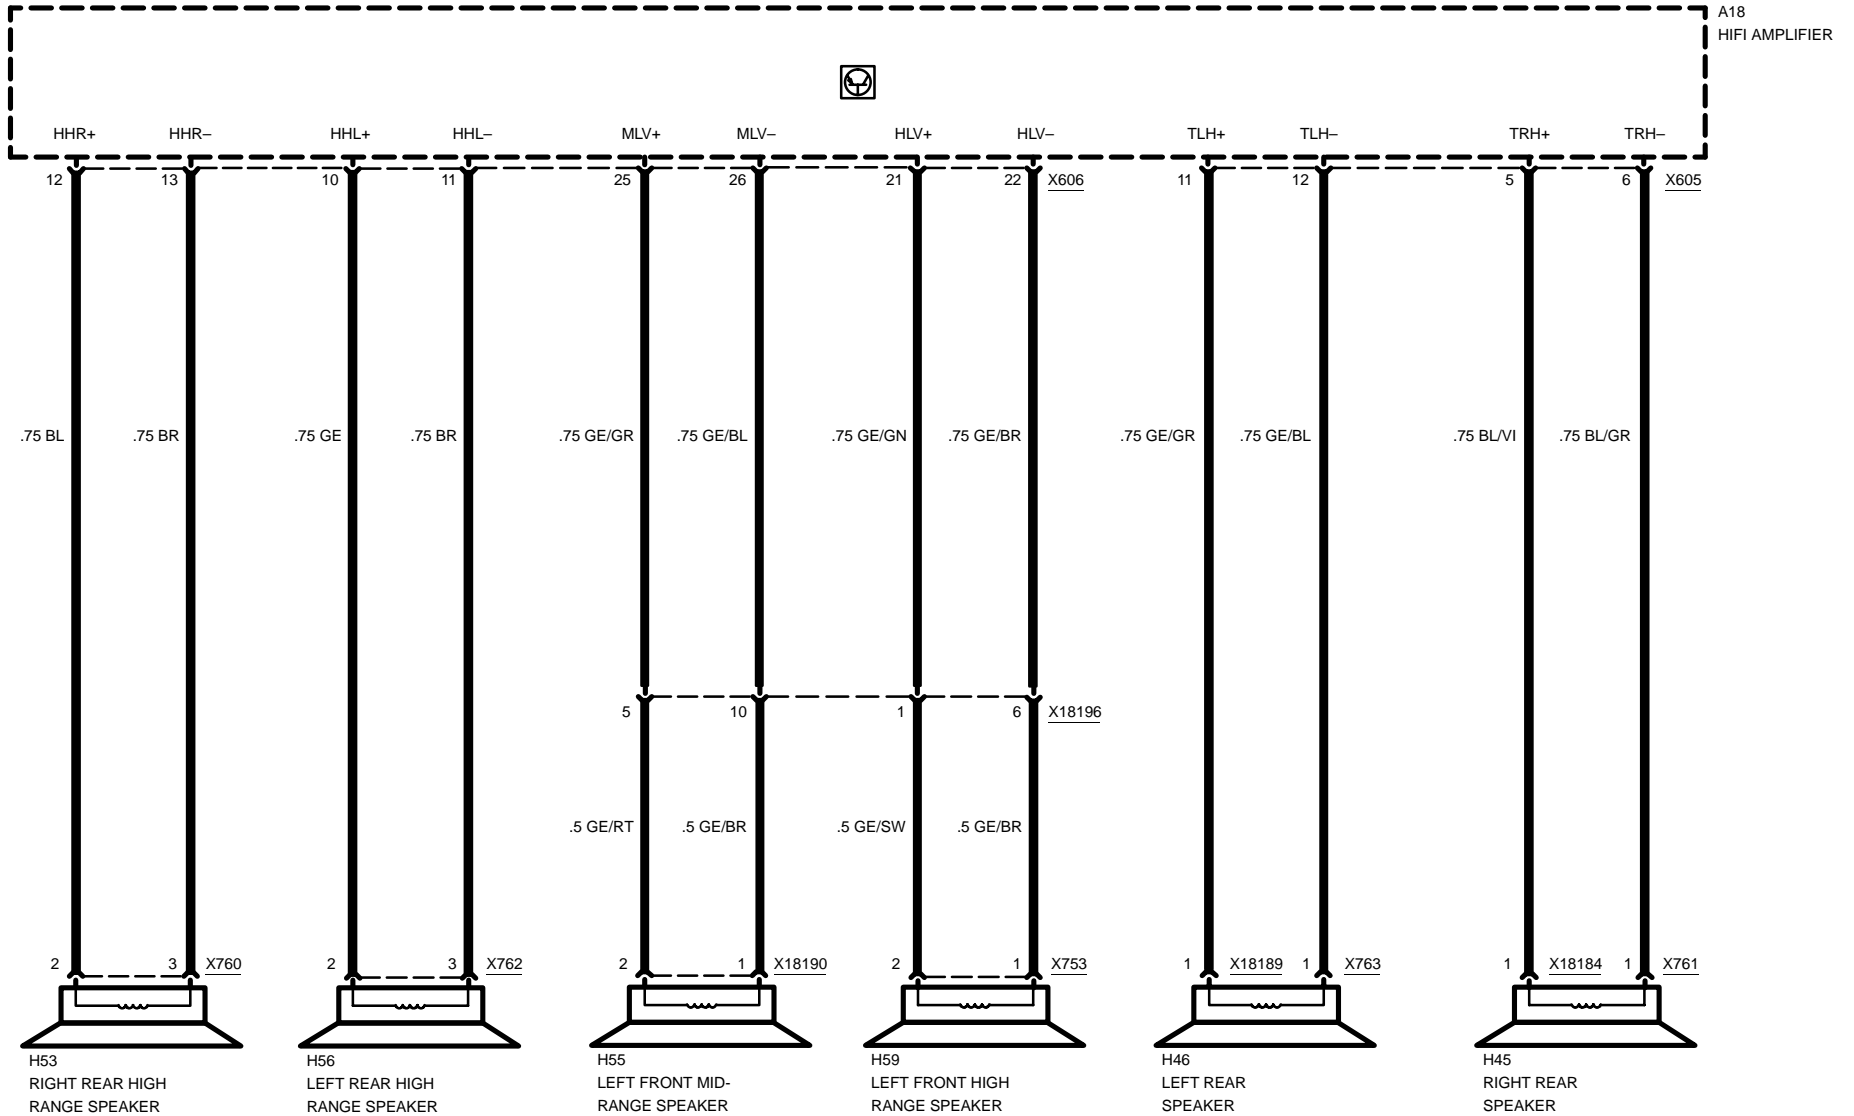



# RADIO/HIFI


Z3

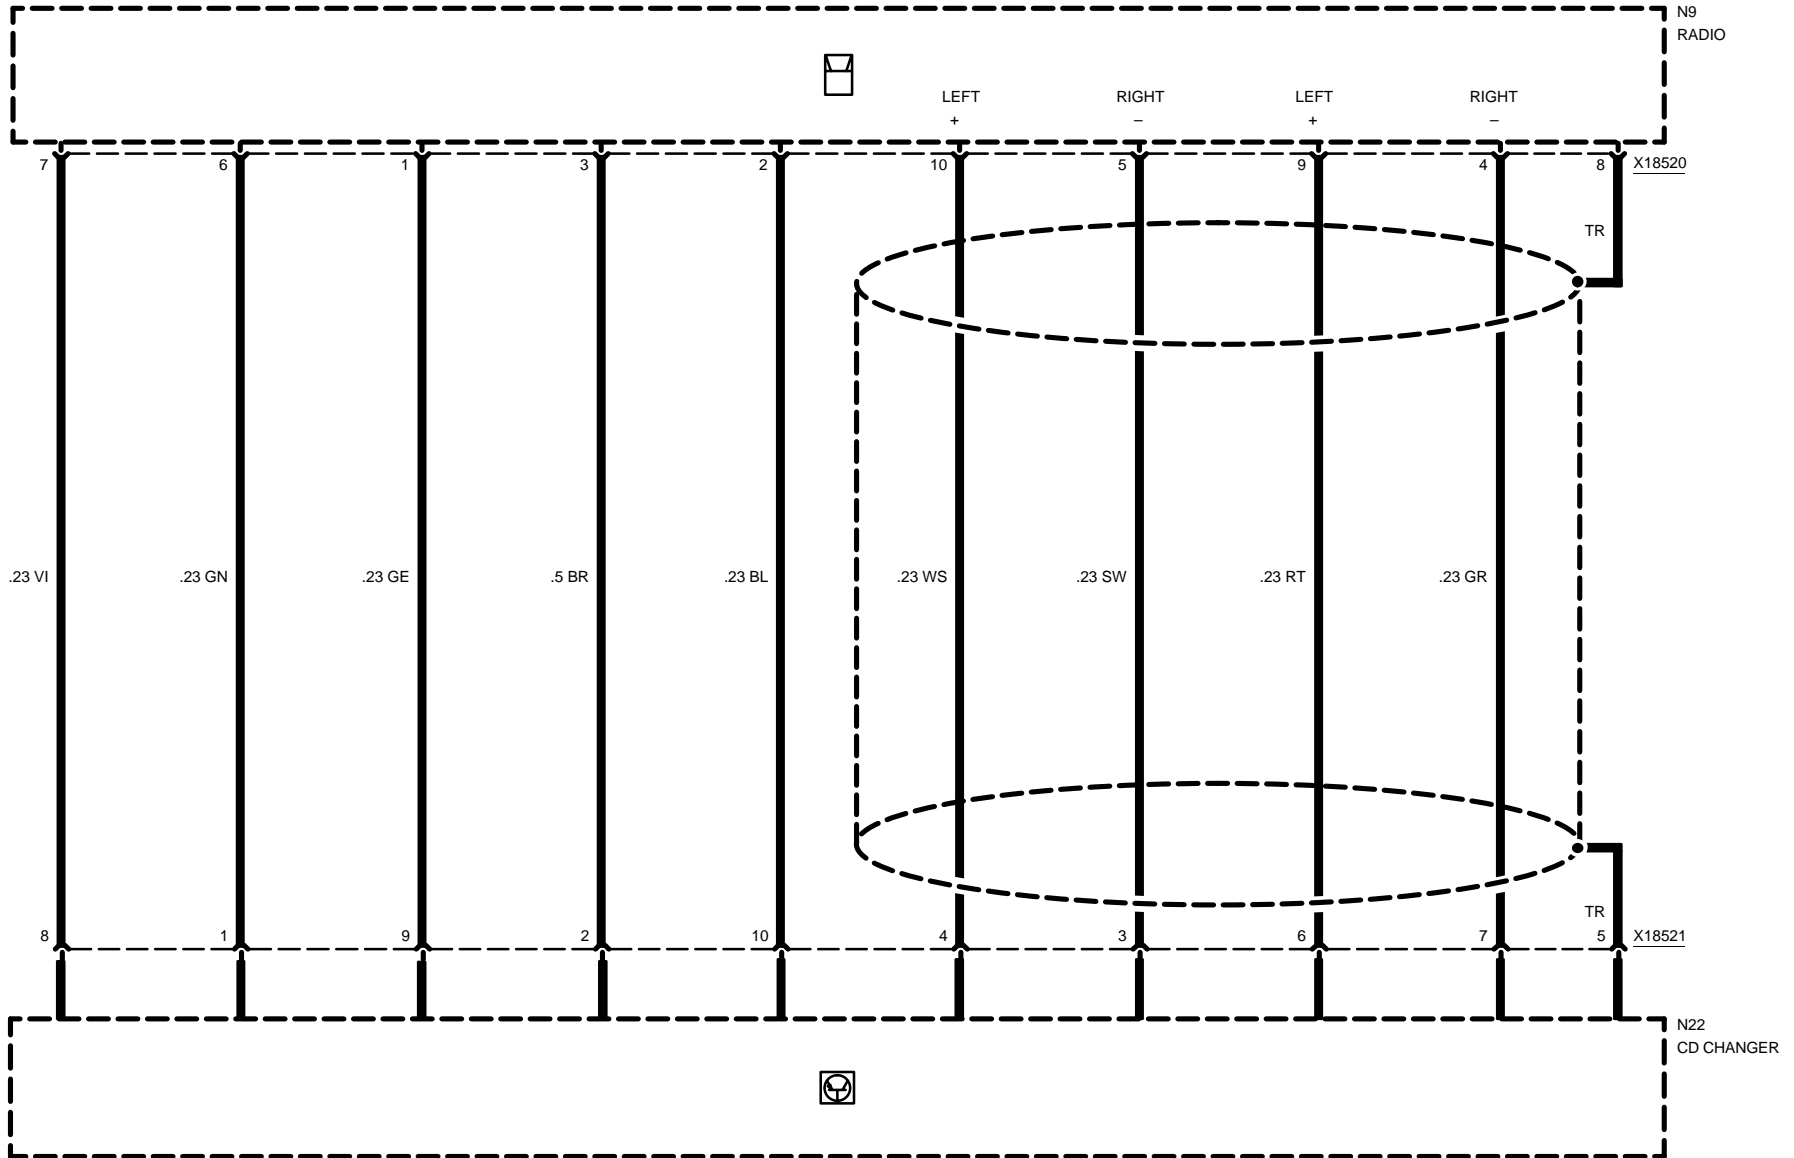



# 6561.0 CELLULAR TELEPHONE (PROVISIONS)

## PROVISIONS

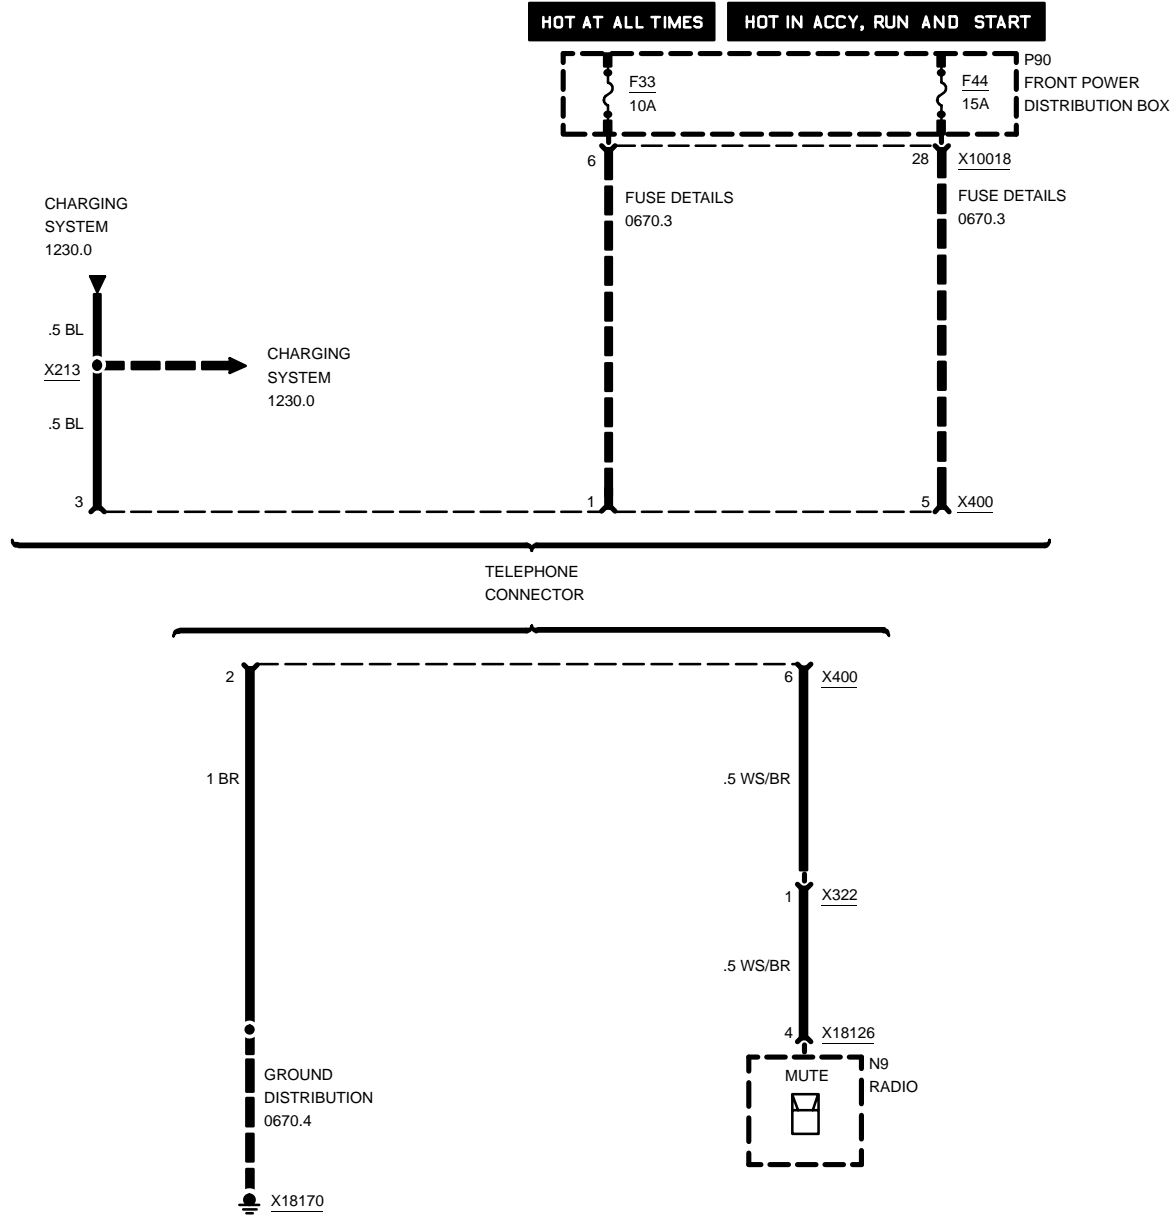






Z3

# 6571.0 CRUISE CONTROL (TEMPOMAT)

M VERSIONS

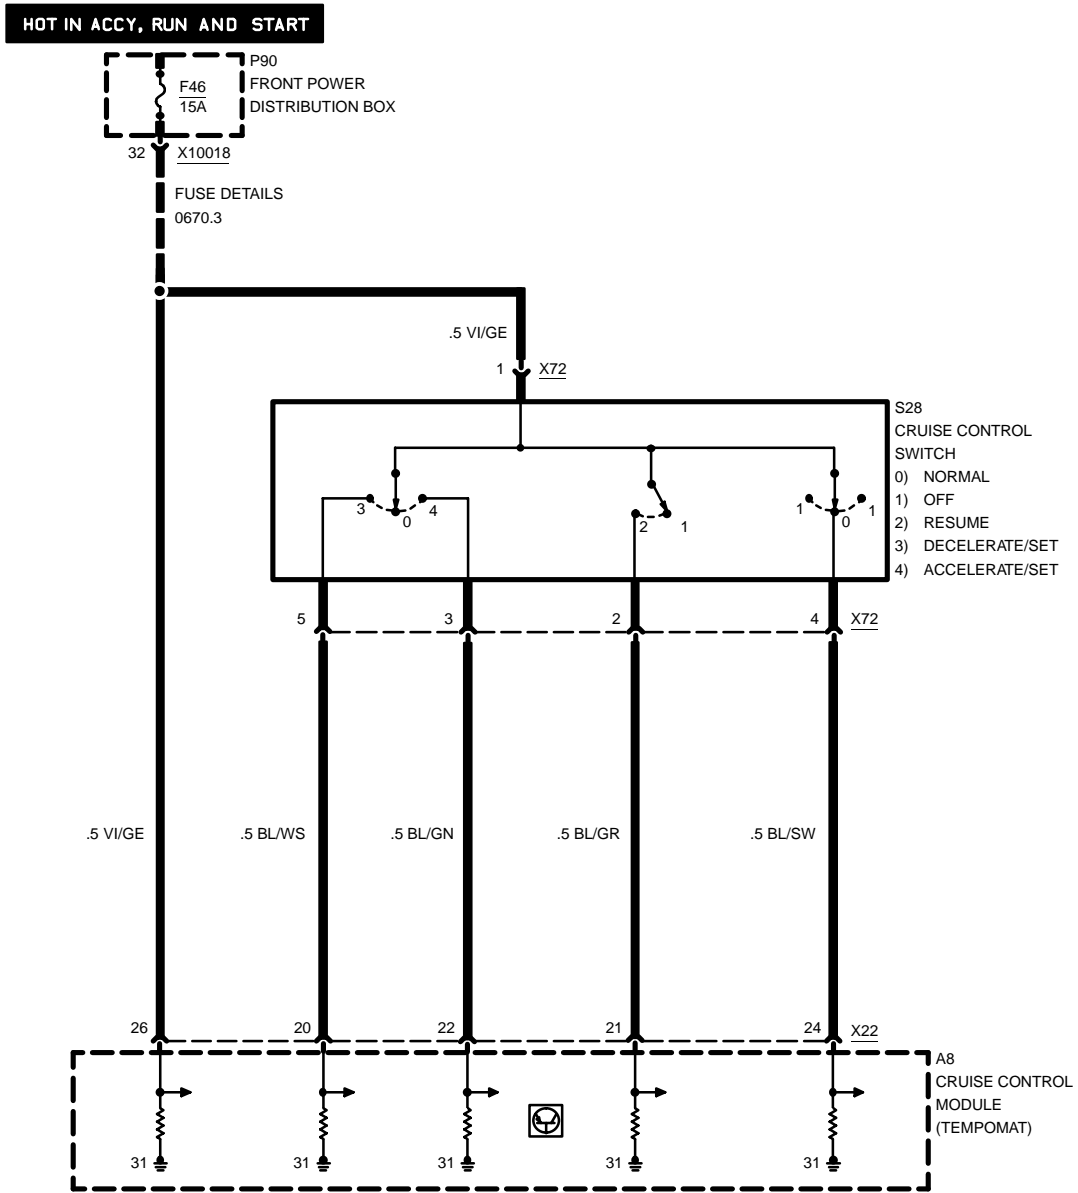

03/00


6571.0-00

1999



# CRUISE CONTROL (TEMPOMAT)


Z3 VERSIONS

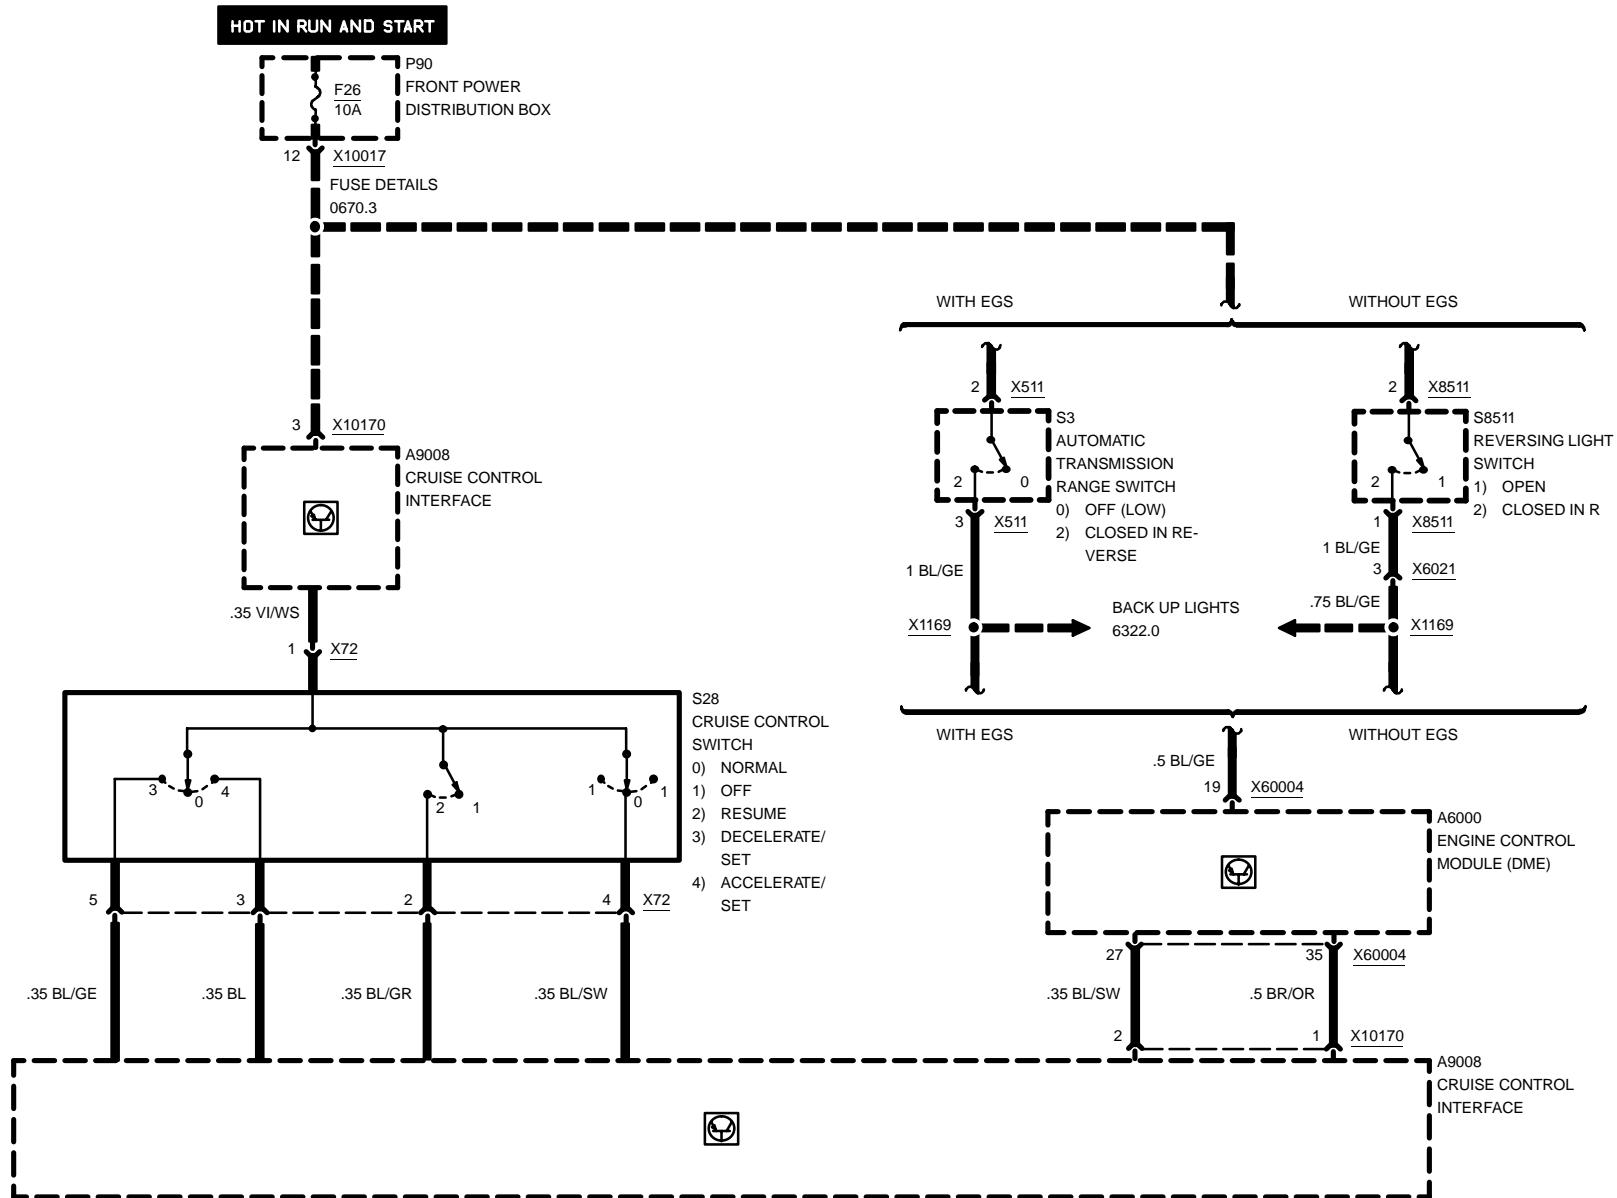




# CRUISE CONTROL (TEMPOMAT)


## Z3 VERSIONS

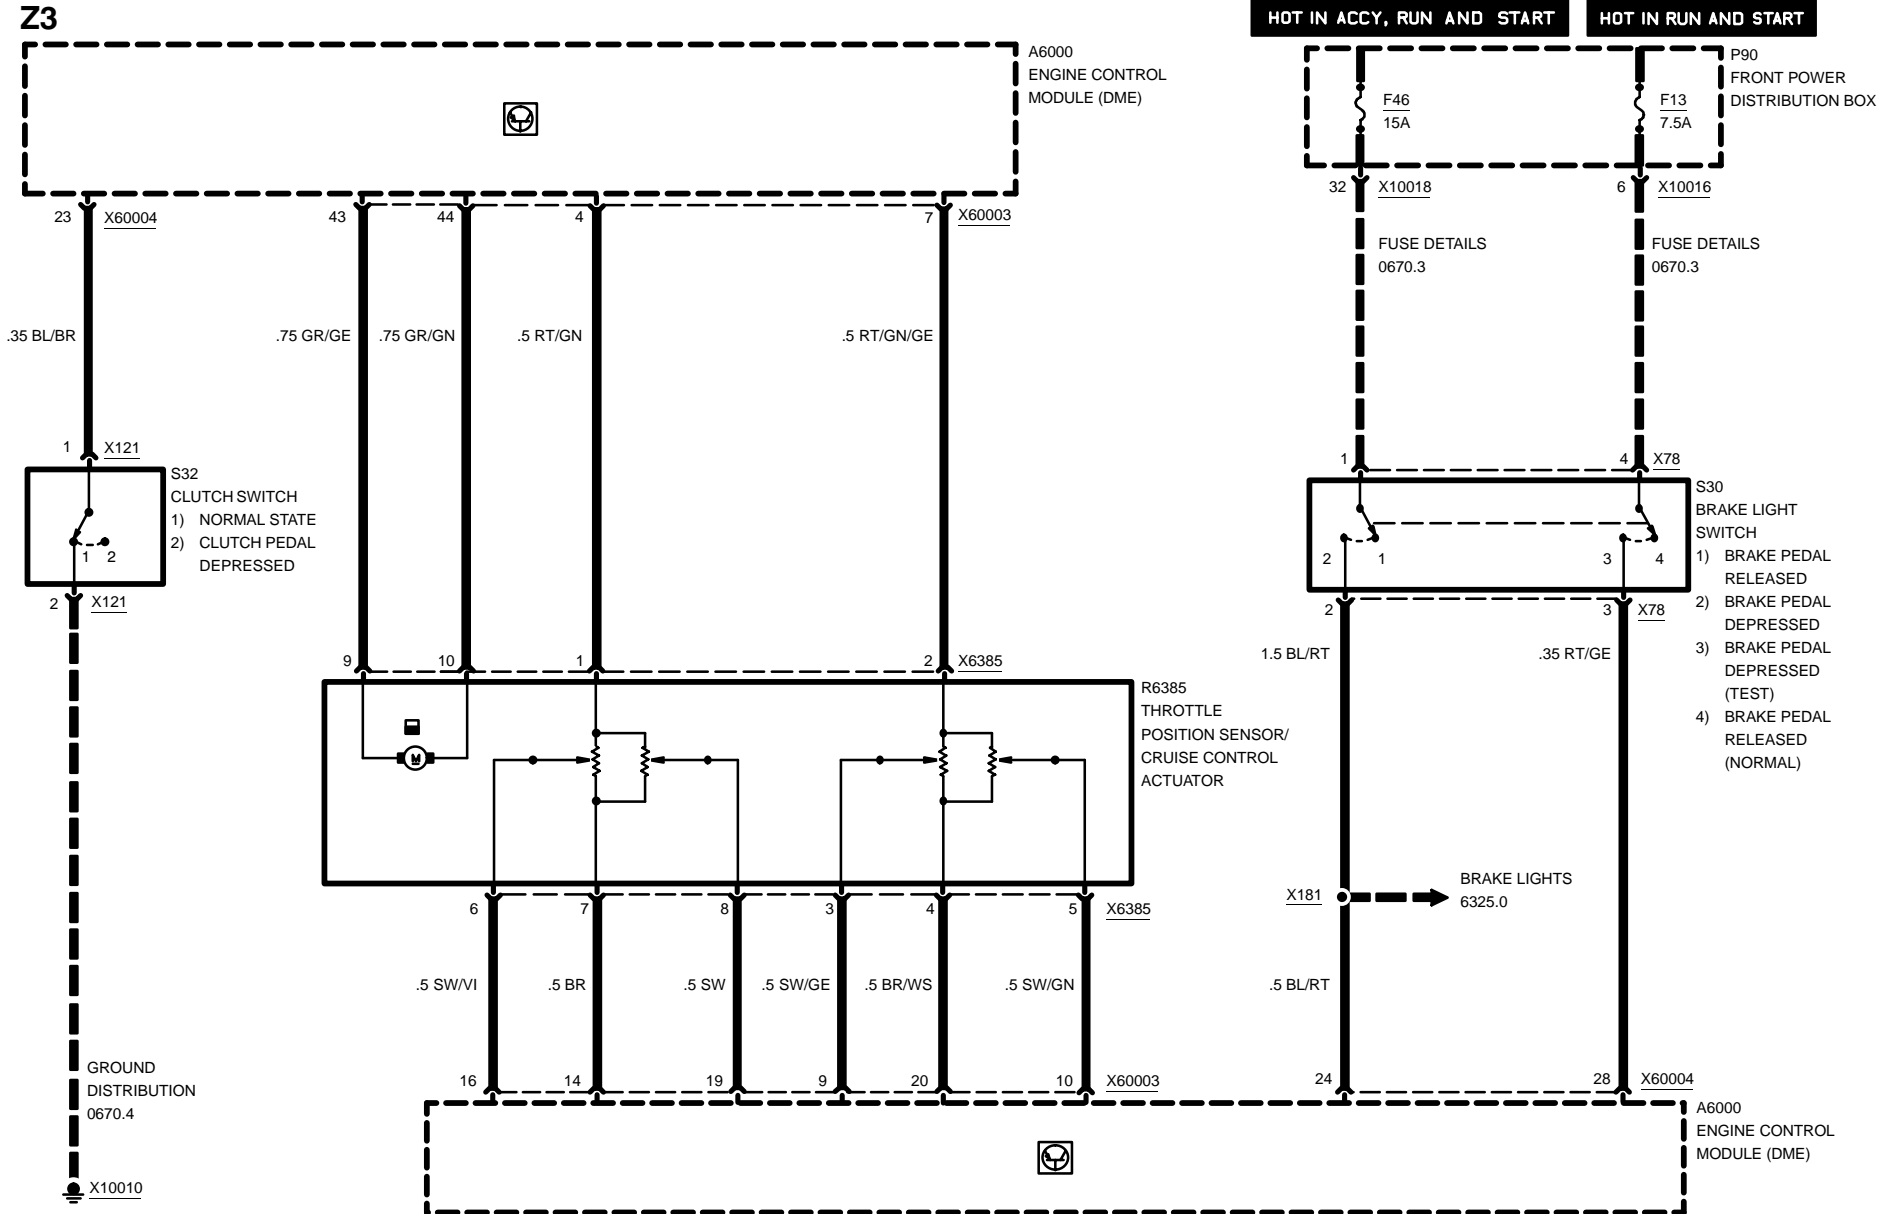

# 6575.2 ANTI-THEFT SYSTEM (ALPINE)

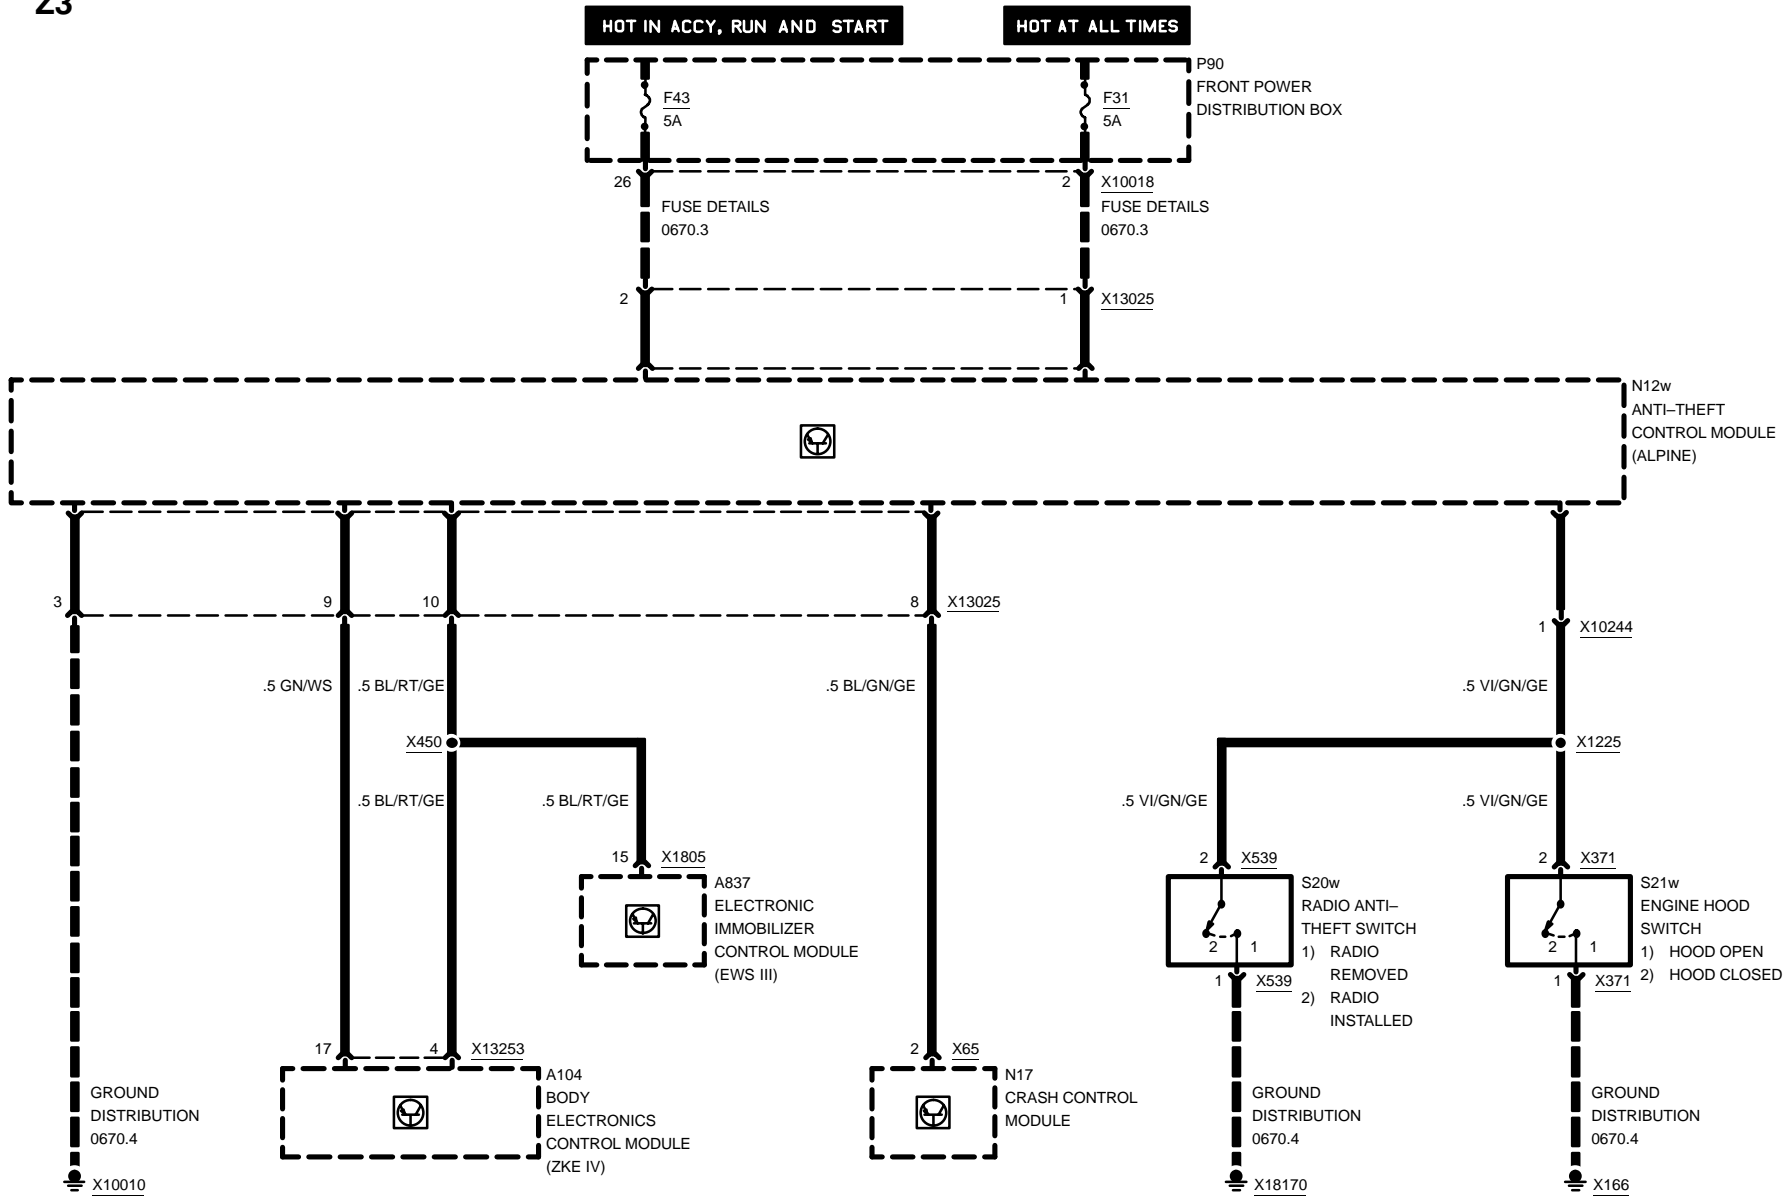


# ANTI-THEFT SYSTEM (ALPINE)

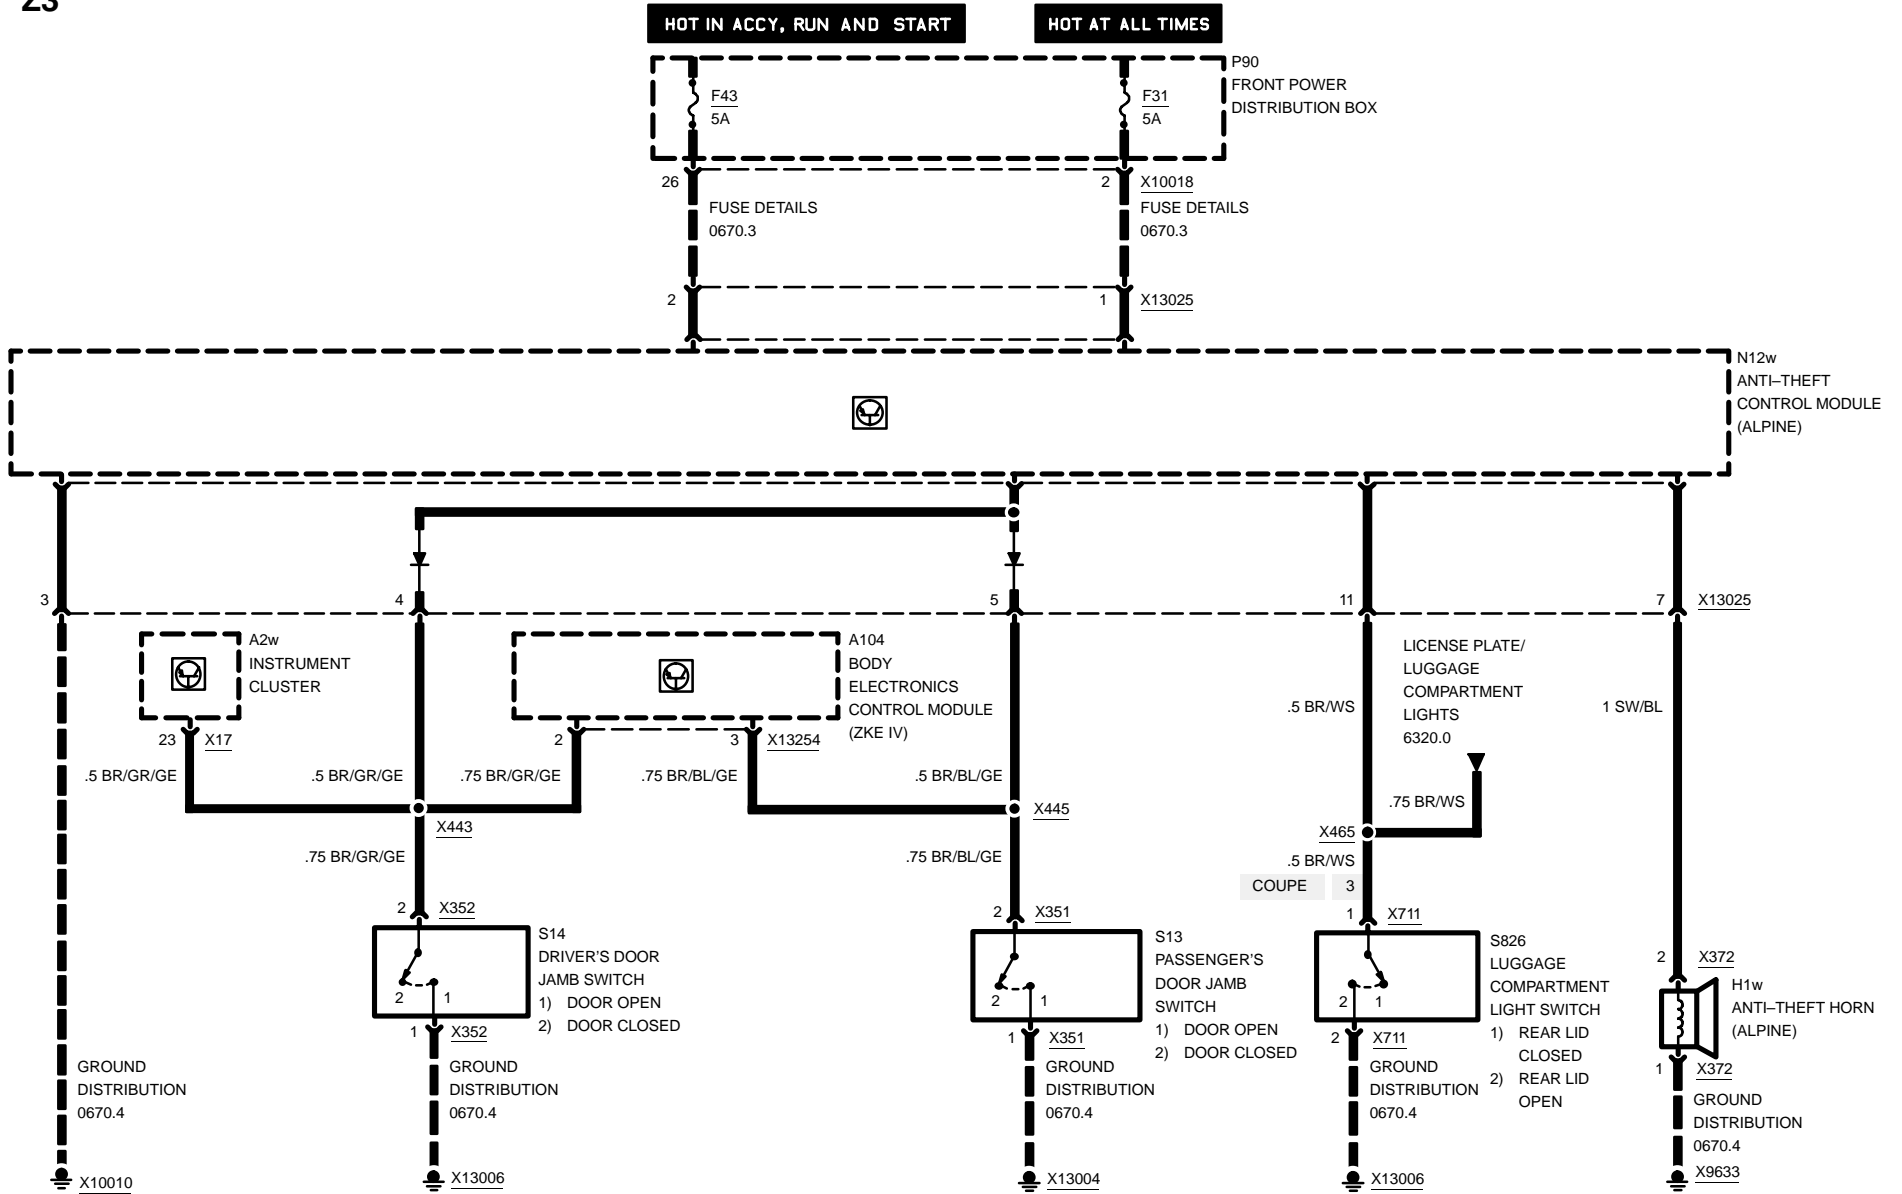



Z3

# 6581.3 BOARD COMPUTER (BC - LOW)

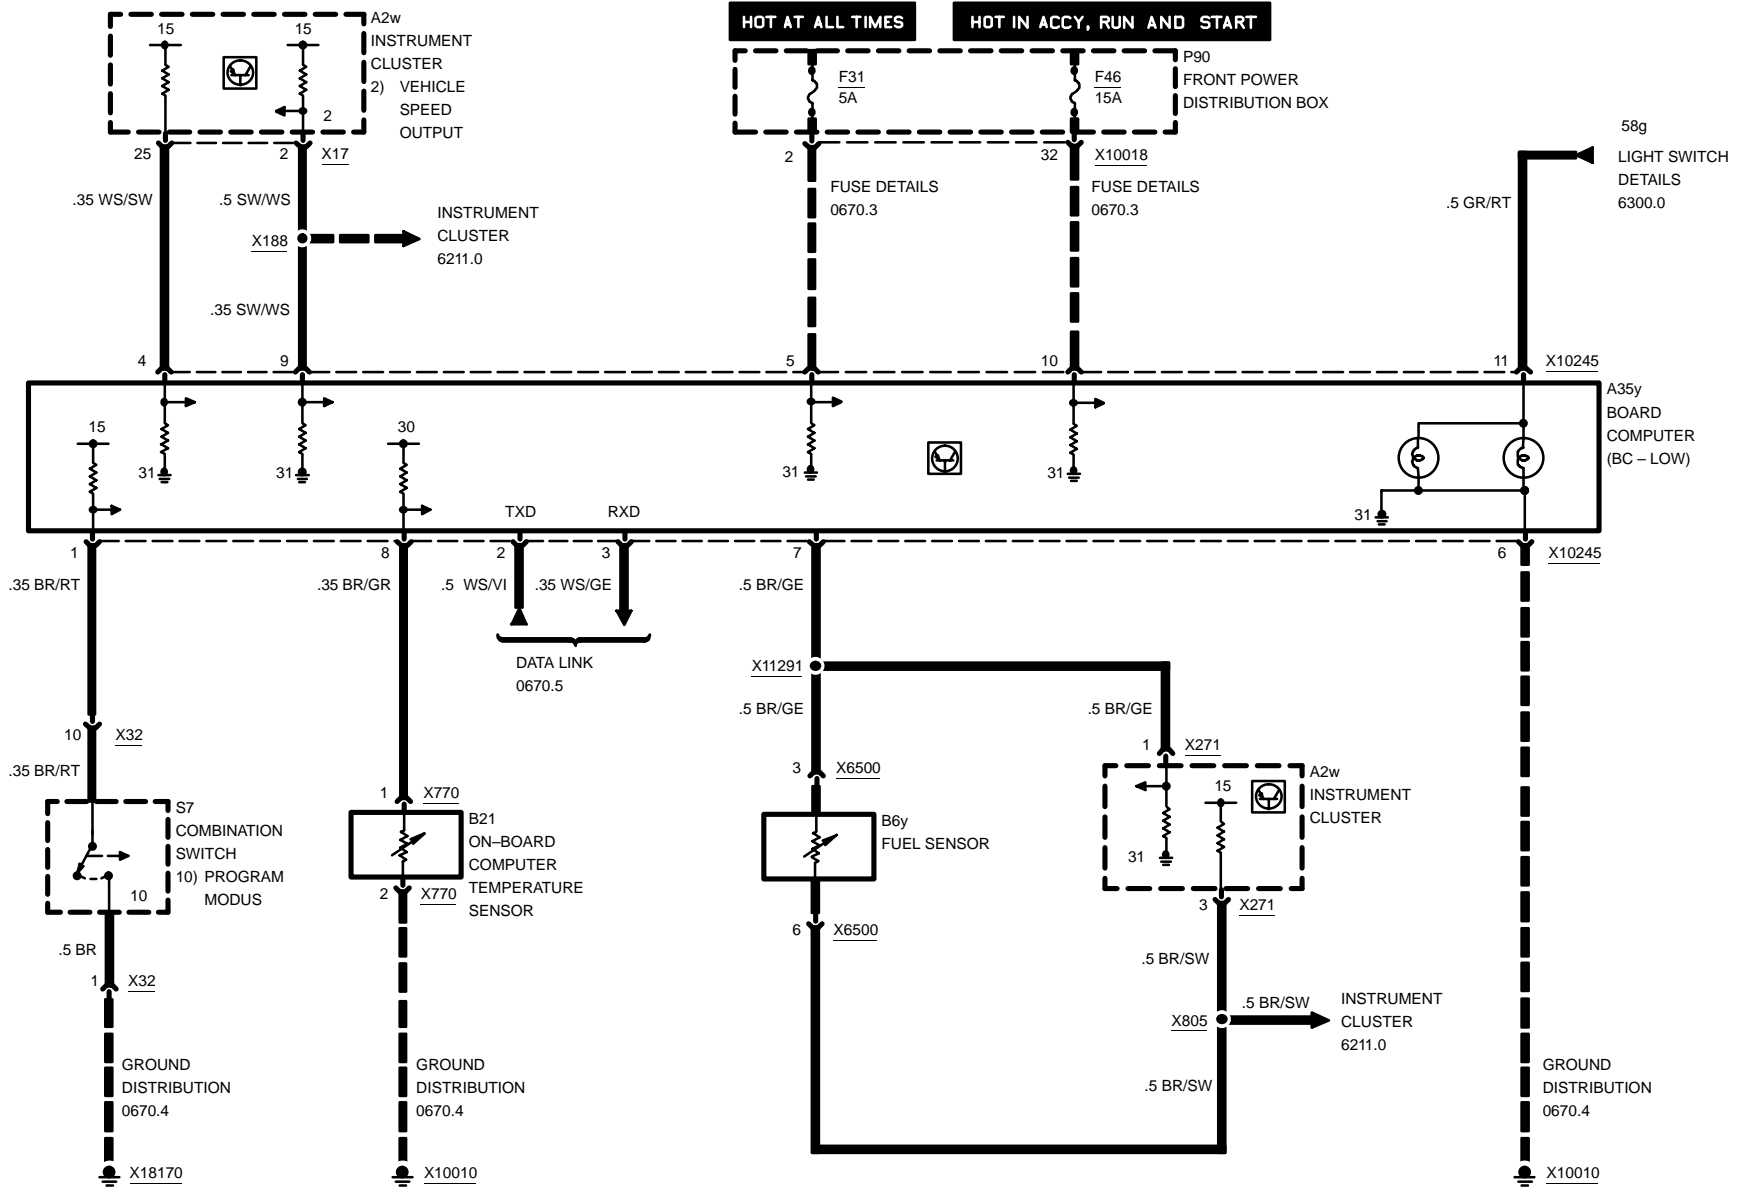

03/00

6581.3-00

1999



# 7000.0 COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
A2w ..	INSTRUMENT CLUSTER .....	LH side of dash .....	20-2	
A8 ....	CRUISE CONTROL MODULE (TEMPOMAT) .....	behind glove box .....	00-2	
A12 ..	SUPPLEMENTAL RESTRAINT SYSTEM CONTROL MODULE .....	below center console .....	22-2	
A18 ..	HIFI AMPLIFIER .....	in RH side of luggage compartment (ROADSTER) .....	27-3	
A18 ..	HIFI AMPLIFIER .....	in RH side of luggage compartment (COUPE) .....	46-1	
A35y .	BOARD COMPUTER (BC – LOW) .....	center console .....	00-3	
A36 ..	REAR WIPER/WASHER INTERVAL CONTROL MODULE .....	in lift gate .....	37-2	
A51 ..	WIPER/WASHER MODULE .....	behind glove box .....	38-2	
A52 ..	SLIP CONTROL MODULE (ABS/ASC) ....	front LH side of engine compartment (Z3 VERSIONS) .....	39-3	
A52 ..	SLIP CONTROL MODULE (ABS/ASC) ....	behind glove box (M VERSIONS) .....	00-2	
A104 .	BODY ELECTRONICS CONTROL MODULE (ZKE IV) .....	behind glove box .....	38-2	
A110 ..	DIGITAL CLOCK .....	center console		
A113 ..	SEAT OCCUPANCY DETECTOR .....	under RH front seat .....	24-1	
A113 ..	SEAT OCCUPANCY DETECTOR .....	under RH front seat (WITH SPORT SEAT) .....	11-2	
A605 .	FUSE HOLDER .....	center console (radio and console removed) .....	36-1	
A837 .	ELECTRONIC IMMOBILIZER CONTROL MODULE (EWS III) .....	LH side of steering column .....	38-3	
A6000	ENGINE CONTROL MODULE (DME) .....	rear RH side of engine compartment in E-Box (M VERSIONS) .....	00-1	
A6000	ENGINE CONTROL MODULE (DME) .....	rear RH side of engine compartment in E-Box (Z3 VERSIONS) .....	40-2	





# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
A8500	TRANSMISSION CONTROL MODULE (EGS)	rear RH side of engine compartment in E-Box	42-3	
A9008	CRUISE CONTROL INTERFACE	near steering column	38-3	
A19007	THERMAL OIL LEVEL SENSOR (TOENS) CONTROL MODULE	behind glove box	38-1	
B1	RIGHT FRONT SPEED SENSOR – ABS	on RH front wheel, above brake caliper		
B2	LEFT FRONT SPEED SENSOR – ABS	on LH front wheel, above brake caliper	12-3	
B3	RIGHT REAR SPEED SENSOR – ABS	on RH rear wheel, above brake caliper		
B4	LEFT REAR SPEED SENSOR – ABS	on LH rear wheel, above brake caliper		
B6y	FUEL SENSOR	in fuel tank		
B8y	PRESSURE SWITCH	front RH side of engine compartment		
B9	INTERMEDIATE PRESSURE SWITCH	front RH side of engine compartment		
B10	VEHICLE SPEED SENSOR	on differential	15-2	
B14	EVAPORATOR TEMPERATURE SENSOR	RH side of LH footwell	21-2	
B16	LEFT FRONT BRAKE PAD SENSOR	on LH front wheel, above brake caliper	12-3	
B17	RIGHT REAR BRAKE PAD SENSOR	behind RH rear wheel		
B18	BRAKE FLUID LEVEL SWITCH	rear LH side of engine compartment	09-1	
B21	ON-BOARD COMPUTER TEMPERATURE SENSOR	in RH front bumper	11-3	
B59	OIL TEMPERATURE GAUGE	center console		
B65	FUEL TANK PRESSURE SENSOR	under rear storage compartment	07-2	
B78	DRIVER'S SIDE IMPACT SENSOR	under LH front seat	35-3	
B79	PASSENGER'S SIDE IMPACT SENSOR	under RH front seat	35-1	



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
B211 ..	VOLTMETER .....	center console		
B6203	CRANKSHAFT POSITION/RPM SENSOR	rear LH side of engine compartment (M VERSIONS) .....	32-3	
B6203	CRANKSHAFT POSITION/RPM SENSOR	rear LH side of engine compartment (Z3 VERSIONS) .....	41-3	
B6204	CAMSHAFT POSITION SENSOR (CYLINDER IDENTIFICATION) .....	front of engine .....	31-3	
B6205	INTAKE AIR TEMPERATURE SENSOR ..	front LH side of engine compartment (M VERSIONS) .....	34-1	
B6205	INTAKE AIR TEMPERATURE SENSOR ..	top center of engine (Z3 VERSIONS) .....	42-2	
B6207	HOT FILM AIR MASS METER .....	LH side of engine compartment (M VERSIONS) .....	33-3	
B6207	HOT FILM AIR MASS METER .....	LH side of engine compartment (Z3 VERSIONS)		
B6209	HALL EFFECT CAMSHAFT SENSOR ....	front of engine		
B6214	CAMSHAFT POSITION SENSOR 1 (INLET)	front of engine		
B6224	CAMSHAFT POSITION SENSOR 2 (OUTLET) .....	front of engine .....	47-2	
B6231	OIL PRESSURE SWITCH .....	lower LH side of engine (M VERSIONS) .....	32-2	
B6231	OIL PRESSURE SWITCH .....	LH side of engine compartment (Z3 VERSIONS) .....	44-1	
B6232	ENGINE COOLANT TEMPERATURE SENSOR .....	front of engine		
B6236	ENGINE COOLANT TEMPERATURE SENSOR .....	front of engine .....	40-1	
B6238	OIL TEMPERATURE SENSOR .....	RH side of oil filter (M VERSIONS) .....	32-2	
B6238	OIL TEMPERATURE SENSOR .....	RH side of oil filter (Z3 VERSIONS) .....	44-1	
B6240	KNOCK SENSOR .....	LH side of engine (Z3 VERSIONS) .....	42-1	
B6240	KNOCK SENSOR .....	top front of engine (M VERSIONS) .....	33-2	



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
B6247	CHARCOAL FILTER SHUT-OFF VALVE . . .	under LH rear of car . . . . .	12-1	
B6254	THERMAL OIL LEVEL SWITCH . . . . .	lower LH side of engine compartment . . . . .	47-1	
B6256	DUAL TEMPERATURE SENSOR (COOLANT TEMPERATURE) . . . . .	rear of engine compartment . . . . .	32-1	
B6279	THERMOSTAT, CHARACTERISTIC MAP COOLING . . . . .	front of engine . . . . .	39-1	
B9508	PRESSURE SWITCH . . . . .	front RH side of engine compartment . . . . .	30-2	
B62101	OXYGEN SENSOR I (IN FRONT OF CATALYTIC CONVERTER) . . . . .	on catalytic converter . . . . .	43-3	
B62102	OXYGEN SENSOR I (BEHIND CATALYTIC CONVERTER) . . . . .	on catalytic converter		
B62201	OXYGEN SENSOR II (IN FRONT OF CATALYTIC CONVERTER) . . . . .	on catalytic converter . . . . .	43-3	
B62202	OXYGEN SENSOR II (BEHIND CATALYTIC CONVERTER) . . . . .	on catalytic converter		
C101 .	CONTACT RING . . . . .	top of steering column . . . . .	36-3	
D100 .	DATA LINK CONNECTOR . . . . .	rear RH side of engine compartment (M VERSIONS) . . . . .	31-1	
D100 .	DATA LINK CONNECTOR . . . . .	rear LH side of engine compartment (Z3 VERSIONS) . . . . .	39-3	
D110 .	OBD II CONNECTOR . . . . .	center console right . . . . .	28-3	
E7 . . . .	LEFT HEADLIGHT . . . . .	front LH side of engine compartment		
E8 . . . .	RIGHT HEADLIGHT . . . . .	front RH side of engine compartment		
E9 . . . .	REAR DEFOGGER I . . . . .	hard top		
E11 . . .	LEFT HIGH BEAM LIGHT . . . . .	near front LH headlight . . . . .	29-1	
E12 . .	RIGHT HIGH BEAM LIGHT . . . . .	near front RH headlight		



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
E13	LEFT LOW BEAM LIGHT	near front LH headlight	29-1	
E14	RIGHT LOW BEAM LIGHT	near front RH headlight	29-3	
E15	LEFT PARK LIGHT	near front LH headlight		
E16	LEFT REAR LIGHT ASSEMBLY	LH side of body rear end		
E17	RIGHT REAR LIGHT ASSEMBLY	RH side of body rear end	01-1	
E19	RIGHT PARK LIGHT	near front RH headlight		
E21	LEFT FRONT MARKER LIGHT	front of vehicle		
E22	RIGHT FRONT MARKER LIGHT	front of vehicle		
E25	FRONT ASHTRAY LIGHT	center console		
E26	LEFT FOG LIGHT	under LH front bumper		
E27	RIGHT FOG LIGHT	under RH front bumper	13-2	
E28	FRONT CIGAR LIGHTER	center console		
E28a	CIGAR LIGHTER CONNECTION	TIRE INFLATION SYSTEM		
E29	FRONT CIGAR LIGHTER LIGHT	center console	22-3	
E32	LUGGAGE COMPARTMENT LIGHT	in luggage compartment (ROADSTER)		
E32	LUGGAGE COMPARTMENT LIGHT	in roof panel (COUPE)		
E34	FRONT DOME LIGHT/MAP READING ASSEMBLY	in roof panel		
E43	LEFT LICENSE PLATE LIGHT	underside of luggage compartment lid, near license plate		
E44	RIGHT LICENSE PLATE LIGHT	underside of luggage compartment lid, near license plate		
E51	LEFT WASHER JET HEATER	on underside of engine hood	37-1	
E52	RIGHT WASHER JET HEATER	on underside of engine hood	37-1	



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
E56	DRIVER'S SEATBACK HEATER	in top of LH backrest		
E57	DRIVER'S SEAT HEATER	under LH front seat		
E58	PASSENGER'S SEAT HEATER	underside of RH front seat		
E59	PASSENGER'S SEATBACK HEATER	in top of RH backrest		
E82	TRANSMISSION POSITION INDICATOR LIGHT	center console	22-1	
E96	GEAR SHIFT LEVER INDICATOR	center console		
E99	HARD TOP CONNECTOR 1	near LH rear wheel well		
E105	HEAT/A/C CONTROL PANEL ILLUMINATION	center of dash	21-3	
E106	HEAT/A/C CONTROL PANEL ILLUMINATION	center of dash	21-3	
E800	FRONT LEFT INTERIOR LIGHT	near interior rear view mirror		
F97	FUSIBLE LINK	in RH side of luggage compartment	01-1	
G1	BATTERY	in RH side of luggage compartment	01-1	
G5	DRIVER'S AIR BAG GAS GENERATOR	behind steering wheel		
G6	PASSENGER'S AIR BAG GAS GENERATOR	behind glove box above		
G12	DRIVER'S SIDE PYROTECHNICAL BELT TENSIONER	in LH front seat belt buckle	36-2	
G13	PASSENGER'S SIDE PYROTECHNICAL BELT TENSIONER	in RH front seat belt buckle	36-2	
G14	LEFT SIDE AIR BAG GAS GENERATOR	LH front door	16-2	
G15	RIGHT SIDE AIR BAG GAS GENERATOR	RH front door	35-2	



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
G6400	B+ JUNCTION POINT E-BOX .....	rear RH side of engine compartment in E-Box .....	41-2	
G6430	B+ JUMP START JUNCTION POINT .....	rear RH side of engine compartment .....	01-2	
G6509	GENERATOR .....	front LH side of engine compartment .....	02-3	
G7512	B+ JUNCTION POINT .....	below LH side of dash		
H1w ..	ANTI-THEFT HORN (ALPINE) .....	rear LH side of engine compartment .....	09-1	
H2 ...	LEFT HORN .....	under LH front bumper		
H3 ...	RIGHT HORN .....	RH front of wheel well .....	13-2	
H4 ...	RIGHT FRONT TURN LIGHT .....	front of vehicle		
H7 ...	LEFT FRONT TURN LIGHT .....	front of vehicle		
H8 ...	RIGHT FRONT AUXILIARY TURN LIGHT .	front of vehicle		
H9 ...	LEFT FRONT AUXILIARY TURN LIGHT ..	front of vehicle		
H10 ..	CHIME MODULE .....	below LH side of dash		
H34 ..	HIGH LEVEL STOP LIGHT .....	on lift gate (ROADSTER) .....	45-1	
H34 ..	HIGH LEVEL STOP LIGHT .....	on lift gate (COUPE)		
H45 ..	RIGHT REAR SPEAKER .....	in roof panel		
H46 ..	LEFT REAR SPEAKER .....	in roof panel		
H50 ..	RIGHT FRONT HIGH RANGE SPEAKER .	in upper RH front door		
H51 ..	RIGHT FRONT LOW RANGE SPEAKER .	in lower RH A-pillar		
H52 ..	RIGHT REAR LOW RANGE SPEAKER ...	in rear speaker box		
H53 ..	RIGHT REAR HIGH RANGE SPEAKER ..	in roof panel		
H54 ..	RIGHT FRONT MIDRANGE SPEAKER ...	in upper RH front door		



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
H54z	REAR RIGHT MID-HIGH RANGE SPEAKER	in rear speaker box (ROADSTER)	07-3	
H54z	REAR RIGHT MID-HIGH RANGE SPEAKER	in roof panel (COUPE)		
H55	LEFT FRONT MIDRANGE SPEAKER	in upper LH front door		
H55z	REAR LEFT MID-HIGH RANGE SPEAKER	in rear speaker box (ROADSTER)	10-1	
H55z	REAR LEFT MID-HIGH RANGE SPEAKER	in roof panel (COUPE)		
H56	LEFT REAR HIGH RANGE SPEAKER	in roof panel		
H57	LEFT REAR LOW RANGE SPEAKER	in rear speaker box		
H58	LEFT FRONT LOW RANGE SPEAKER	in lower LH A-pillar		
H59	LEFT FRONT HIGH RANGE SPEAKER	in upper LH front door		
H500	REAR WOOFER	in rear speaker box (COUPE)	46-1	
H500	REAR WOOFER	in rear speaker box (ROADSTER)		
I1008	SEAT MAT	in passenger's seat area		
K2	HORN RELAY	rear LH side of engine compartment in Power Distribution Box	09-2	
K4	BLOWER RELAY	rear LH side of engine compartment in Power Distribution Box	09-2	
K9	UNLOADER RELAY, TERMINAL 15	rear LH side of engine compartment in Power Distribution Box	09-3	
K16	HAZARD FLASHER RELAY	rear LH side of engine compartment in Power Distribution Box	09-2	
K19	COMPRESSOR CONTROL RELAY	rear LH side of engine compartment in Power Distribution Box	09-3	
K21	NORMAL SPEED RELAY	rear LH side of engine compartment in Power Distribution Box	09-3	
K22	HIGH SPEED RELAY	rear LH side of engine compartment in Power Distribution Box	09-3	
K33a	AIR CONDITIONING RELAY, MOTRONIC	rear LH side of engine compartment in Power Distribution Box	09-2	



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
K46	.. HIGH BEAM LIGHT RELAY .....	footwell, driver's side (USA) .....	19-1	
K46z	.. DAY LIGHT RELAY MODULE .....	footwell, driver's side (CANADA)		
K47	.. FRONT FOG LIGHT RELAY .....	rear LH side of engine compartment in Power Distribution Box .....	09-2	
K48	.. LOW BEAM LIGHT RELAY .....	rear LH side of engine compartment in Power Distribution Box .....	09-2	
K70	.. CENTRAL LOCKING LUGGAGE COMPARTMENT LID MOTOR RELAY (ZV) .....	rear LH side of engine compartment in Power Distribution Box .....	08-2	
K94	.. ENGINE CONTROL RELAY (ABS/ASC) ..	rear LH side of engine compartment in Power Distribution Box .....	09-3	
K95	.. VALVE RELAY (ABS/ASC) .....	rear LH side of engine compartment in Power Distribution Box .....	09-3	
K910	.. PASSENGER'S SEAT TILT ADJUST CUT- OFF RELAY .....	underside of RH front seat .....	11-1	
K911	.. PASSENGER'S SEAT LENGTH ADJUST CUT-OFF RELAY .....	underside of RH front seat .....	11-1	
K920	.. DRIVER'S SEAT TILT ADJUST CUT-OFF RELAY .....	underside of LH front seat .....	10-2	
K921	.. DRIVER'S SEAT LENGTH ADJUST CUT- OFF RELAY .....	underside of LH front seat .....	10-2	
K6300	ENGINE CONTROL MODULE RELAY ....	rear RH side of engine compartment in E-Box (M VERSIONS) .....	00-1	
K6300	ENGINE CONTROL MODULE RELAY ....	rear RH side of engine compartment in E-Box (Z3 VERSIONS) .....	41-1	
K6304	SECONDARY AIR PUMP RELAY .....	rear RH side of engine compartment in E-Box (M VERSIONS) .....	00-1	
K6304	SECONDARY AIR PUMP RELAY .....	rear RH side of engine compartment in E-Box (Z3 VERSIONS) .....	41-1	
K6326	UNLOADER RELAY, TERMINAL 15 .....	rear RH side of engine compartment in E-Box (M VERSIONS) .....	00-1	
K6326	UNLOADER RELAY, TERMINAL 15 .....	rear RH side of engine compartment in E-Box (Z3 VERSIONS) .....	41-1	
K6301w	FUEL PUMP RELAY .....	below LH side of dash .....	19-1	





# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
K6394	COMPRESSOR RELAY .....	TIRE INFLATION SYSTEM		
K18363	CONVERTIBLE TOP RELAY I (CLOSE) ...	in LH side of luggage compartment .....	25-3	
K18364	CONVERTIBLE TOP RELAY II (OPEN) ...	in LH side of luggage compartment .....	25-3	
L1 ....	EWS TOROIDAL COIL .....	at ignition switch		
M2 ...	FUEL PUMP .....	in fuel tank		
M3 ...	WIPER MOTOR .....	rear of engine compartment .....	45-3	
M4 ...	WASHER PUMP .....	front RH side of engine compartment on washer fluid reservoir		
M7 ...	HEADLIGHT/FOG LIGHT WASHER PUMP	front RH side of engine compartment on washer fluid reservoir		
M9 ...	AUXILIARY FAN MOTOR .....	behind front grille		
M12 ..	DRIVER'S DOOR LOCK MOTOR .....	driver's door		
M13 ..	PASSENGER'S DOOR LOCK MOTOR ...	passenger's door		
M17 ..	LUGGAGE COMPARTMENT LOCK MOTOR .....	rear side of luggage compartment behind trim panel (ROADSTER)		
M17 ..	LUGGAGE COMPARTMENT LOCK MOTOR .....	in lift gate (Z3 COUPE) .....	37-2	
M17 ..	LUGGAGE COMPARTMENT LOCK MOTOR .....	in lift gate (M COUPE) .....	46-3	
M21 ..	DRIVER'S WINDOW MOTOR .....	in driver's door .....	17-2	
M23 ..	PASSENGER'S WINDOW MOTOR .....	in passenger's door .....	18-3	
M24y .	TILT SUNROOF MOTOR .....	in roof panel		
M25 ..	CRUISE CONTROL ACTUATOR (TEMPOMAT) .....	rear LH side of engine compartment .....	08-3	
M30 ..	BLOWER MOTOR .....	rear of engine compartment		



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
M51 ..	DRIVER'S SEAT MOVEMENT MOTOR ...	under LH front seat .....	25-1	
M51 ..	DRIVER'S SEAT MOVEMENT MOTOR ...	under LH front seat (WITH SPORT SEAT) .....	10-3	
M52 ..	DRIVER'S SEAT HEIGHT MOTOR .....	under LH front seat .....	25-1	
M52 ..	DRIVER'S SEAT HEIGHT MOTOR .....	under LH front seat (WITH SPORT SEAT) .....	10-3	
M59 ..	PASSENGER'S SEAT HEIGHT MOTOR ..	under RH front seat .....	24-1	
M60 ..	PASSENGER'S SEAT MOVEMENT MOTOR .....	under RH front seat .....	24-1	
M93 ..	AUXILIARY THROTTLE POSITION MOTOR (ADS) .....	front of engine .....	08-1	
M101 .	CONVERTIBLE TOP MOTOR .....	in LH side of luggage compartment .....	25-3	
M111 .	FRESH AIR RECIRCULATION MOTOR ...	RH side of LH footwell .....	21-2	
M805 .	ELECTRICAL COMPRESSOR .....	TIRE INFLATION SYSTEM		
M6506	E-BOX FAN .....	in E-Box		
M6510	STARTER .....	rear LH side of engine compartment .....	02-2	
N5 ...	ANALOG CLOCK .....	center console		
N8 ...	ANTENNA AMPLIFIER AM/FM .....	in LH side of luggage compartment behind trim panel (ROADSTER)		
N8 ...	ANTENNA AMPLIFIER AM/FM .....	in roof panel (COUPE) .....	37-3	
N9 ...	RADIO .....	center console		
N12w .	ANTI-THEFT CONTROL MODULE (ALPINE) .....	behind glove box		
N17 ..	CRASH CONTROL MODULE .....	footwell, driver's side .....	19-1	
N22 ..	CD CHANGER .....	in RH side of luggage compartment		
P90 ..	FRONT POWER DISTRIBUTION BOX ...	rear LH side of engine compartment		



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
P95 ..	AUXILIARY FUSE BOX .....	below LH side of dash		
P97 ..	AUXILIARY FUSE BOX .....	below LH side of dash .....	19-1	
P98 ..	FUSE HOLDER IN E-BOX .....	rear RH side of engine compartment in E-Box .....	40-3	
P99 ..	FUSE HOLDER .....	in RH side of luggage compartment		
R11 ...	BLOWER RESISTORS .....	rear of engine compartment behind firewall		
R31 ..	AUXILIARY THROTTLE POSITION SENSOR .....	front of engine .....	33-3	
R6252	THROTTLE POSITION SENSOR .....	front of engine .....	33-3	
R6385	THROTTLE POSITION SENSOR/CRUISE CONTROL ACTUATOR .....	top LH side of engine .....	39-2	
R8554	RESISTOR .....	on cylinder head		
S2 ....	IGNITION SWITCH .....	LH side of dash		
S3 ....	AUTOMATIC TRANSMISSION RANGE SWITCH .....	center console .....	22-1	
S4 ....	HORN SWITCH .....	on steering wheel		
S5 ....	WIPER/WASHER SWITCH .....	LH side of dash RH side of steering column above		
S6 ....	ASC SWITCH .....	center console		
S7 ....	COMBINATION SWITCH .....	LH side of dash LH side of steering column above		
S8 ....	LIGHT SWITCH .....	LH side of dash		
S10 ..	FOG LIGHT SWITCH .....	LH side of dash		
S13 ..	PASSENGER'S DOOR JAMB SWITCH ...	RH B-pillar .....	26-1	
S14 ..	DRIVER'S DOOR JAMB SWITCH .....	LH B-pillar .....	27-1	
S17 ..	MIRROR CONTROL SWITCH .....	in upper LH front door		



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
S18	HAZARD SWITCH	center console bottom		
S20w	RADIO ANTI-THEFT SWITCH	center console (radio and console removed)	36-1	
S21w	ENGINE HOOD SWITCH	near LH headlight assembly	29-1	
S28	CRUISE CONTROL SWITCH	LH side of dash RH side of steering column above		
S30	BRAKE LIGHT SWITCH	LH footwell	20-1	
S31	PARK BRAKE SWITCH	center console on rear of park brake lever		
S32	CLUTCH SWITCH	LH footwell	20-1	
S36	TEMPERATURE SWITCH	front RH side of engine compartment	30-1	
S38y	TILT SUNROOF SWITCH	in roof panel		
S47	DRIVER'S DOOR LOCK SWITCH	in driver's door	17-1	
S49	PASSENGER'S DOOR LOCK SWITCH	in passenger's door		
S51	DRIVER'S SEAT, SEAT CONTROL SWITCH	LH front seat		
S53	DRIVER'S SEAT, SEAT HEATER SWITCH	center console	23-1	
S54	PASSENGER'S SEAT, SEAT HEATER SWITCH	center console	23-1	
S56	PASSENGER'S SEAT, SEAT CONTROL SWITCH	RH front seat		
S58	DRIVER'S SEAT BELT SWITCH	in LH front seat belt buckle		
S59	PASSENGER'S SEAT BELT SWITCH	in RH front seat belt buckle		
S75	BLOWER SWITCH	center of dash	21-3	
S76	REAR WINDOW DEFOGGER SWITCH	center console		



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
S117 . .	LUGGAGE COMPARTMENT LID LOCKING SWITCH . . . . .	in lift gate		
S126y	DRIVER'S POWER WINDOW SWITCH . . .	center console near gearshift lever		
S127y	PASSENGER'S POWER WINDOW SWITCH . . . . .	center console near gearshift lever		
S143 .	CONVERTIBLE TOP ACTUATING SWITCH	center console		
S164 .	CONVERTIBLE TOP END-POSITION MICRO SWITCH . . . . .	at convertible top linkage . . . . .	17-3	
S198 .	JET HEATER THERMOSWITCH . . . . .	on front RH wheel well		
S220 .	AIR CONDITIONING/RECIRCULATING SWITCH ASSEMBLY . . . . .	center console . . . . .	00-3	
S221 .	EVAPORATOR CONTROLLER . . . . .	RH side of LH footwell . . . . .	21-2	
S232 .	COMPRESSOR MAIN SWITCH . . . . .	TIRE INFLATION SYSTEM		
S235 .	STARTER IMMOBILIZATION SWITCH . . . .	LH footwell . . . . .	20-1	
S408 .	INTERIOR LIGHT SWITCH . . . . .	near interior rear view mirror . . . . .	28-2	
S531 .	TEMPERATURE WHEEL SWITCH . . . . .	center of dash . . . . .	21-3	
S559 .	PASSENGER'S AIR BAG CUT-OFF SWITCH . . . . .	center console		
S826 .	LUGGAGE COMPARTMENT LIGHT SWITCH . . . . .	underside of luggage compartment lid		
S910 .	DRIVER'S SEAT LIMIT SWITCH . . . . .	in driver's seatback . . . . .	45-2	
S911 . .	PASSENGER'S SEAT LIMIT SWITCH . . . .	in passenger's seatback . . . . .	45-2	
S8503	PROGRAM SWITCH . . . . .	center console . . . . .	22-1	
S8507	KICK-DOWN SWITCH . . . . .	behind gas pedal . . . . .	19-3	

03/00

7000.0-13

1999



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
S8511	REVERSING LIGHT SWITCH	LH side of transmission	14-2	
T6151	CYL. 1 IGNITION COIL	RH side of engine compartment		
T6152	CYL. 2 IGNITION COIL	RH side of engine compartment		
T6153	CYL. 3 IGNITION COIL	RH side of engine compartment		
T6154	CYL. 4 IGNITION COIL	RH side of engine compartment		
T6155	CYL. 5 IGNITION COIL	RH side of engine compartment		
T6156	CYL. 6 IGNITION COIL	RH side of engine compartment		
X0	B+ JUNCTION POINT	rear LH side of engine compartment in Power Distribution Box	02-1	
X2	BATTERY B+ START POINT	rear LH side of engine compartment in Power Distribution Box (M VERSIONS)		
X2	BATTERY B+ START POINT	in RH side of luggage compartment (Z3 VERSIONS)		
X4	GROUND	LH side of engine compartment		
X8	CABLE SOCKET B+	in RH side of luggage compartment		
X9	CABLE SOCKET B+	below LH side of dash		
X16	(26 PINS, NATURAL)	LH side of dash rear side of instrument cluster, A2w	20-2	00-3
X17	(26 PINS, BLUE)	LH side of dash rear side of instrument cluster, A2w	20-2	00-3
X20	(25 PINS, BLACK)	rear LH side of engine compartment	08-1	04-4
X22	(26 PINS, BLUE)	behind glove box	00-2	00-3
X29	(1 PIN, —)	LH side of steering column		
X32	(12 PINS, NATURAL)	on steering column	19-2	02-4
X33	(12 PINS, BLACK)	on steering column	19-2	02-4
X35	(4 PINS, BLACK)	RH side of LH footwell	21-1	03-1
X44	(9 PINS, BLACK)	Power Distribution Box rear LH side of engine compartment		03-4



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X45 ..	(9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....		03-4
X50 ..	(9 PINS, BLACK) .....	Power Distribution Box, rear LH side of engine compartment .....		03-4
X51 ..	(9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....		03-4
X52 ..	(9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....		03-4
X53 ..	(9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....		03-4
X56 ..	(9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....		03-4
X58 ..	(9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....		03-4
X63 ..	(9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....		03-4
X64 ..	(9 PINS, BLACK) .....	Power Distribution Box rear LH side of engine compartment .....		03-4
X65 ..	(9 PINS, BLACK) .....	below LH side of dash .....		03-4
X70 ..	(8 PINS, BLACK) .....	rear LH side of engine compartment .....	08-3	06-2
X72 ..	(6 PINS, NATURAL) .....	on steering column .....	19-2	05-3
X74 ..	(50 PINS, NATURAL) .....	below center console .....	22-2	11-2
X78 ..	(4 PINS, BLACK) .....	on steering column .....	20-1	03-1
X82 ..	(3 PINS, BLACK) .....	under radiator .....	13-1	05-5
X85 ..	(3 PINS, BLACK) .....	rear LH side of engine compartment .....	14-3	05-5
X87 ..	(3 PINS, BLACK) .....	RH top of radiator .....	30-1	02-5
X105 ..	(2 PINS, GRAY) .....	on underside of engine hood .....	37-1	
X106 ..	(2 PINS, GRAY) .....	on underside of engine hood .....	37-1	
X107 ..	(2 PINS, BLACK) .....	front RH side of engine compartment on washer fluid reservoir		
X111 ..	(2 PINS, BLACK) .....	rear LH side of engine compartment .....	09-1	
X113 ..	(3 PINS, GRAY) .....	behind RH front wheel .....	13-3	06-3

03/00

7000.0-15

1999



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X114	(3 PINS, GRAY)	behind LH front wheel	12-2	06-3
X118	(2 PINS, BLACK)	behind LH front wheel	12-2	
X121	(2 PINS, WHITE)	LH footwell	20-1	
X123	(2 PINS, GRAY)	front RH side of engine compartment on washer fluid reservoir		
X127	(4 PINS, BLACK)	front RH side of engine compartment	30-2	05-4
X128	(3 PINS, BLACK)	front LH side of engine compartment		02-5
X130	(2 PINS, GRAY)	near front LH headlight	29-2	
X131	(2 PINS, BLACK)	near front LH headlight	29-2	
X132	(2 PINS, BLACK)	on front LH wheel well		
X133	(2 PINS, BLACK)	on front RH wheel well	13-2	
X134	(2 PINS, BLACK)	near front RH headlight	29-3	
X135	(2 PINS, GRAY)	near front RH headlight	29-3	
X137	(3 PINS, BLACK)	front RH side of engine compartment	30-3	02-5
X142	(2 PINS, GRAY)	under LH rear of car	16-1	
X143	(2 PINS, GRAY)	under RH rear of car	15-3	
X163	(3 PINS, BLACK)	front RH side of engine compartment on washer fluid reservoir near RH headlight assembly	30-2	05-5
X165	GROUND	front RH side of engine compartment	04-2	
X166	GROUND	front LH side of engine compartment	05-1	
X170	GROUND	behind LH footwell speaker grille	03-2	
X256	(26 PINS, BLACK)	RH A-pillar	18-1	03-5
X257	(26 PINS, BLACK)	LH A-pillar	16-3	03-5

03/00

7000.0-16

1999





# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X271	(12 PINS, BLACK)	LH side of dash rear side of instrument cluster, A2w	20-2	01-3
X275	(4 PINS, NATURAL)	under LH front seat	25-2	03-1
X275	(4 PINS, NATURAL)	under LH front seat (WITH SPORT SEAT)	10-3	03-1
X279	(4 PINS, NATURAL)	under RH front seat	24-2	03-1
X279	(4 PINS, NATURAL)	under RH front seat (WITH SPORT SEAT)	11-2	03-1
X285	(15 PINS, BLUE)	behind glove box	38-2	05-1
X295	(8 PINS, BLACK)	on steering column	19-2	03-3
X311	(3 PINS, BLACK)	in luggage compartment lid (ROADSTER)	28-1	01-1
X311	(3 PINS, BLACK)	in lift gate (COUPE)	37-2	01-1
X315	(2 PINS, BLACK)	in luggage compartment lid (ROADSTER)	28-1	
X315	(2 PINS, BLACK)	in lift gate (COUPE)	37-2	
X316	(4 PINS, VIOLET)	center console near gearshift lever		07-1
X318	(8 PINS, BLACK)	in RH rear side of luggage compartment behind RH rear light assembly	01-1	02-1
X319	(8 PINS, BLACK)	in LH side of luggage compartment behind trim panel		02-1
X322	(6 PINS, BLACK)	footwell, driver's side	19-1	03-6
X324	(4 PINS, VIOLET)	center console near gearshift lever		07-1
X333	(4 PINS, NATURAL)	rear of engine compartment below center of cowl	45-3	03-1
X336	(3 PINS, BLACK)	in upper RH A-pillar		01-1
X351	(3 PINS, BLACK)	RH B-pillar	26-1	01-1
X352	(3 PINS, BLACK)	LH B-pillar	27-1	01-1
X357	(2 PINS, WHITE)	near interior rear view mirror	28-2	
X371	(3 PINS, BLACK)	near front LH headlight	29-1	02-5



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X372	(2 PINS, GRAY)	rear LH side of engine compartment	09-1	
X379	(1 PIN, NATURAL)	HARD TOP CONNECTOR 1		
X380	(1 PIN, NATURAL)	HARD TOP CONNECTOR 1		
X383	(2 PINS, BLACK)	on differential	15-2	
X389	(2 PINS, BLACK)	LEFT FRONT AUXILIARY TURN LIGHT		
X390	(2 PINS, BLACK)	RIGHT FRONT AUXILIARY TURN LIGHT		
X400	(8 PINS, BLACK)	center console		02-1
X413	(3 PINS, BLACK)	HIGH LEVEL STOP LIGHT (ROADSTER)	45-1	01-1
X413	(3 PINS, BLACK)	HIGH LEVEL STOP LIGHT (COUPE)		01-1
X423	(1 PIN, —)	below center console on rear of park brake lever		
X424	(1 PIN, —)	in LH side of luggage compartment behind trim panel (ROADSTER)		
X424	(1 PIN, —)	in roof panel (COUPE)	37-3	
X494	GROUND	below center console	03-1	
X503	(12 PINS, BLACK)	LH side of dash	20-3	07-2
X504	(4 PINS, NATURAL)	LH side of dash	20-3	03-1
X511	(8 PINS, BLACK)	center console	22-1	02-1
X516	(5 PINS, BLACK)	center console		02-6
X521	(6 PINS, BLUE)	center console		04-5
X522	(3 PINS, NATURAL)	RH side of LH footwell		04-3
X531	(1 PIN, NATURAL)	center console	22-3	
X532	(2 PINS, BLACK)	center console	22-3	
X537	(3 PINS, BLACK)	REAR LEFT MID-HIGH RANGE SPEAKER (ROADSTER)	10-1	01-1

03/00

7000.0-18

1999



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X537	(3 PINS, BLACK)	in roof panel REAR LEFT MID-HIGH RANGE SPEAKER (COUPE)		01-1
X538	(3 PINS, BLACK)	REAR RIGHT MID-HIGH RANGE SPEAKER (ROADSTER)	07-3	01-1
X538	(3 PINS, BLACK)	in roof panel REAR RIGHT MID-HIGH RANGE SPEAKER (COUPE)		01-1
X539	(2 PINS, BLACK)	center console (radio and console removed)	36-1	
X605	(12 PINS, BLACK)	in RH forward side of luggage compartment (ROADSTER)	27-3	01-5
X605	(12 PINS, BLACK)	in RH forward side of luggage compartment (COUPE)	46-1	01-5
X606	(26 PINS, BLACK)	in RH forward side of luggage compartment (ROADSTER)	27-3	00-3
X606	(26 PINS, BLACK)	in RH forward side of luggage compartment (COUPE)	46-1	00-3
X623	(4 PINS, BLACK)	in driver's door	17-2	07-1
X624	(4 PINS, BLACK)	in passenger's door	18-3	07-1
X625	(6 PINS, BLACK)	in driver's door	17-2	08-2
X641	(6 PINS, BLACK)	in passenger's door	18-2	07-4
X643	(6 PINS, WHITE)	in roof panel		04-6
X651	(6 PINS, VIOLET)	center console	23-1	04-5
X658	(6 PINS, VIOLET)	center console	23-1	04-5
X660	(6 PINS, BLACK)	LH front door behind door panel		07-4
X693	(1 PIN, NATURAL)	TIRE INFLATION SYSTEM		
X700	(1 PIN, —)	behind RH footwell speaker grille	23-3	
X701	(1 PIN, —)	behind LH footwell speaker grille		
X709	(2 PINS, BLACK)	underside of luggage compartment lid, near license plate		
X710	(2 PINS, BLACK)	underside of luggage compartment lid, near license plate		
X711	(2 PINS, BLACK)	in luggage compartment lid	28-1	



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X712	(1 PIN, BLACK)	in luggage compartment (ROADSTER)		
X712	(4 PINS, NATURAL)	in roof panel (COUPE)	37-3	
X713	(2 PINS, BLACK)	under RH rear of car	15-3	
X726	(2 PINS, NATURAL)	under LH front seat	25-1	
X726	(2 PINS, NATURAL)	under LH front seat (WITH SPORT SEAT)	10-3	
X728	(2 PINS, BLACK)	under LH front seat	25-1	
X728	(2 PINS, BLACK)	under LH front seat (WITH SPORT SEAT)	10-3	
X733	(4 PINS, BLACK)	under LH front seat	25-2	03-1
X733	(4 PINS, BLACK)	under LH front seat (WITH SPORT SEAT)	10-3	03-1
X734	(2 PINS, NATURAL)	under RH front seat	24-1	
X734	(2 PINS, NATURAL)	under RH front seat (WITH SPORT SEAT)	11-1	
X737	(2 PINS, BLACK)	under RH front seat	24-1	
X737	(2 PINS, BLACK)	under RH front seat (WITH SPORT SEAT)	11-2	
X740	(4 PINS, BLACK)	under RH front seat	24-2	03-1
X740	(4 PINS, BLACK)	under RH front seat (WITH SPORT SEAT)	11-2	
X742	(2 PINS, YELLOW)	in passenger's door		
X744	(4 PINS, GRAY)	in passenger's door	18-3	05-4
X746	(3 PINS, YELLOW)	in passenger's door	18-3	10-5
X747	(2 PINS, YELLOW)	in driver's door	17-1	
X749	(2 PINS, GRAY)	in driver's door	17-2	
X753	(3 PINS, YELLOW)	in driver's door	17-2	10-5
X760	(3 PINS, BLACK)	RIGHT REAR HIGH RANGE SPEAKER		01-1

03/00

7000.0-20

1999



Z3

# COMPONENT LOCATION CHART

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X761	(1 PIN, BLACK)	RIGHT REAR SPEAKER		
X762	(3 PINS, BLACK)	LEFT REAR HIGH RANGE SPEAKER		01-1
X763	(1 PIN, BLACK)	LEFT REAR SPEAKER		
X766	(2 PINS, BLACK)	LH front of vehicle		
X767	(2 PINS, BLACK)	RH front of vehicle		
X768	(2 PINS, BLACK)	on front LH wheel well		
X769	(2 PINS, BLACK)	RH front of wheel well	13-2	
X770	(2 PINS, YELLOW)	in RH front bumper	11-3	
X771	(2 PINS, NATURAL)	RH side of LH footwell	21-2	
X778	(4 PINS, BLACK)	under LH front seat		07-1
X778	(4 PINS, BLACK)	under LH front seat (WITH SPORT SEAT)	10-2	07-1
X782	(3 PINS, ORANGE)	behind glove box above	00-2	07-5
X783	(3 PINS, ORANGE)	underside of steering column	36-3	07-5
X898	(8 PINS, BLACK)	under rear storage compartment (ROADSTER)	26-2	08-3
X898	(4 PINS, NATURAL)	center console (M COUPE)		07-1
X898	(8 PINS, BLACK)	center console (Z3 COUPE)		08-3
X904	(4 PINS, BLACK)	RH side of LH footwell		03-1
X905	(7 PINS, BLACK)	center of dash	21-3	09-3
X1014	(1 PIN, BLACK)	center console	22-3	
X1098	(3 PINS, BLACK)	LH side of dash	20-3	01-1
X1116	GROUND	in LH side of luggage compartment	06-3	
X1148	(2 PINS, BLACK)	on front RH wheel well		

03/00

7000.0-21

1999



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X1155	(2 PINS, BLACK)	center console		
X1166	GROUND	behind glove box	04-1	
X1170	(25 PINS, GRAY)	front LH side of engine compartment	39-3	09-4
X1175	(83 PINS, NATURAL)	behind glove box	00-2	08-4
X1178	(2 PINS, WHITE)	center console	27-2	
X1193	(3 PINS, BLACK)	center console	22-1	01-1
X1213	(2 PINS, BLACK)	center console		
X1255	(4 PINS, BLACK)	TIRE INFLATION SYSTEM		03-1
X1265	(1 PIN, NATURAL)	HARD TOP CONNECTOR 1		
X1266	(1 PIN, NATURAL)	HARD TOP CONNECTOR 1		
X1376	(9 PINS, BLACK)	front Power Distribution Box rear LH side of engine compartment		03-4
X1380	(1 PIN, —)	behind RH footwell speaker grille	23-3	
X1381	(1 PIN, —)	behind LH footwell speaker grille		
X1439	(2 PINS, BLACK)	center console		
X1441	GROUND	below center console	03-3	
X1517	(6 PINS, BLACK)	RH side of LH footwell	21-2	09-2
X1588	(2 PINS, BLACK)	below LH side of dash	19-1	
X1715	(4 PINS, NATURAL)	in rear left speaker box (ROADSTER)	26-3	03-1
X1715	(4 PINS, NATURAL)	in RH forward side of luggage compartment (COUPE)	46-1	03-1
X1764	(3 PINS, BLACK)	RH side of steering column	38-3	01-1
X1775	(3 PINS, NATURAL)	in lift gate		10-5
X1805	(15 PINS, NATURAL)	LH side of steering column	38-3	05-1



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X1883	(2 PINS, YELLOW)	LH front door	16-2	
X1884	(2 PINS, YELLOW)	RH front door	35-2	
X1885	(3 PINS, BLACK)	under LH front seat	35-3	10-1
X1886	(3 PINS, BLACK)	under RH front seat	35-1	10-1
X1976	CABLE SOCKET B+	below LH side of dash		
X1977	CABLE SOCKET B+	below LH side of dash		
X1978	CABLE SOCKET B+	below LH side of dash		
X1979	CABLE SOCKET B+	below LH side of dash		
X1980	CABLE SOCKET B+	below LH side of dash		
X1981	CABLE SOCKET B+	below LH side of dash		
X1982	CABLE SOCKET B+	below LH side of dash		
X2213	(15 PINS, NATURAL)	LH side of engine compartment	08-1	05-1
X2227	(4 PINS, BLUE)	center console		07-1
X3040	(2 PINS, BLACK)	TIRE INFLATION SYSTEM		
X3158	(1 PIN, NATURAL)	TIRE INFLATION SYSTEM		
X5115	(2 PINS, BLACK)	center console (radio and console removed)	36-1	
X6000	(88 PINS, NATURAL)	rear RH side of engine compartment in E-Box	00-1	00-1
X6002	(20 PINS, BLACK)	rear RH side of engine compartment (M VERSIONS)		04-1
X6002	(20 PINS, BLACK)	rear LH side of engine compartment (Z3 VERSIONS)		04-1
X6011	(2 PINS, BLUE)	rear RH side of engine compartment in E-Box	40-3	
X6021	(4 PINS, BLACK)	rear RH side of engine compartment in E-Box	40-3	03-1
X6031	(12 PINS, BLACK)	rear LH side of engine compartment (M VERSIONS)	08-1	01-6



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X6031	(18 PINS, BLACK) . . . . .	rear RH side of engine compartment in E-Box (Z3 VERSIONS) . . . . .	40-3	07-3
X6053	(4 PINS, NATURAL) . . . . .	rear RH side of engine compartment in E-Box . . . . .	41-2	03-1
X6054	(2 PINS, NATURAL) . . . . .	rear RH side of engine compartment in E-Box . . . . .	41-1	
X6101	(2 PINS, BLACK) . . . . .	top center of engine		
X6102	(2 PINS, BLACK) . . . . .	top center of engine		
X6103	(2 PINS, BLACK) . . . . .	top center of engine		
X6104	(2 PINS, BLACK) . . . . .	top center of engine		
X6105	(2 PINS, BLACK) . . . . .	top center of engine		
X6106	(2 PINS, BLACK) . . . . .	top center of engine		
X6120	(2 PINS, BLACK) . . . . .	LH side of engine compartment (Z3 VERSIONS) . . . . .	44-1	
X6120	(2 PINS, BLACK) . . . . .	LH side of engine compartment (M VERSIONS) . . . . .	34-2	
X6130	(3 PINS, BLACK) . . . . .	front of engine . . . . .	43-1	10-2
X6133	(2 PINS, BLACK) . . . . .	rear RH side of engine compartment . . . . .	31-2	
X6139	(3 PINS, BLACK) . . . . .	under LH center of car . . . . .	47-1	05-5
X6150	(10 PINS, BLACK) . . . . .	rear RH side of engine compartment . . . . .	31-1	05-2
X6151	(3 PINS, BLACK) . . . . .	top RH side of engine . . . . .		09-5
X6152	(3 PINS, BLACK) . . . . .	top RH side of engine . . . . .		09-5
X6153	(3 PINS, BLACK) . . . . .	top RH side of engine . . . . .		09-5
X6154	(3 PINS, BLACK) . . . . .	top RH side of engine . . . . .		09-5
X6155	(3 PINS, BLACK) . . . . .	top RH side of engine . . . . .		09-5
X6156	(3 PINS, BLACK) . . . . .	top RH side of engine . . . . .		09-5
X6163	(2 PINS, BLACK) . . . . .	LH side of engine compartment (M VERSIONS) . . . . .	31-3	





# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X6163	(2 PINS, BLACK)	LH side of engine compartment (Z3 VERSIONS)	44-2	
X6167	(2 PINS, BLACK)	LH side of engine compartment	39-3	
X6203	(3 PINS, BLACK)	rear LH side of engine compartment (M VERSIONS)	33-1	10-2
X6203	(3 PINS, BLACK)	rear LH side of engine compartment (Z3 VERSIONS)	41-3	06-4
X6204	(3 PINS, BLACK)	front of engine below intake manifold	33-1	10-2
X6205	(2 PINS, BLACK)	top center of engine (Z3 VERSIONS)	42-2	
X6205	(2 PINS, BLACK)	front LH side of engine compartment (M VERSIONS)	34-1	
X6207	(4 PINS, BLACK)	LH side of engine compartment (M VERSIONS)	33-3	10-4
X6207	(3 PINS, BLACK)	LH side of engine compartment (Z3 VERSIONS)		10-2
X6214	(3 PINS, BLACK)	front of engine	44-3	10-2
X6224	(3 PINS, BLACK)	front of engine	47-2	06-4
X6231	(2 PINS, BLACK)	LH side of engine compartment (Z3 VERSIONS)	44-1	
X6231	(2 PINS, BLACK)	front of engine (M VERSIONS)	32-2	
X6236	(2 PINS, BLACK)	LH side of engine	40-1	
X6238	(2 PINS, BLACK)	RH side of oil filter (M VERSIONS)	32-2	
X6238	(2 PINS, BLACK)	RH side of oil filter (Z3 VERSIONS)	44-1	
X6240	(4 PINS, BLACK)	LH side of engine near starter (Z3 VERSIONS)	42-1	06-1
X6240	(4 PINS, BLACK)	LH side of engine (M VERSIONS)	33-1	06-1
X6247	(2 PINS, BLACK)	under LH rear of car	12-1	
X6252	(3 PINS, BLACK)	front of engine	33-3	10-2
X6254	(3 PINS, BLACK)	LH side of engine	47-1	06-4
X6256	(4 PINS, BLACK)	rear of engine compartment		10-3

03/00

7000.0-25

1999



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X6275	(2 PINS, BLACK)	top center of engine (M VERSIONS)	31-3	
X6275	(2 PINS, BLACK)	top center of engine (Z3 VERSIONS)	42-2	
X6276	(2 PINS, BLACK)	front of engine	47-2	
X6279	(2 PINS, BLACK)	front of engine	39-1	
X6300	(9 PINS, BLACK)	rear RH side of engine compartment in E-Box		03-4
X6301	(9 PINS, BLACK)	below LH side of dash		03-4
X6304	(9 PINS, BLACK)	rear RH side of engine compartment in E-Box		03-4
X6326	(9 PINS, BLACK)	rear RH side of engine compartment in E-Box		03-4
X6385	(10 PINS, BLACK)	top LH side of engine	39-2	05-2
X6394	(9 PINS, BLACK)	TIRE INFLATION SYSTEM		03-4
X6430	CABLE SOCKET B+ JUMP START JUNCTION POINT	rear RH side of engine compartment		
X6431	CABLE SOCKET B+ JUMP START JUNCTION POINT	rear RH side of engine compartment		
X6432	CABLE SOCKET B+ JUMP START JUNCTION POINT	rear RH side of engine compartment		
X6433	CABLE SOCKET B+ JUMP START JUNCTION POINT	rear RH side of engine compartment		
X6437	CABLE SOCKET B+ JUMP START JUNCTION POINT	rear RH side of engine compartment		
X6454	GROUND	rear RH side of engine compartment (Z3 VERSIONS)		
X6454	GROUND	rear RH side of engine compartment (M VERSIONS)	04-2	
X6455	GROUND	rear RH side of engine compartment (M VERSIONS)	04-2	
X6455	GROUND	rear RH side of engine compartment (Z3 VERSIONS)		



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X6456	GROUND	rear RH side of engine compartment	06-1	
X6500	(6 PINS, BLACK)	under rear storage compartment	07-1	06-5
X6501	(3 PINS, BLACK)	under rear storage compartment	07-1	02-5
X6506	(2 PINS, BLACK)	in E-Box	41-1	
X6509	CABLE SOCKET ALTERNATOR B+	front LH side of engine compartment	02-3	
X6510	CABLE SOCKET STARTER, TERMINAL 50	rear LH side of engine compartment at starter	02-2	
X6511	CABLE SOCKET STARTER, TERMINAL 30h	rear LH side of engine compartment at starter		
X6512	CABLE SOCKET STARTER, TERMINAL 30	rear LH side of engine compartment at starter	02-2	
X6524	(3 PINS, BLACK)	front LH side of engine compartment	43-2	10-2
X6550	(2 PINS, BLACK)	under LH center of car	34-3	
X7509	CABLE SOCKET ALTERNATOR, TERMINAL D+	front LH side of engine compartment	02-3	
X8500	(88 PINS, NATURAL)	rear RH side of engine compartment in E-Box	42-3	00-1
X8503	(6 PINS, VIOLET)	center console	22-1	04-5
X8505	(16 PINS, BLACK)	on RH side of transmission	15-1	11-4
X8507	(1 PIN, BLACK)	behind gas pedal	19-3	
X8511	(2 PINS, BLACK)	LH side of transmission	14-2	
X8516	(2 PINS, BLACK)	LH side of transmission		
X8533	(2 PINS, BLACK)	LH side of engine compartment	08-1	
X9023	(3 PINS, BLACK)	in lift gate	46-2	01-1
X9170	CABLE SOCKET GROUND	LH side of engine compartment		



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X9336	(4 PINS, NATURAL)	in upper RH A-pillar		03-1
X9633	GROUND	behind LH footwell speaker grille	03-2	
X9990	(3 PINS, BLACK)	underside of LH front seat		11-1
X9991	(10 PINS, BLACK)	underside of LH front seat	10-2	11-5
X9994	(3 PINS, BLACK)	underside of RH front seat		11-1
X9995	(10 PINS, BLACK)	underside of RH front seat	11-1	11-5
X9997	(2 PINS, ORANGE)	behind steering wheel		
X10010	GROUND	behind glove box	04-1	
X10013	(2 PINS, NATURAL)	behind steering wheel		
X10054	(8 PINS, BLACK)	RH side of LH footwell	21-1	02-1
X10059	(3 PINS, BLACK)	center console		01-2
X10065	(2 PINS, WHITE)	LH footwell	14-1	
X10088	(2 PINS, BLACK)	front RH side of engine compartment	30-3	
X10170	(3 PINS, NATURAL)	near steering column	38-3	01-1
X10182	(18 PINS, BLACK)	behind glove box		07-3
X10214	(3 PINS, VIOLET)	under LH front seat	10-2	10-5
X10215	(3 PINS, VIOLET)	under RH front seat	11-1	10-5
X10216	(3 PINS, YELLOW)	in LH front seat belt buckle	36-2	07-5
X10217	(3 PINS, YELLOW)	in RH front seat belt buckle	36-2	07-5
X10218	(3 PINS, NATURAL)	under RH front seat	24-2	01-1
X10218	(3 PINS, NATURAL)	under RH front seat (WITH SPORT SEAT)	11-2	01-1
X10239	(3 PINS, BLACK)	front of engine	33-3	10-2

03/00

7000.0-28

1999



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X10241	(3 PINS, BLACK)	front RH side of engine compartment	30-2	05-5
X10244	(1 PIN, BLACK)	behind glove box	24-3	
X10245	(12 PINS, BLACK)	center console	00-3	01-3
X10246	(12 PINS, BLACK)	in rear left speaker box	26-3	01-3
X10262	(9 PINS, BLACK)	below LH side of dash		03-4
X10263	(6 PINS, BLACK)	center console		04-5
X10266	(6 PINS, BLACK)	in RH forward side of luggage compartment (ROADSTER)	27-3	04-5
X10266	(6 PINS, BLACK)	in RH forward side of luggage compartment (COUPE)	46-1	04-5
X10285	(2 PINS, BLACK)	in lift gate	46-3	
X10299	(4 PINS, BLACK)	RH rear wheel well	17-3	03-1
X10422	CABLE SOCKET B+	below LH side of dash		
X11104	(1 PIN, —)	near interior rear view mirror	28-2	
X11105	(1 PIN, —)	near interior rear view mirror	28-2	
X11106	(1 PIN, —)	near interior rear view mirror	28-2	
X11209	(4 PINS, BLACK)	near RH rear wheel well	17-3	03-1
X11277	(2 PINS, BLACK)	in lift gate		
X11287	CONNECTORS SOLDERED UP	center of dash		
X11402	(3 PINS, VIOLET)	in luggage compartment lid		01-1
X11403	(3 PINS, VIOLET)	in luggage compartment lid		01-1
X13004	GROUND	behind glove box	04-1	
X13006	GROUND	in LH side of luggage compartment	05-3	
X13016	GROUND	in LH side of luggage compartment	05-2	



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X13017	(2 PINS, BLUE)	hard top		
X13025	(12 PINS, BLACK)	behind glove box	24-3	02-4
X13032	GROUND	under rear storage compartment	06-2	
X13045	(6 PINS, NATURAL)	center console		04-5
X13057	(2 PINS, BLACK)	in lift gate	37-2	
X13146	(8 PINS, BLACK)	in LH side of luggage compartment	25-3	02-1
X13233	(2 PINS, BLACK)	center of dash behind center console		
X13252	(15 PINS, BLACK)	behind glove box	38-2	05-1
X13253	(26 PINS, VIOLET)	behind glove box	38-2	00-3
X13254	(26 PINS, GREEN)	behind glove box	38-2	00-3
X13268	(3 PINS, BLACK)	in lift gate	37-2	01-1
X13287	(1 PIN, WHITE)	center of dash behind center console		
X18080	(1 PIN, BLACK)	in LH side of luggage compartment		
X18126	(17 PINS, BLACK)	center console behind radio		02-2
X18170	GROUND	below center console	03-1	
X18180	(3 PINS, BLACK)	in RH rear side of luggage compartment		01-1
X18184	(1 PIN, BLACK)	RIGHT REAR SPEAKER		
X18189	(1 PIN, BLACK)	LEFT REAR SPEAKER		
X18190	(3 PINS, BLACK)	in driver's door	17-2	10-5
X18196	(10 PINS, BLACK)	LH A-pillar	16-3	02-3
X18198	(10 PINS, BLACK)	RH A-pillar	18-1	02-3
X18279	(2 PINS, GRAY)	in driver's door		

03/00

7000.0-30

1999



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X18280	(2 PINS, GRAY)	in passenger's door		
X18333	(2 PINS, BLACK)	on instrument cluster		
X18349	(8 PINS, BLACK)	center console	00-3	08-3
X18350	(6 PINS, BLACK)	RH side of LH footwell	21-2	03-6
X18363	(9 PINS, BLACK)	in LH side of luggage compartment		03-4
X18364	(9 PINS, BLACK)	in LH side of luggage compartment		03-4
X18365	(3 PINS, BLACK)	rear RH side of engine compartment in E-Box	41-2	04-3
X18516	(3 PINS, BLACK)	in passenger's door	18-3	10-5
X18518	(4 PINS, BLACK)	under RH front seat	11-1	07-1
X18520	(10 PINS, BLACK)	center console RADIO		
X18521	(10 PINS, BLACK)	RH side of luggage compartment CD CHANGER		
X18766	(9 PINS, BLACK)	front Power Distribution Box rear LH side of engine compartment		03-4
X18767	(9 PINS, BLACK)	front Power Distribution Box rear LH side of engine compartment		03-4
X18983	(2 PINS, BLACK)	center of dash		
X18984	(2 PINS, BLACK)	center of dash	21-3	
X18994	(3 PINS, VIOLET)	LH footwell	20-1	01-1
X19007	(12 PINS, BLACK)	behind glove box	38-1	01-3
X19018	(2 PINS, BLACK)	behind glove box	23-2	
X19022	(3 PINS, BLACK)	under radiator	13-1	05-5
X19023	(2 PINS, BLACK)	below LH side of dash		
X19245	(8 PINS, BLACK)	center console		02-1
X19527	(16 PINS, BLACK)	center console right	28-3	08-1

03/00

7000.0-31

1999



# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
X19528	(3 PINS, NATURAL)	under rear storage compartment	07-2	02-5
X19565	(6 PINS, NATURAL)	center console		11-3
X21111	(3 PINS, NATURAL)	center console		01-2
X21112	(2 PINS, BLACK)	center console		
X21113	(2 PINS, BLACK)	center console		
X21114	(2 PINS, BLACK)	center console		
X23146	(2 PINS, BLACK)	in LH side of luggage compartment	25-3	
X60001	(9 PINS, BLACK)	rear RH side of engine compartment in E-Box	40-2	01-4
X60002	(24 PINS, BLACK)	rear RH side of engine compartment in E-Box	40-2	04-2
X60003	(52 PINS, BLACK)	rear RH side of engine compartment in E-Box	40-2	03-2
X60004	(40 PINS, BLACK)	rear RH side of engine compartment in E-Box	40-2	09-1
X60005	(9 PINS, BLACK)	rear RH side of engine compartment in E-Box	40-2	01-4
X62101	(4 PINS, BLACK)	on catalytic converter	43-3	06-1
X62102	(4 PINS, BLACK)	on catalytic converter	42-2	06-1
X62201	(4 PINS, BLACK)	on catalytic converter	43-3	06-1
X62202	(4 PINS, BLACK)	on catalytic converter	42-2	06-1
X64101	(2 PINS, BLACK)	rear RH side of engine compartment in E-Box	41-2	
X64102	(2 PINS, BLACK)	rear RH side of engine compartment in E-Box	41-2	
X64192	(2 PINS, BLACK)	rear RH side of engine compartment in E-Box		
X89977	(2 PINS, BLACK)	rear RH side of engine compartment in E-Box	40-3	
X91009	(2 PINS, BLACK)	under RH front seat	11-2	
Y1w	ABS HYDRAULIC UNIT	rear LH side of engine compartment	08-1	





# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
Y2 . . . .	AIR CONDITIONING COMPRESSOR . . . .	front RH side of engine compartment		
Y4z . . .	WATER VALVE . . . . .	rear LH side of engine compartment . . . . .	14-3	
Y5 . . . .	DRIVER'S SIDE MIRROR . . . . .	in upper LH front door		
Y6 . . . .	PASSENGER'S SIDE MIRROR . . . . .	in upper RH front door		
Y19 . .	SHIFT-LOCK . . . . .	center console . . . . .	27-2	
Y6101	CYL. 1 FUEL INJECTION VALVE . . . . .	on cylinder head		
Y6102	CYL. 2 FUEL INJECTION VALVE . . . . .	on cylinder head		
Y6103	CYL. 3 FUEL INJECTION VALVE . . . . .	on cylinder head		
Y6104	CYL. 4 FUEL INJECTION VALVE . . . . .	on cylinder head		
Y6105	CYL. 5 FUEL INJECTION VALVE . . . . .	on cylinder head		
Y6106	CYL. 6 FUEL INJECTION VALVE . . . . .	on cylinder head		
Y6120	EVAPORATIVE EMISSION VALVE . . . . .	LH side of engine compartment (Z3 VERSIONS) . . . . .	44-1	
Y6120	EVAPORATIVE EMISSION VALVE . . . . .	LH side of engine compartment (M VERSIONS) . . . . .	34-2	
Y6130	IDLE SPEED CONTROL VALVE . . . . .	front of engine . . . . .	43-1	
Y6133	AIR PUMP . . . . .	rear RH side of engine compartment . . . . .	31-2	
Y6139	LEAKAGE DIAGNOSIS PUMP . . . . .	under LH center of car . . . . .	47-1	
Y6163	SECONDARY AIR PUMP VALVE . . . . .	LH side of engine compartment (M VERSIONS) . . . . .	33-2	
Y6163	SECONDARY AIR PUMP VALVE . . . . .	LH side of engine compartment (Z3 VERSIONS) . . . . .	44-2	
Y6167	VALVE, INDIVIDUAL CONTROL INTAKE SYSTEM . . . . .	LH side of engine compartment . . . . .	39-3	
Y6275	VARIABLE CAMSHAFT CONTROL VALVE 1 . . . . .	on cylinder head . . . . .	31-3	





# COMPONENT LOCATION CHART

Z3

COMP.	DESCRIPTION	LOCATION	7100.0	8500.0
Y6275z	VARIABLE CAMSHAFT CONTROL VALVE 1 (INLET) .....	on cylinder head .....	42-2	
Y6276	VARIABLE CAMSHAFT CONTROL VALVE 2 (OUTLET) .....	on cylinder head .....	47-2	
Y6550	SOLENOID VALVE ("RUNNING LOSSES")	under LH center of car .....	34-3	
Y8521	TRANSMISSION VALVE UNIT .....	on RH side of transmission .....	15-1	

## 7100.0 COMPONENT LOCATION VIEWS

### ELECTRICAL CONTROL MODULE LOCATIONS

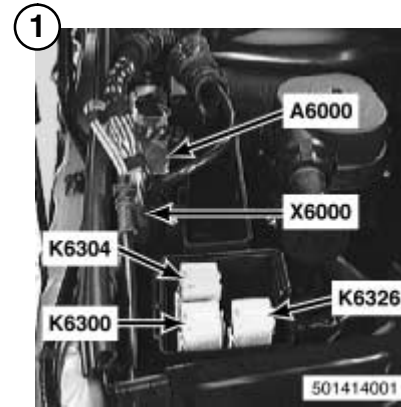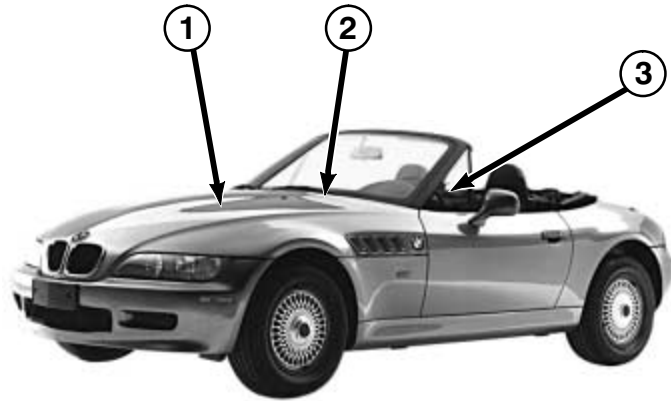

A6000  
ENGINE CONTROL  
MODULE (DME)


K6326  
UNLOADER RELAY,  
TERMINAL 15

X6000

X6000  
ENGINE CONTROL  
MODULE RELAY

K6304  
SECONDARY AIR  
PUMP RELAY

501414001

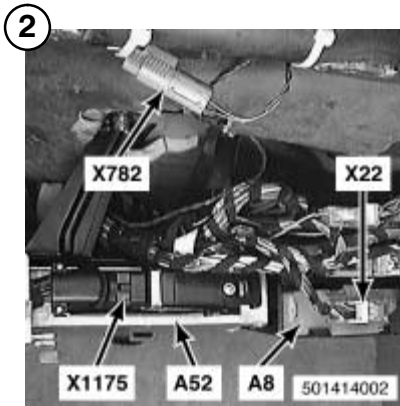

A8  
CRUISE CONTROL  
MODULE  
(TEMPOMAT)


A52  
SLIP CONTROL  
MODULE  
(ABS/ASC)

X22

X782

X1175

501414002

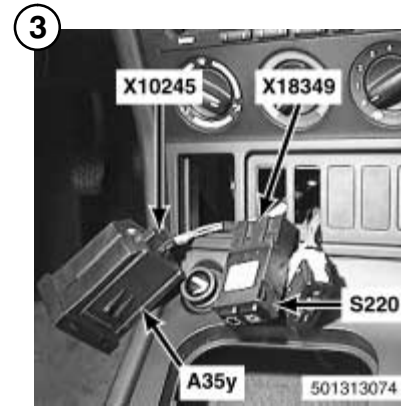

A35y  
BOARD  
COMPUTER  
(BC - LOW)

S220  
AIR CONDITIONING/  
RECIRCULATING  
SWITCH ASSEMBLY

X10245




X18349

501313074



# COMPONENT LOCATION VIEWS

 Z3

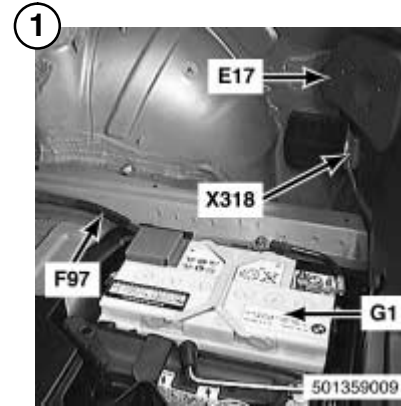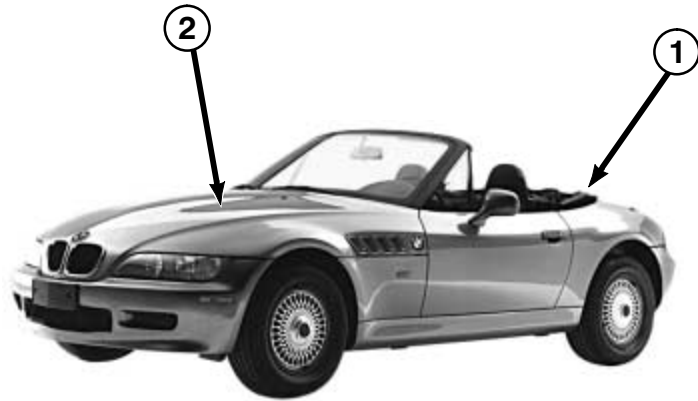

E17  
RIGHT REAR LIGHT  
ASSEMBLY  
  
F97  
FUSIBLE LINK  
  
G1  
BATTERY

X318






G6430  
B+ JUMP START  
JUNCTION POINT




# COMPONENT LOCATION VIEWS

 Z3

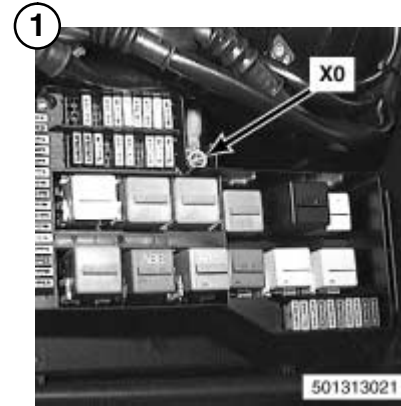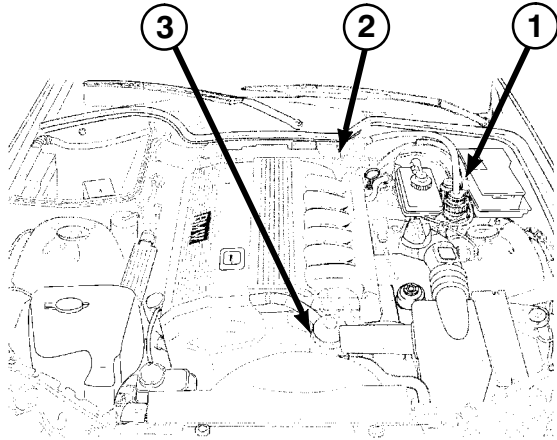


X0  
B+ JUNCTION  
POINT

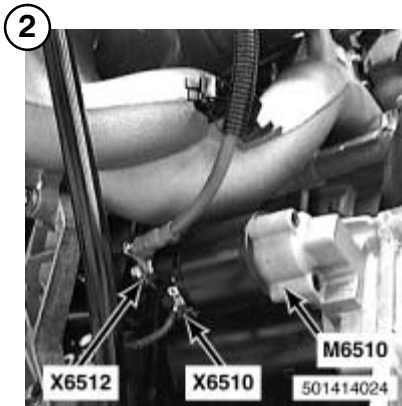

M6510  
STARTER

X6510  
X6512

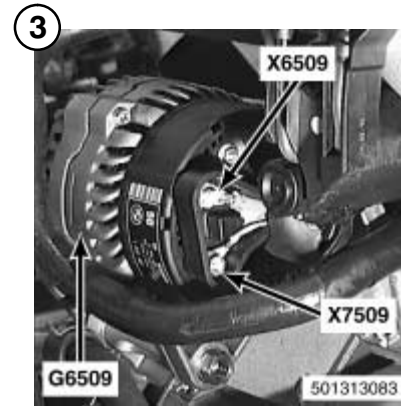




G6509  
GENERATOR

X6509  
X7509




# COMPONENT LOCATION VIEWS

 Z3

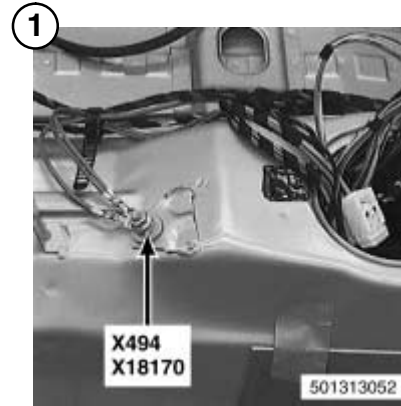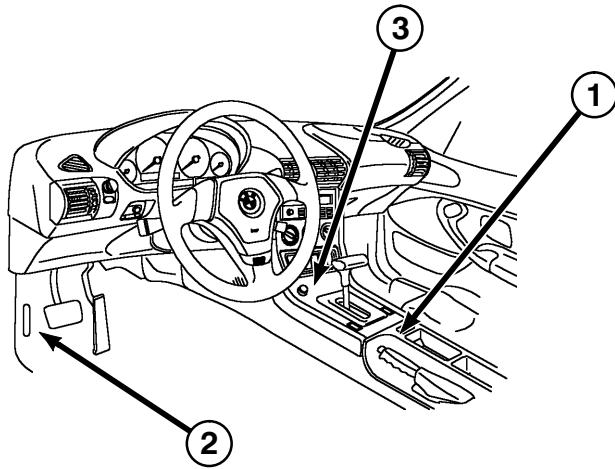

X494  
GROUND

X18170  
GROUND

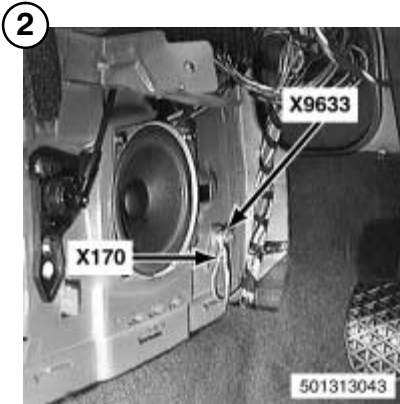

X170  
GROUND

X9633  
GROUND






X1441  
GROUND



# COMPONENT LOCATION VIEWS

 
Z3

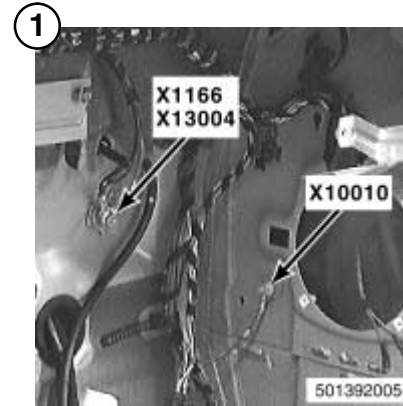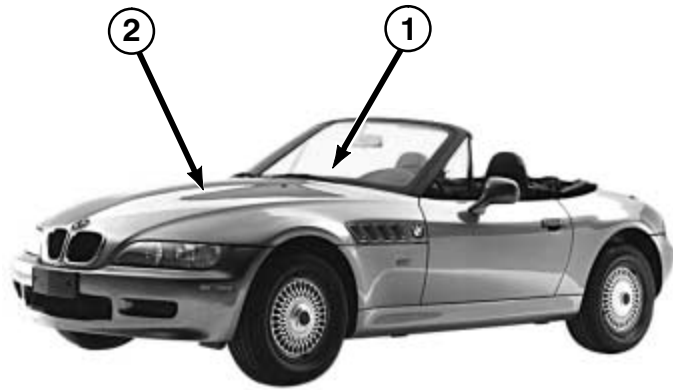

X1166  
GROUND

X10010  
GROUND

X13004  
GROUND

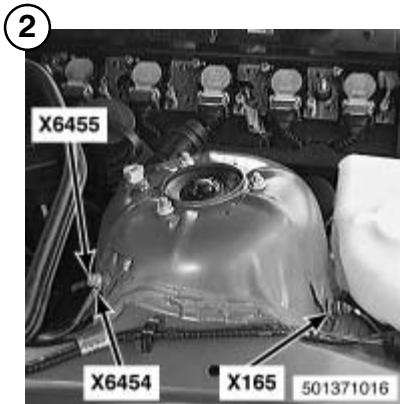

X165  
GROUND




X6454  
GROUND

X6455  
GROUND



Z3

# COMPONENT LOCATION VIEWS

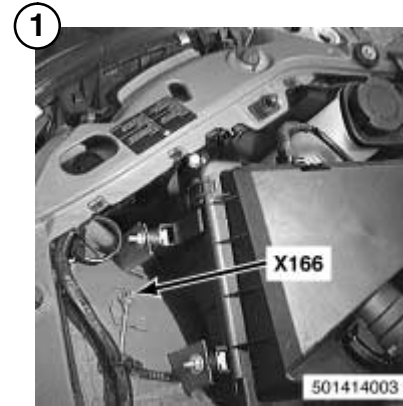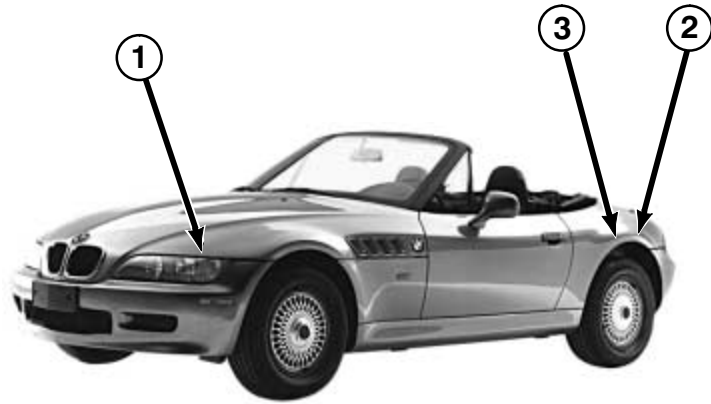 

X166  
GROUND



X13016  
GROUND



X13006  
GROUND








3

Z3

# COMPONENT LOCATION VIEWS

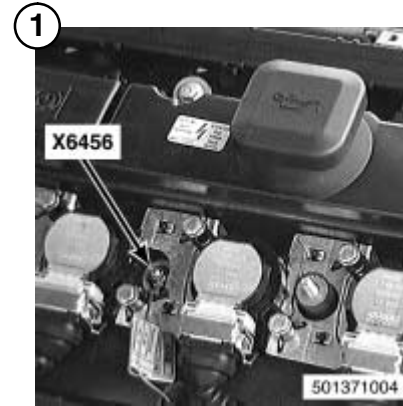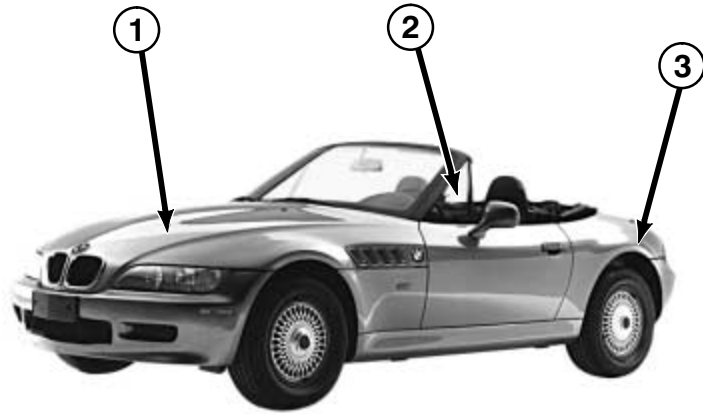 

X6456  
GROUND





X13032  
GROUND




X1116  
GROUND

# COMPONENT LOCATION VIEWS

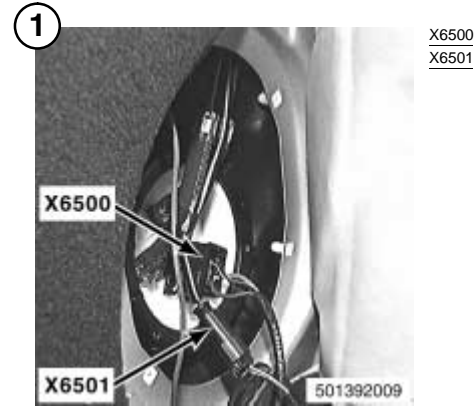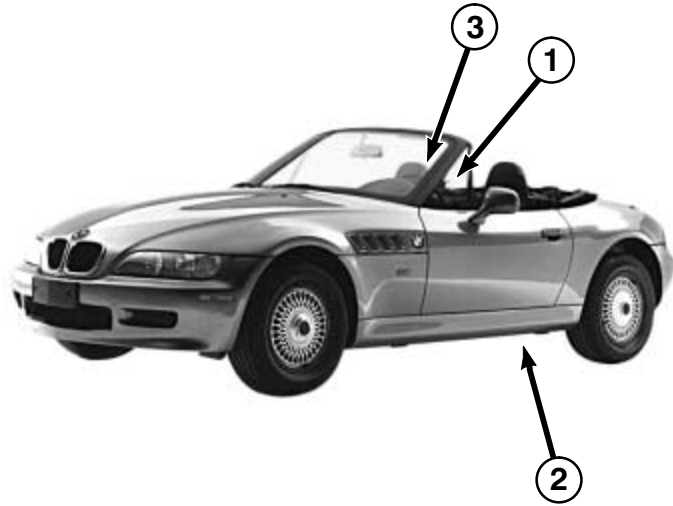


X6500  
X6501

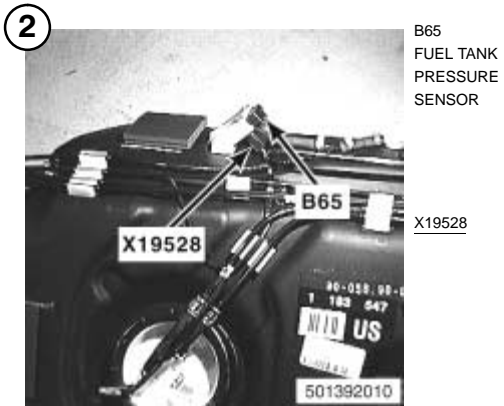

B65  
FUEL TANK  
PRESSURE  
SENSOR



X19528

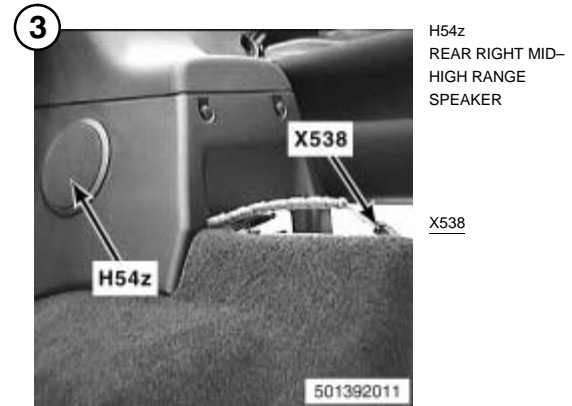

H54z  
REAR RIGHT MID-  
HIGH RANGE  
SPEAKER

X538


# COMPONENT LOCATION VIEWS

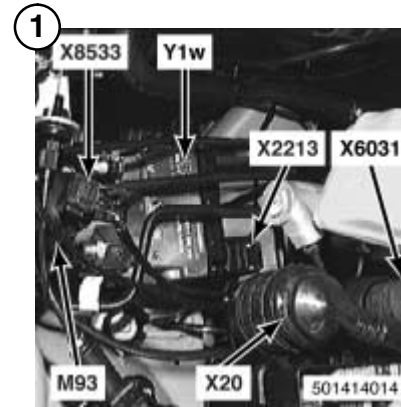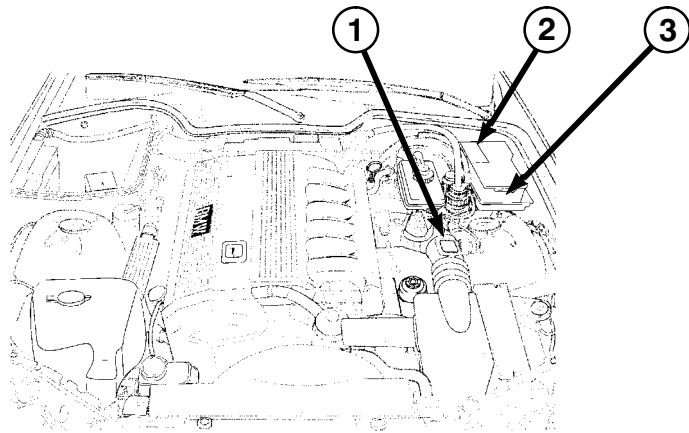


M93  
AUXILIARY  
THROTTLE  
POSITION MOTOR  
(ADS)

Y1w  
ABS HYDRAULIC  
UNIT

X20  
X2213  
X6031  
X8533

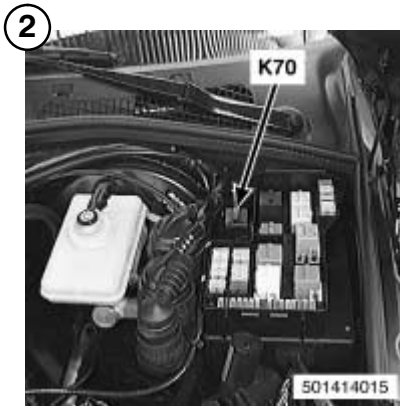



K70  
CENTRAL LOCKING  
LUGGAGE  
COMPARTMENT  
LID MOTOR RELAY  
(ZV)

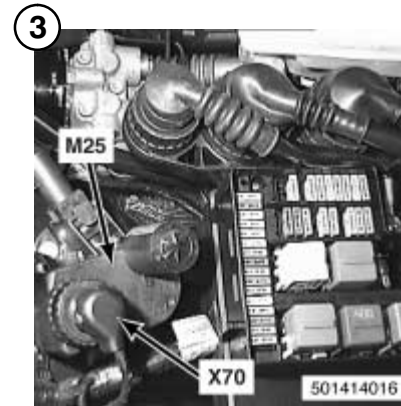

M25  
CRUISE CONTROL  
ACTUATOR  
(TEMPOMAT)

X70

**COMPONENT LOCATION VIEWS**

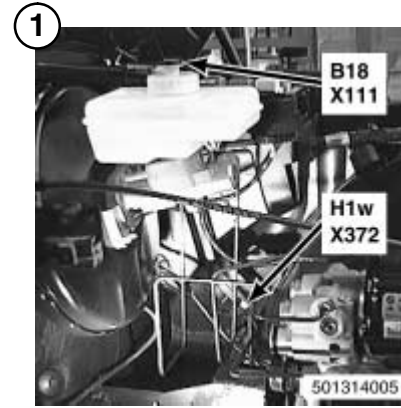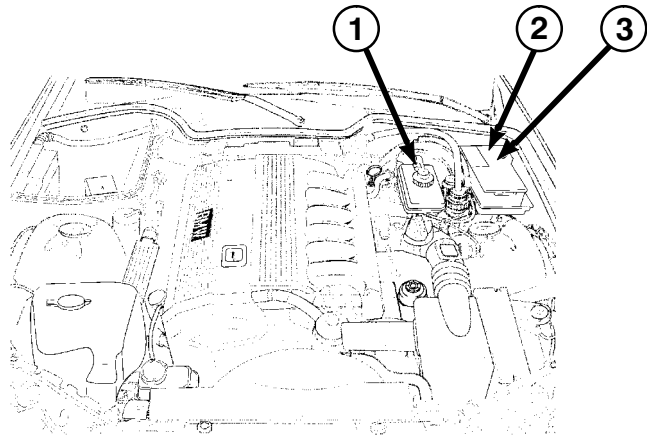


**1**

B18  
BRAKE FLUID  
LEVEL SWITCH

H1w  
ANTI-THEFT HORN  
(ALPINE)

X111  
X372

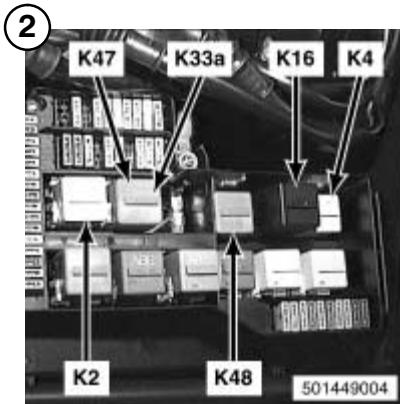

**2**

K2  
HORN RELAY

K4  
BLOWER RELAY


K16  
HAZARD FLASHER  
RELAY

K33a  
AIR CONDITIONING  
RELAY, MOTRONIC

K47  
FRONT FOG LIGHT  
RELAY

K48  
LOW BEAM LIGHT  
RELAY

501449004

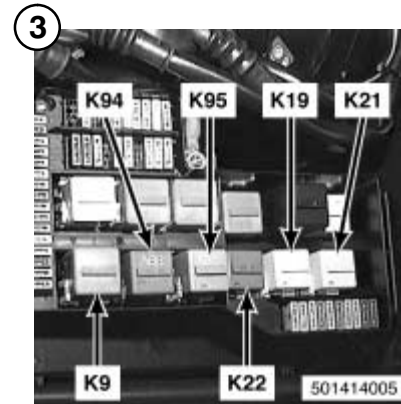

**3**

K9  
UNLOADER RELAY,  
TERMINAL 15

K19  
COMPRESSOR  
CONTROL RELAY

K21  
NORMAL SPEED  
RELAY



K94  
ENGINE CONTROL  
RELAY (ABS/ASC)

K95  
VALVE RELAY  
(ABS/ASC)

K22  
HIGH SPEED  
RELAY

501414005


COMPONENT LOCATION VIEWS

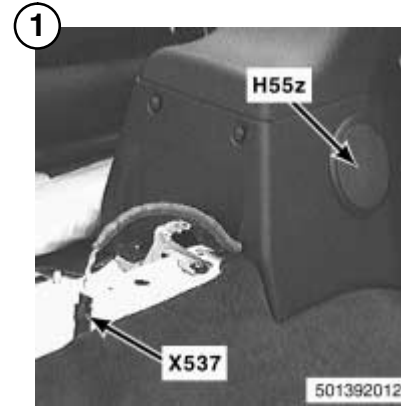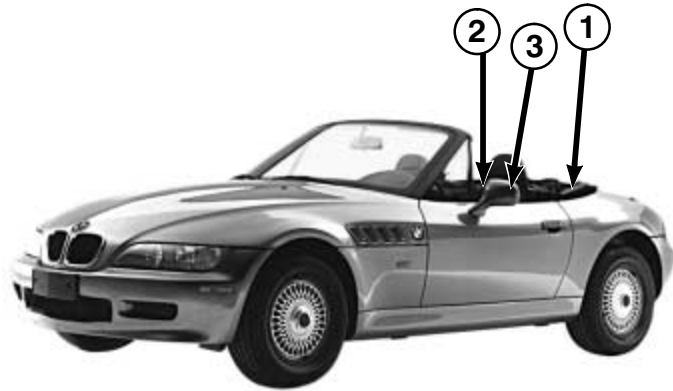

H55z  
REAR LEFT MID-  
HIGH RANGE  
SPEAKER

X537

501392012

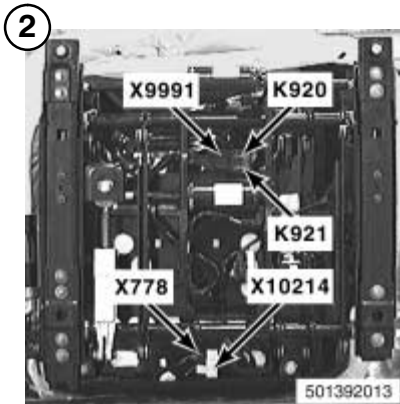


K920  
DRIVER'S SEAT  
TILT ADJUST CUT-  
OFF RELAY

K921  
DRIVER'S SEAT  
LENGTH ADJUST  
CUT-OFF RELAY

X778  
X9991  
X10214

501392013

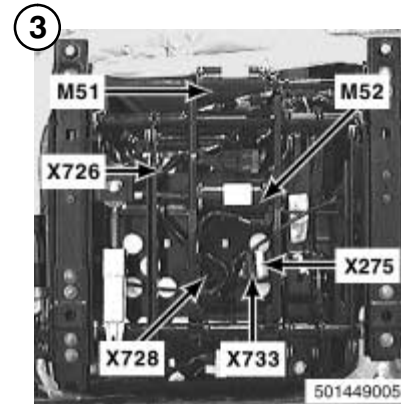



M51  
DRIVER'S SEAT  
MOVEMENT  
MOTOR

M52  
DRIVER'S SEAT  
HEIGHT MOTOR

X275  
X726  
X728  
X733

501449005


COMPONENT LOCATION VIEWS

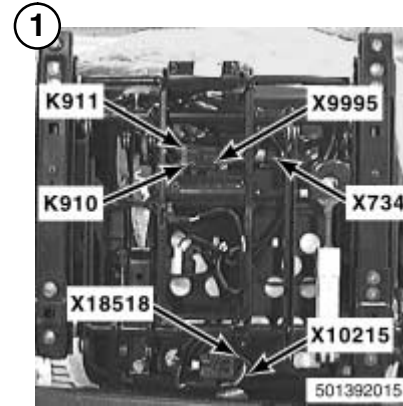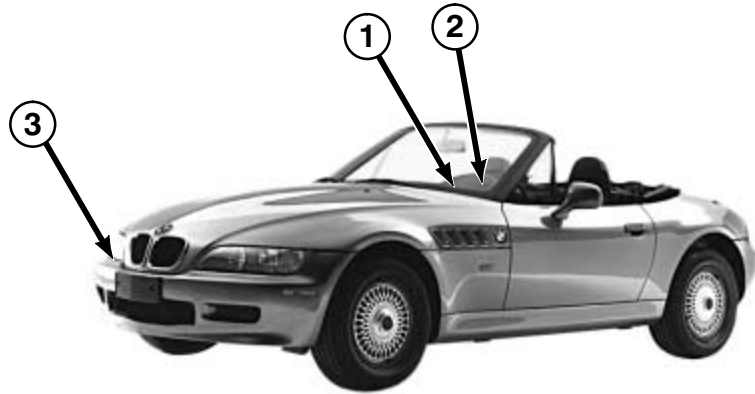

K910  
PASSENGER'S  
SEAT TILT ADJUST  
CUT-OFF RELAY


K911  
PASSENGER'S  
SEAT LENGTH AD-  
JUST CUT-OFF  
RELAY

X734  
X9995  
X10215  
X18518

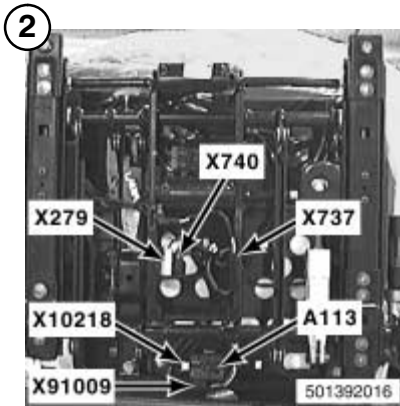

A113  
SEAT OCCUPANCY  
DETECTOR



X279  
X737  
X740  
X10218  
X91009

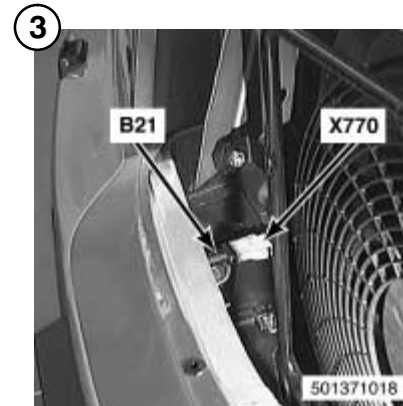

B21  
ON-BOARD  
COMPUTER  
TEMPERATURE  
SENSOR


X770

# COMPONENT LOCATION VIEWS

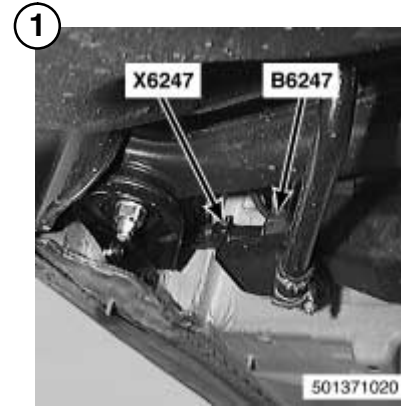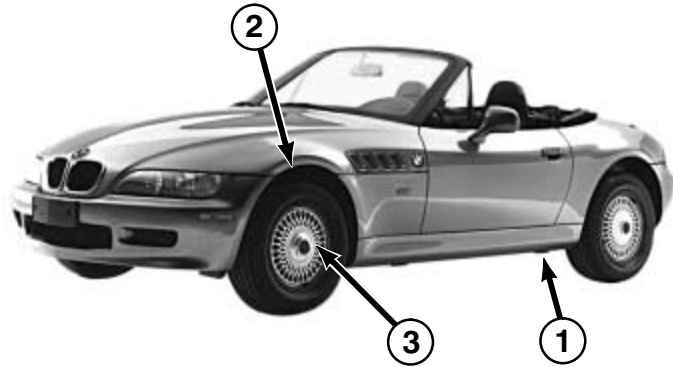


B6247  
CHARCOAL FILTER  
SHUT-OFF VALVE

X6247

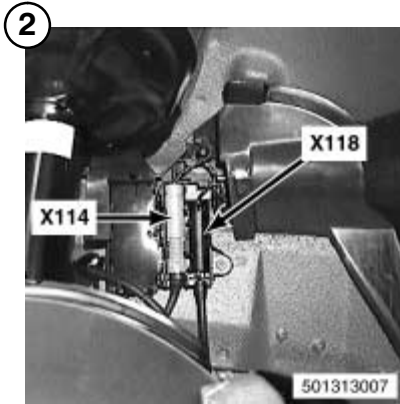





X114  
X118

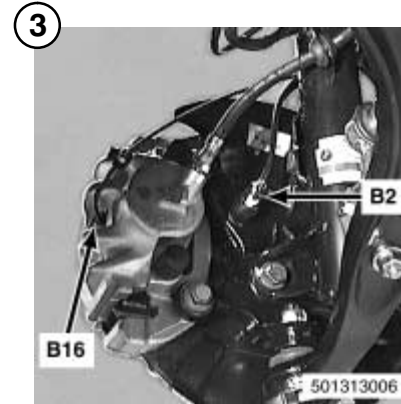



B2  
LEFT FRONT  
SPEED SENSOR –  
ABS

B16  
LEFT FRONT  
BRAKE PAD  
SENSOR





# COMPONENT LOCATION VIEWS

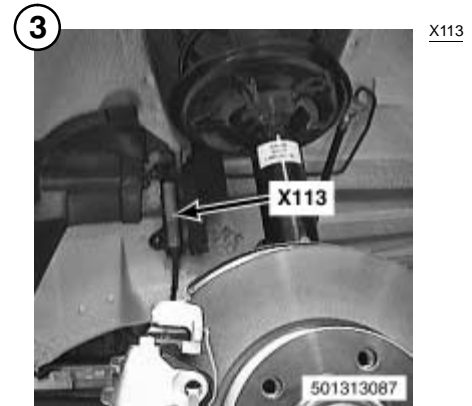
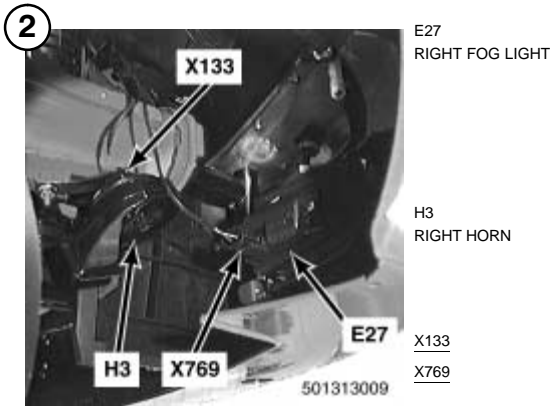
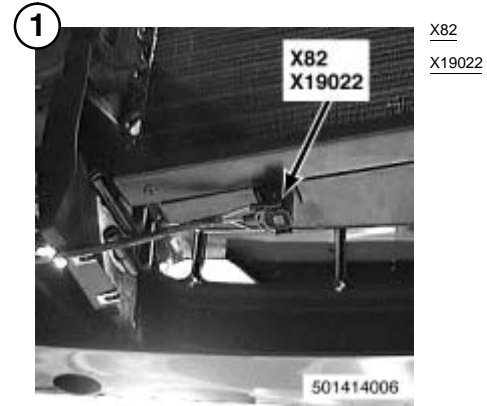
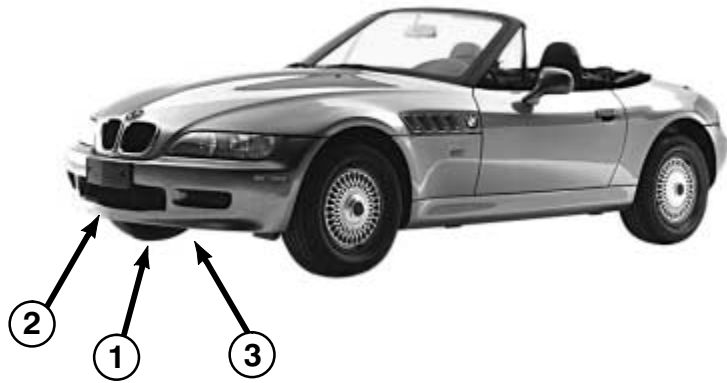




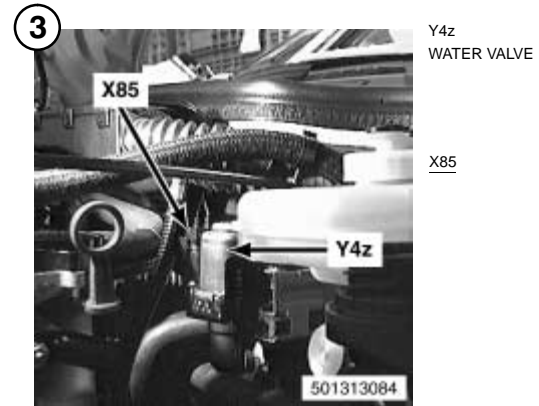
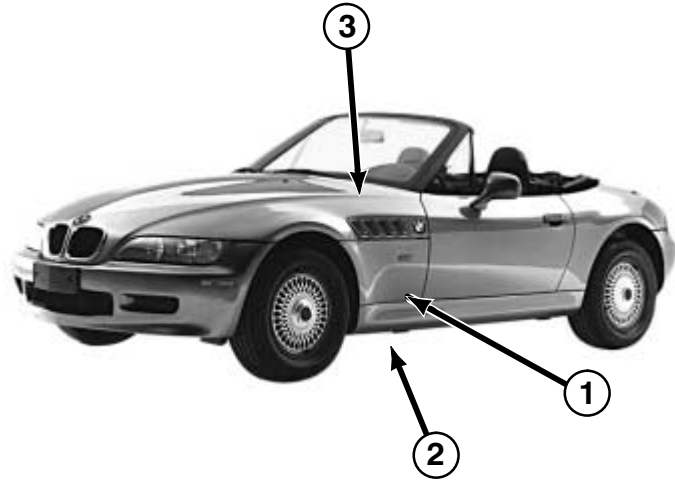


# COMPONENT LOCATION VIEWS

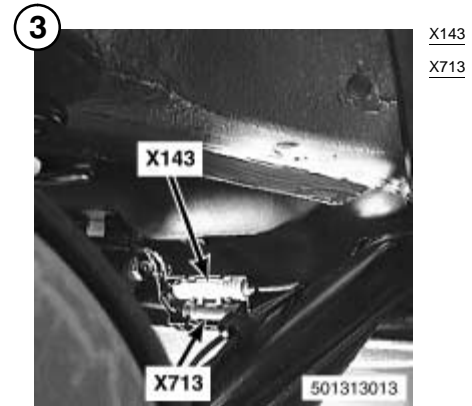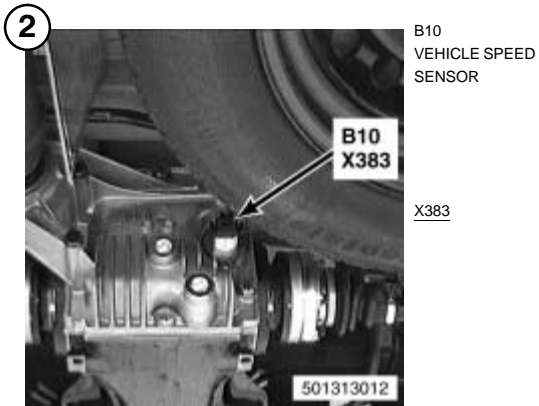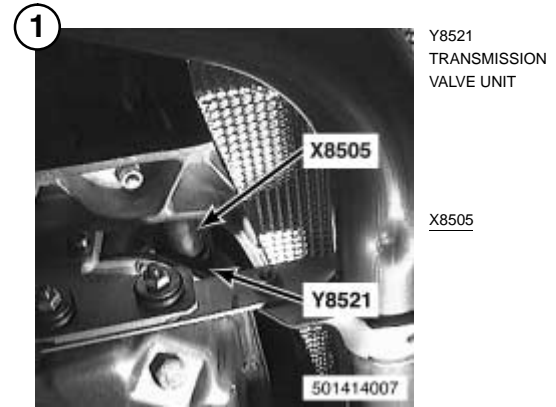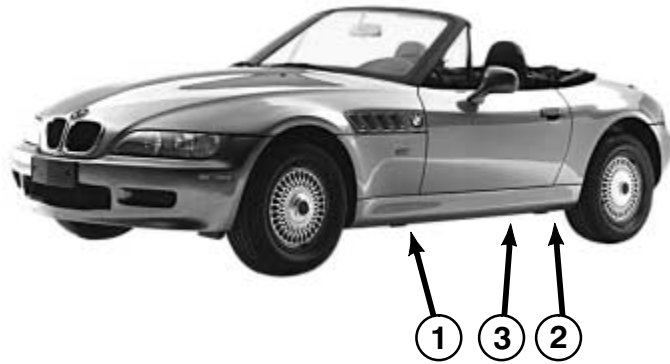

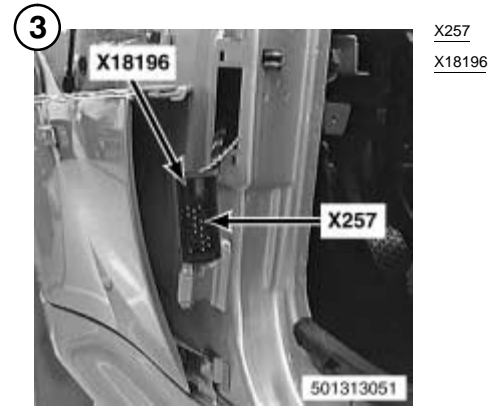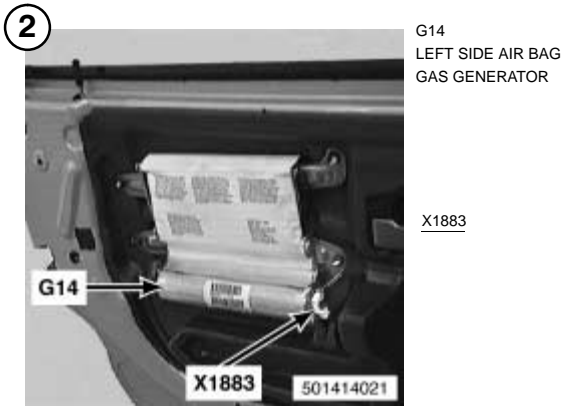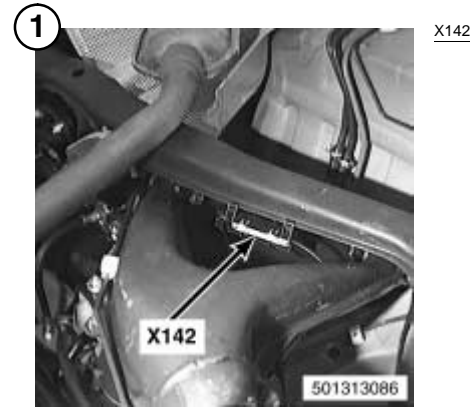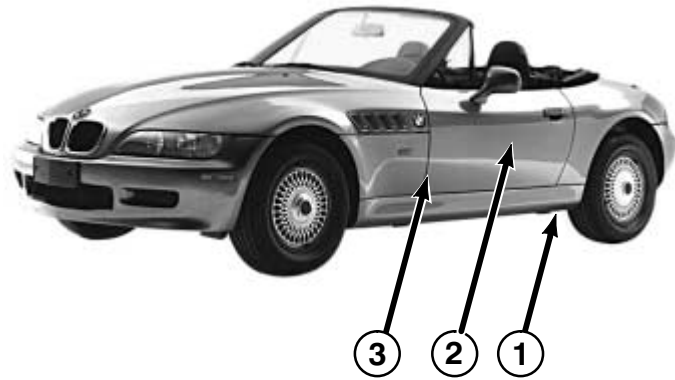


COMPONENT LOCATION VIEWS

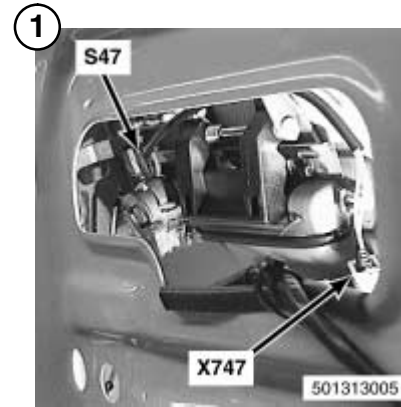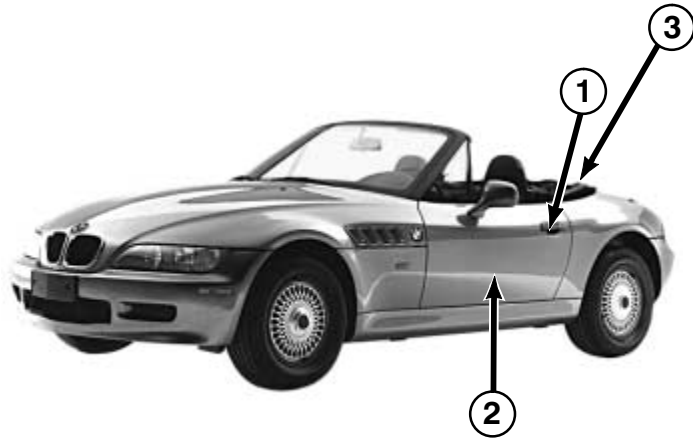

S47  
DRIVER'S DOOR  
LOCK SWITCH

X747


501313005

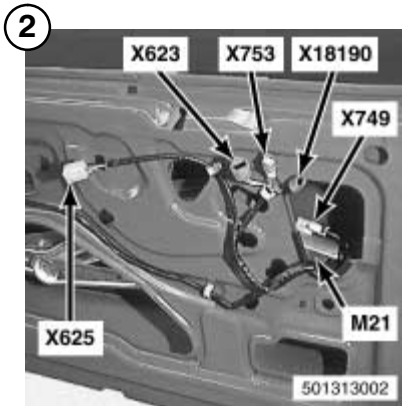

M21  
DRIVER'S WINDOW  
MOTOR

X623  
X625  
X749  
X753  
X18190

501313002



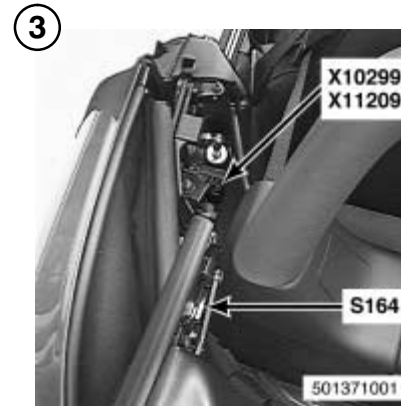


S164  
CONVERTIBLE TOP  
END-POSITION MI-  
CRO SWITCH



X10299  
X11209

501371001


COMPONENT LOCATION VIEWS

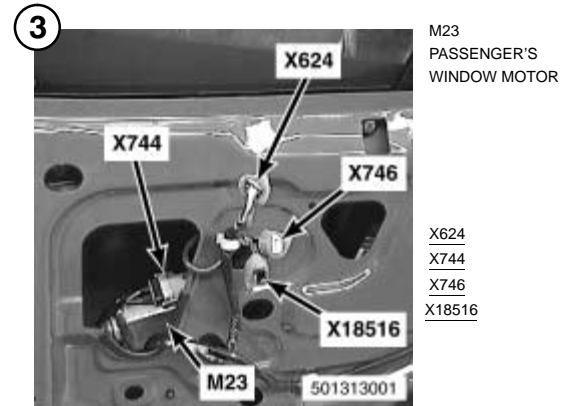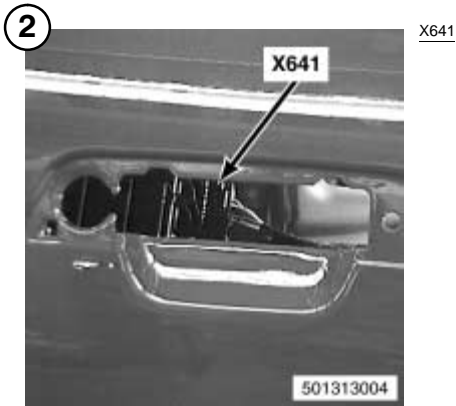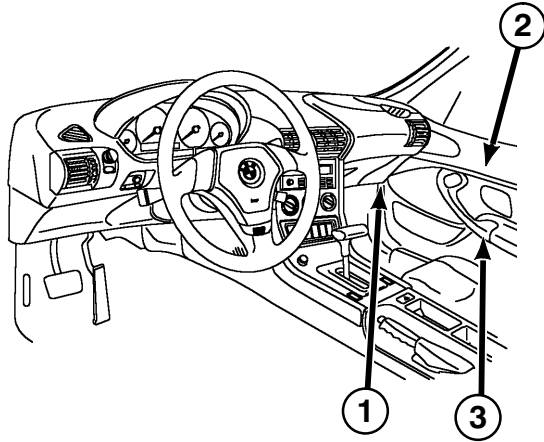

COMPONENT LOCATION VIEWS

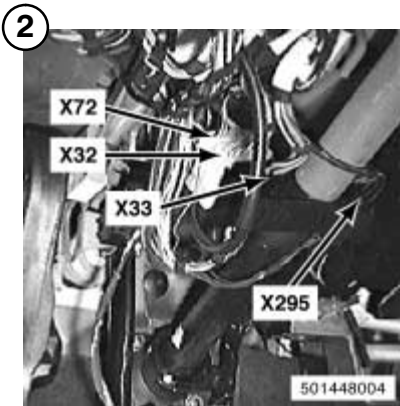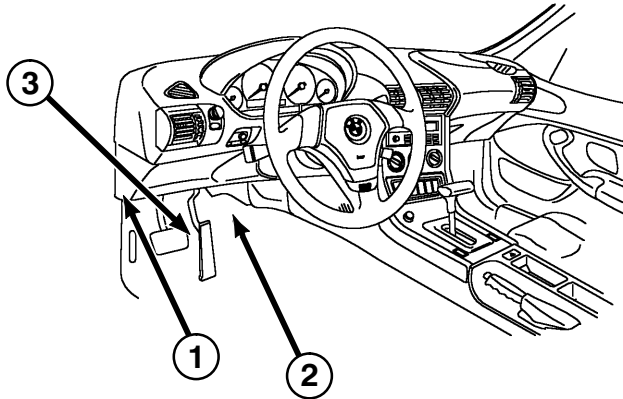

X32  
X33  
X72  
X295

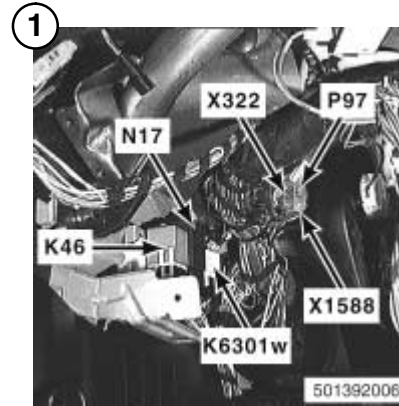



K46 HIGH BEAM LIGHT RELAY	P97 AUXILIARY FUSE BOX
K6301w FUEL PUMP RELAY	X322 X1588
N17 CRASH CONTROL MODULE	



S8507  
KICK-DOWN  
SWITCH


X8507

COMPONENT LOCATION VIEWS

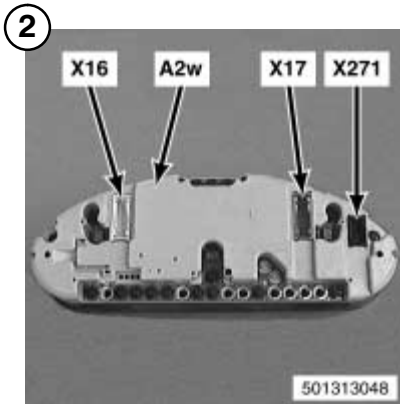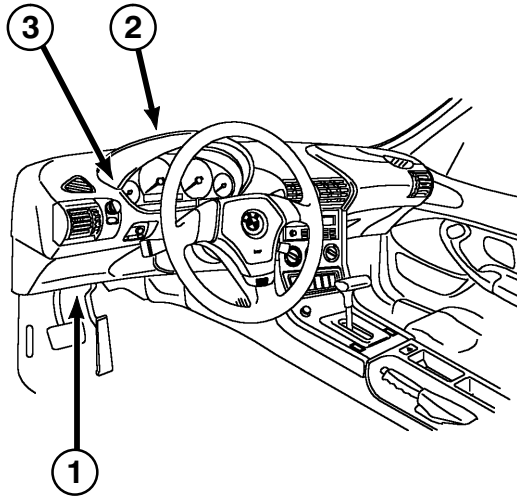

A2w  
INSTRUMENT  
CLUSTER

X16  
X17  
X271

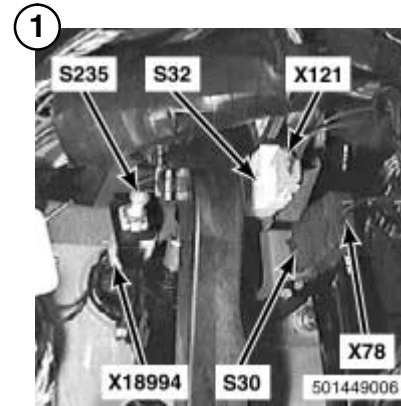


S30  
BRAKE LIGHT  
SWITCH

X78  
X121  
X18994



S32  
CLUTCH SWITCH

S235  
STARTER  
IMMOBILIZATION  
SWITCH

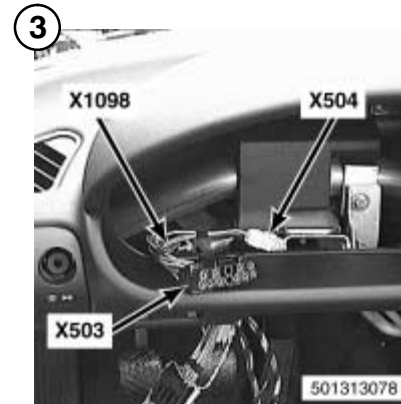


X503  
X504  
X1098

# COMPONENT LOCATION VIEWS

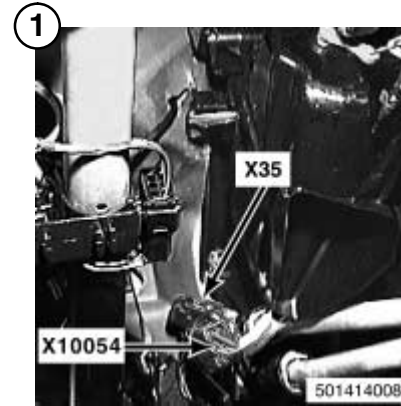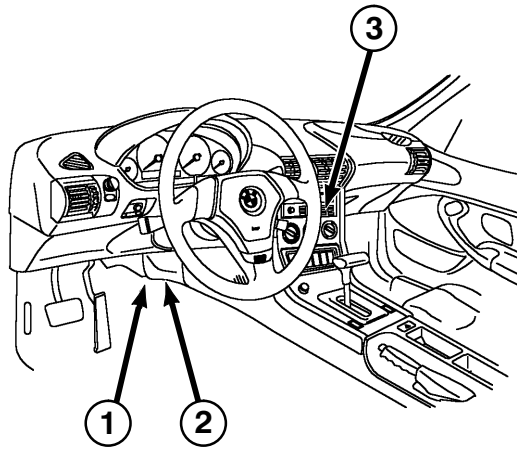

X35  
X10054

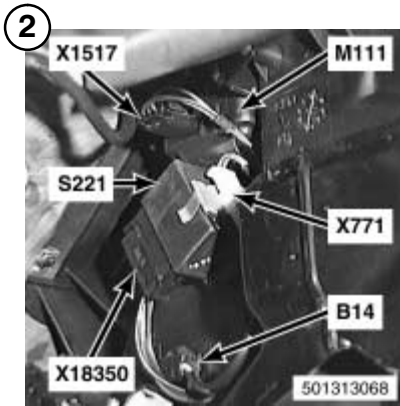


B14  
EVAPORATOR  
TEMPERATURE  
SENSOR

X771  
X1517  
X18350

M111  
FRESH AIR  
RECIRCULATION  
MOTOR

S221  
EVAPORATOR  
CONTROLLER

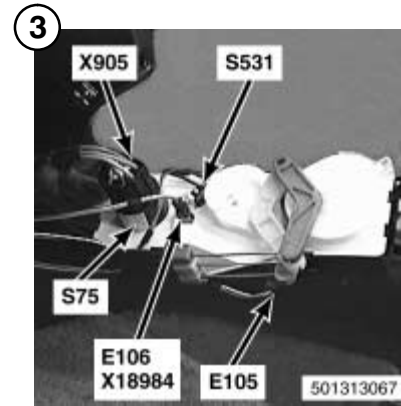

E105  
HEAT/A/C  
CONTROL PANEL  
ILLUMINATION

S531  
TEMPERATURE  
WHEEL SWITCH



E106  
HEAT/A/C  
CONTROL PANEL  
ILLUMINATION

X905  
X18984

S75  
BLOWER SWITCH



# COMPONENT LOCATION VIEWS

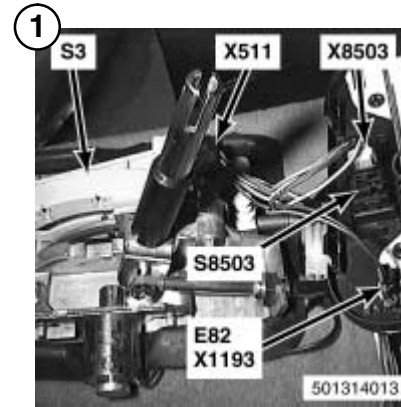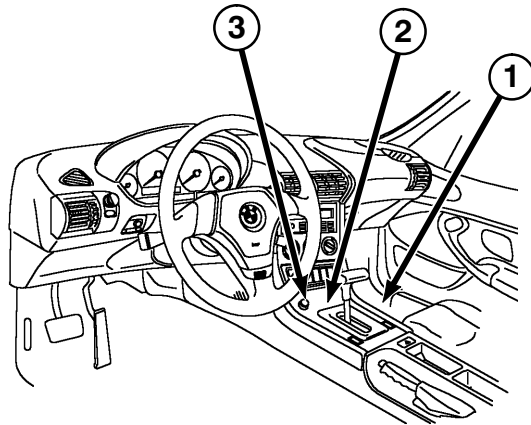


E82  
TRANSMISSION  
POSITION INDICA-  
TOR LIGHT

X511  
X1193  
X8503


S3  
AUTOMATIC  
TRANSMISSION  
RANGE SWITCH

S8503  
PROGRAM SWITCH

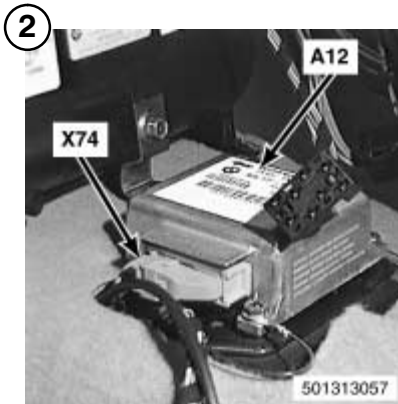



A12  
SUPPLEMENTAL  
RESTRAINT  
SYSTEM CONTROL  
MODULE

X74

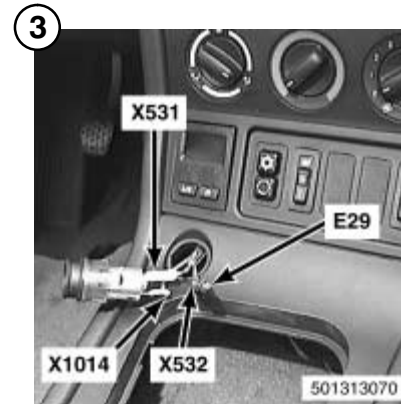

E29  
FRONT CIGAR  
LIGHTER LIGHT


X531  
X532  
X1014

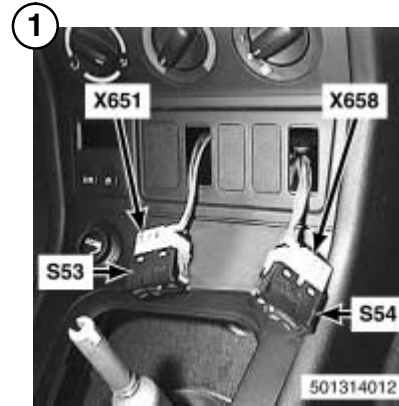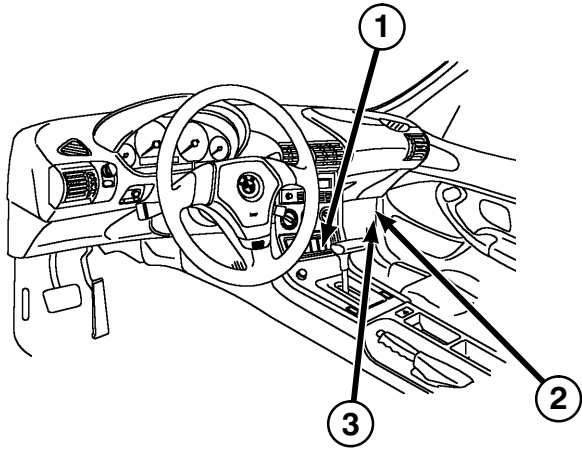


S53  
DRIVER'S SEAT,  
SEAT HEATER  
SWITCH

S54  
PASSENGER'S  
SEAT, SEAT  
HEATER SWITCH

X651  
X658


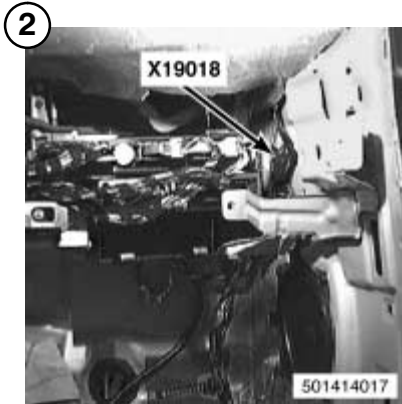


X19018

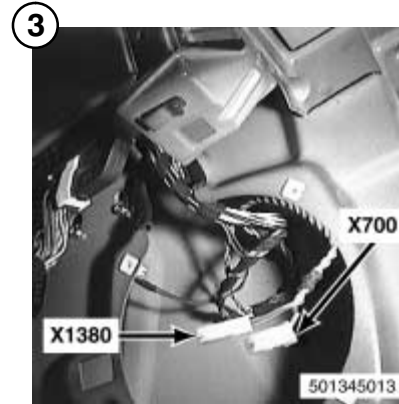

X700  
X1380


COMPONENT LOCATION VIEWS

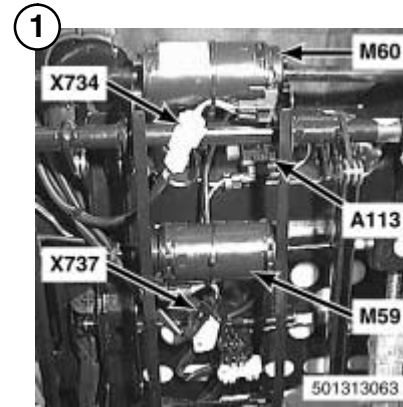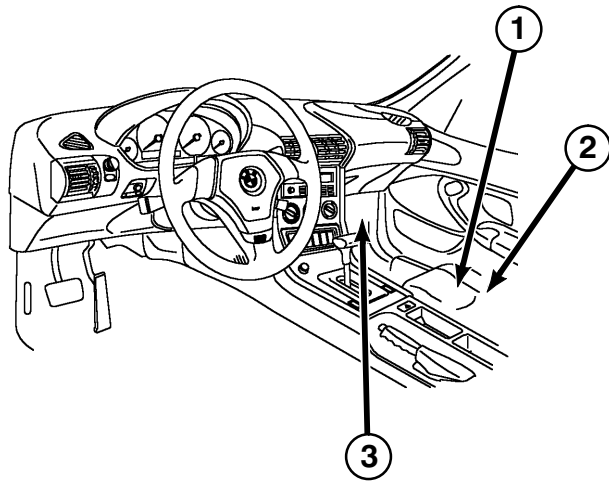

A113 SEAT OCCUPANCY DETECTOR X734  
X737

M59 PASSENGER'S SEAT HEIGHT MOTOR

M60 PASSENGER'S SEAT MOVEMENT MOTOR

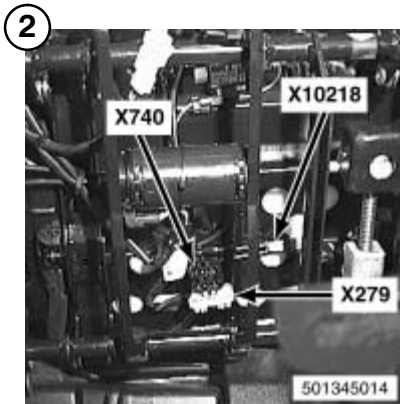



X279  
X740  
X10218



X10244  
X13025




# COMPONENT LOCATION VIEWS

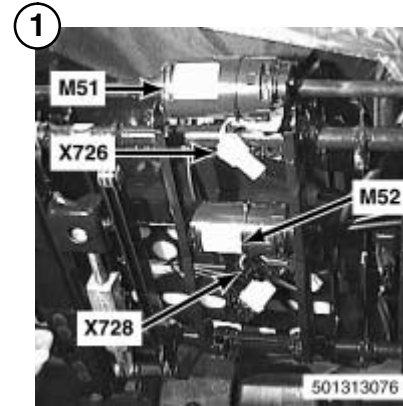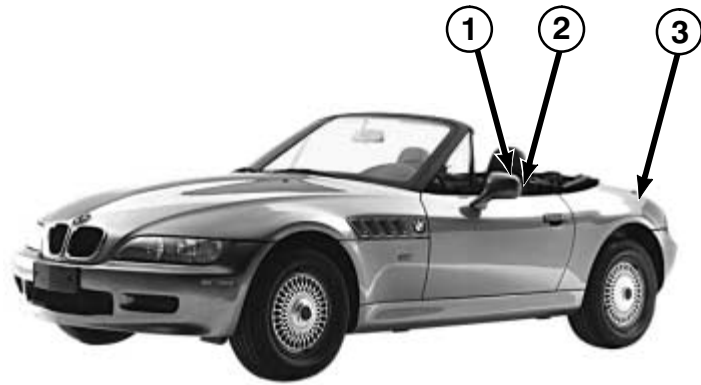


M51  
DRIVER'S SEAT  
MOVEMENT  
MOTOR

M52  
DRIVER'S SEAT  
HEIGHT MOTOR

X726  
X728

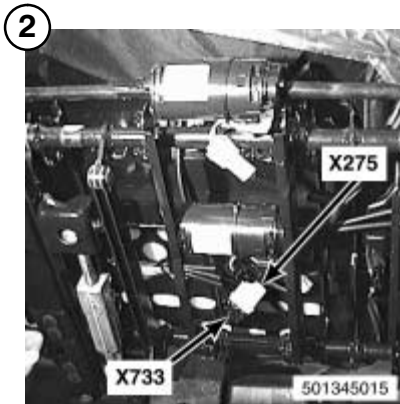

X275  
X733

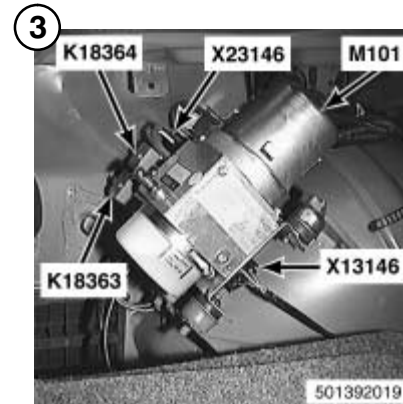



K18363  
CONVERTIBLE TOP  
RELAY I (CLOSE)

X13146  
X23146

K18364  
CONVERTIBLE TOP  
RELAY II (OPEN)

M101  
CONVERTIBLE TOP  
MOTOR

# COMPONENT LOCATION VIEWS

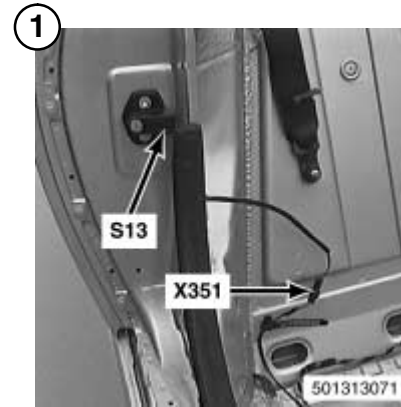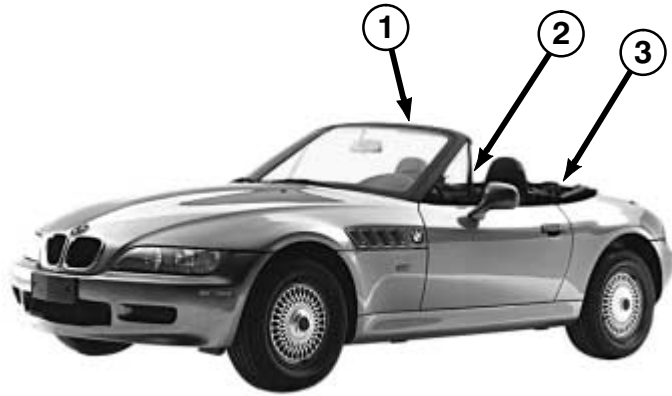

S13  
PASSENGER'S  
DOOR JAMB  
SWITCH

X351






X898





X1715  
X10246

COMPONENT LOCATION VIEWS

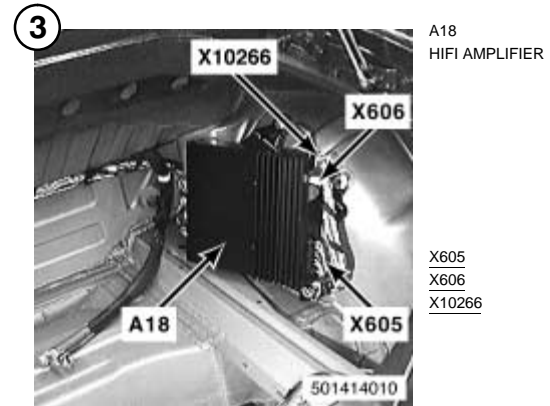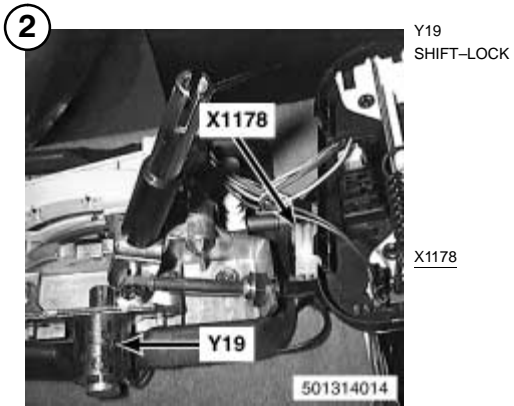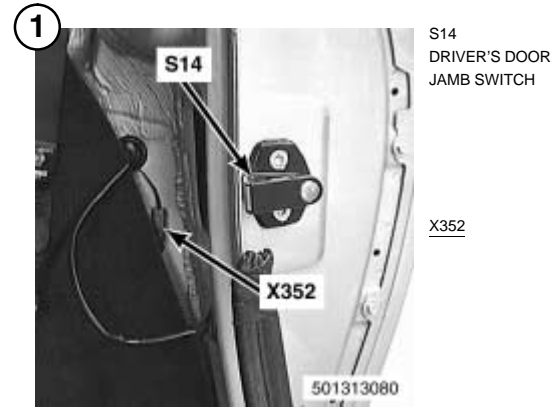


# COMPONENT LOCATION VIEWS

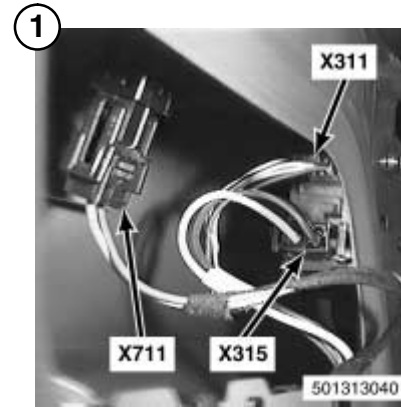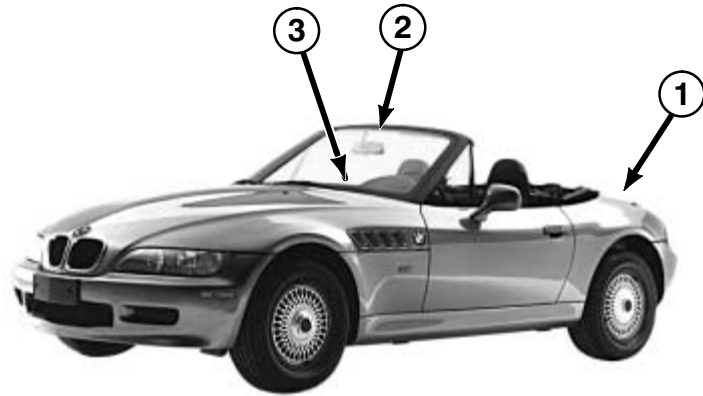

X311  
X315  
X711


501313040

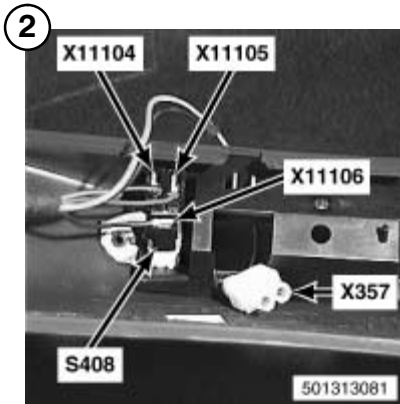

S408  
INTERIOR LIGHT  
SWITCH

X357  
X11104  
X11105  
X11106

501313081


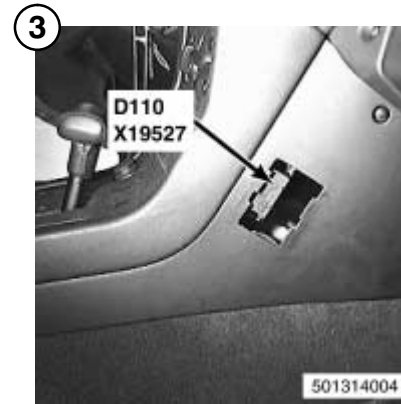


D110  
OBD II  
CONNECTOR


X19527

501314004


COMPONENT LOCATION VIEWS

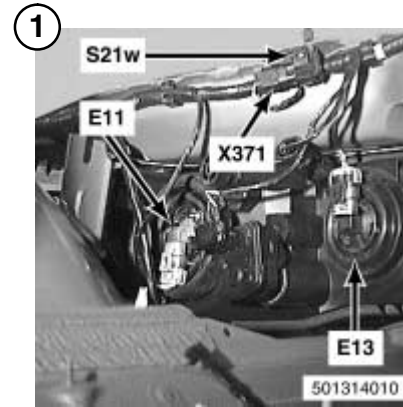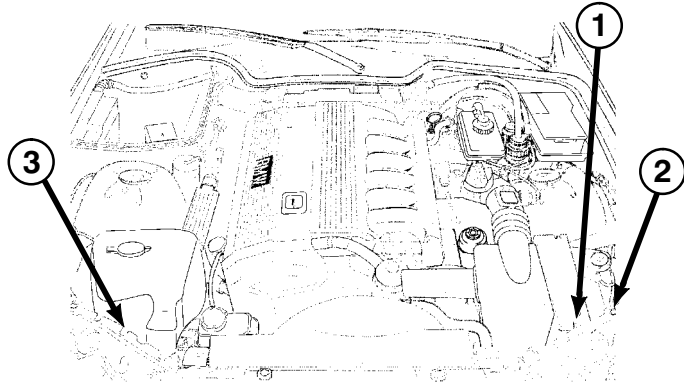

E11 X371  
LEFT HIGH BEAM LIGHT  
E13  
LEFT LOW BEAM LIGHT  
S21w  
ENGINE HOOD SWITCH

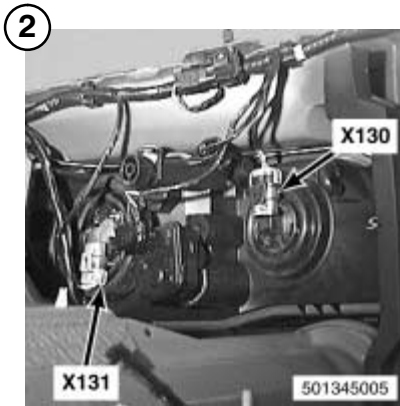



X130  
X131

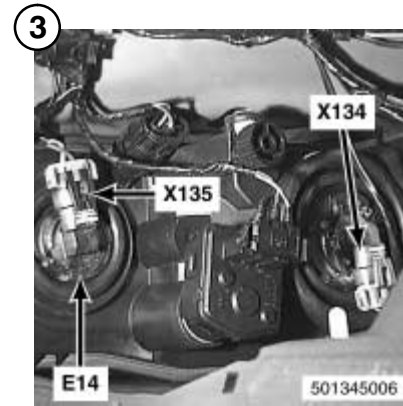

E14  
RIGHT LOW BEAM LIGHT  
X134  
X135




# COMPONENT LOCATION VIEWS

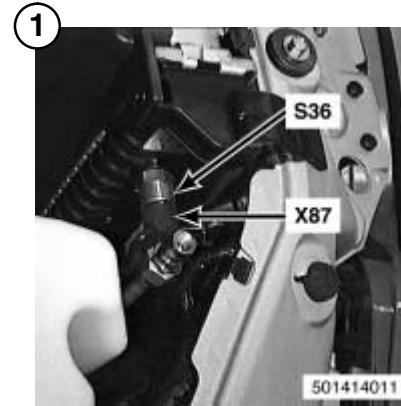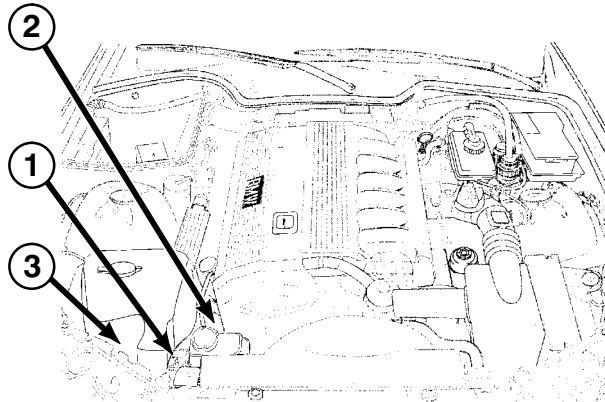


S36  
TEMPERATURE  
SWITCH

X87

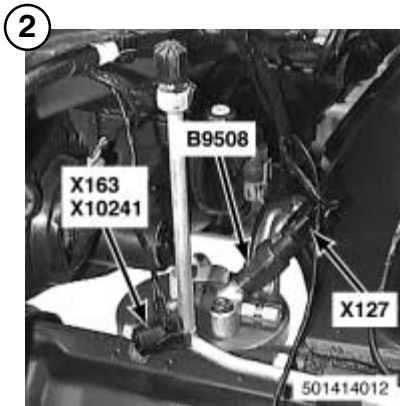



B9508  
PRESSURE  
SWITCH

X127  
X163  
X10241

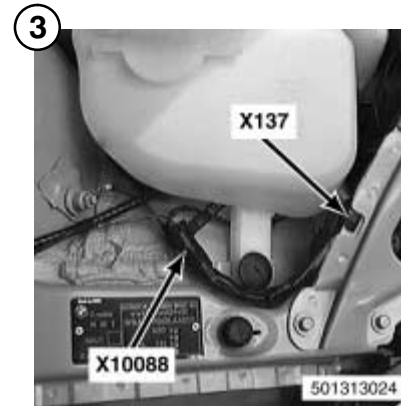

X137  
X10088

COMPONENT LOCATION VIEWS

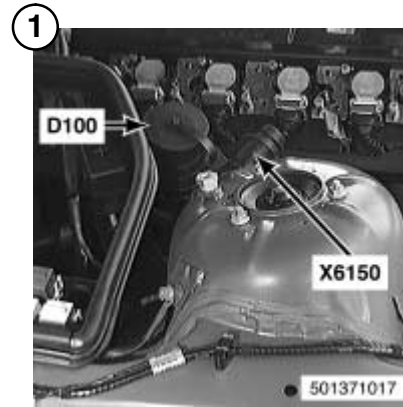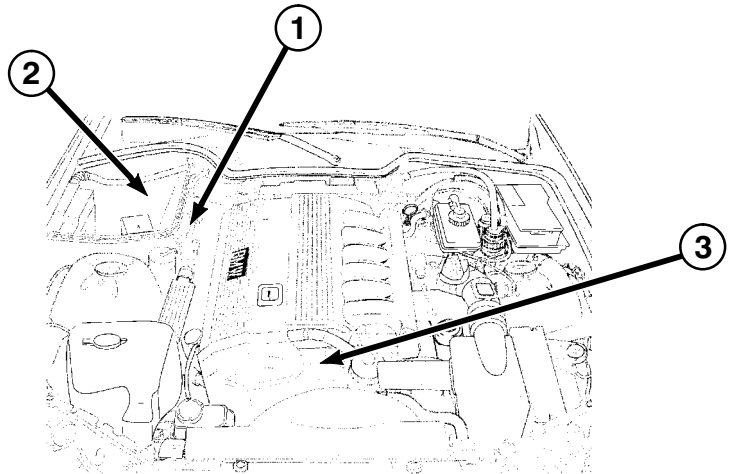


D100  
DATA LINK  
CONNECTOR

X6150



Y6133  
AIR PUMP

X6133

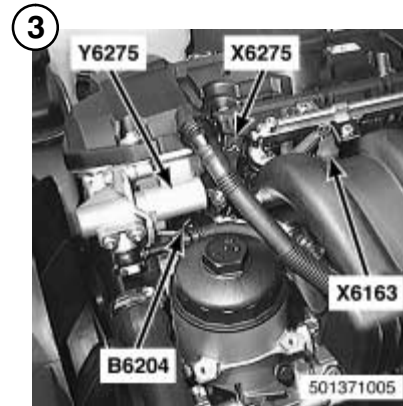


B6204  
CAMSHAFT  
POSITION SENSOR  
(CYLINDER  
IDENTIFICATION)


Y6275  
VARIABLE CAM-  
SHAFT CONTROL  
VALVE 1

X6163  
X6275

# COMPONENT LOCATION VIEWS

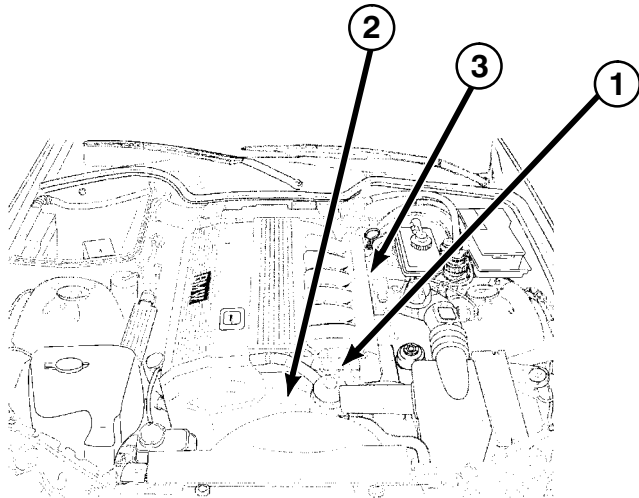


B6256  
DUAL  
TEMPERATURE  
SENSOR  
(COOLANT  
TEMPERATURE)

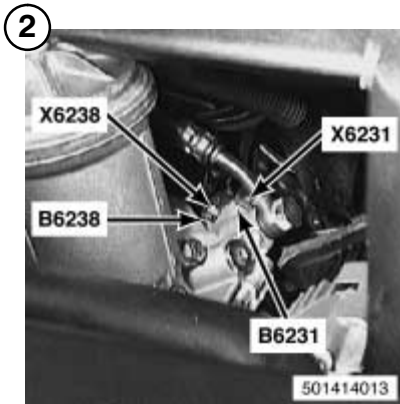

B6231  
OIL PRESSURE  
SWITCH



B6238  
OIL TEMPERATURE  
SENSOR

X6231  
X6238

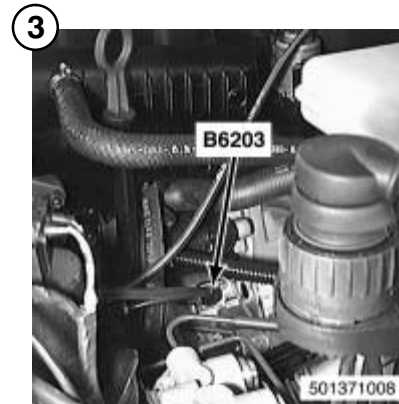

B6203  
CRANKSHAFT  
POSITION/RPM  
SENSOR

# COMPONENT LOCATION VIEWS

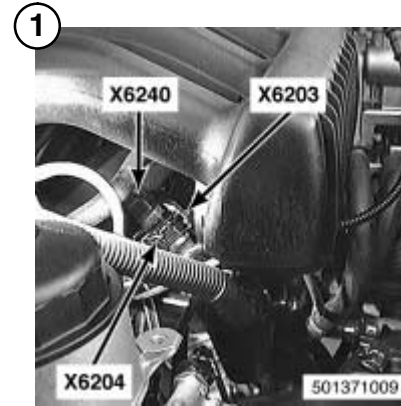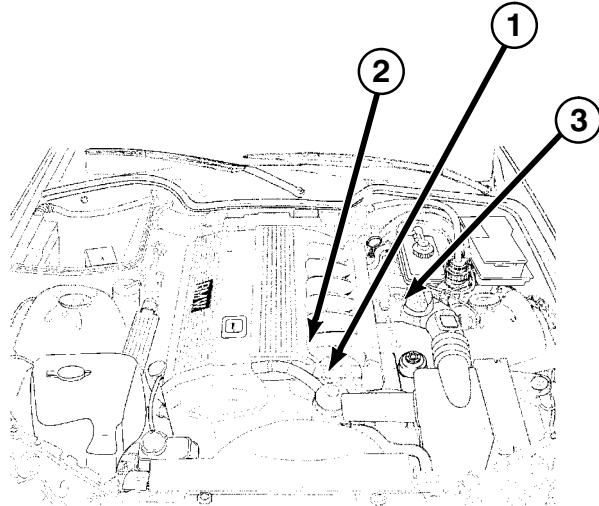


X6203  
X6204  
X6240



B6240  
KNOCK SENSOR

Y6163  
SECONDARY AIR  
PUMP VALVE

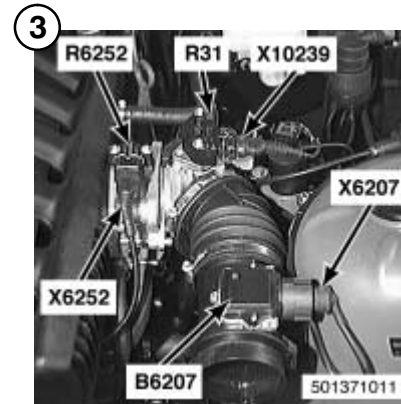


B6207  
HOT FILM AIR  
MASS METER

X6207  
X6252  
X10239

R31  
AUXILIARY  
THROTTLE  
POSITION SENSOR


R6252  
THROTTLE  
POSITION SENSOR

# COMPONENT LOCATION VIEWS

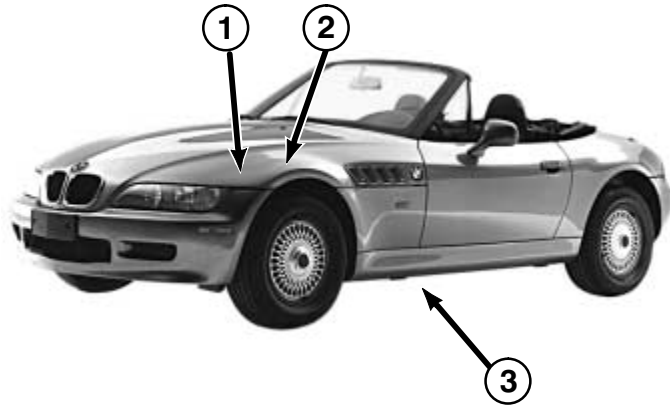


B6205  
INTAKE AIR  
TEMPERATURE  
SENSOR

X6205

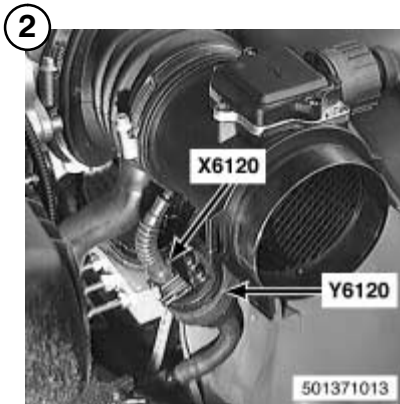

Y6120  
EVAPORATIVE  
EMISSION VALVE



X6120

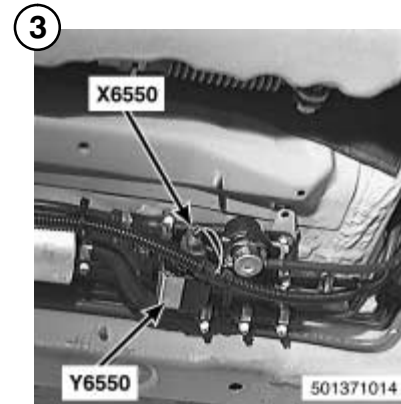

Y6550  
SOLENOID VALVE  
("RUNNING  
LOSSES")

X6550


# COMPONENT LOCATION VIEWS

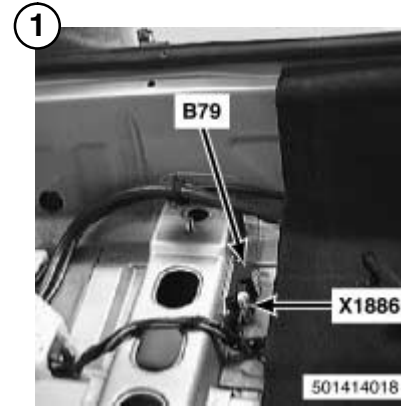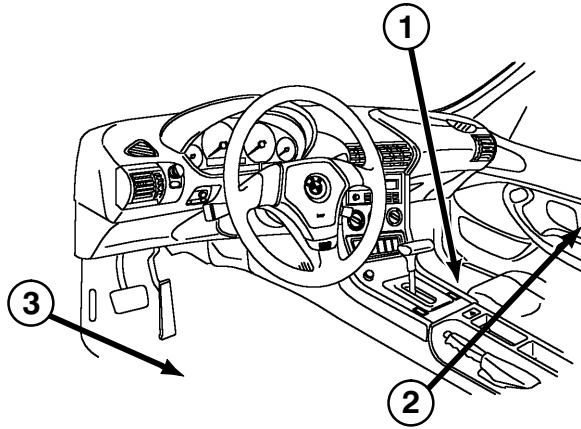

B79  
PASSENGER'S  
SIDE IMPACT  
SENSOR

X1886

501414018

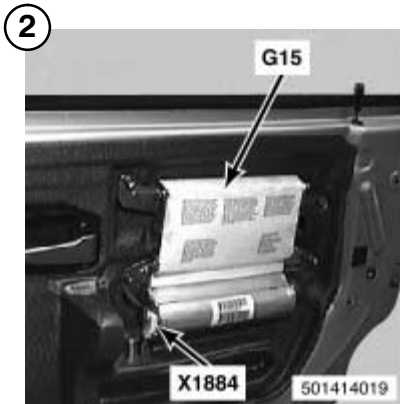


G15  
RIGHT SIDE AIR  
BAG GAS  
GENERATOR

X1884

501414019

X1884


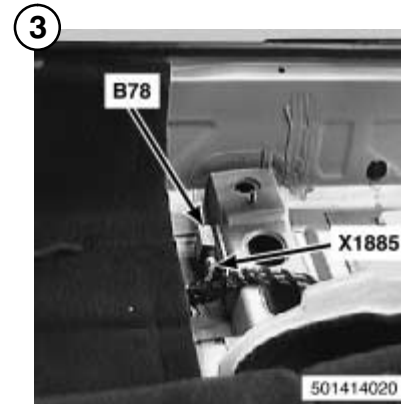


B78  
DRIVER'S SIDE IM-  
PACT SENSOR

X1885

501414020


COMPONENT LOCATION VIEWS

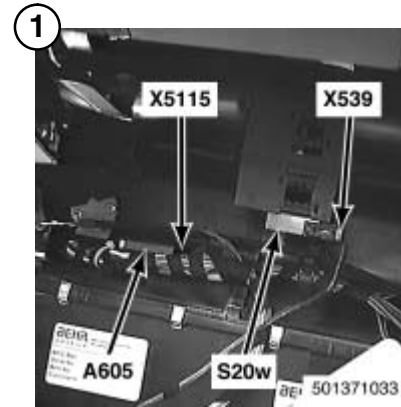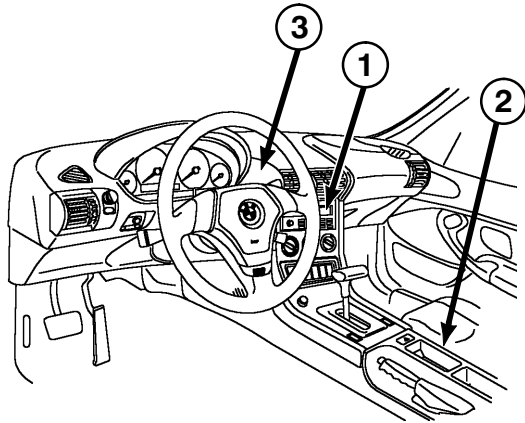

A605  
FUSE HOLDER

S20w  
RADIO ANTI-  
THEFT SWITCH

X539  
X5115

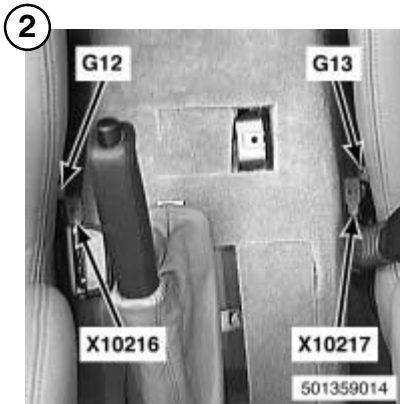


G12  
DRIVER'S SIDE  
PYROTECHNICAL  
BELT TENSIONER

G13  
PASSENGER'S  
SIDE  
PYROTECHNICAL  
BELT TENSIONER

X10216  
X10217

501359014


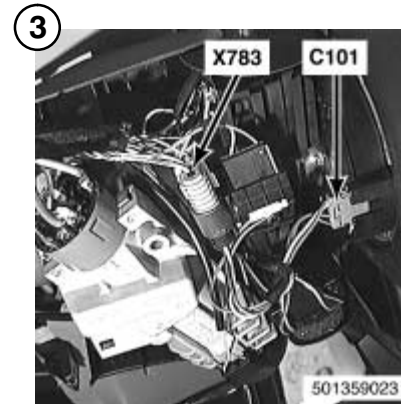


C101  
CONTACT RING

X783

501359023


# COMPONENT LOCATION VIEWS

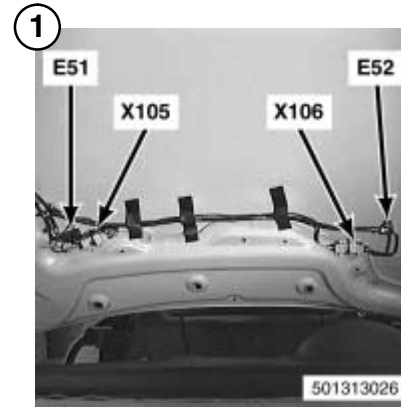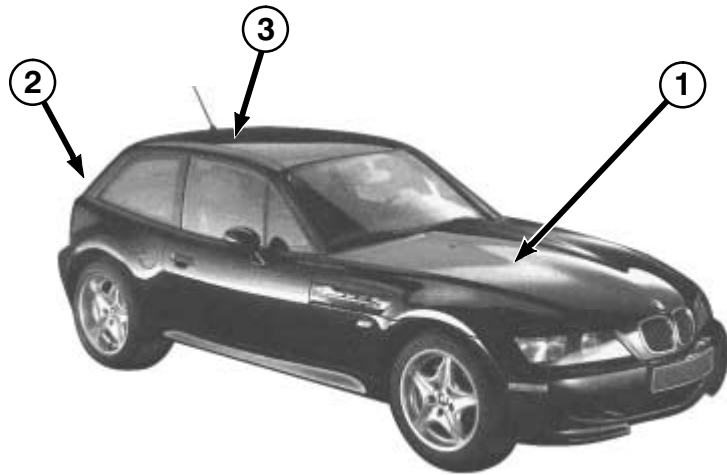

E51  
LEFT WASHER JET  
HEATER

E52  
RIGHT WASHER  
JET HEATER

X105  
X106

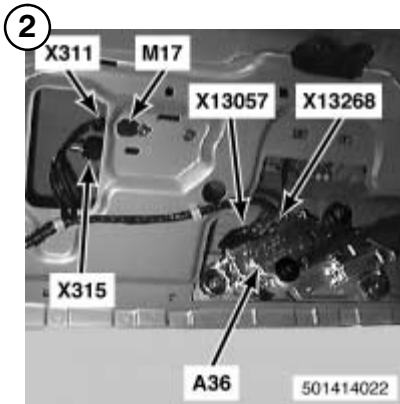


A36  
REAR WIPER/  
WASHER INTERVAL  
CONTROL MODULE

M17  
LUGGAGE  
COMPARTMENT  
LOCK MOTOR

X311  
X315

X13057  
X13268


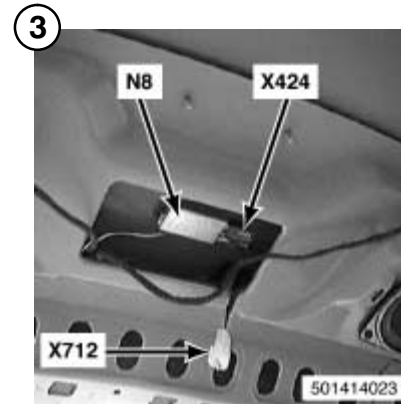


N8  
ANTENNA  
AMPLIFIER AM/FM

X424  
X712



# COMPONENT LOCATION VIEWS

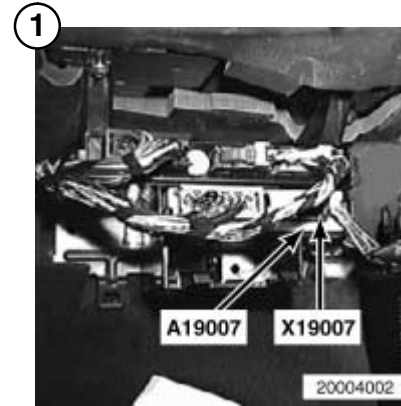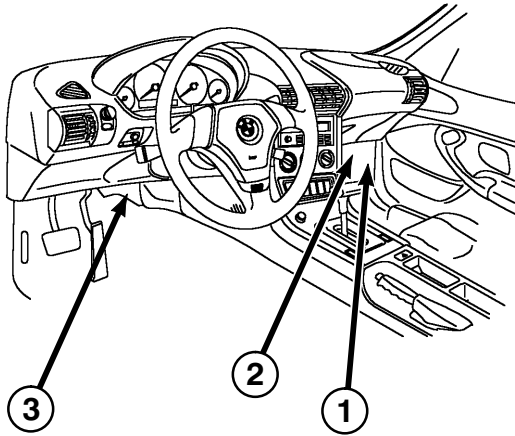


A19007  
THERMAL OIL  
LEVEL SENSOR  
(TOENS) CONTROL  
MODULE

X19007

A19007 X19007

20004002

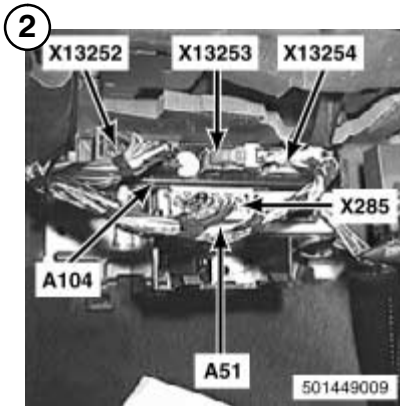

A51  
WIPER/WASHER  
MODULE

A104  
BODY  
ELECTRONICS  
CONTROL MODULE  
(ZKE IV)

X285  
X13252  
X13253  
X13254


X13252 X13253 X13254

A104

X285

A51

501449009

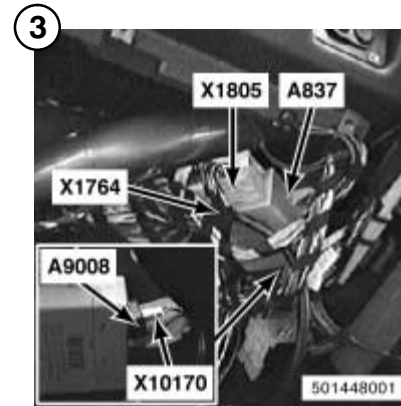

A837  
ELECTRONIC  
IMMOBILIZER  
CONTROL MODULE  
(EWS III)

A9008  
CRUISE CONTROL  
INTERFACE

X1764  
X1805  
X10170

X1805 A837



X1764

A9008

X10170


501448001

COMPONENT LOCATION VIEWS

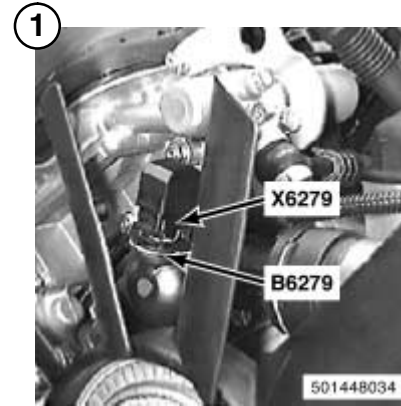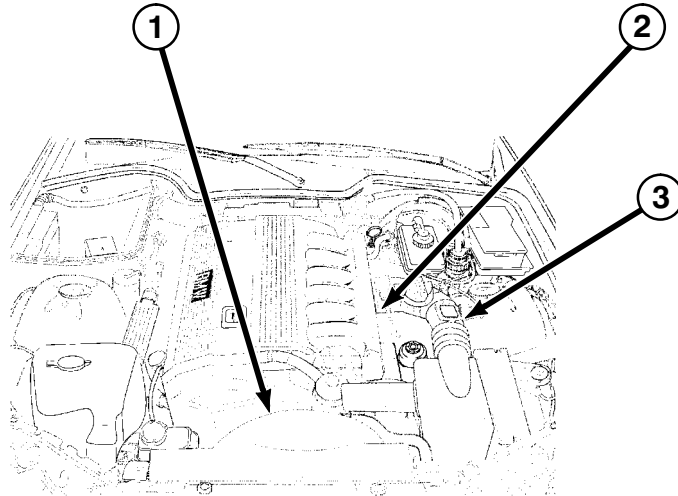


B6279  
THERMOSTAT,  
CHARACTERISTIC  
MAP COOLING

X6279

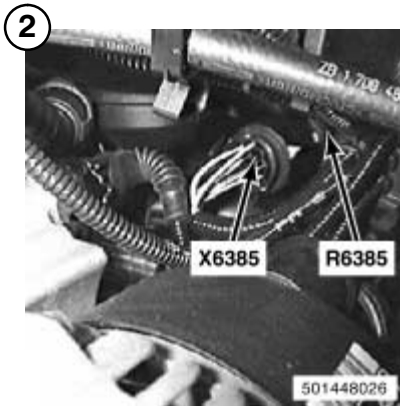

R6385  
THROTTLE  
POSITION SEN-  
SOR/CRUISE  
CONTROL  
ACTUATOR

X6385

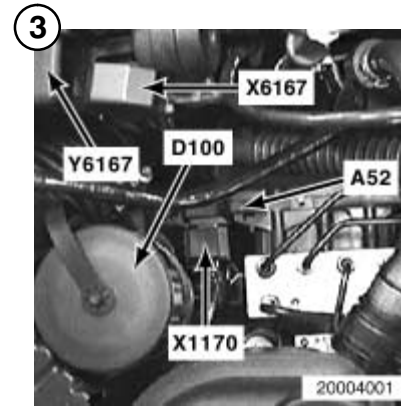


A52  
SLIP CONTROL  
MODULE  
(ABS/ASC)

D100  
DATA LINK  
CONNECTOR

Y6167  
VALVE, INDIVIDUAL  
CONTROL INTAKE  
SYSTEM

X1170  
X6167


# COMPONENT LOCATION VIEWS

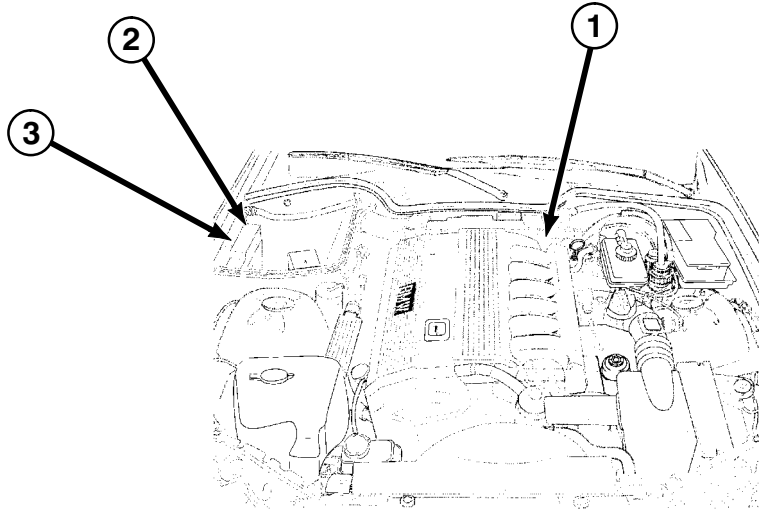

B6236  
ENGINE COOLANT  
TEMPERATURE  
SENSOR

X6236


501449033

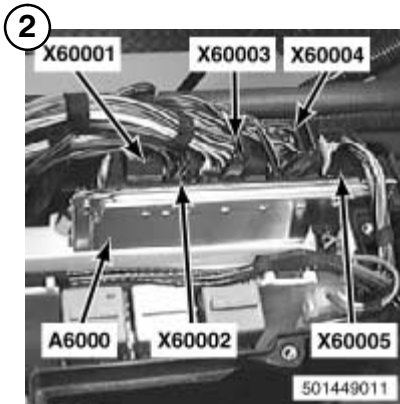

A6000  
ENGINE CONTROL  
MODULE (DME)

X60001  
X60002  
X60003  
X60004  
X60005

501449011


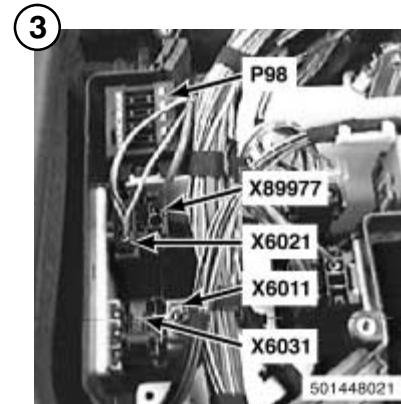


P98  
FUSE HOLDER IN  
E-BOX

X6011  
X6021  
X6031  
X89977

501448021

# COMPONENT LOCATION VIEWS

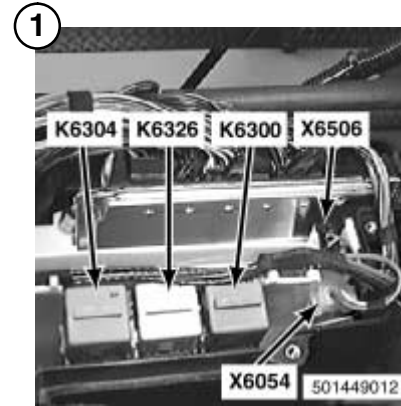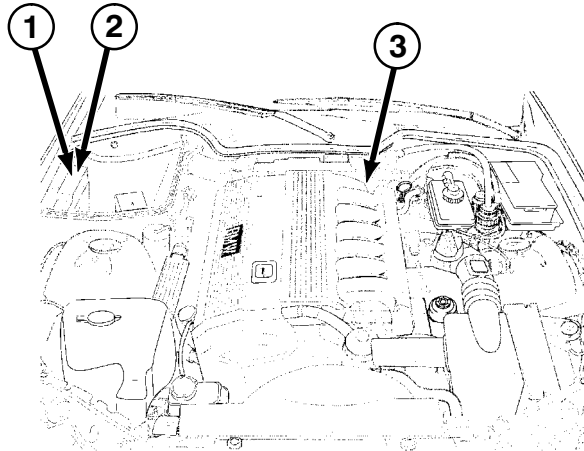


K6300 ENGINE CONTROL  
MODULE RELAY

X6054  
X6506


K6304  
SECONDARY AIR  
PUMP RELAY

K6326  
UNLOADER RELAY,  
TERMINAL 15

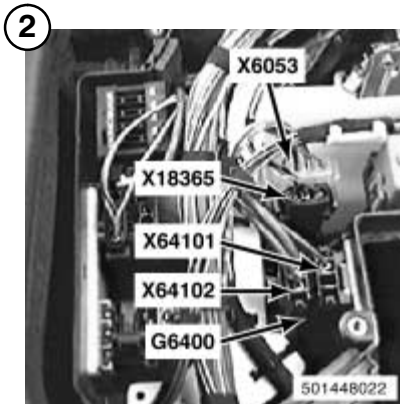

G6400  
B+ JUNCTION  
POINT E-BOX



X6053  
X18365  
X64101  
X64102

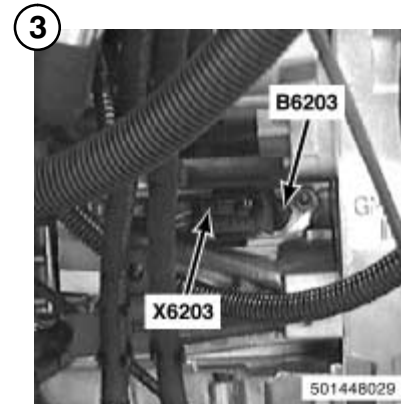

B6203  
CRANKSHAFT  
POSITION/RPM  
SENSOR

X6203


# COMPONENT LOCATION VIEWS

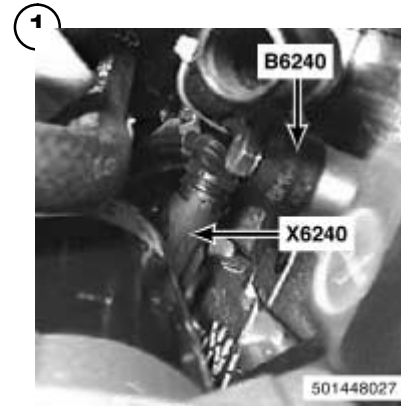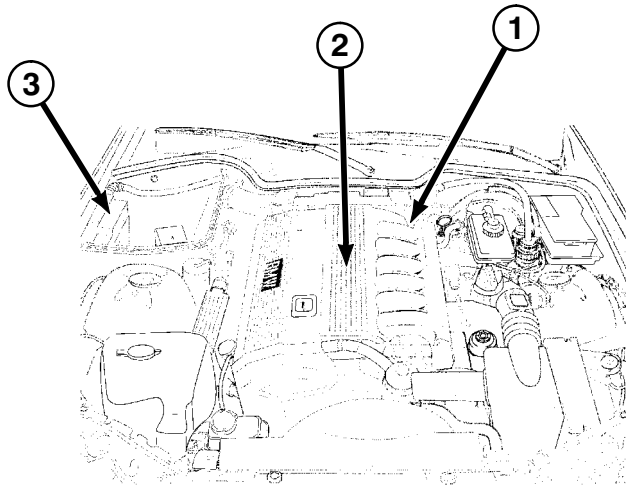

B6240  
KNOCK SENSOR

X6240

501448027

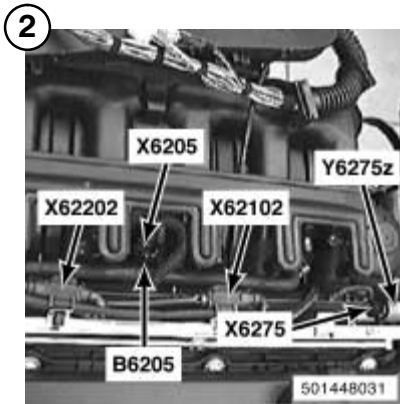


B6205  
INTAKE AIR  
TEMPERATURE  
SENSOR

Y6275z  
VARIABLE CAM-  
SHAFT CONTROL  
VALVE 1 (INLET)

X6205  
X6275  
X62102  
X62202

501448031


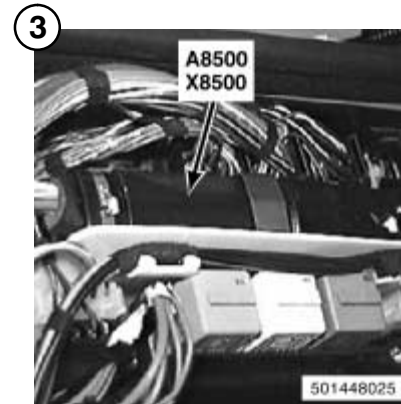


A8500  
TRANSMISSION  
CONTROL MODULE  
(EGS)

X8500

501448025

# COMPONENT LOCATION VIEWS

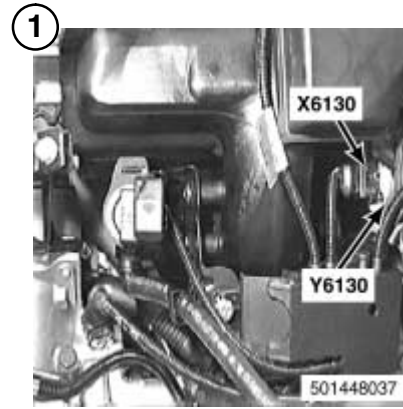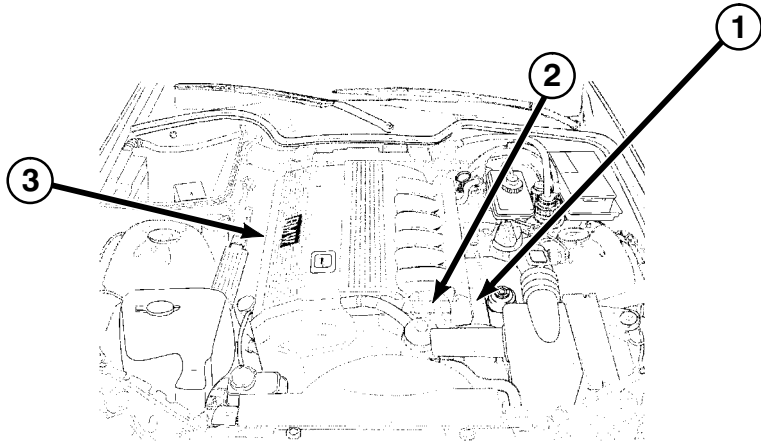


Y6130  
IDLE SPEED  
CONTROL VALVE

X6130



X6524


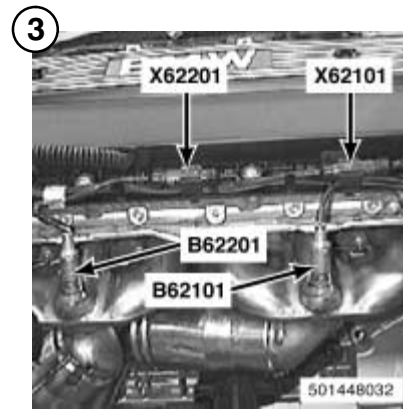


B62101  
OXYGEN SENSOR I  
(IN FRONT OF  
CATALYTIC  
CONVERTER)

B62201  
OXYGEN SENSOR  
II (IN FRONT OF  
CATALYTIC  
CONVERTER)

X62101  
X62201

COMPONENT LOCATION VIEWS

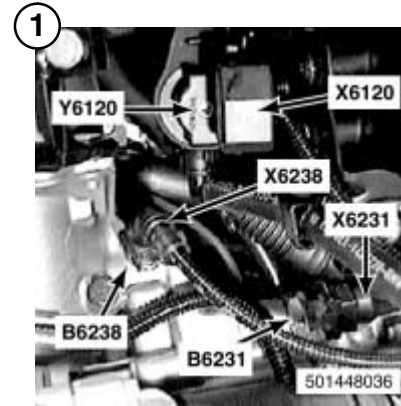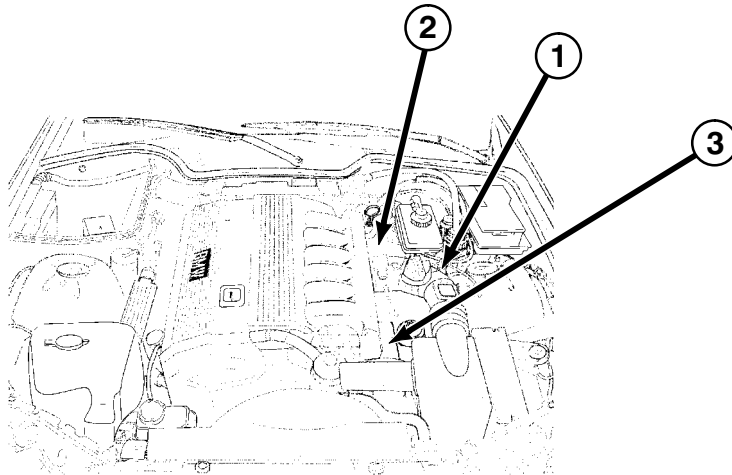


B6231  
OIL PRESSURE  
SWITCH

X6120  
X6231  
X6238


B6238  
OIL TEMPERATURE  
SENSOR

Y6120  
EVAPORATIVE  
EMISSION VALVE

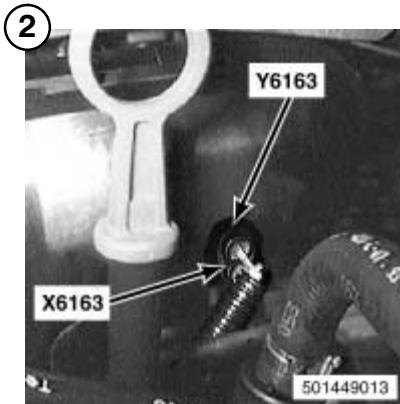





Y6163  
SECONDARY AIR  
PUMP VALVE

X6163

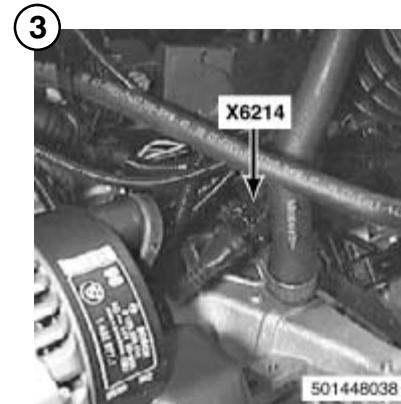




X6214

# COMPONENT LOCATION VIEWS

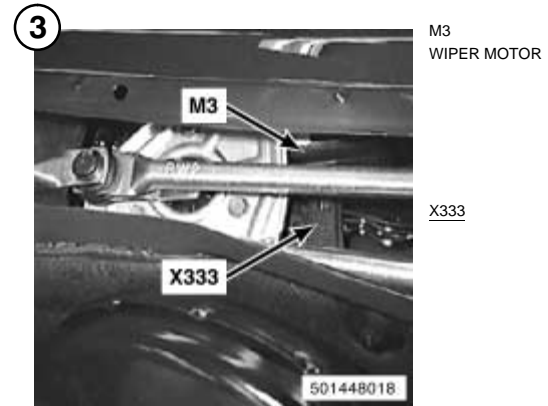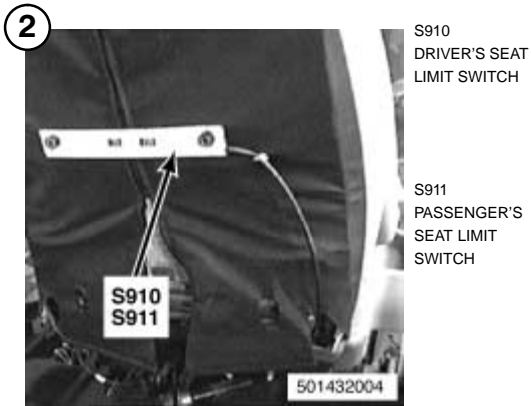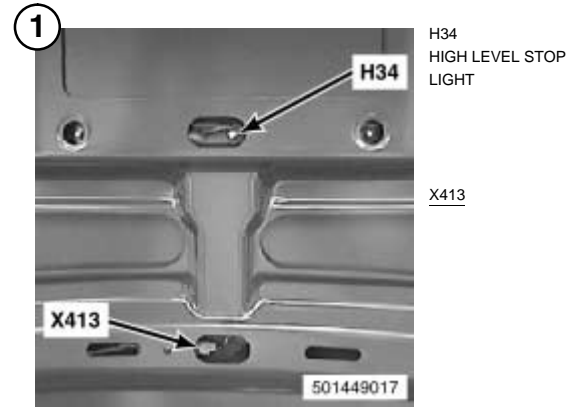
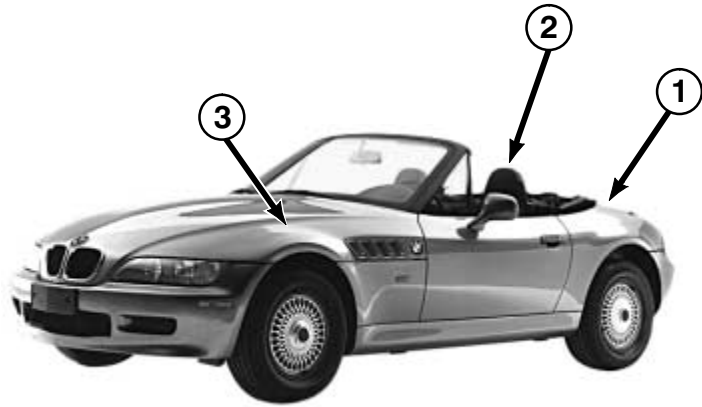




COMPONENT LOCATION VIEWS

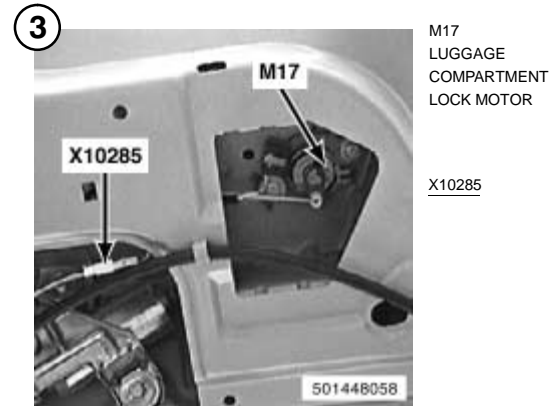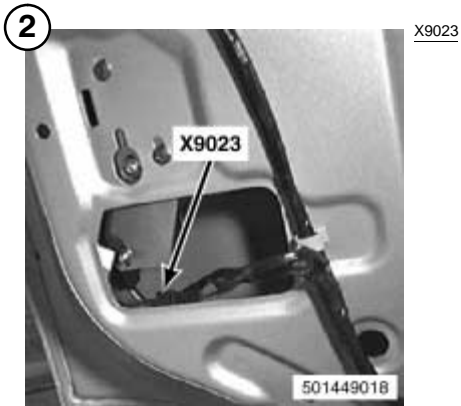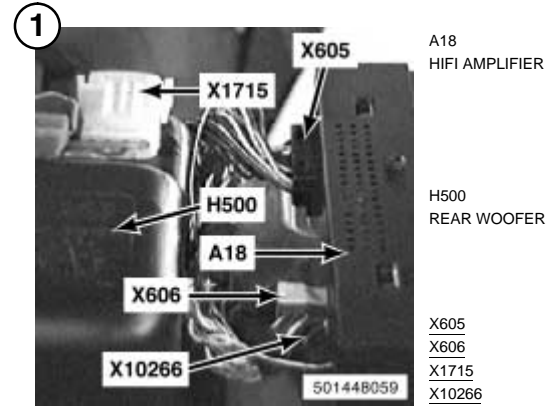


# COMPONENT LOCATION VIEWS

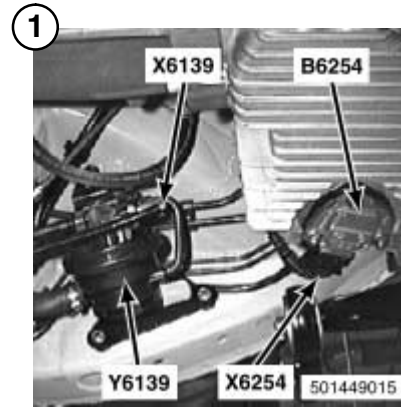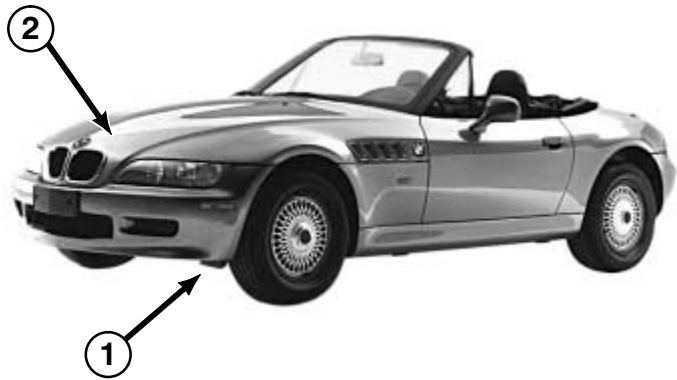

B6254  
THERMAL OIL  
LEVEL SWITCH

Y6139  
LEAKAGE DIAGNO-  
SIS PUMP

X6139  
X6254

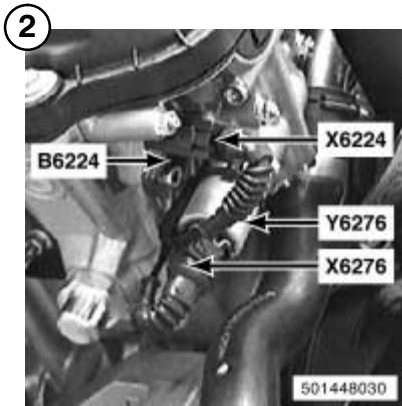

B6224  
CAMSHAFT  
POSITION SENSOR  
2 (OUTLET)

Y6276  
VARIABLE CAM-  
SHAFT CONTROL  
VALVE 2 (OUTLET)

X6224  
X6276



# 8000.0 SPLICE LOCATION VIEWS

Z3

SPLICE	HARNESS	PAGE NUMBER	SPLICE	HARNESS	PAGE NUMBER
X181–X185	BODY	8000.0-03	X849–X851	DRIVER'S DOOR	8000.0-04
X188	BODY	8000.0-04	X876–X877	RADIO/HIFI/CD	NOT SHOWN
X189	IHKS	NOT SHOWN	X878–X888	BODY	8000.0-03
X191–X197	BODY	8000.0-04	X942	PASSENGER'S DOOR	8000.0-04
X203	BODY	8000.0-03	X985	IHKS	NOT SHOWN
X213	BODY	8000.0-04	X1015–X1019	BODY	8000.0-03
X216–X223	BODY	8000.0-03	X1022–X1027	BODY	8000.0-03
X245–X246	BODY	8000.0-03	X1028–X1029	BODY	8000.0-04
X276	BODY	8000.0-03	X1036–X1047	BODY	8000.0-03
X443	BODY	8000.0-03	X1055	BODY	8000.0-04
X445	BODY	8000.0-03	X1066–X1076	BODY	8000.0-03
X449	BODY	8000.0-04	X1079	BODY	8000.0-04
X450	BODY	8000.0-03	X1091	BODY	8000.0-04
X453–X465	BODY	8000.0-04	X1100–X1115	BODY	8000.0-03
X470	BODY	8000.0-03	X1152–X1164	BODY	8000.0-03
X530	BODY	8000.0-03	X1168–X1169	BODY	8000.0-03
X576–X595	BODY	8000.0-03	X1182	BODY	8000.0-04
X697–X699	BODY	8000.0-03	X1186	BODY	8000.0-03
X704	CONSOLE INSTRUMENTS	NOT SHOWN	X1214	BODY	8000.0-03
X805	BODY	8000.0-04	X1225	BODY	8000.0-04
X806	BODY	8000.0-03	X1234–X1235	BODY	8000.0-04
X814–X818	IHKS	NOT SHOWN	X1236	BODY	8000.0-03
X824–X830	RADIO/HIFI/CD	NOT SHOWN	X1258	BODY	8000.0-03

03/00

8000.0-00

1999



## SPLICE LOCATION VIEWS

SPLICE	HARNESS	PAGE NUMBER	SPLICE	HARNESS	PAGE NUMBER
X1263	BODY	8000.0-04	X6832–X6836	M52 ENGINE (Z3 VERSIONS)	8000.0-05
X1264	BODY	8000.0-03	X6863–X6868	S52 ENGINE (M VERSIONS)	8000.0-06
X1280	BODY	8000.0-03	X6900	M52 ENGINE (Z3 VERSIONS)	8000.0-05
X1429–X1435	IHKS	NOT SHOWN	X6960–X6965	M52 ENGINE (Z3 VERSIONS)	8000.0-05
X1608	BODY	8000.0-04	X8000–X8015	S52 ENGINE (M VERSIONS)	8000.0-06
X1610–X1616	BODY	8000.0-03	X8038–X8051	S52 ENGINE (M VERSIONS)	8000.0-06
X1617–X1618	BODY	8000.0-04	X8071–X8074	S52 ENGINE (M VERSIONS)	8000.0-06
X1620–X1625	BODY	8000.0-03	X8073	M52 ENGINE (Z3 VERSIONS)	8000.0-05
X1682	BODY	8000.0-03	X8103	S52 ENGINE (M VERSIONS)	8000.0-06
X1683–X1894	BODY	8000.0-03	X8564–X8565	M52 ENGINE (Z3 VERSIONS)	8000.0-05
X1893–X1894	BODY	8000.0-03	X9454	BODY	8000.0-03
X2233	BODY	8000.0-03	X9806	CONSOLE INSTRUMENTS	NOT SHOWN
X6411–X6415	S52 ENGINE (M VERSIONS)	8000.0-06	X9992–X9993	DRIVER'S SEAT	NOT SHOWN
X6420	S52 ENGINE (M VERSIONS)	8000.0-06	X9996–X9997	PASSENGER'S SEAT	NOT SHOWN
X6458	M52 ENGINE (Z3 VERSIONS)	8000.0-05	X10008	BODY	8000.0-03
X6458–X6460	S52 ENGINE (M VERSIONS)	8000.0-06	X10009	BODY (Z3 VERSIONS)	8000.0-03
X6460	M52 ENGINE (Z3 VERSIONS)	8000.0-05	X10009	BODY (M VERSIONS)	8000.0-04
X6475	S52 ENGINE (M VERSIONS)	8000.0-06	X10014–X10048	BODY	8000.0-03
X6492	S52 ENGINE (M VERSIONS)	8000.0-06	X10064	BODY	8000.0-04
X6810	S52 ENGINE (M VERSIONS)	8000.0-06	X10126	BODY	8000.0-03
X6820–X6822	S52 ENGINE (M VERSIONS)	8000.0-06	X10189	BODY	8000.0-03
X6830–X6835	S52 ENGINE (M VERSIONS)	8000.0-06	X10464	RADIO/HIFI	NOT SHOWN
X6849	S52 ENGINE (M VERSIONS)	8000.0-06	X10468–X10469	BODY	8000.0-03



Z3

## SPLICE LOCATION VIEWS


---

SPLICE	HARNESS	PAGE NUMBER
X11212	BODY	8000.0-03
X11264	BODY	8000.0-03
X11291	BODY	8000.0-04
X11337–X11353	BODY	8000.0-03
X11355	BODY	8000.0-04
X11357	BODY	8000.0-03
X13007	BODY	8000.0-03
X13011–X13047	BODY	8000.0-04
X13134	BODY	8000.0-03
X13304	BODY	8000.0-04
X13281	BODY	8000.0-03
X18061	BODY	8000.0-03
X18510	BODY	8000.0-03
X19513	RADIO/HIFI/CD	NOT SHOWN
X19525–X19526	BODY	8000.0-03
X64109	BODY	8000.0-03
X64119	BODY	8000.0-03
X64129	BODY	8000.0-03
X64591	BODY (Z3 VERSIONS)	8000.0-03
X64591	BODY (M VERSIONS)	8000.0-04
X68309	IHKS	NOT SHOWN



# SPLICE LOCATION VIEWS

## BODY HARNESS

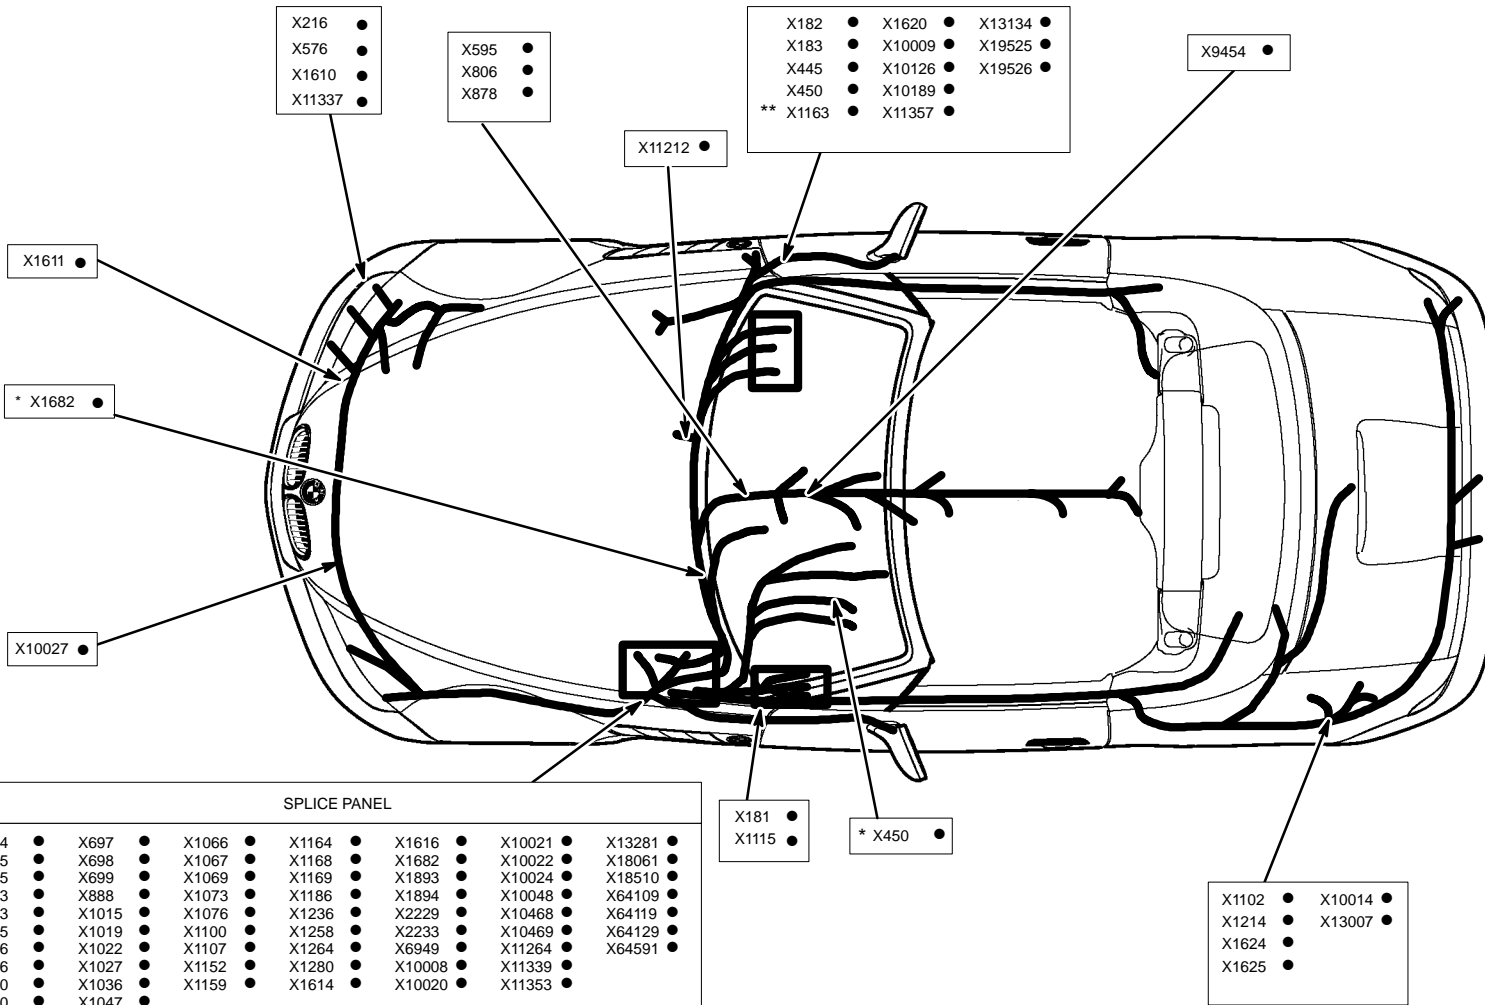


\*\* Z3 VERSIONS  
 \*\* M VERSIONS



# SPLICE LOCATION VIEWS

## BODY HARNESS

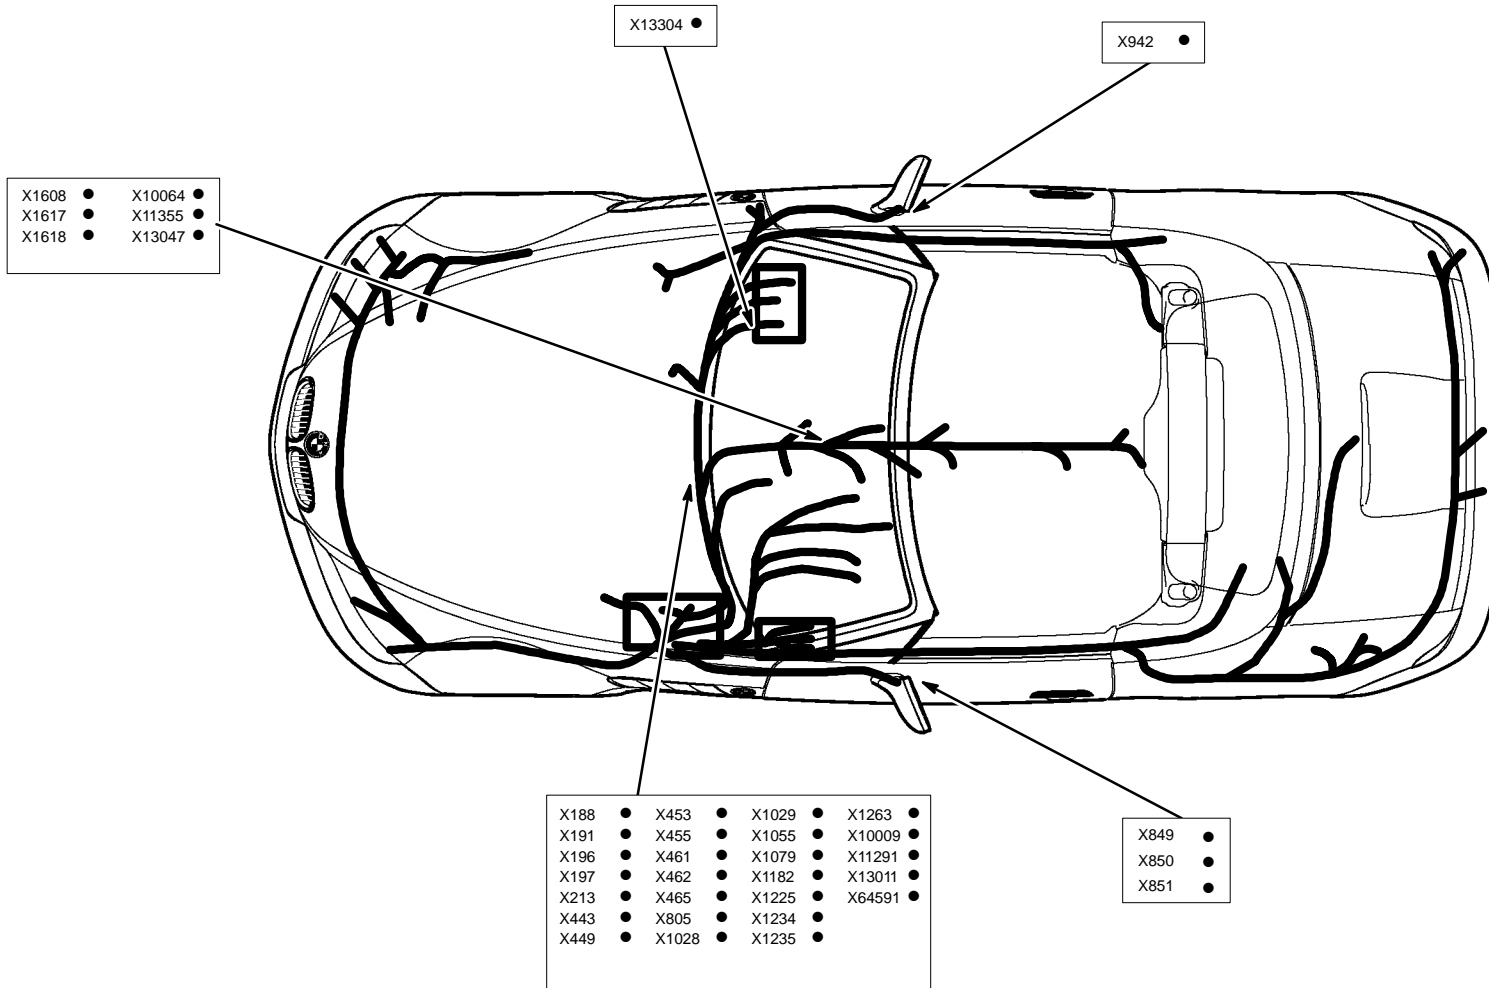




# SPLICE LOCATION VIEWS

Z3 VERSIONS

## ENGINE HARNESS M52

Z3

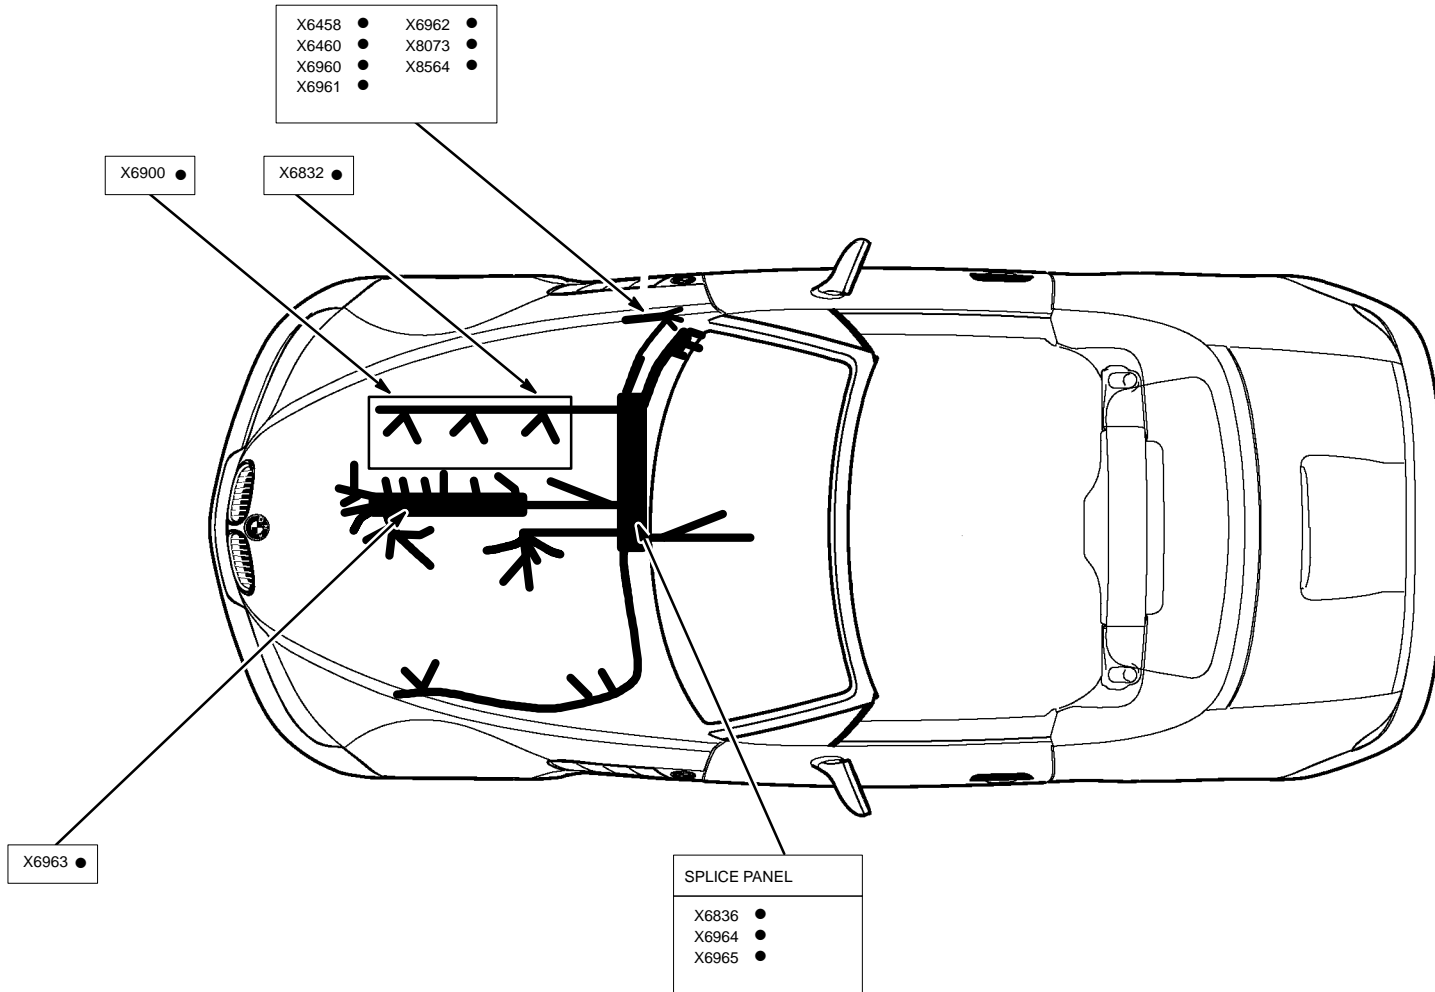






# SPLICE LOCATION VIEWS

M VERSIONS

## ENGINE HARNESS S52

Z3

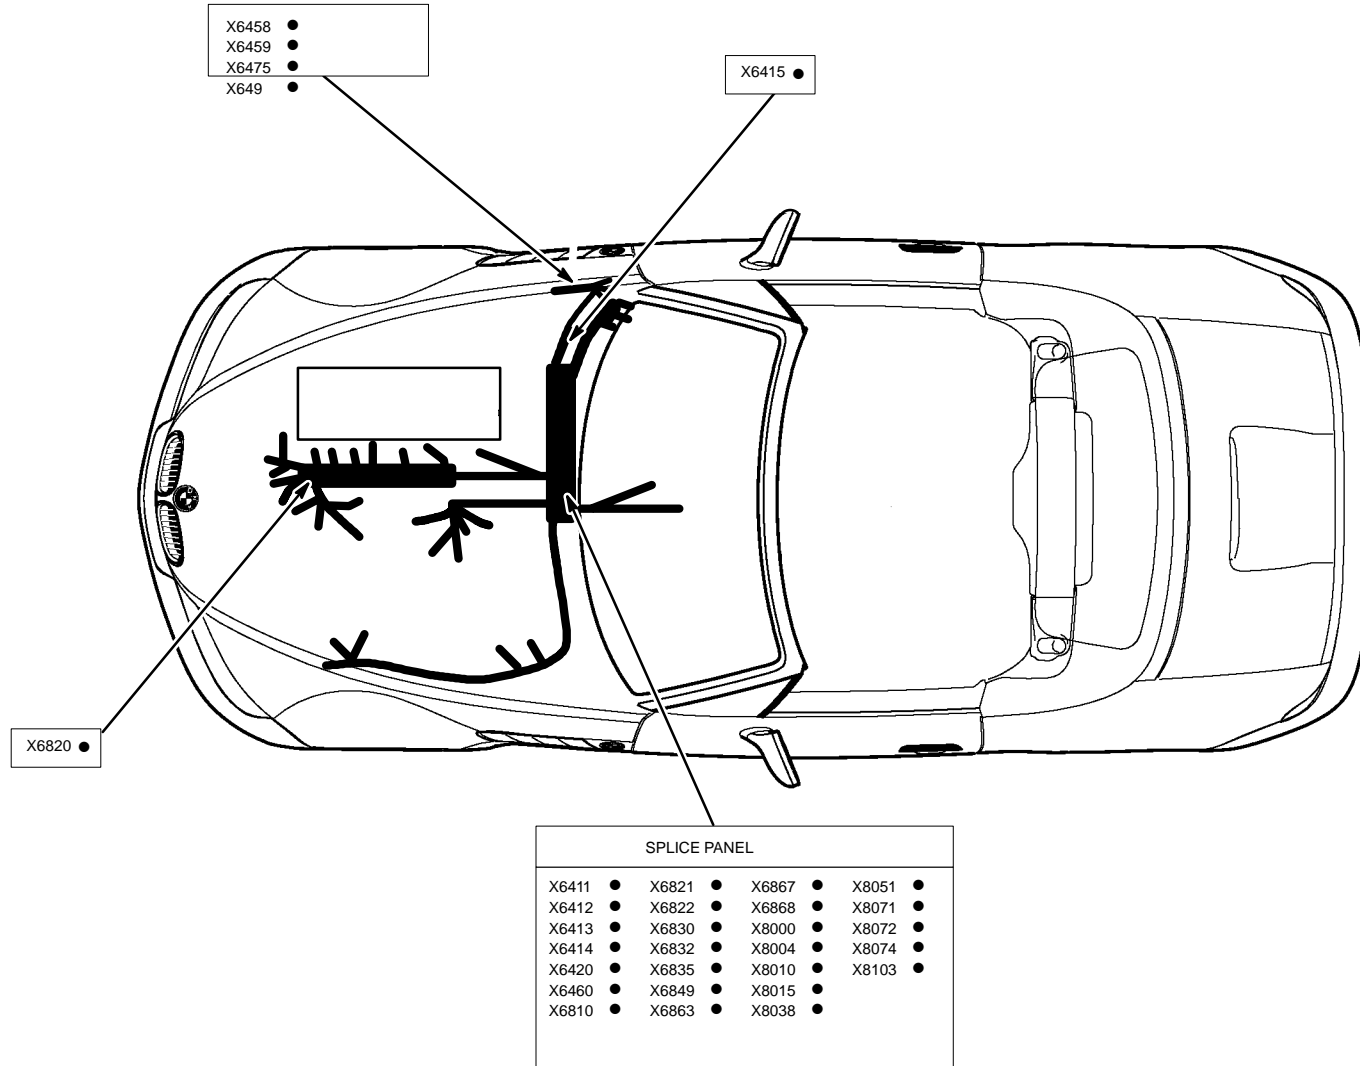



Z3

# 8500.0 CONNECTOR VIEWS

FIG. 1

B880001.00

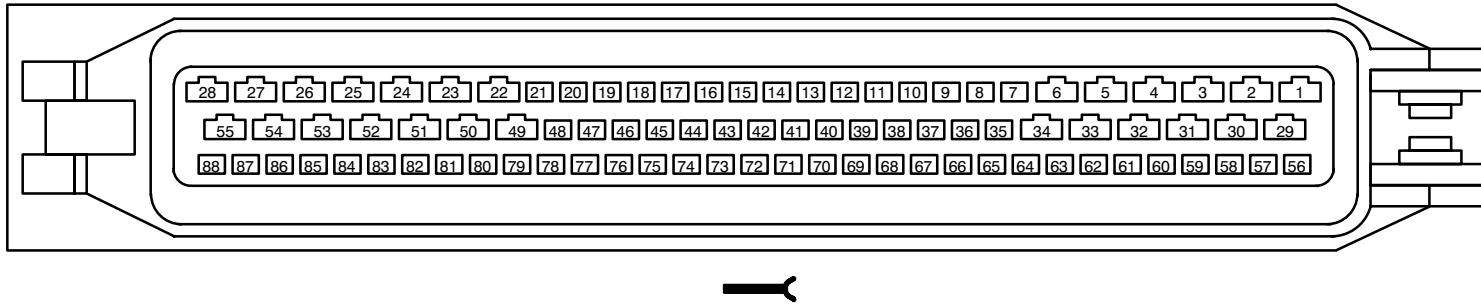


FIG. 2

B040030.00


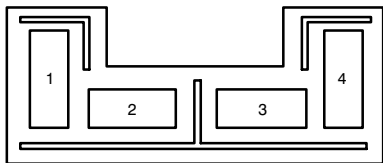


FIG. 3

 B260005.00






Z3

# CONNECTOR VIEWS


**FIG. 1**

B030024

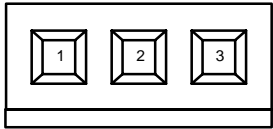


**FIG. 2**

B030046.00

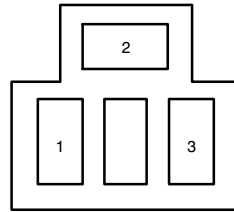

**FIG. 3**

B120001.01

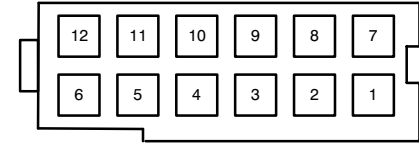


**FIG. 4**

B090008.00



**FIG. 5**

B120002.02

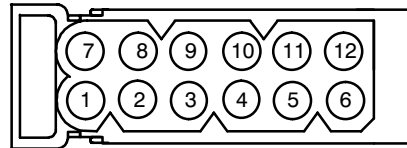

**FIG. 6**

B120015

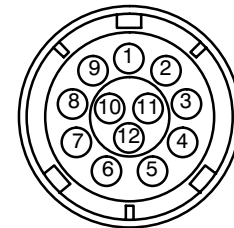


FIG. 1

B080002.00

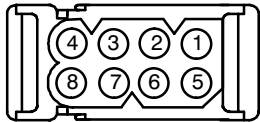


FIG. 2

B170001.00

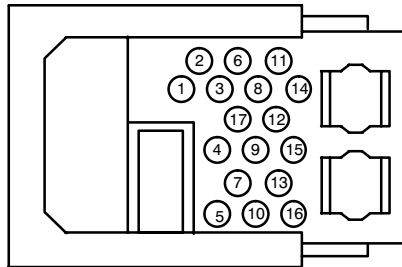


FIG. 3

B100008.00

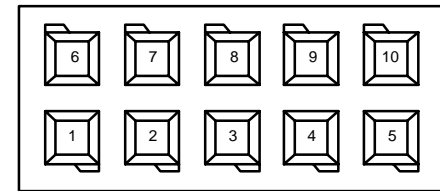


FIG. 4

B120004.01

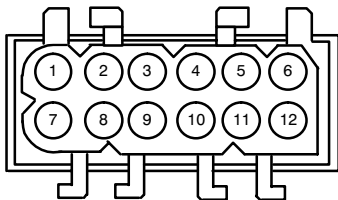


FIG. 5

B030004.01

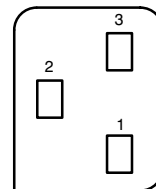


FIG. 6

B050003.00

 


FIG. 1

B040004.00

 


FIG. 2

B520001.00

52	51	50	49	48	47	46	45	44	43	42	41	40
39	38	37	36	35	34	33	32	31	30	29	28	27
26	25	24	23	22	21	20	19	18	17	16	15	14
13	12	11	10	9	8	7	6	5	4	3	2	1



FIG. 3

B080001.00

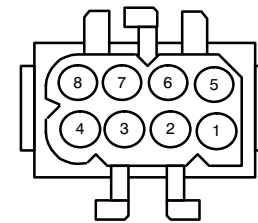


FIG. 4

B090002.00

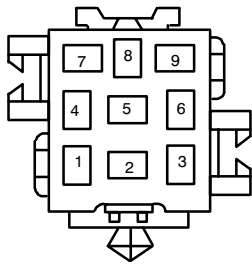


FIG. 5

B260002.01


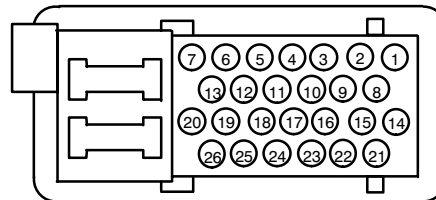


FIG. 6

 B060001.02






# CONNECTOR VIEWS

Z3


**FIG. 1**

B200003.00

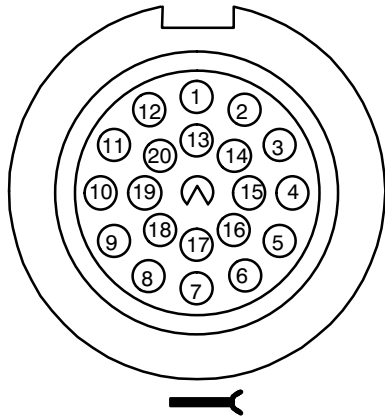

**FIG. 2**

B240002.00

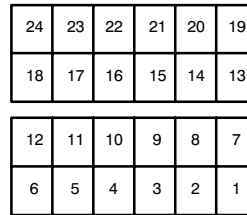


**FIG. 3**

B030003.00




**FIG. 4**

B250001.02

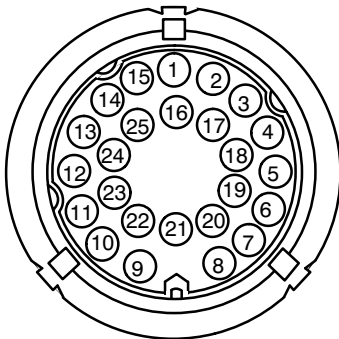


**FIG. 5**

B060019.03

 

**FIG. 6**


B060036.00

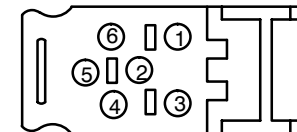

# CONNECTOR VIEWS


**FIG. 1**

B150002.00

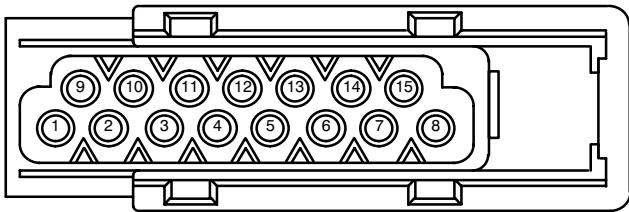


**FIG. 2**

B100014.00

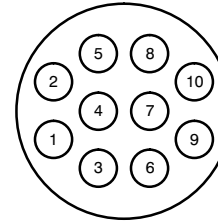


**FIG. 3**

B060038.00

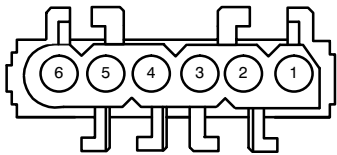


**FIG. 4**

B040027.00

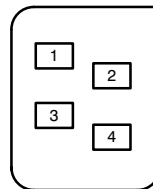

**FIG. 5**

B030006.00

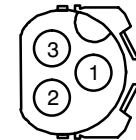

# CONNECTOR VIEWS

FIG. 1

B0400028.00

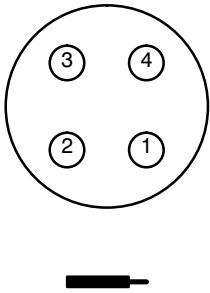


FIG. 2

B080020.00

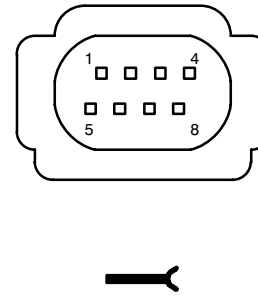


FIG. 3

B0300044.00

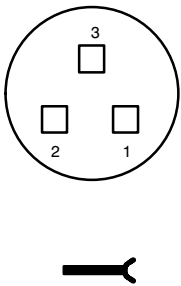


FIG. 4

B030049.00


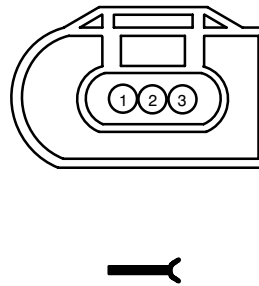


FIG. 5

B060041.00



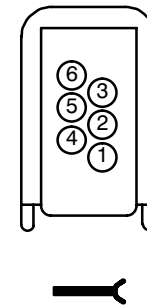

# CONNECTOR VIEWS

FIG. 1

B040026

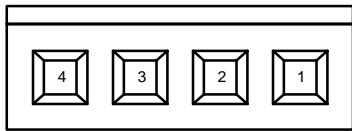


FIG. 2

B120006.00

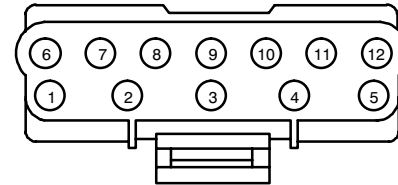


FIG. 3

B180000.00

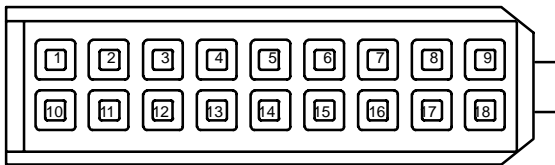


FIG. 4

B060037.00


 


FIG. 5

B030042.00



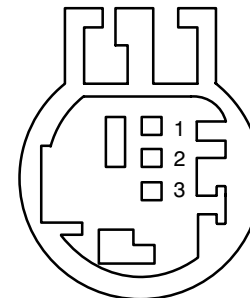

# CONNECTOR VIEWS

Z3

FIG. 1

B160002.00

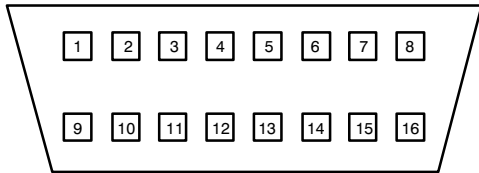


FIG. 2

B060013.00

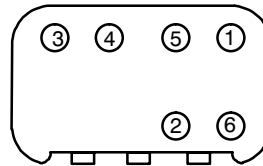


FIG. 3

B080013.00


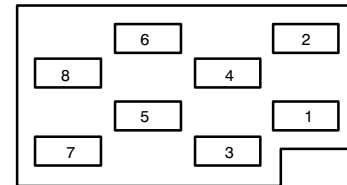


FIG. 4

B830001.00



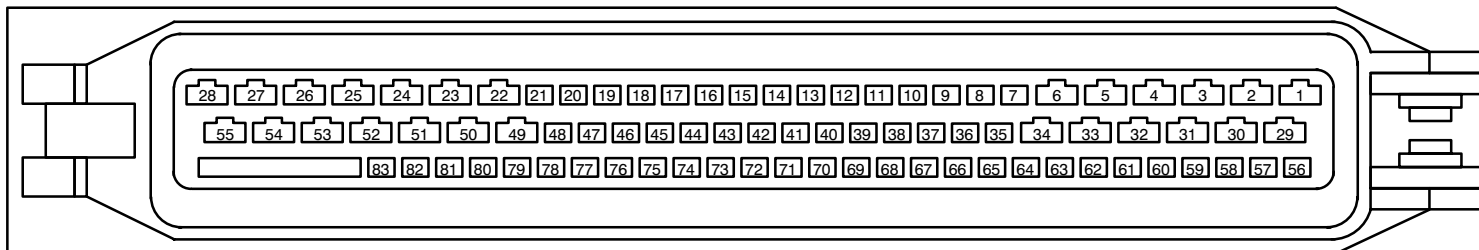

Z3

# CONNECTOR VIEWS

**FIG. 1**


B400000.00

31	32	33	34	35	36	37	38	39	40
21	22	23	24	25	26	27	28	29	30
11	12	13	14	15	16	17	18	19	20
1	2	3	4	5	6	7	8	9	10




**FIG. 2**

B060043.00

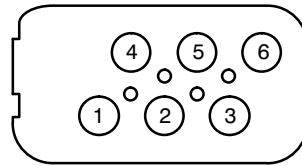


**FIG. 3**

B070012.00

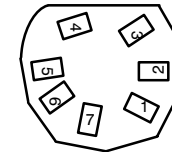


**FIG. 4**

B250004.00

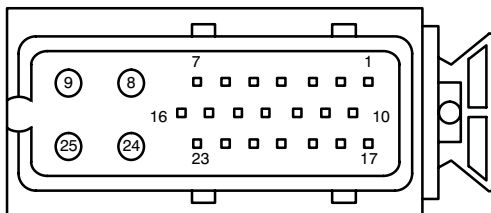

**FIG. 5**

 B030015.08





Z3

# CONNECTOR VIEWS

FIG. 1

B030048a

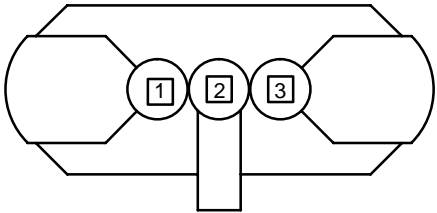


FIG. 2

B030018.02

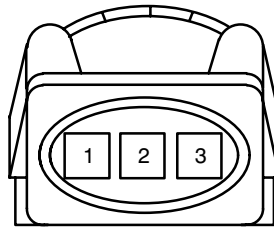


FIG. 3

B040023.02

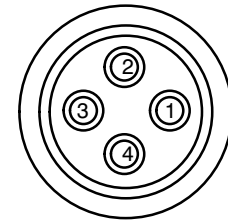


FIG. 4

B040023.01


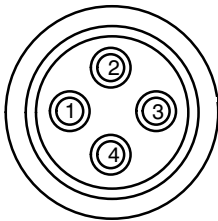


FIG. 5

 B030036.01





Z3

# CONNECTOR VIEWS

FIG. 1

B030022.00

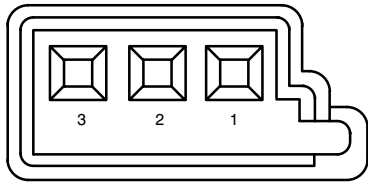


FIG. 2

B500000.00

 


FIG. 3

B060042

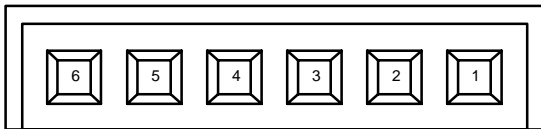


FIG. 4

B160001.00

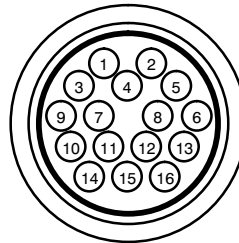


FIG. 5

B100004.02

