
**Special tools required:**

- 00 5 500
- 11 2 340
- 11 2 350

(clutch removed)

Remove thrust bearing with special tool 11 2 340 .

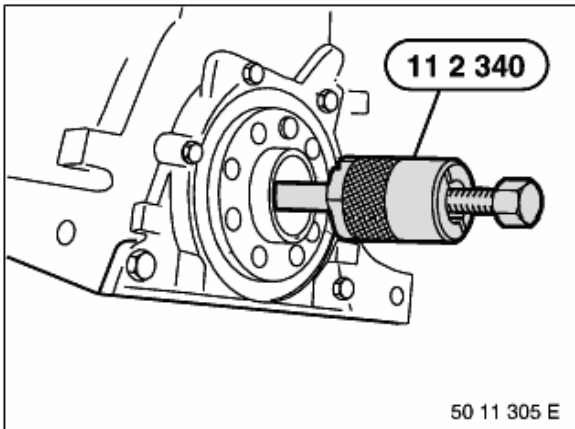

Install new thrust bearing and drive firmly home with special tool 11 2 350 in conjunction with special tool 00 5 500 .

