



Drive out cheese-head bolts using a plastic hammer. Remove washers.

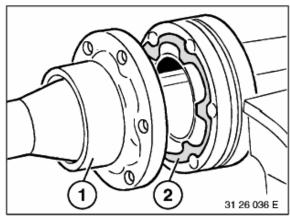

Pull or knock off end cover (1).

Watch out for seal (2) between constant-velocity joint and end cover.


Check grease filling, adding grease if necessary, refer to Technical Data.

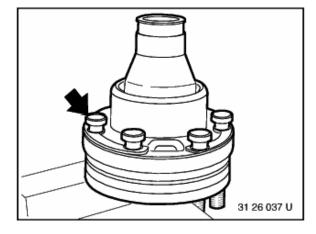

Mount new end cover and boot on propeller shaft or on constant-velocity joint.

Install washers and cheese-head bolts.

Drive in cheese-head bolts to fit tightly using a plastic hammer.

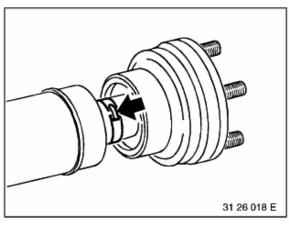

Pull boot onto propeller shaft.

Install hose clamp on boot and tighten.