
62 11 070 Replace encoding connector

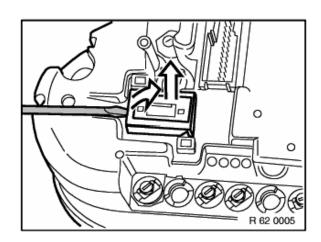


compact

Removing instrument cluster,

siehe 62 21 000

Break open retaining frame with screwdriver and remove encoding connector.

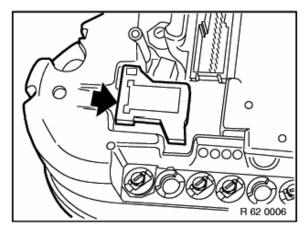

Insert encoding connector and clip in new retaining frame.

Caution!

The new encoding connector must be checked against the instrument cluster,

refer to 62 10 000

Tests 15 and 09