


Note:


If the drive belt is to be subsequently reused:

Mark direction of travel and reinstall drive belt in same direction of travel.

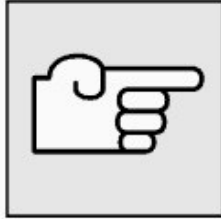

Remove fan clutch with fan impeller.

Remove A/C compressor drive belt.

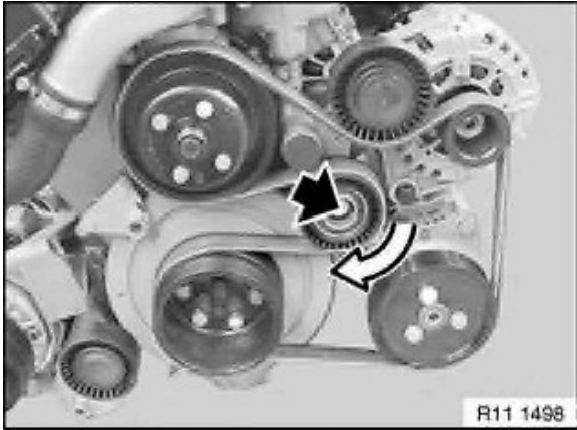

Place on screw connection of tensioning wheel and compress belt tensioner slowly and carefully.

Hold belt tensioner under tension, remove drive belt.

Caution!

If contaminated with hydraulic fluid: Replace drive belt.

Installation:

Check drive belt for coolant and oil residue and replace if necessary.



Installation:

Fit drive belt and check if it is correctly located on pulleys.