*Note:*


When the main flow oil-filter cover is released, the oil flows from the oil-filter housing back into the sump.

Unfasten oil filter cover.


*Installation:*

Replace sealing ring.

Tightening torque 11 42 2AZ.

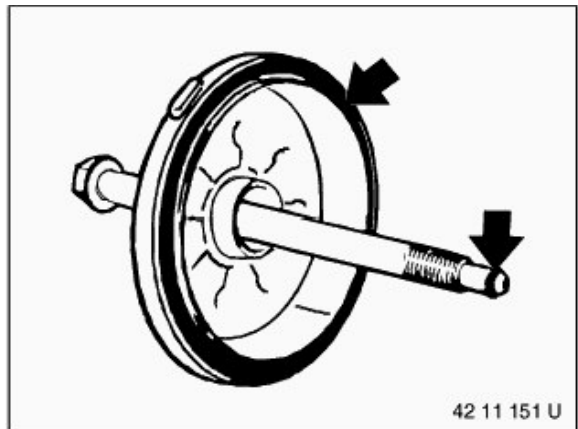*Installation:*

Replace sealing ring in oil-filter cover and sealing ring on bolt.

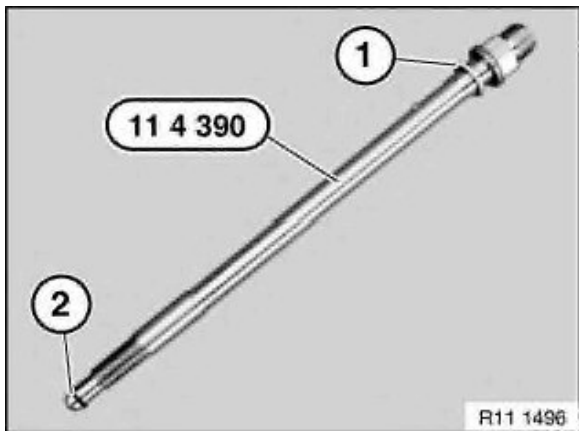

Check sealing rings (1 and 2) on special tool 11 4 390, replace if necessary.



Insert special tool 11 4 390 and tighten down oil filter cover.



Connect special tools 13 3 061 / 063.

Start engine and check engine oil pressure.