


Turn off ignition.

Remove heater bulkhead.

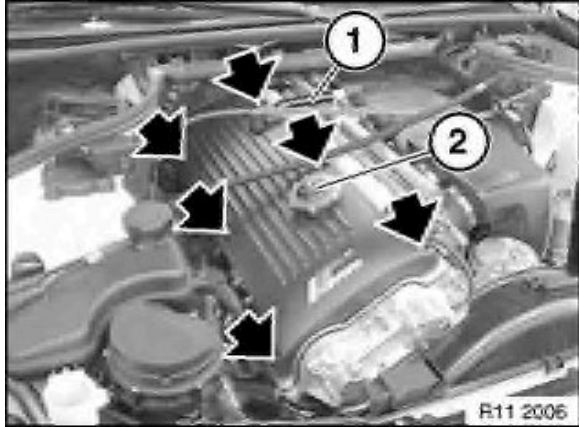


Remove engine vent (1).


Release screws.

Unscrew oil filler cap (2).


Remove cover.

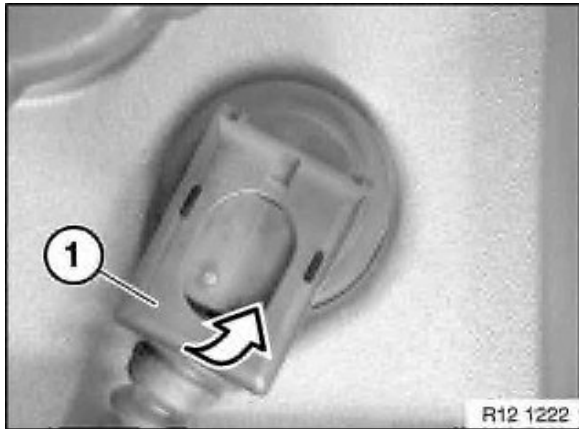

Unlock plug lock (1) for ignition coil.

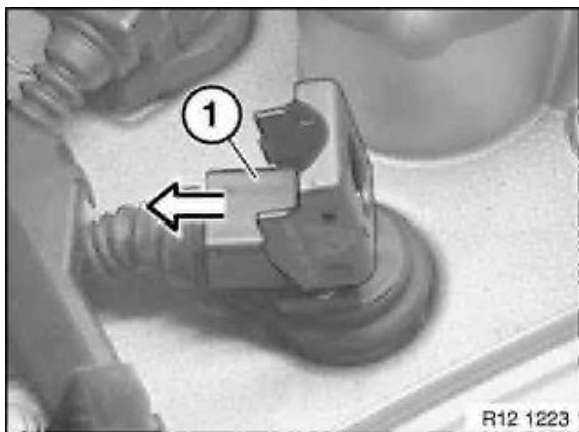

Detach plug (1) from ignition coil.

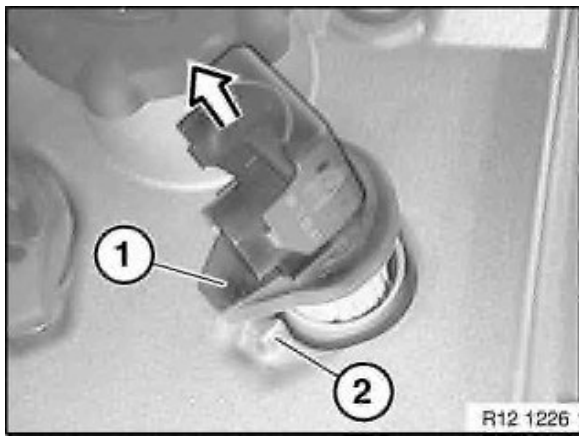


Withdraw ignition coil.

This removal procedure is applicable to all ignition coils.

*Installation:*

The lug on the cylinder head (2) must be inserted in the opening on the underside (1) of the rubber seal.

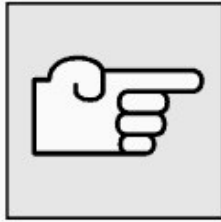

*Note:*

Interrogate fault memory of DME control unit.

Check stored fault messages.

Rectify faults.

Then clear fault memory.