



Turn off ignition.

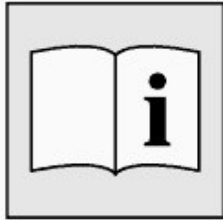

Remove intake air manifold.

Remove cable strip for fuel injectors with special tool 12 1 120.
This operation is described in the section "Removing and installing a fuel injector".

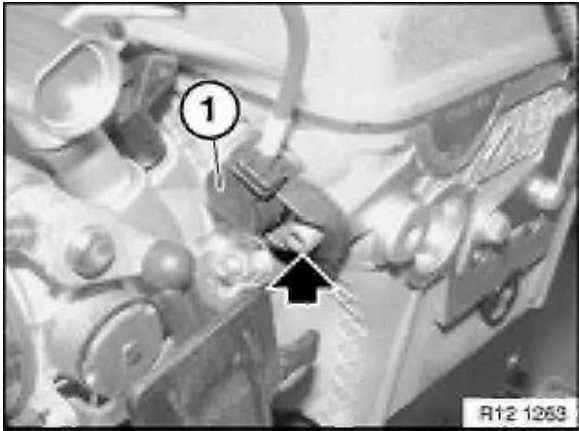

Release screw on pulse generator (1).


Disconnect pulse generator plug connection on connector strip.

Remove pulse generator (1).

Installation:

Tightening torque, 12 14 3AZ.

Check sealing ring of pulse generator for possible damage,
replace if necessary.

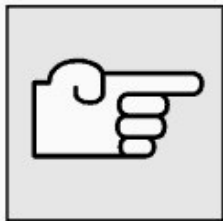

Note:

Interrogate fault memory of DME control unit.

Check stored fault messages.

Rectify faults.

Then clear fault memory.