



Turn off ignition.

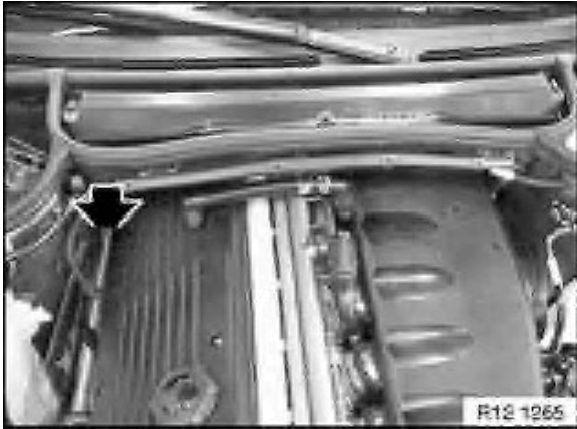

*Note:*

The installation location of the pulse generator for exhaust camshaft is at the rear of the cylinder head on the exhaust side.

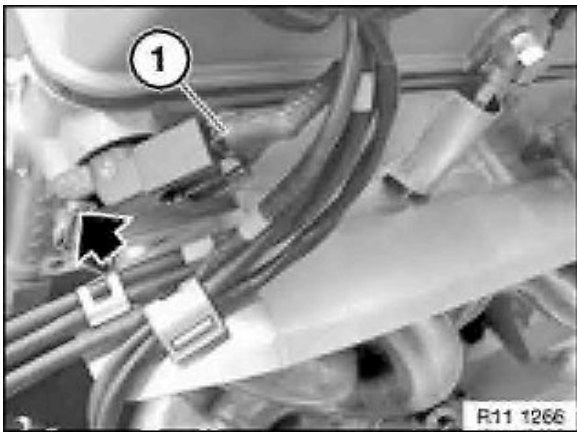

*Note:*

For a better overview, this work step is shown on an engine that has been removed.

Unlock plug (1) and detach from pulse generator.


Release screw on cylinder head.

Remove pulse generator.

*Installation:*

Tightening torque, 12 14 3AZ.

Check sealing ring for possible damage, replace if necessary.

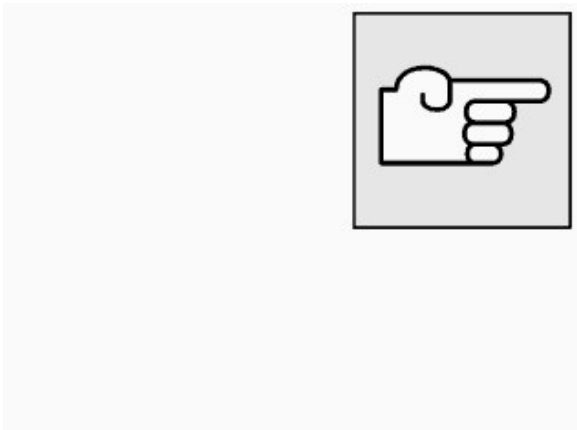

*Note:*

Interrogate fault memory of DME control unit.

Check stored fault messages.

Rectify faults.

Then clear fault memory.