


Note:

Alternator removed


Unscrew capacitor and cover.

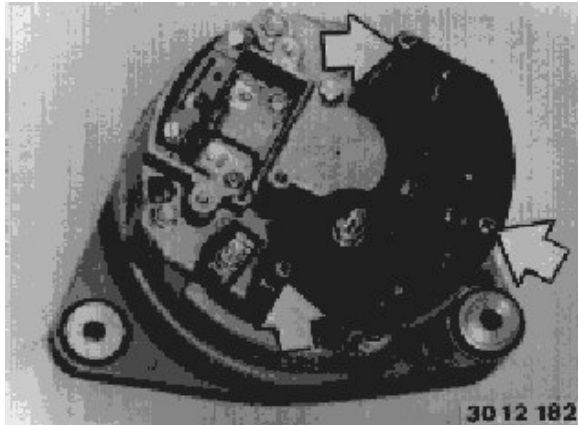

Unsolder stator winding on diode plate

Caution!

Excessive heat from soldering iron would destroy diodes.

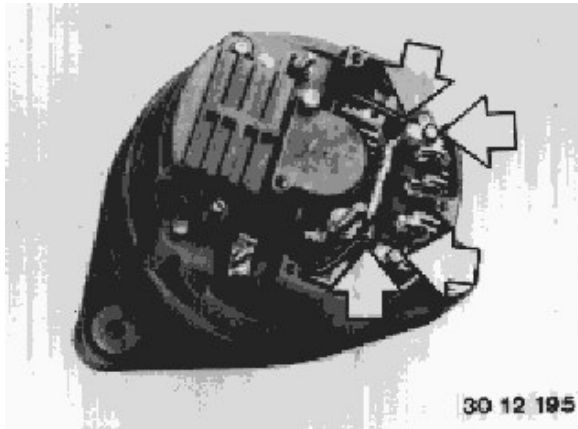

Unscrew screws and take off diode plate.

Installation:

Check that insulating sleeves are in satisfactory condition.

