



Disconnect vacuum hose on intake manifold and non-return valve (1).

Installation:

Replace hose clamp if necessary.