



Dimensions in mm

Tolerance: dimension over 1000 mm  $\pm$  2.0 mm

Tolerance: dimension up to 1000 mm  $\pm$  1.0 mm

Note:

Only use the indicated values for a rough inspection.

Repairs can only be carried out correctly with the approved set of attachments and with straightening bench.

- |   |  |   |                                   |
|---|--|---|-----------------------------------|
| A | Front impact absorber support, without attached front trim panel | K | Top front hinge shaft             |
| B | Front spring support   | L | Lower front hinge shaft           |
| C | Vehicle jack front take-up point                                 | M | Hinge shaft, rear top             |
| D | Vehicle jack rear take-up point                                  | U | Supports for shock absorber       |
|   |  | V | Impact absorber support, rear     |
|   |  | W | Rear spring support (spring seat) |