



- | | |
|---|--|
| <p>A Front impact absorber support, without attached front trim panel</p> <p>B Front spring support</p> <p>O Front axle, mount, front</p> <p>P Front axle mount, rear</p> | <p>R Hole in engine carrier \varnothing12 mm, with M 10 threading</p> <p>Q Hole in engine carrier \varnothing10 mm, with M 8 threading</p> |
|---|--|

Dimensions in mm

Tolerance: dimension over 1000 mm \pm 2.0 mm

Tolerance: dimension up to 1000 mm \pm 1.0 mm

Note:

Only use the indicated values for a rough inspection.

Repairs can only be carried out correctly with the approved set of attachments and with straightening bench.