

Open trunk lid.


Remove inside wheel housing cover.

Remove retaining clip from side panel / bumper if necessary.


Remove finisher on B-pillar,
refer to 51 47 080

Remove finisher strip from front left rocker panel,
refer to 51 47 065

Remove rear antenna,
refer to 65 21 020

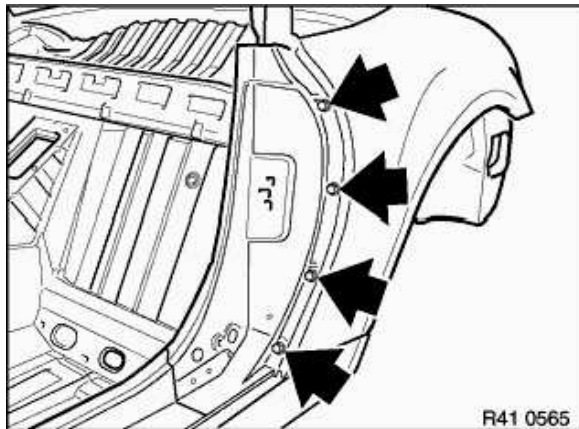

Retaining screws from rear side panel on B-pillar.

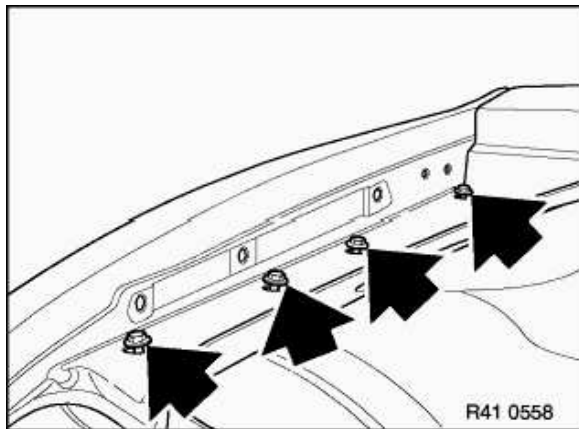


Caution!

Do not damage paintwork: insert cover between hinge of trunk lid and side panel.

Unfasten screws for hinge on trunk lid and place hinge on side panel.

Unfasten screws on rear side panel.

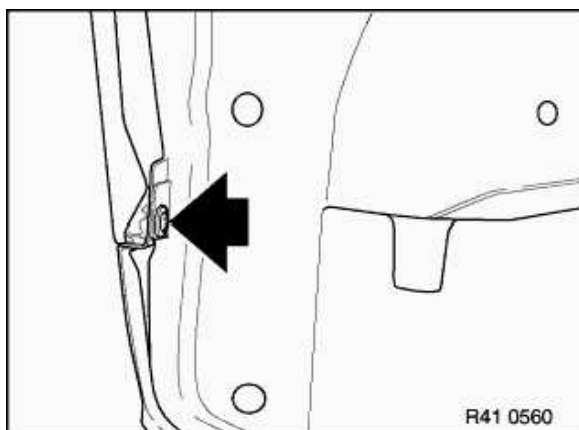

Unfasten screw for trim retainer on cover of side member and rear side panel.

Unfasten screw for retainer on side panel of rear wheel arch.
Remove rear side panel.

