


Removing and installing rear oddments box,
refer to 51 16 240


Unfasten seatbelt screw (1).

Installation:

Tightening torque, refer to Technical Data 72 11 1AZ

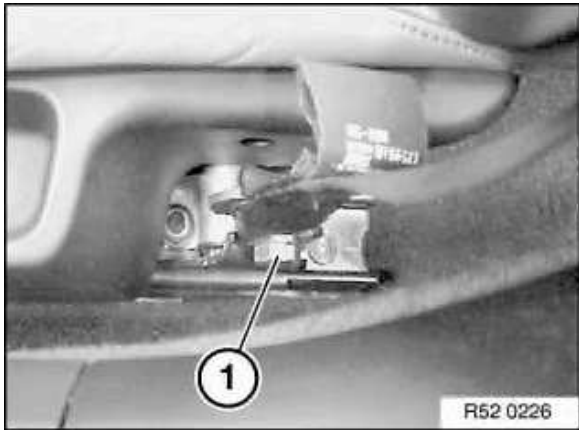

Unfasten cover cap (1) and screw.

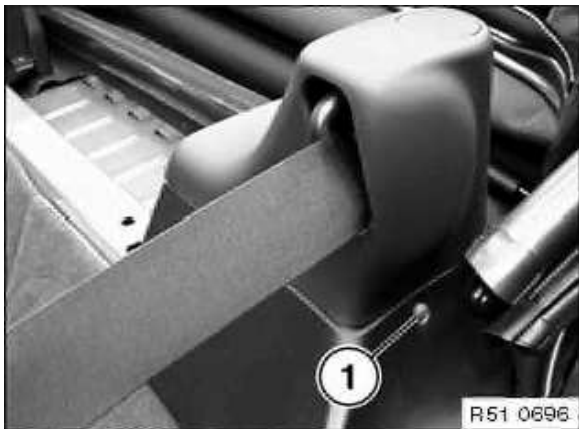

Remove caps (1) and screws. Pull out upper section of side trim panel (2) upward/forward over the seat belt roller (3).

