



Removing and installing / replacing left trunk wheel
housing trim,
refer to 51 47 151

Removing and installing / replacing right trunk wheel
housing trim
refer to 51 47 161


Removing and installing luggage compartment light,
refer to 63 21 080

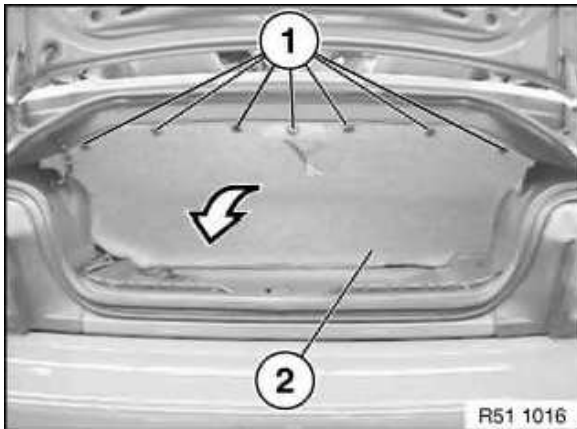

Version without HiFi system, without CD changer:
Unfasten clips (1) and remove trim (2) for luggage
compartment separating wall.

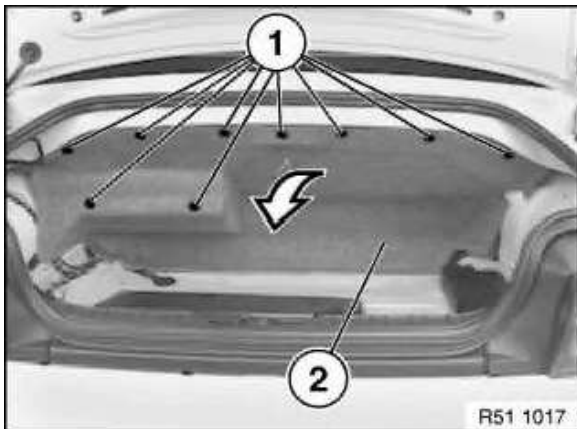

Version with HiFi system:
Unfasten clips (1) and remove trim (2) for luggage
compartment separating wall.

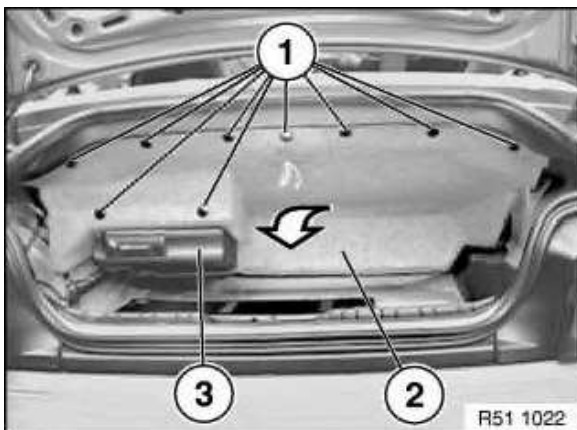

Version with CD changer (3):
Unfasten clips (1), lift out trim (2) for luggage compartment
separating wall of CD changer (3) and remove.