


Unfasten screws (1 .. 2) and remove underbody protection (3).

Installation:

First tighten screws (1) (danger of damage).

Center underbody protection (3) and tighten screws (2).

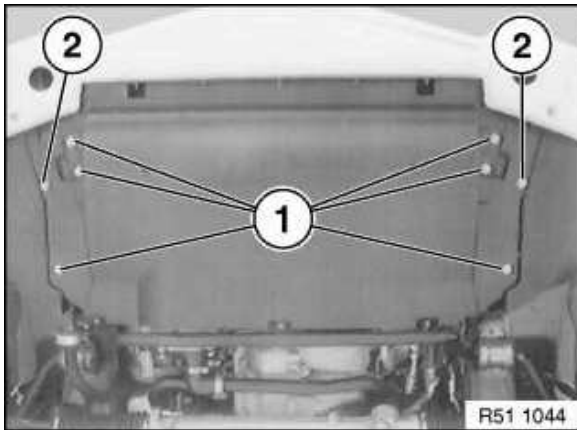

Only replace:

Unfasten screws (1) and lift off air guide (2).

