




Unscrew screw.

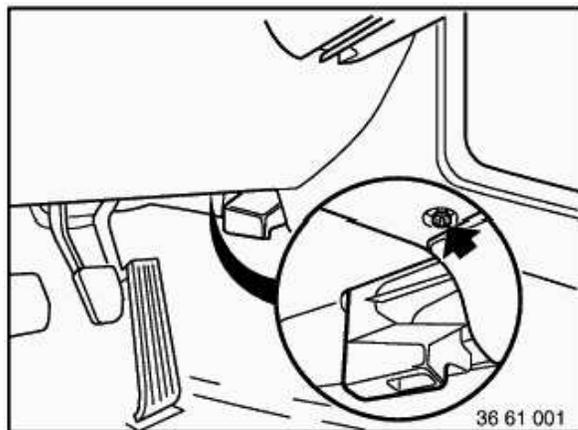


Unscrew screw.

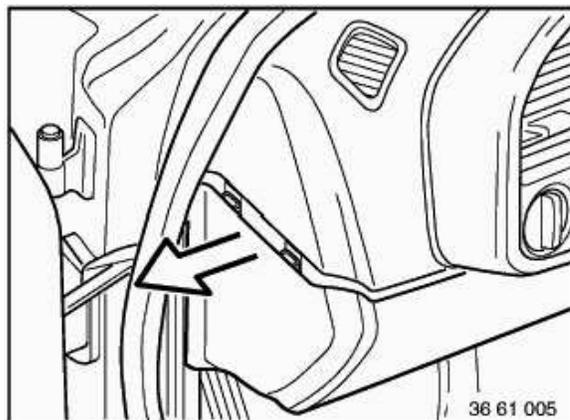

Pull bottom trim panel to the side out of the clips.

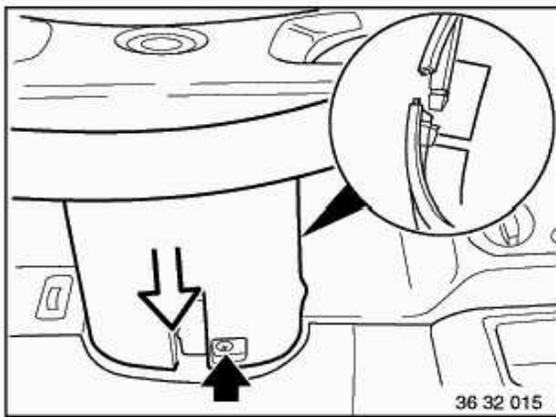

Remove screw and take off lower section of steering-column panelling.

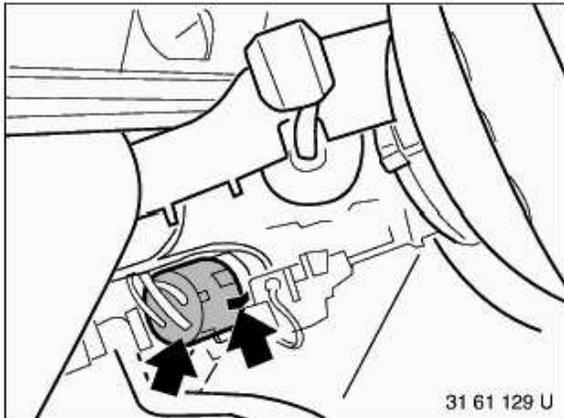

Unscrew headless screws on both sides, pull out switch.
Disconnect plug connection.

Installation:

Check position of ignition-start switch in relation to steering-wheel lock.

Check position of turn-indicator lever in relation to steering wheel.

Secure headless screws with varnish.

Caution!

After installation, carry out mechanical test (lock cylinder) and electric operational check (e.g ignition, radio, etc.).