



Brake-light-test switch is in same housing as brake-light switch.  
For removal and adjustment, refer to brake-light switch  
61 31 310.

Can be recognized on 4-pin connector.