

Remove radio,  
refer to 65 11 030

Unfasten heater controls and press inwards.

Loosen union nut of external temperature display through radio  
aperture and press display out forwards.



Mark connectors and pull off.



#### Installation:

Larger distance between edge and threading of union nut  
faces display. Install display vertically and brace union nut  
while tightening.

