


Removing and installing right glovebox,
refer to 51 16 360




Caution!

Note safety regulations for handling airbag modules and
pyrotechnical seatbelt tensioners,
refer to MG 72
Incorrect handling can activate airbag and result in injury.

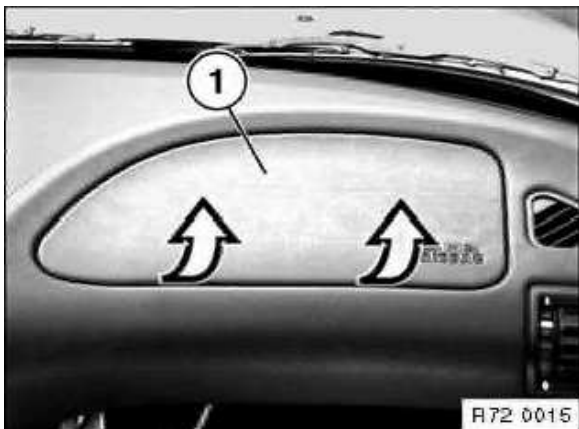

Lift cover (1) off passenger airbag.

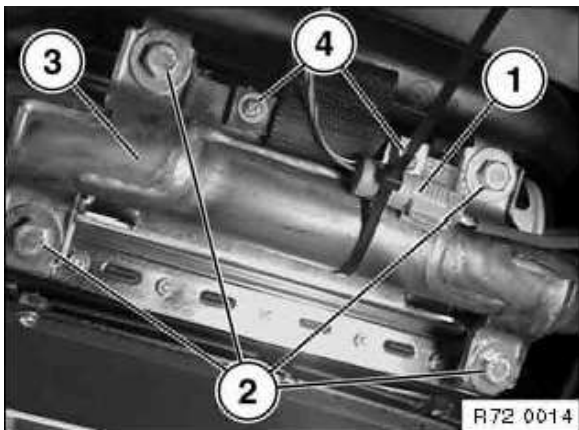

If necessary, unfasten cable tie for plug connection on airbag
module. Open lock on connector (1) by applying pressure to tab
and unfasten the connector.

Unfasten screws (2) on bracket (3) and remove airbag module.

Installation:

Tightening Torque for screws (2),
refer to Technical Data 72 12 8AZ.

If necessary, remove retaining strap for cover from passenger
airbag by unfastening screws (4) and remove cover.