

Caution!


Note safety regulations for handling airbag modules and pyrotechnical seatbelt tensioners,
refer to MG 72

Incorrect handling can activate airbag and result in injury.


Removing and installing front left or right door trim,
refer to 51 41 000

**Caution!**


Do not overstretch or damage locking clips otherwise.
Replace damaged locking clips.

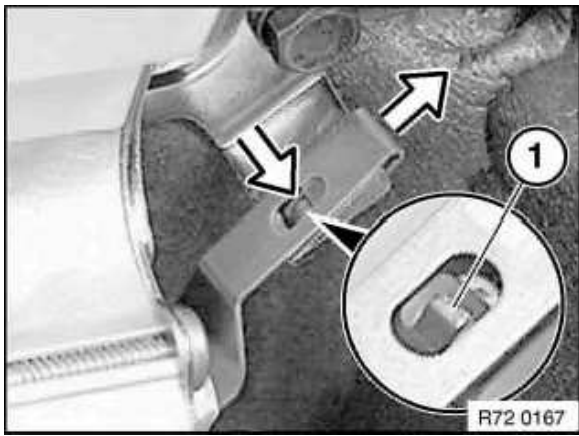


Take off locking clip.
To do so, open locking clip until lug (1) can be pulled out of catch.
Detach locking clip.

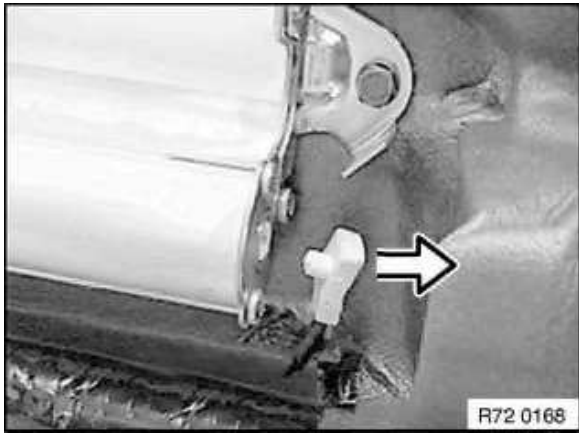


Pull off connectors.

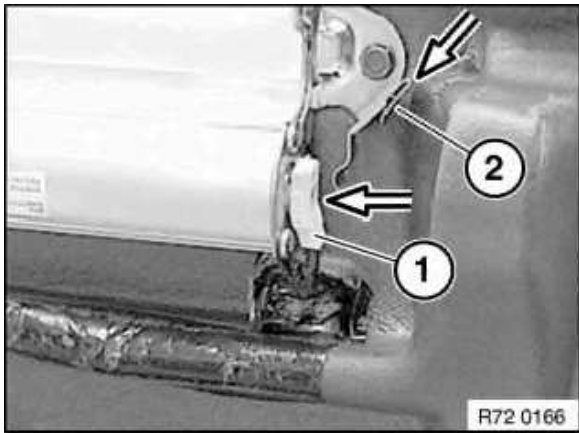

Installation:
Connect plug (1).
Push on locking clip (2).

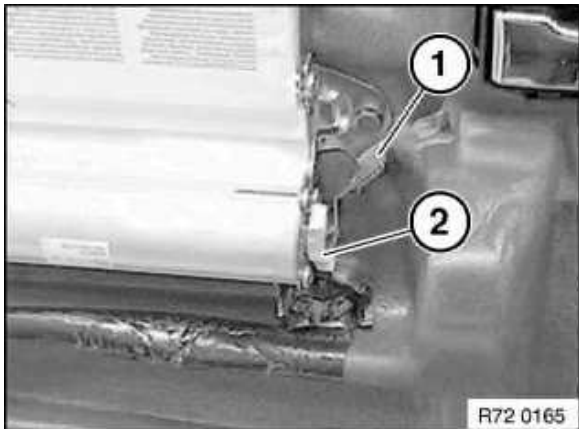

Installation:
Locking clip (1) must be snapped into place so that plug (2) cannot be detached!
Check that locking clip (1) is correctly secured.

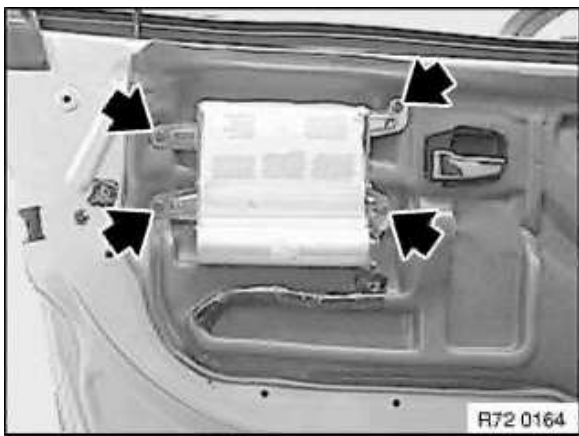

Unfasten screws.

Remove airbag module (3).

Installation:

Always replace micro-encapsulated screws!

Tightening Torque,
refer to Technical Data 72 12 1AZ