
**Special tools required:**

- 33 4 400
- 33 4 401
- 33 4 402
- 33 4 403
- 33 4 404
- 33 4 405
- 33 4 406
- 33 4 407

Detach wheel bearing inner race with special tool  
33 4 400 through groove in bearing inner race.

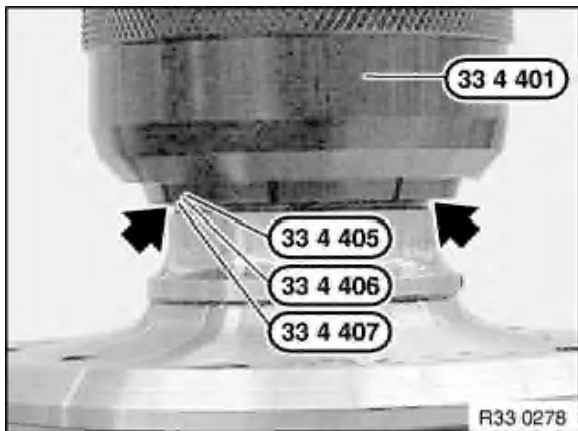


According to outside dia. of bearing inner race, special tool  
33 4 401 with:

33 4 405 for dia. 45 - 51 mm

33 4 406 for dia. 50 - 55 mm

33 4 407 for dia. 55 - 61 mm

in groove.

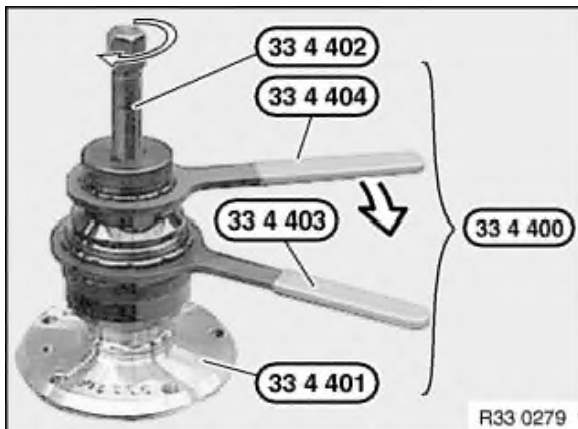

Compress special tool 33 4 401 with wrenches 33 4 403 and  
33 4 404 until special tool can still just be turned in groove.

Screw in special tool 33 4 402. Detach inner bearing race.