


Note:

Remove and install panel for instrument panel,
refer to Gr. 51 .

Remove brake light switch, if necessary remove clutch switch,
refer to Gr. 61 .

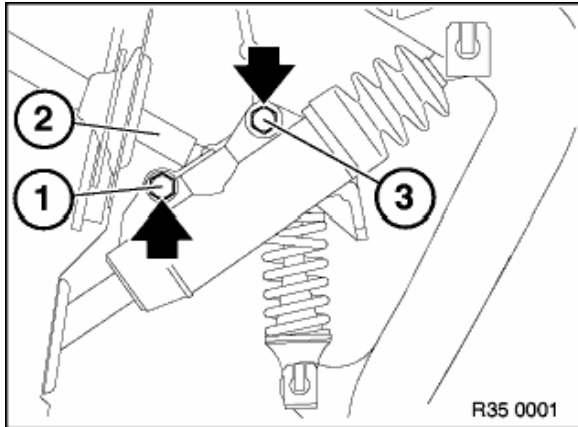


Unscrew and pull out screws (1 and 3). Take off holder for brake-light and clutch switches.

Place clutch cylinder to one side.

Installation:

Replace self-locking nut of screw (1).

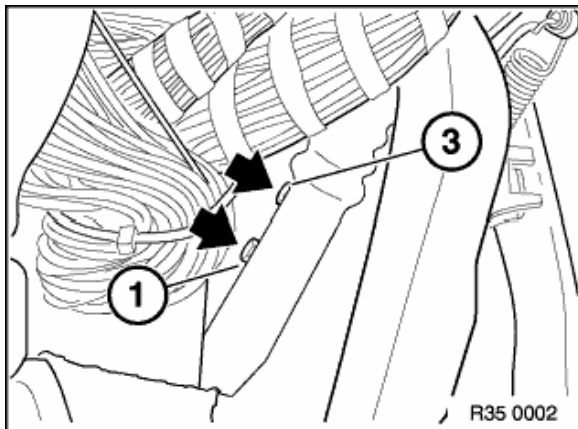


Screw (3) holds retaining plate for clutch and brake-light switches.

Installation:

Make sure line (2) is laid without kinks.

(1) and (3) = clutch-cylinder screws.

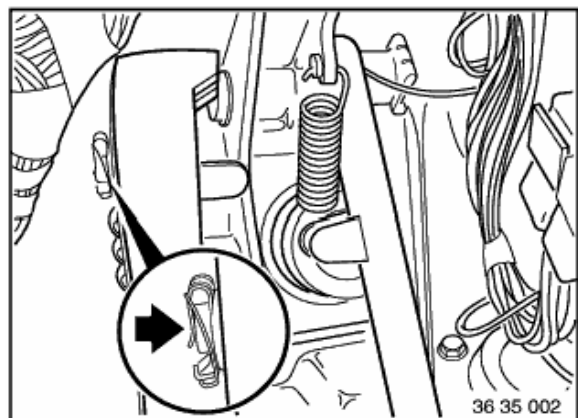

Remove locking clip for shaft pin of clutch cylinder.


Version with return spring for clutch pedal:

Disconnect return spring.

Push out shaft pin.

Installation:

Grease sliding surfaces,
refer to Technical Data.

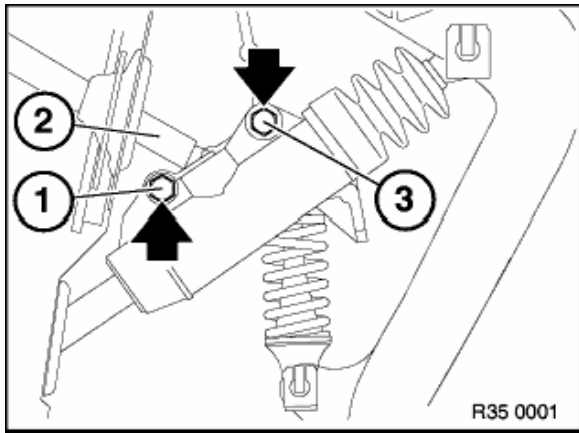

R35 0001

Version with over-center helper spring for clutch pedal:

Hold clutch pedal tightly.

Push out shaft pin.


Pull up clutch pedal slowly.

Take off over-center helper spring.

Installation:

Grease sliding surfaces,
refer to Technical Data.


Make sure spring holder is seated correctly in mounting block.

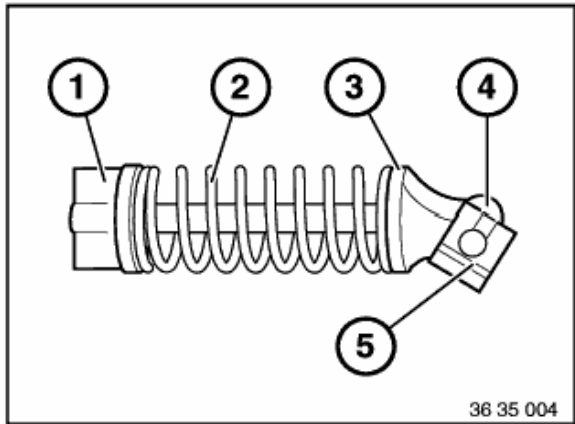

36 35 004

Assembly of over-centre helper spring:


1. Spring retainer
2. Over-center helper spring
3. Guide pin
4. Bearing shaft
5. Locking clip

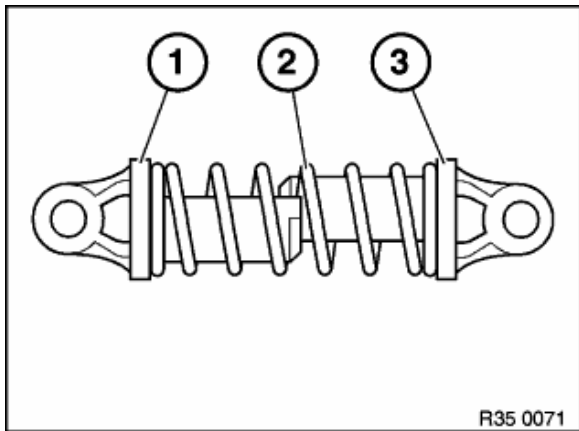

R35 0071

Over-center helper spring from model 3/97:

1. Spring retainer, black
2. Over-center helper spring
3. Spring retainer, gray

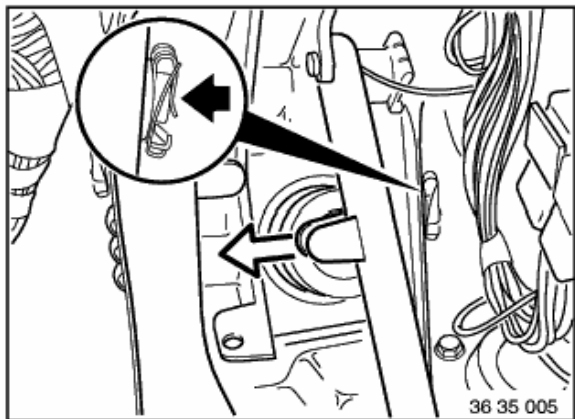

36 35 005


Disconnect return spring for brake pedal.

Take off locking clip for shaft pin of brake pedal.

Push out shaft pin.

Installation:


Grease sliding surfaces,
refer to Technical Data.

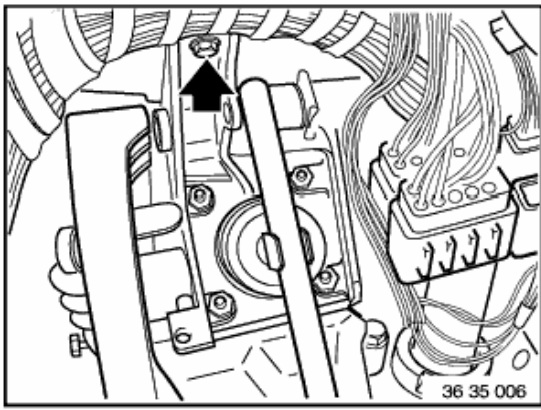

Unscrew screw.

Installation:

Tightening torque, 35 11 1AZD.

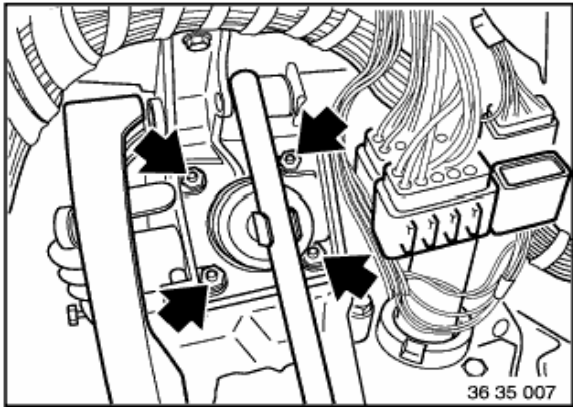

Unscrew self-locking nuts.

Remove mounting block.

Installation:

Replace self-locking nuts.

Tightening torque, 35 11 1AZD.