
**Special tools required:**


- 11 2 170


(clutch removed)

Lock flywheel with special tool 11 2 170 .

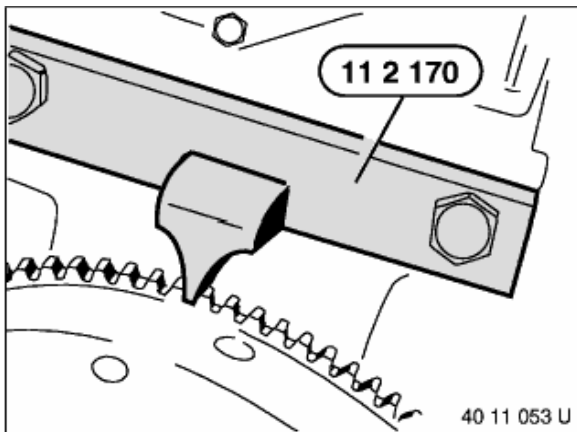


Unfasten screws and remove flywheel.

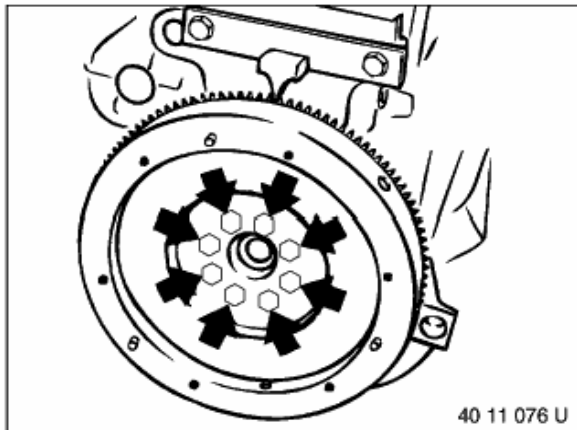

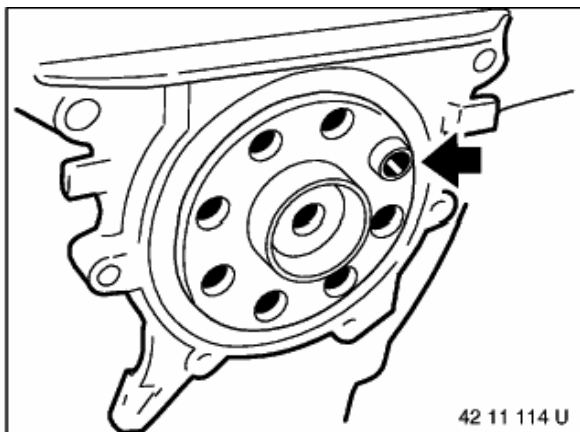


Installation:

Check dowel sleeve for damage and correct installation position.

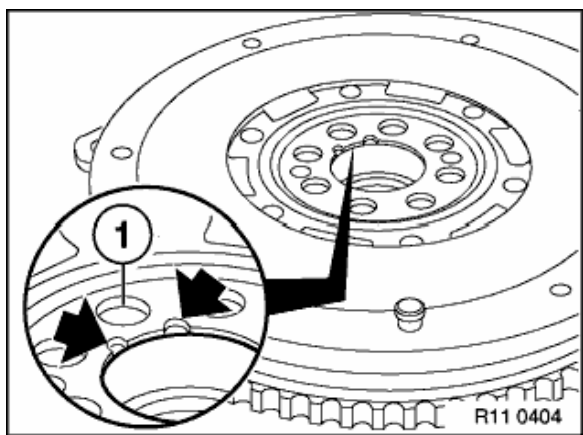

Installation:

Position of dowel sleeve (1) in dual-mass flywheel is identified by two notches next to associated bolt hole.

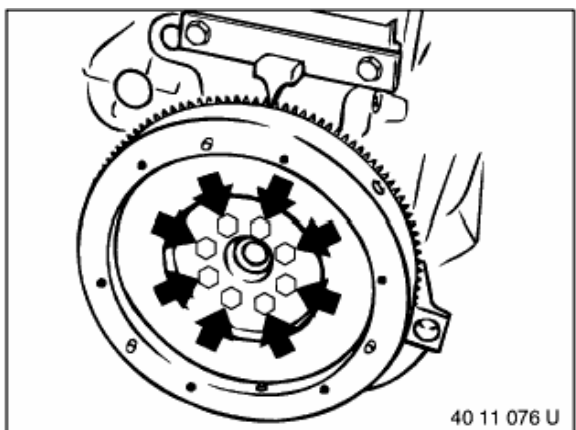

Installation:

Clean thread and install new micro-encapsulated screws.
Tightening torque 11 22 1AZ.