

Caution!

Support rear muffler on jack.


Release screw connections (1) between catalytic converter and rear muffler.

Installation:

Check gaskets and replace if necessary.

Replace self-locking nuts.


Coat thread with copper paste -CRC-, refer to BMW Parts Service.

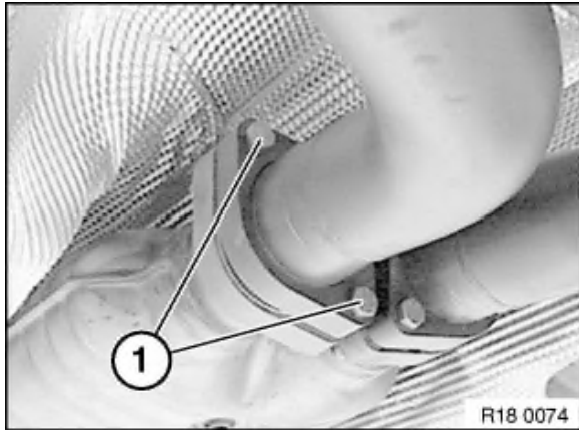


Loosen screw (1)

Installation:

After the installation of the exhaust system is complete, move exhaust bracket to align it without tension and then tighten securely.

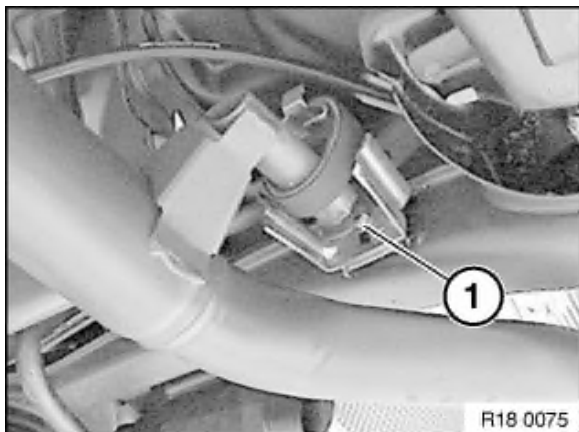

Unfasten hex nuts (1).

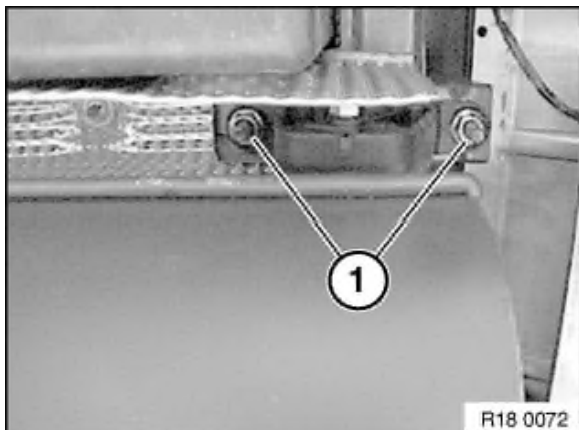

Unfasten hex nuts (1).

Remove rear muffler from below.

