

Note:

Remove and install rear wheels.

Bleed brakes. Vehicle without ABS:


refer to 34 00 046.

Vehicle with ABS:


refer to 34 00 047.

Vehicle with ASC+T:

refer to 34 00 048.

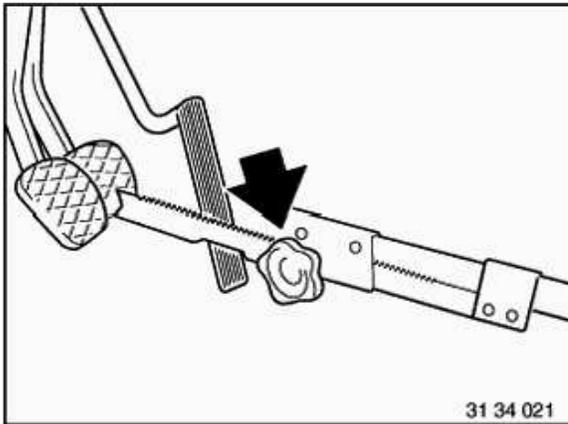

Apply pedal prop and depress brake pedal slightly. This prevents brake fluid from escaping from expansion tank after brake pipes have been disconnected (which would enable air to enter the braking system).

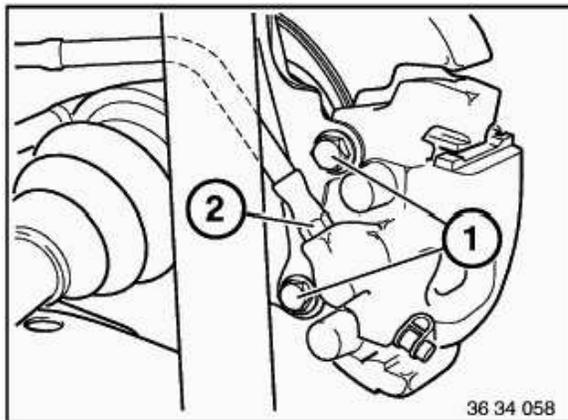

Loosen screws (1). Disconnect brake hose (2).

Right side:

Disconnect plug connection for brake lining sensor.

Pull off fist caliper towards rear of vehicle.

Installation:

Tightening torque,
refer to Technical Data.

Caution!

Check routing and securing of brake-pad-wear indicator cable. Check for correct securing with tab of dust cap. Rubbing of cable on rim must be prevented.