


**Only sedan and touring:**

Removing and installing finisher on window frame of left  
or right front door,  
refer to 51 32 420

Attach adhesive tape (1) below window cavity cover strip (2)  
(risk of damage).

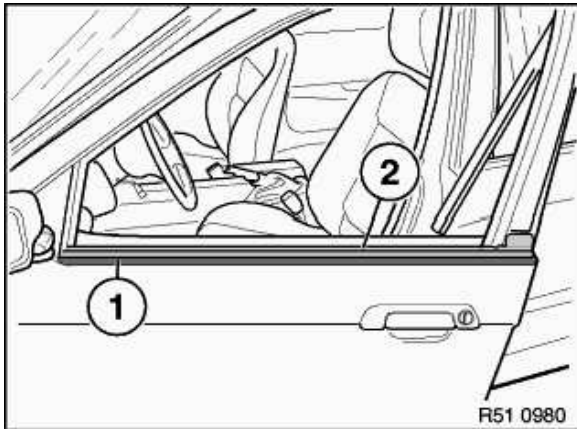

Using special tool 00 9 311, starting at back, (1) and moving to  
front (2), lift out window cavity cover strip.

